


Arctic Cat® Wildcat

Installation Instructions - Service Parts

Door Kit (p/n 5506-392/393/394/395)

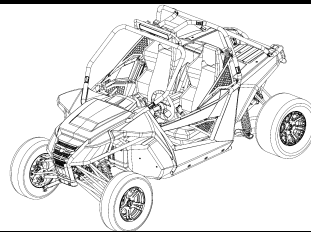

■ **NOTE:** Read these Installation Instructions thoroughly before beginning the installation process. Retain these Installation Instructions for future reference.

Kit includes:

p/n	QTY	DESCRIPTION
0423-355	2	Shoulder Screw (M6 x 18)
0423-817	2	Machine Screw (M8 x 20)
0826-029	2	Machine Screw (M6 x 12)
1423-205	1	Shoulder Screw (M6 x 35)
8050-223	1	Flat Washer
8427-602	1	Nylon Lock Nut (M6)
5506-170	1	Right-Side Black Door
5506-171	1	Left-Side Black Door
2411-948	1	Right-Side Upper Green Decal
2411-950	1	Right-Side Lower Green Decal
2411-949	1	Left-Side Upper Green Decal
2411-951	1	Left-Side Upper Green Decal
2411-960	1	Right-Side Upper Black Decal
2411-962	1	Right-Side Lower Black Decal
2411-961	1	Left-Side Upper Black Decal
2411-963	1	Left-Side Upper Black Decal
0453-871	1	Instructions

■ **NOTE:** Refer to the appropriate Arctic Cat Wildcat Service Manual for more detailed instructions.

1. Remove the appropriate seat.
2. Remove and discard the torx-head screws and nut securing the existing door to the frame and ROPS.
3. Remove and discard the torx-head screws securing the existing latch to the frame. See Fig. 1.

Fig. 1



ROV-273

4. Remove the new latch from New Door Assembly; then loosely secure new latch to the frame using two new Machine Screws (M6 x 12). See Fig. 2.

Fig. 2



ROV-274

5. Loosely secure new door to the frame using two new Machine Screws (M8 x 20).
6. To adjust the door assembly for the proper fit, raise or lower door to latch contact or the latch moves forward or back. After adjustment, tighten securely. See Fig. 3 and 4.

Fig. 3



WC134A

Fig. 4



WC109B

7. Adjust the latch to the desired position; then tighten securely. See Fig. 5.

Fig. 5



ROV-274

8. With the door adjust properly, secure the lower net to the bottom panel using new Shoulder Screw (M6 x 35). Tighten securely. See Fig. 6.

Fig. 6



ROV-275A

9. Secure the upper net to the ROPS using two Shoulder Screws (M6 x 18) and one M6 Nylon Lock Nut. Tighten securely. See Fig. 7.

Fig. 7



ROV-276A

10. Install the seat.

CAUTION

The doors should always be properly latched when the vehicle is moving.

