


Arctic Cat® Wildcat

Installation Instructions

Gear Case Seal Installation Kit

(p/n 0444-273)

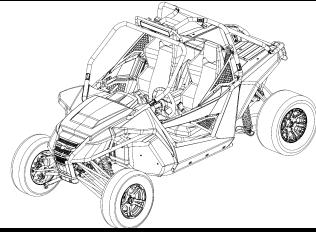

■ NOTE: Read these Installation Instructions thoroughly before beginning the installation process. Retain these Installation Instructions for future reference.

Application: Wildcat

Kit includes:

p/n	QTY	DESCRIPTION
0443-073	1	Rear Seal Installation Head - 40 mm
0443-072	1	Front Seal Installation Head - 48 mm
0443-070	1	Handle
0453-811	1	Instructions

■ NOTE: Refer to the appropriate Wildcat Service Manual for more detailed instructions. Some photographs used in this instruction are used for clarity purposes only and are not designed to depict actual conditions.

1. Remove the appropriate drive axle.
2. With the drive axle removed and using a clean towel, wipe away any oil or grease from the axle or gear case components.
3. If removing a front gearcase seal, use seal removal tool (p/n 0644-180). If removing a rear gearcase seal, use a flat-head screwdriver making sure not to damage the gear case. See Fig. 1.

Fig. 1



ROV-228A

4. Apply a light coat of multi-purpose grease to the seals inner lips; then position the new seal. See Fig. 2.

Fig. 2



ROV-229

5. Using Gear Case Seal Installation Tool, evenly press the seal into the gear case cover until the seal is properly seated. See Fig. 3 and 4.

Fig. 3



ROV-231

Fig. 4



ROV-230

6. Install the existing components using the instructions included in the Wildcat Service Manual.