

2012 ATV

ILLUSTRATED PARTS MANUAL

550 TRV EFT



Model Number A2012TB04EETP

ARCTIC CAT®
SHARE OUR PASSION.™


TABLE OF CONTENTS

2012 ATV 550 TRV EFT

Black (Model No. A2012TBO4EETP)

FRONT RACK, BODY PANEL, AND HEADLIGHT ASSEMBLIES	1
REAR BODY PANEL, FOOTWELL, AND TAILLIGHT ASSEMBLIES	2
REAR RACK ASSEMBLY	3
FRAME AND RELATED PARTS	4
WINCH ASSEMBLY	5
LICENSE PLATE HOLDER ASSEMBLY	6
SEAT ASSEMBLY	7
PASSENGER SEAT AND BACKREST ASSEMBLY	8
STEERING ASSEMBLY	9
HANDLEBAR ASSEMBLY	10
INSTRUMENT POD ASSEMBLY	11
FRONT SUSPENSION ASSEMBLY	12
REAR SUSPENSION ASSEMBLY	13
WHEEL AND TIRE ASSEMBLY	14
HYDRAULIC BRAKE ASSEMBLY	15
PARKING BRAKE ASSEMBLY	16
GAS TANK ASSEMBLY	17
SHIFT LEVER ASSEMBLY	18
AIR INTAKE ASSEMBLY	19
ENGINE AND EXHAUST	20
COOLING ASSEMBLY	21
CASE/BELT COOLING ASSEMBLY	22
DRIVE TRAIN ASSEMBLY	23
FRONT DRIVE GEARCASE ASSEMBLY	24
REAR DRIVE GEARCASE ASSEMBLY	25
WIRING HARNESS ASSEMBLY	26
BATTERY AND STARTER ASSEMBLY	27
THROTTLE BODY ASSEMBLY	28
CYLINDER ASSEMBLY	29
CYLINDER HEAD AND CAMSHAFT/VALVE ASSEMBLY	30
CAM CHAIN ASSEMBLY	31
CRANKCASE ASSEMBLY	32
CRANKSHAFT AND PISTON ASSEMBLY	33
CLUTCH/V-BELT/MAGNETO COVER ASSEMBLY	34
STARTER CLUTCH ASSEMBLY	35
CRANK BALANCER ASSEMBLY	36
OIL FILTER/PUMP ASSEMBLY	37
WATER PUMP ASSEMBLY	38
TRANSMISSION ASSEMBLY	39
SECONDARY TRANSMISSION ASSEMBLY	40
GEAR SHIFTING ASSEMBLY	41
SECONDARY DRIVE ASSEMBLY	42
MAGNETO ASSEMBLY	43


■ **NOTE:** The illustrations used in this Parts Manual are for reference to replacement part numbers only and are not to be used for assembly. For assembly procedures, use an Arctic Cat Service Manual. For a complete list of related items, refer to the current accessory catalog.

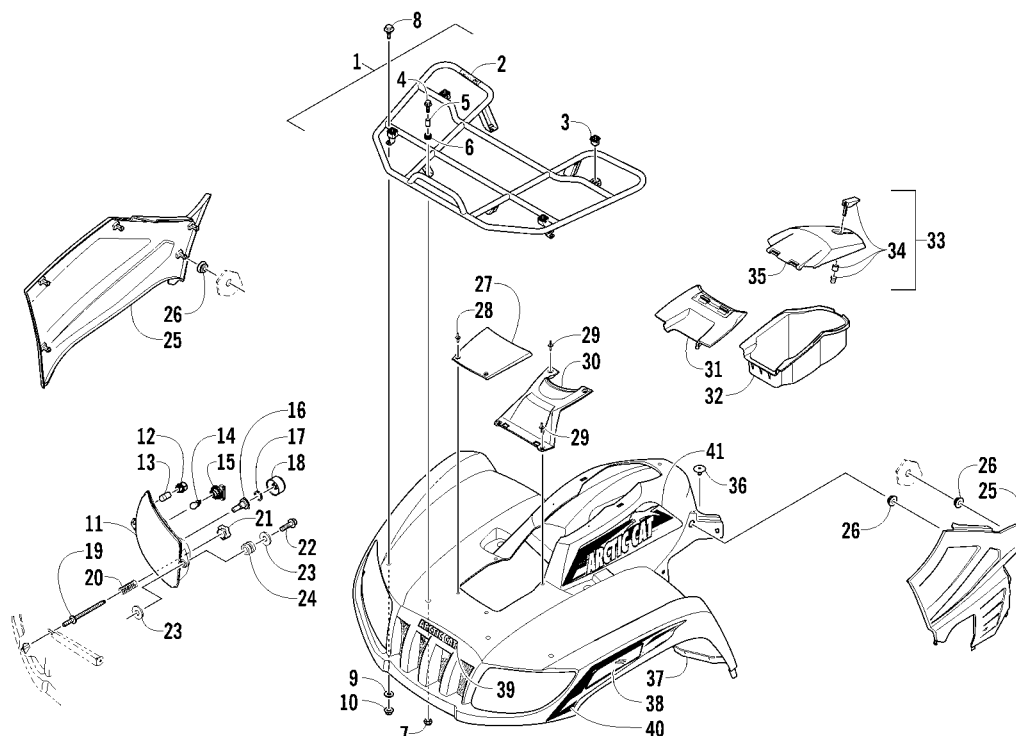

FRONT RACK, BODY PANEL, AND HEADLIGHT ASSEMBLIES

0746-019


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	2506-106		1	Rack, Front - Assembly (inc. 2-3)	23	8050-217		8	Washer
2	0411-576		1	● Decal, Warning - Load	24	0423-447		4	Grommet
3	0441-592		4	● Bushing	25	2406-324		1	Panel, Side - Lower - Right
4	8410-830		4	Screw, Cap		2406-421		1	Panel, Side - Lower - Left
5	0423-669		4	Spacer	26	0423-678		8	Grommet
6	0423-465		4	Grommet	27	1406-358		1	Cover, Access
7	8432-802		4	Nut, Lock	28	0423-535		2	Rivet, Reinstallable
8	0423-654		2	Screw, Shoulder	29	0623-362		4	Rivet, Reinstallable
9	8050-222		2	Washer	30	1406-484		1	Cover, Steering Post
10	0423-540		2	Nut, Lock	31	0470-513		1	Cover, Storage Box
11	0509-036		1	Headlight Assembly - Right (inc. 12-18)	32	1406-573		1	Box, Storage
	0509-037		1	Headlight Assembly - Left (inc. 12-18)	33	2506-234		1	Lid, Storage Box w/Latch (inc. 34-35)
12	0409-102		2	● Socket, Position Bulb	34	1406-599		1	● Latch, Storage Box
13	0409-101		2	● Bulb, Position	35	0470-514		1	● Lid, Storage Box
14	0409-099		2	● Bulb, Turn Signal	36	0423-101		2	Screw, Shoulder
15	0409-100		2	● Socket, Turn Signal Bulb	37	2406-523		1	Panel, Fender - Black
16	0409-096		2	● Bulb, Headlight	38	0411-818		1	Decal, Reflector - Right - Amber
17	0409-097		2	● Retainer, Spring		0411-819		1	Decal, Reflector - Left - Amber
18	0409-098		2	● Boot, Rubber	39	1411-725		1	Decal, "Arctic Cat"
19	0423-514		2	Stud, Adjuster - Headlight	40	2411-716	X	1	Decal, Side - Front Right
20	0423-522		2	Spring, Adjuster		2411-717	X	1	Decal, Side - Front Left
21	0423-513		2	Knob, Adjuster	41	2411-718	X	1	Decal, Side - Upper Right
22	0623-785		4	Screw, Self-Tapping		2411-719	X	1	Decal, Side - Upper Left

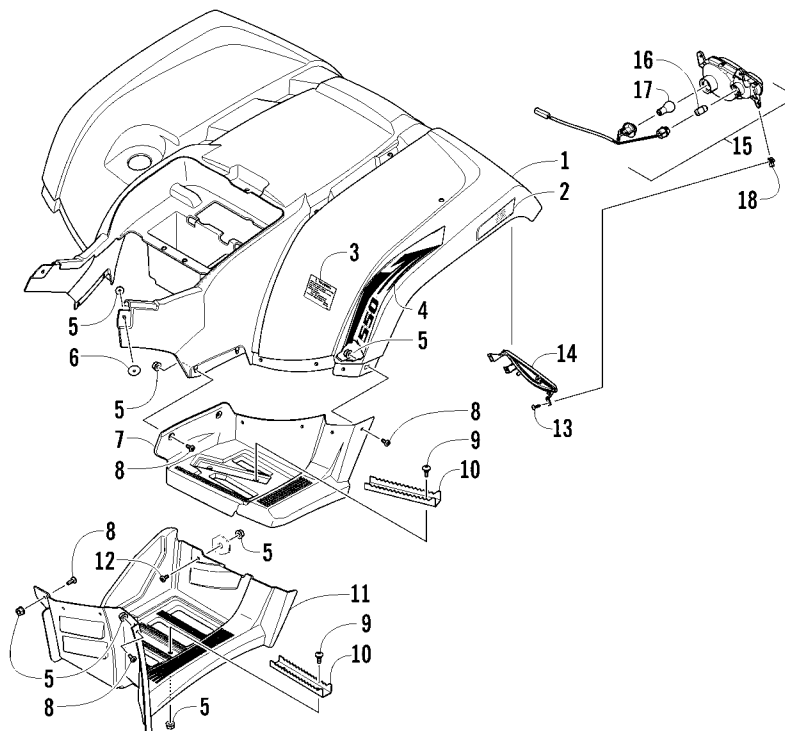

REAR BODY PANEL, FOOTWELL, AND TAILLIGHT ASSEMBLIES

0746-287


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	2506-890		1	Fender, Rear - Assembly - Black	10	1506-125		4	Footpeg
2	1411-592		1	Decal, Reflector - Right - Red	11	1506-813		1	Footwell - Right
	1411-593		1	Decal, Reflector - Left - Red		2406-471		1	Footwell - Left
3	2411-609	X	1	Decal, Warning - Tire Pressure	12	8477-620		2	Screw, Machine
4	2411-864	X	1	Decal, Side - Lower Right	13	8476-516		6	Screw, Machine
	2411-865	X	1	Decal, Side - Lower Left	14	0409-112		1	Bezel, Taillight - Right
5	0423-540		34	Nut, Lock		0409-113		1	Bezel, Taillight - Left
6	0423-101		2	Screw, Shoulder	15	3313-392		1	Taillight Assembly - Right (inc. 16-17)
7	2406-042		1	Footwell, Rear - Right		3313-393		1	Taillight Assembly - Left (inc. 16-17)
	2406-043		1	Footwell, Rear - Left	16	3313-506		2	● Bulb, Turn Signal
8	0423-419		22	Screw, Machine	17	3303-849		2	● Bulb, Taillight
9	0423-355		8	Screw, Shoulder	18	3304-061		6	Clip, U-Nut

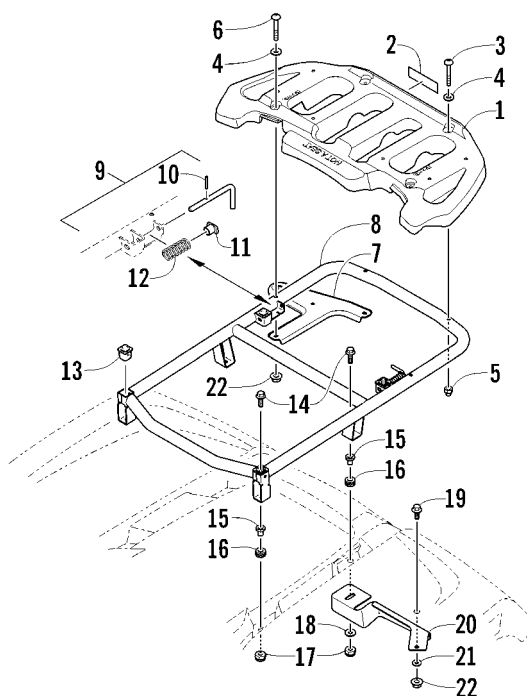

REAR RACK ASSEMBLY

0745-327


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	2516-339		1	Rack, Rear (inc. 2)	13	0441-592		4	● Bushing
2	1411-201		1	● Decal, Warning - Load	14	8410-835		4	Screw, Cap
3	8410-640		3	Screw, Cap	15	0423-669		4	Spacer
4	8050-223		4	Washer	16	0423-465		4	Grommet
5	0423-891		2	Nut, Cap	17	8432-802		4	Nut, Lock
6	8410-645		2	Screw, Cap	18	0423-087		2	Washer
7	2506-926		1	Bracket, Mounting - Safety Flag	19	0423-654		2	Screw, Shoulder
8	2516-169		1	Base, MRP - Assembly (inc. 9-13)	20	2506-092		1	Bracket, Rear Fender - Right
9	0541-504		2	● Pin - Assembly (inc. 10-12)		2506-093		1	Bracket, Rear Fender - Left
10	0423-635		2	●● Pin, Roll	21	8050-222		2	Washer
11	0423-677		2	●● Bushing, Flanged	22	0423-540		4	Nut, Lock
12	0423-636		2	●● Spring					

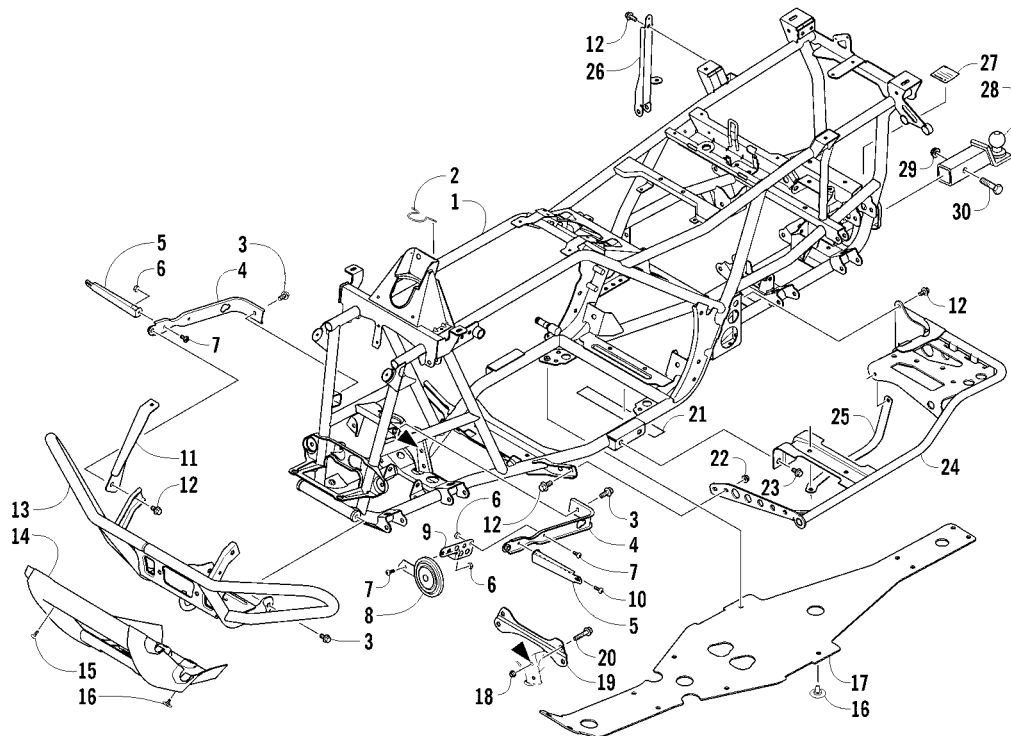

FRAME AND RELATED PARTS

0746-289

Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	4506-552	X	1	Frame, Main	16	0423-101		12	Screw, Shoulder
2	2416-401		1	Clip, Routing	17	2406-091		1	Panel, Belly
3	8409-020		4	Screw, Cap	18	0423-744		2	Nut, Lock
4	1506-596		2	Channel, Bumper Mounting	19	2516-852		1	Brace, A-Arm
5	2416-162		1	Bracket, Support - Right	20	8409-025		2	Screw, Cap
	2416-163		1	Bracket, Support - Left	21	0406-289		2	Pad, Foam
6	0623-038		3	Nut w/Washer	22	8424-802		4	Nut
7	8477-616		3	Screw, Machine	23	8409-016		4	Screw, Cap
8	0430-053		1	Horn, Electric - 12V	24	1506-848		1	Footrest - Right
9	2406-321		1	Bracket, Mounting - Horn		1506-849		1	Footrest - Left
10	8477-620		1	Screw, Machine	25	2406-216		1	Strap, Footrest - Right
11	1506-562		1	Bracket, Mounting - Bumper - Right		2406-217		1	Strap, Footrest - Left
	1506-563		1	Bracket, Mounting - Bumper - Left	26	2506-447		1	Bracket, Support
12	8408-816		11	Screw, Cap	27	1411-077		1	Decal, Warning - Towing
13	1506-855		1	Bumper	28	0541-857		1	Mount, Ball Hitch (inc. 29-30)
14	1406-360		1	Fascia, Bumper - Front	29	0423-690		1	● Nut, Lock
15	0423-419		2	Screw, Machine	30	0423-693		1	● Screw, Cap

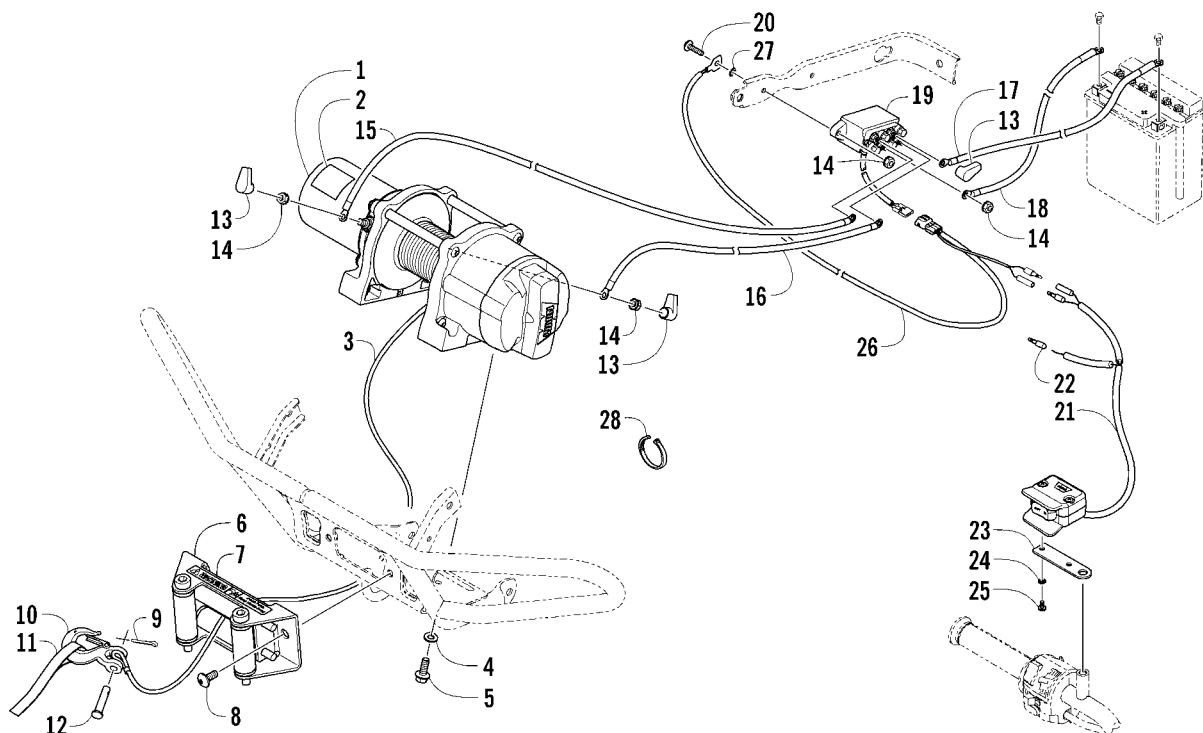


WINCH ASSEMBLY

0745-322

Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	1441-657		1	Winch (inc. 2-3)	16	0445-069		1	Cable, Winch/Solenoid - Blue
2	1411-826		1	● Decal, Warning	17	0445-087		1	Cable, Solenoid/Battery - Red
3	0441-061		1	● Cable, Winch	18	1441-112		1	Cable, Solenoid/Battery - Black
4	8051-246		4	Washer, Lock	19	0409-066		1	Solenoid
5	8408-820		4	Screw, Cap	20	8476-625		2	Screw, Machine
6	0441-403		1	Roller, Winch (inc. 7)	21	0505-552		1	Switch, Winch - Assembly (inc. 22-27)
7	0411-474		1	● Decal, Warning - Pinch Point	22	1441-428		1	● Connector, Harness
8	8468-820		2	Screw, Machine	23	0505-551		1	● Bracket, Winch Switch
9	0623-175		1	Pin, Cotter	24	8052-093		2	● Washer, Internal Tooth Lock
10	1441-833		1	Hook, Winch	25	8009-243		2	● Screw, Machine
11	1441-781		1	Strap	26	0486-276		1	● Harness, Adapter - Solenoid
12	1441-834		1	Pin	27	8053-212		1	● Washer, External Tooth Lock
13	0645-019		3	Boot, Terminal	28	0123-788		AR	Tie, Cable - 8 in.
14	0623-038		8	Nut w/Washer		0123-903		AR	Tie, Cable - 11.5 in.
15	0445-068		1	Cable, Winch/Solenoid - Yellow					




Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	2506-914	1		Mount, License Plate	5	0123-950	2		Screw, Self-Tapping
2	3304-772	1		Light, License Plate Assembly (inc. 3-4)	6	8432-802	2		Nut, Lock
3	3305-399	2		● Screw, Self-Tapping	7	8050-247	2		Washer
4	3303-847	1		● Bulb	8	8468-820	2		Screw, Machine

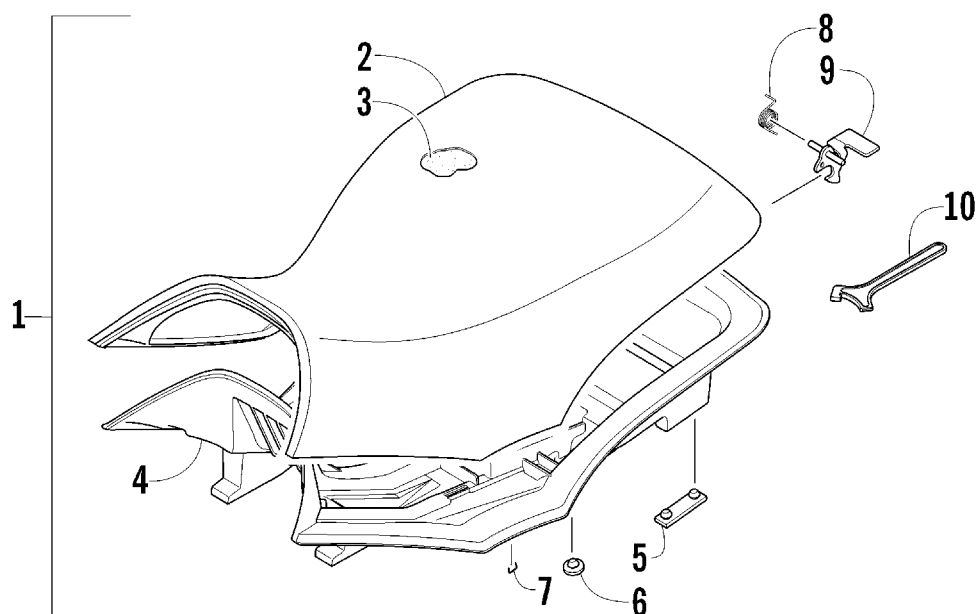

SEAT ASSEMBLY

0744-435


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	4506-557	X	1	Seat Assembly (inc. 2-9)	6	0406-877		4	●● Bumper, Seat - Front
2	1506-209		1	● Cover, Seat	7	0624-263		AR	● Staple
3	0517-119		1	● Foam, Seat	8	1406-592		1	● Spring, Seat Latch
4	2416-826	X	1	● Base, Seat - Assembly (inc. 5-6)	9	1506-156		1	● Latch, Seat
5	0406-879		2	●● Bumper, Seat - Rear	10	0441-587		1	Wrench, Spanner

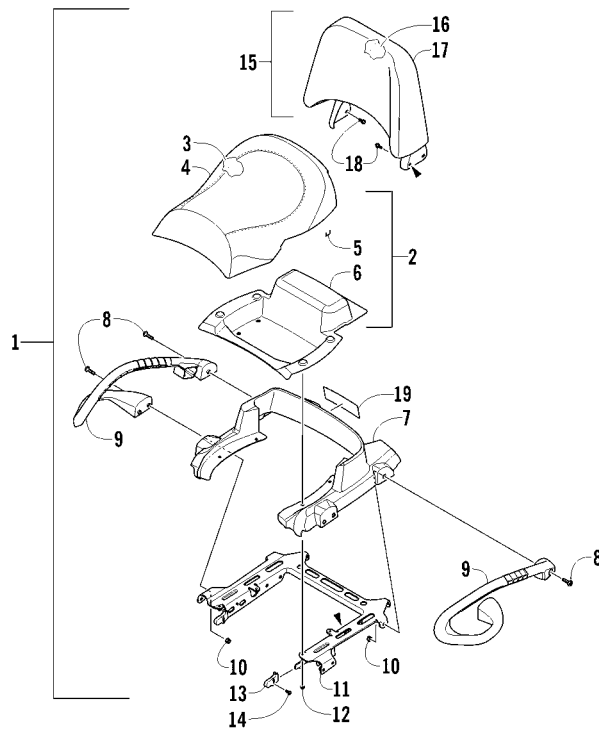

PASSENGER SEAT AND BACKREST ASSEMBLY

0745-710


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	2516-896		1	Seat, Passenger - Assembly (inc. 2-14)	10	8432-802		6	● Nut, Lock
2	2506-064		1	● Seat, Passenger - Sub-Assembly (inc. 3-6)	11	2516-040		1	● Bracket, Seat Support - Assembly
3	1506-816		1	●● Foam, Seat - Passenger	12	8427-602		4	● Nut, Lock
4	1506-815		1	●● Cover, Seat - Passenger	13	2406-895		2	● End Cap, Seat Support
5	0624-263	AR		●● Staple	14	0423-538		2	● Screw, Self-Tapping
6	2406-110		1	●● Base, Seat - Inner	15	2516-020		1	Backrest Assembly (inc. 16-17)
7	2406-044		1	● Base, Seat - Passenger	16	2516-018		1	● Foam, Backrest
8	8468-830		6	● Screw, Machine	17	2516-141		1	● Cover, Backrest
9	2406-834		1	● Handhold, Passenger - Right	18	8408-816		4	Screw, Cap
	2406-835		1	● Handhold, Passenger - Left	19	0411-814		1	Decal, "Arctic Cat"

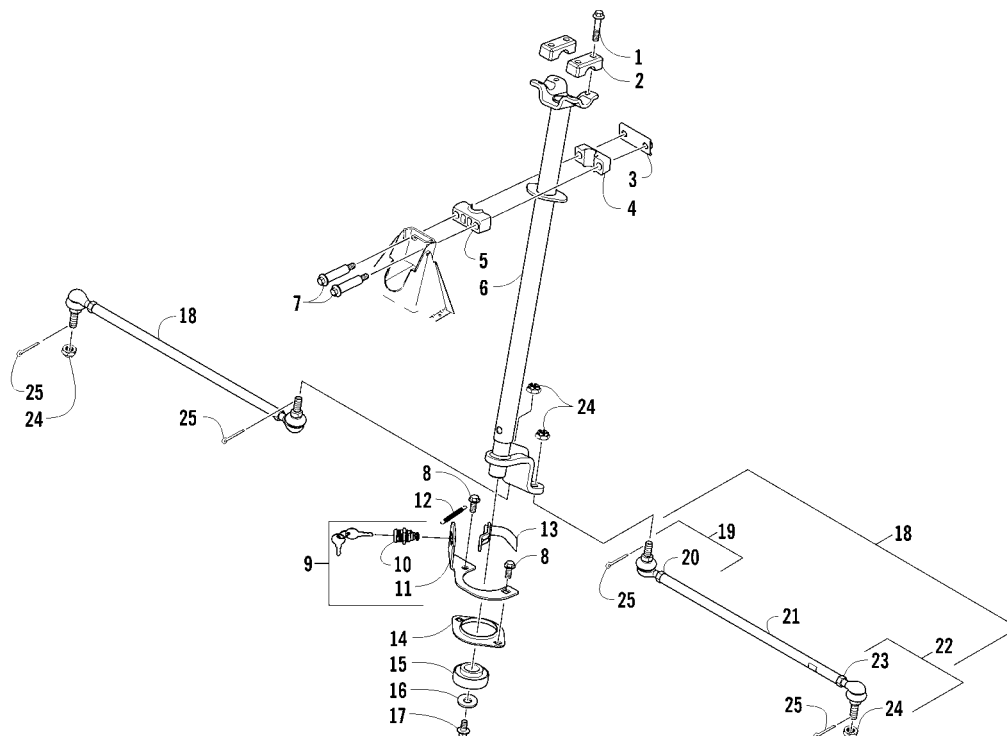

STEERING ASSEMBLY

0745-326


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	8408-835		4	Screw, Cap	15	0405-052		1	Bearing w/Inverted Oil Seal
2	0405-035		2	Cap, Steering Adjuster	16	0423-073		1	Washer
3	0505-484		1	Cap, Housing	17	8409-020		1	Screw, Cap
4	0405-260		1	Housing, Upper	18	0505-499		2	Tie Rod - Assembly (inc. 19-23)
5	0405-259		1	Housing, Lower	19	0505-511		2	● End, Tie Rod - Left-Hand Thread - Kit (inc. 20)
6	0505-493		1	Post, Steering	20	0423-013		2	●● Nut - Left-Hand Thread
7	0423-505		2	Screw, Shoulder	21	0405-281		2	● Tie Rod
8	8408-820		2	Screw, Cap	22	0505-510		2	● End, Tie Rod - Right-Hand Thread - Kit (inc. 23)
9	0505-713		1	Steering Lock Assembly (inc. 10-13)	23	8420-002		2	●● Nut - Right-Hand Thread
10	2406-354		1	● Lock	24	0423-157		4	Nut, Lock
11	2406-349		1	● Bracket, Mounting - Lock	25	0623-175		4	Pin, Cotter
12	1423-058		1	● Spring					
13	2506-173		1	● Latch					
14	0602-233		1	Flange, Bearing					

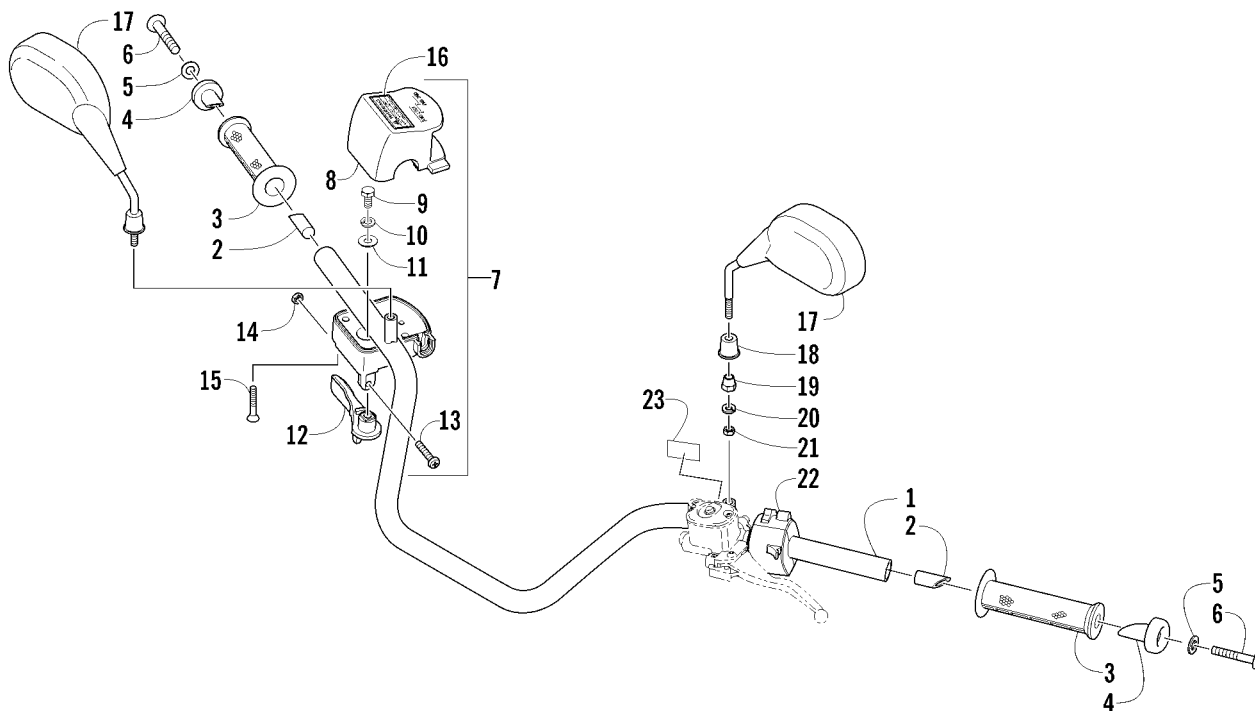

HANDLEBAR ASSEMBLY

0745-005


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0505-522		1	Handlebar	13	3423-014		1	● Screw, Machine
2	0405-218		2	Plug, Handlebar	14	3423-327		1	● Nut
3	0405-147		2	Grip, Handlebar	15	3423-199		2	● Screw, Machine
4	0405-149		2	End Cap, Handlebar	16	0411-966		1	Decal, Warning - Differential Lock
5	8050-247		2	Washer	17	2406-630		1	Mirror - Right (inc. 18-21)
6	8477-845		2	Screw, Machine		2406-631		1	Mirror - Left (inc. 18-21)
7	0509-054		1	Case, Throttle - Assembly (inc. 8-15)	18	0423-985		2	● Cover
8	0409-141		1	● Cover, Throttle Case w/Switch	19	0423-986		2	● Nut, Adjuster
9	3007-392		1	● Screw, Cap	20	0423-987		2	● Washer, Lock
10	3004-447		1	● Washer, Lock	21	0423-988		2	● Nut
11	3003-030		1	● Washer	22	0409-081		1	Switch, Control - Assembly
12	0409-133		1	● Lever, Throttle	23	1411-865		1	Decal, Warning - Brake Lever Lock

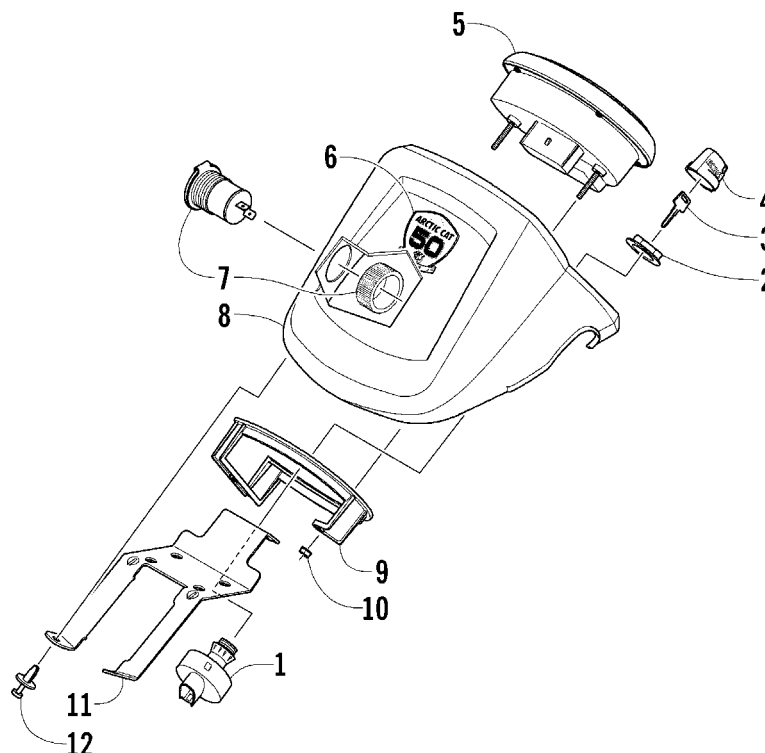

INSTRUMENT POD ASSEMBLY

0745-865


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0430-090		1	Switch, Ignition - Assembly (inc. 2-4)	6	9611-399	X	1	Decal, 50th Anniversary
2	0430-050		1	● Nut, Retaining	7	0641-897		1	Outlet, Accessory - 12V
3	0430-042		1	● Key, Ignition - (Y Series - Left-Side Cut)	8	0405-276		1	Instrument Pod - Black
	0430-043		1	● Key, Ignition - (Z Series - Right-Side Cut)	9	0420-065		1	Bracket, Retaining
4	0430-054		1	● Cover, Key	10	0423-493		2	Nut w/Washer
5	0520-163	X	1	Gauge, LCD	11	2506-470		1	Bracket, Mounting - Instrument Pod
					12	0423-535		2	Rivet, Reinstallable

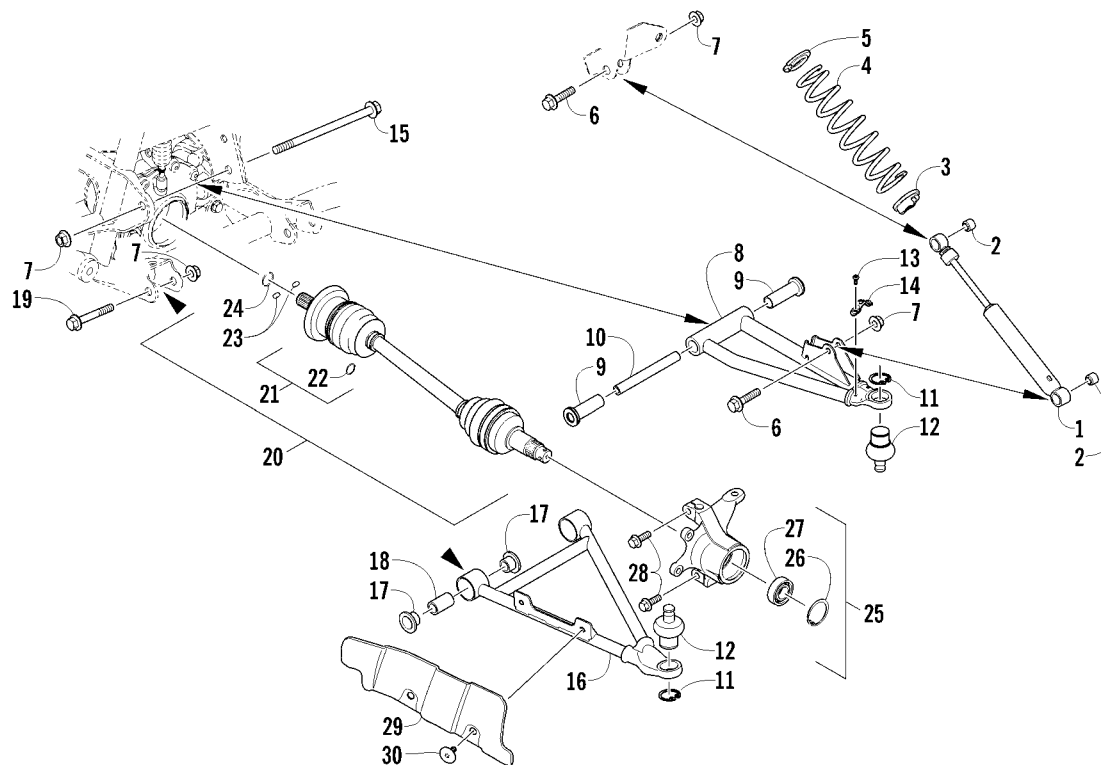

FRONT SUSPENSION ASSEMBLY

0745-247


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0403-209		2	Shock Absorber (inc. 2)	17	0403-208		8	● Bushing
2	0403-182		4	● Bushing	18	0403-214		4	● Axle
3	0403-102		2	Cam, Spring Adjuster	19	8409-075		4	Screw, Cap
4	0503-468		2	Spring, Suspension - White	20	1502-800		1	Axle, Drive - Right (inc. 21-24)
5	1603-889		2	Retainer, Spring	21	1502-799		1	Axle, Drive - Locking - Left (inc. 21-24)
6	8409-040		4	Screw, Cap	22	1436-419		2	● Repair Kit, Boot (inc. 22)
7	0423-744		10	Nut, Lock	23	1441-988		2	● Clip, Retaining
8	0503-416		1	A-Arm, Upper Right - Black (inc. 9-12)	24	1402-885		4	● Pin, Detent
9	0503-417		1	A-Arm, Upper Left - Black (inc. 9-12)	25	1402-889		2	● Clip, Retaining
10	0403-080		2	● Bushing	26	0505-576		1	Knuckle - Assembly - Right (inc. 26-27)
11	0423-009		4	● Ring, Retaining	27	0505-577		1	Knuckle - Assembly - Left (inc. 26-27)
12	0405-115		4	● Ball Joint	28	0423-423		2	● Ring, Retaining
13	0423-946		4	Screw, Self-Tapping	29	1402-809		2	● Bearing
14	1502-594		2	Clamp, Routing	30	0423-998		4	Screw, Shoulder
15	0423-334		2	Screw, Cap	29	1406-034		1	Guard, Boot - Right - Black
16	0503-376		1	A-Arm, Lower Right - Black (inc. 17-18 and two No. 11-12)	30	1406-035		1	Guard, Boot - Left - Black
	0503-377		1	A-Arm, Lower Left - Black (inc. 17-18 and two No. 11-12)		0423-545		4	Screw, Shoulder

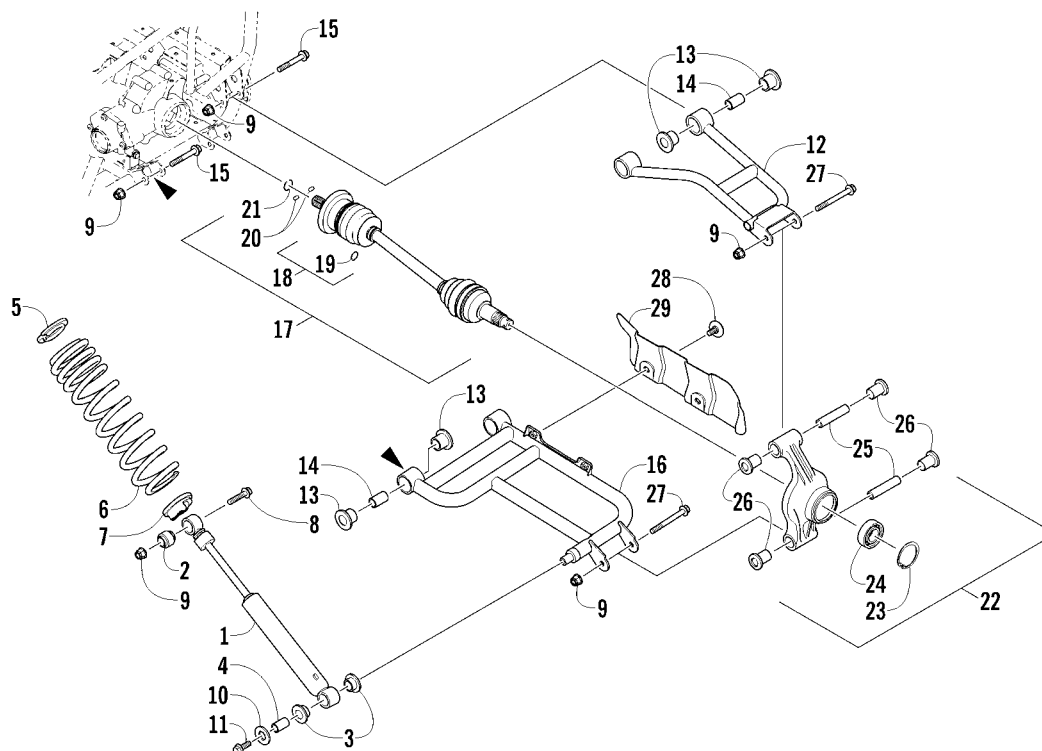

REAR SUSPENSION ASSEMBLY

0745-252


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0404-158	2		Shock Absorber (inc. 2-4)	17	1502-798	2		Axle, Drive (inc. 18-21)
2	0403-182	2		● Bushing	18	1436-419	2		● Repair Kit, Boot (inc. 19)
3	0603-955	4		● Bushing	19	1441-988	2		●● Clip, Retaining
4	1603-219	2		● Sleeve	20	1402-884	4		● Pin, Detent
5	1603-889	2		Retainer, Spring	21	1402-890	2		● Clip, Retaining
6	0504-638	2		Spring, Suspension - White	22	0504-616	1		Knuckle, Right - Assembly (inc. 23-26)
7	0404-057	2		Cam, Spring Adjuster		0504-549	1		Knuckle, Left - Assembly (inc. 23-26)
8	8409-050	2		Screw, Cap	23	0423-423	2		● Ring, Retaining
9	0423-744	14		Nut, Lock	24	1402-809	2		● Bearing
10	0423-087	2		Washer	25	0403-213	4		● Axle
11	8408-820	2		Screw, Cap	26	0403-206	8		● Bushing
12	0504-582	1		A-Arm, Rear - Upper Right - Black (inc. 13-14)	27	8409-000	4		Screw, Cap
	0504-583	1		A-Arm, Rear - Upper Left - Black (inc. 13-14)	28	0423-545	4		Screw, Shoulder
13	0403-208	16		● Bushing	29	1406-068	1		Guard, Boot - Rear - Right - Black
14	0403-214	8		● Axle		1406-069	1		Guard, Boot - Rear - Left - Black
15	8409-075	8		Screw, Cap					
16	0504-572	1		A-Arm, Rear - Lower Right - Black (inc. 13-14)					
	0504-573	1		A-Arm, Rear - Lower Left - Black (inc. 13-14)					

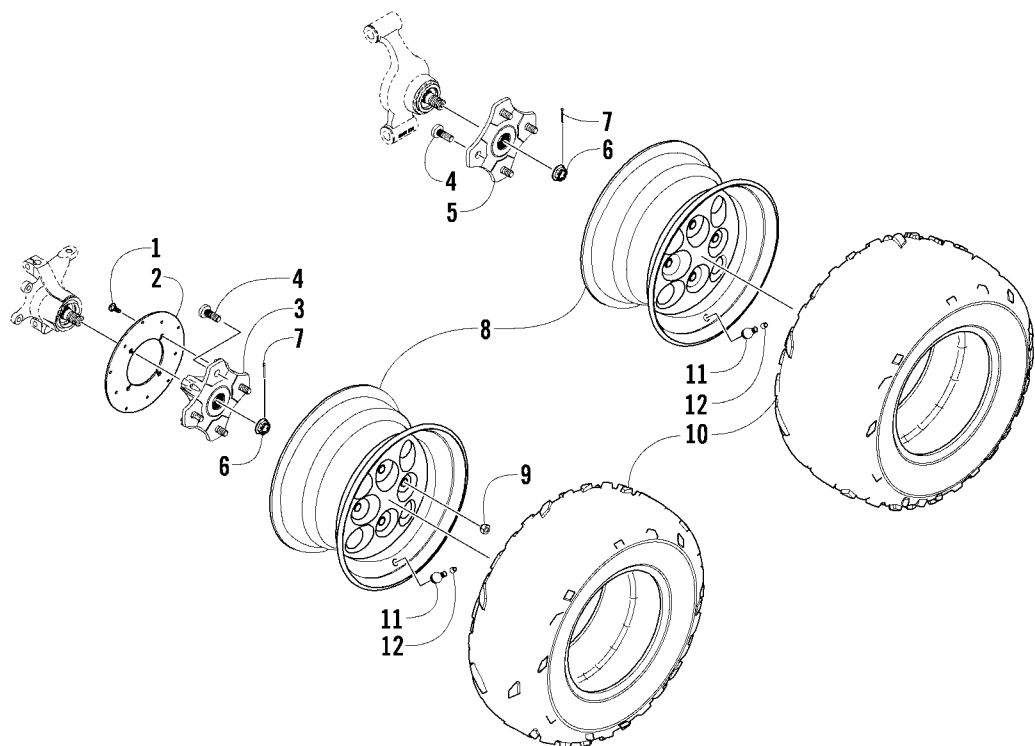

WHEEL AND TIRE ASSEMBLY

0743-964


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0423-557		12	Screw, Shoulder	8	1402-776		2	Wheel - Front - Platinum
2	1436-164		3	Disc, Brake		1402-777		2	Wheel - Rear - Platinum
3	1502-462		2	Hub, Wheel - Front (inc. 4)	9	0423-408		16	Nut, Lug
4	0402-974		16	● Stud	10	1402-858		2	Tire - Front
5	1502-462		1	Hub, Wheel - Rear - Right (inc. 4)		1402-859		2	Tire - Rear
	1502-464		1	Hub, Wheel - Rear - Left (inc. 4)	11	0402-064		4	Stem, Valve (inc. 12)
6	0423-607		4	Nut, Castle	12	0402-140		4	● Cap, Valve Stem
7	0423-407		4	Pin, Cotter					

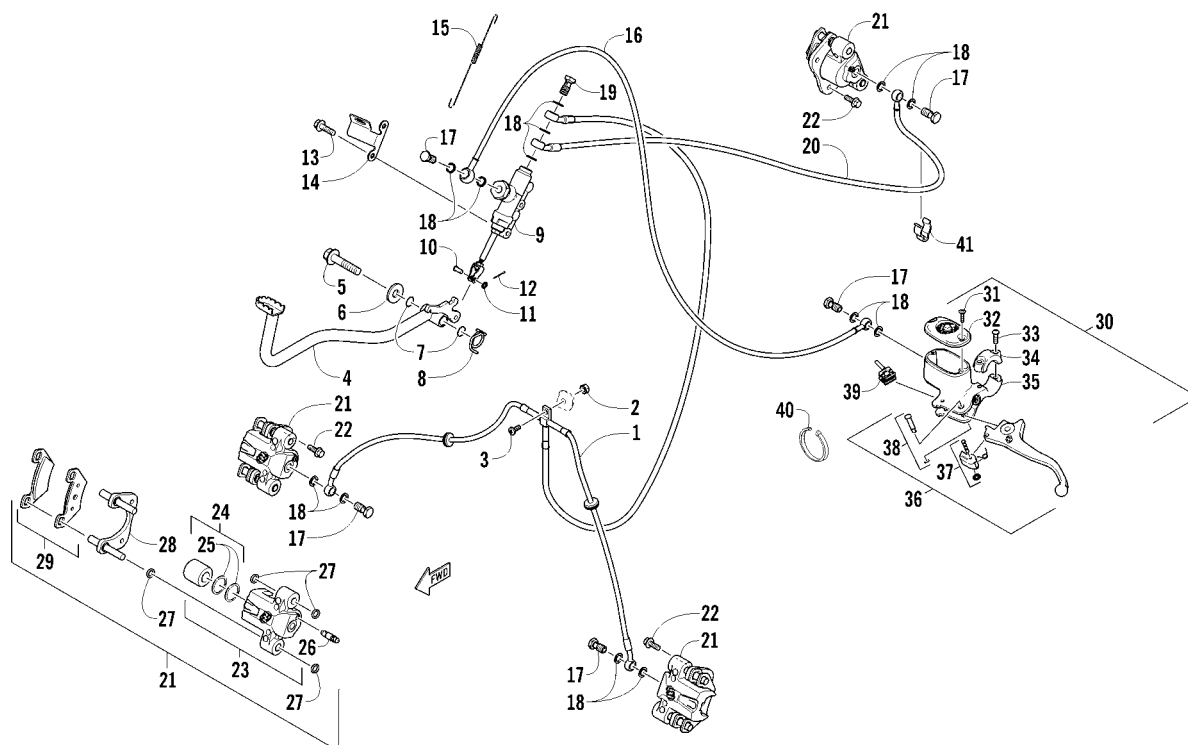

HYDRAULIC BRAKE ASSEMBLY

0745-906


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	1502-148		1	Hose, Brakeline - Assembly	22	8408-821		6	● Screw, Cap
2	0623-038		1	Nut w/Washer	23	1436-160		1	● Housing, Caliper - Assembly - Right Front (inc. two No. 22 and 24-26)
3	8476-625		1	Screw, Machine		1436-161		1	● Housing, Caliper - Assembly - Left Front (inc. two No. 22 and 24-26)
4	1502-063		1	Lever, Brake		1436-161		1	● Housing, Caliper - Assembly - Rear (inc. two No. 22 and 24-26)
5	8408-816		1	Screw, Cap	24	0502-606		3	●● Piston/Seal Set (inc. 25)
6	8050-252		1	Washer	25	0502-607		3	●●● Seal Set
7	1602-213		2	O-Ring	26	0502-609		3	●● Valve, Bleed
8	0502-807		1	Spring, Brake Lever	27	0502-608		3	● O-Ring, Guide - Set
9	1502-147		1	Brake Assembly	28	0502-605		3	● Bracket Assembly
10	1402-377		1	Pin, Clevis	29	1502-694		3	● Pad, Brake - Set
11	8050-217		1	Washer	30	0502-914		1	Brake Assembly (inc. 31-39)
12	0117-868		1	Pin, Cotter	31	0502-566		1	● Screw, Machine - Kit
13	8408-625		2	Screw, Cap	32	0502-868		1	● Cover, Reservoir
14	0502-840		1	Bracket, Switch	33	0502-568		1	● Screw, Machine - Kit
15	0502-785		1	Spring, Brake Switch	34	0502-869		1	● Clamp, Master Cylinder
16	1402-592		1	Hose, Brakeline	35	0502-704		1	● Master Cylinder Assembly
17	0423-413		5	Bolt, Banjo-Fitting	36	0502-866		1	● Lever Assembly - Kit (inc. 37-38)
18	0423-178		13	Washer, Crush	37	0502-867		1	●● Lock, Brake Lever - Kit
19	0423-610		1	Bolt, Banjo-Fitting - Double	38	0502-580		1	●● Lock Pin - Kit
20	1402-594		1	Hose, Brakeline	39	0502-564		1	● Switch, Brake
21	1436-422		1	Caliper, Brake - Right Front (inc. two No. 22 and 23-29)	40	0123-788		AR	Tie, Cable - 8 in.
	1436-423		1	Caliper, Brake - Left Front (inc. two No. 22 and 23-29)	41	1502-115		2	Clip, Brakeline Hose
	1436-423		1	Caliper, Brake - Rear (inc. two No. 22 and 23-29)					

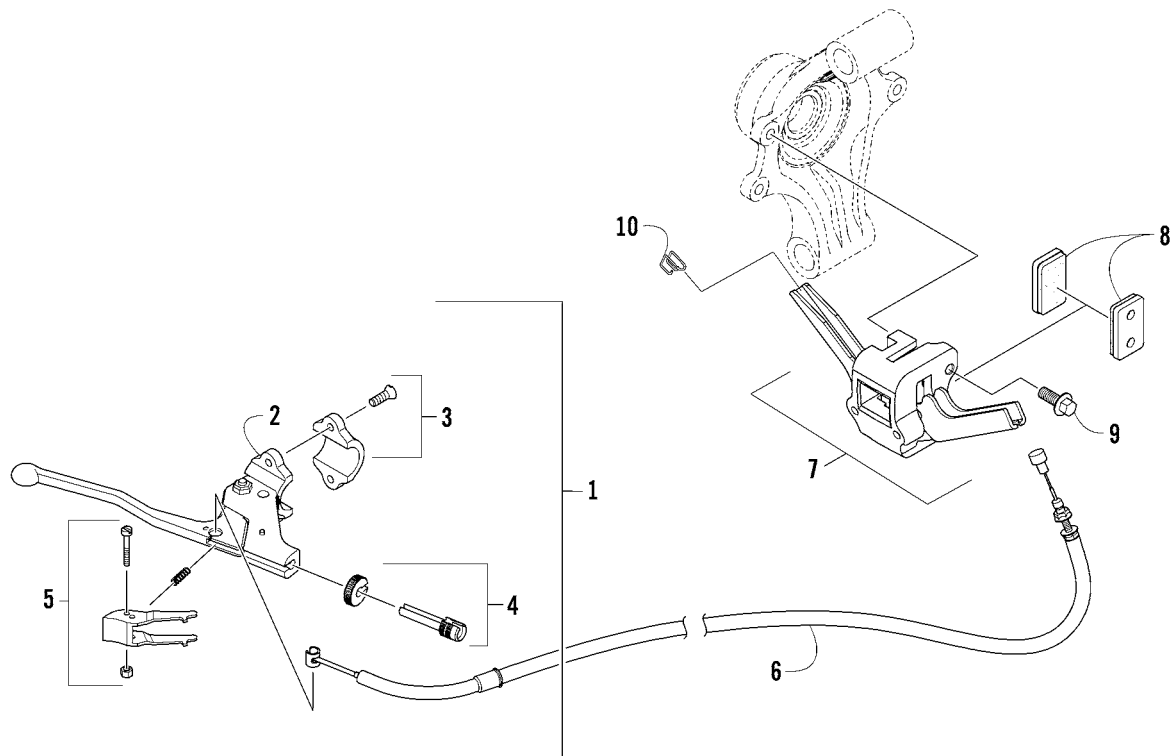

PARKING BRAKE ASSEMBLY

0743-214


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	1502-278		1	Lever, Parking Brake - Assembly (inc. 2-6)	6	0487-055		1	● Cable, Brake - Rear
2	1502-429		1	● Lever, Parking Brake - Kit	7	1502-865		1	Mechanical Brake Assembly (inc. 8)
3	1502-432		1	● Clamp, Handlebar - Kit	8	1402-602		2	● Pad, Brake
4	1502-430		1	● Adjuster, Thumb Nut - Kit	9	8408-826		2	Screw, Cap
5	1502-431		1	● Lock, Parking Brake Lever - Kit	10	0402-379		1	Wire Form, Cable

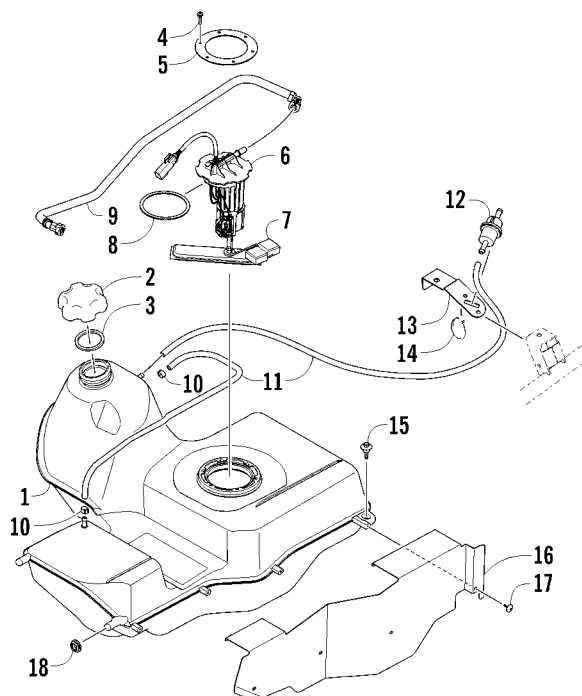

GAS TANK ASSEMBLY

0745-565


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0570-308		1	Tank, Gas - Assembly (inc. 2-5)	10	0423-688		2	Clamp, Hose
2	0470-438		1	● Cap, Gas Tank (inc. 3)	11	0410-070		AR	Hose, Gasline - 25 ft
3	0109-733		1	●● Gasket, Gas Tank Cap	12	0510-335		1	Filter, In-Line
4	0423-898		6	● Screw, Self-Tapping	13	0470-794		1	Bracket, Mounting - Filter
5	2670-042		1	● Plate, Retaining	14	0123-788		AR	Tie, Cable - 8 in.
6	0570-323		1	Pump, Fuel - Assembly (inc. 7-8)	15	0423-732		2	Screw, Shoulder
7	2670-235		1	● Float	16	0470-822		1	Shield, Heat
8	0470-838		1	● Seal	17	0623-797		4	Screw, Self-Tapping
9	0570-305		1	Hose, Fuel - Assembly	18	0423-460		2	Grommet

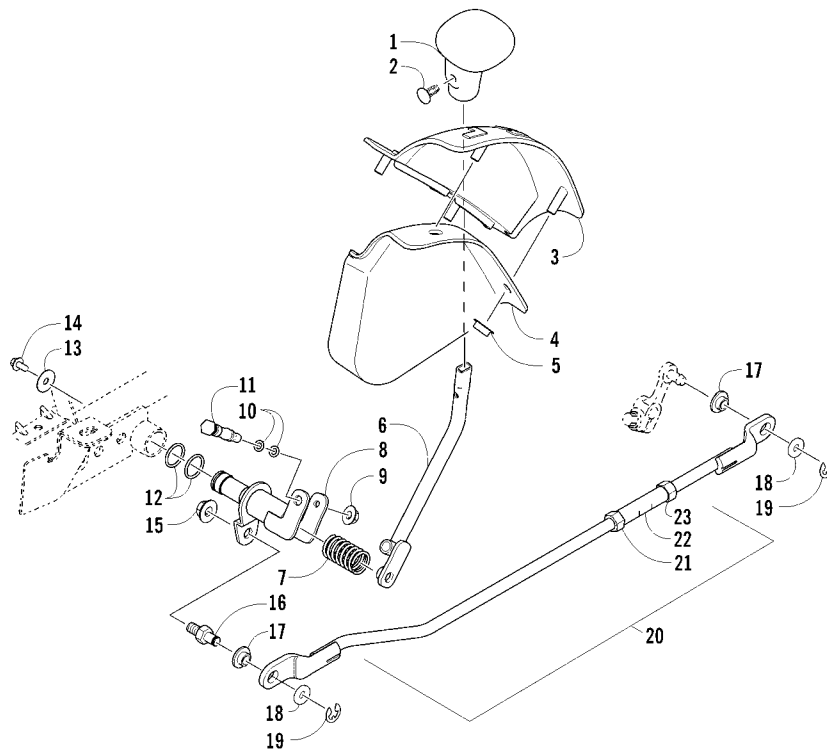

SHIFT LEVER ASSEMBLY

0745-123


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0402-843		1	Knob, Shift	13	0423-087		1	Washer
2	0423-345		1	Clip, Retaining	14	8408-812		1	Screw, Cap
3	1402-576		1	Plate, Shift	15	8424-802		1	Nut
4	2406-345		1	Shield, Shift Plate	16	1402-621		1	Pin, Mounting
5	0423-357		4	Nut, Stamped	17	0423-091		2	Bushing
6	0502-659		1	Lever, Shift	18	0623-094		2	Washer
7	0402-678		1	Spring, Shift Lever	19	0423-169		2	E-Ring
8	1502-332		1	Actuator, Shift	20	1502-200		1	Linkage, Shift - Assembly (inc. 21-23)
9	8424-602		1	Nut	21	0123-917		1	● Nut, Hex - Left-Hand Thread
10	0423-182		2	O-Ring	22	1402-619		1	● Coupler
11	0402-675		1	Axle, Pivot	23	0623-294		1	● Nut, Hex - Right-Hand Thread
12	0423-299		2	O-Ring					

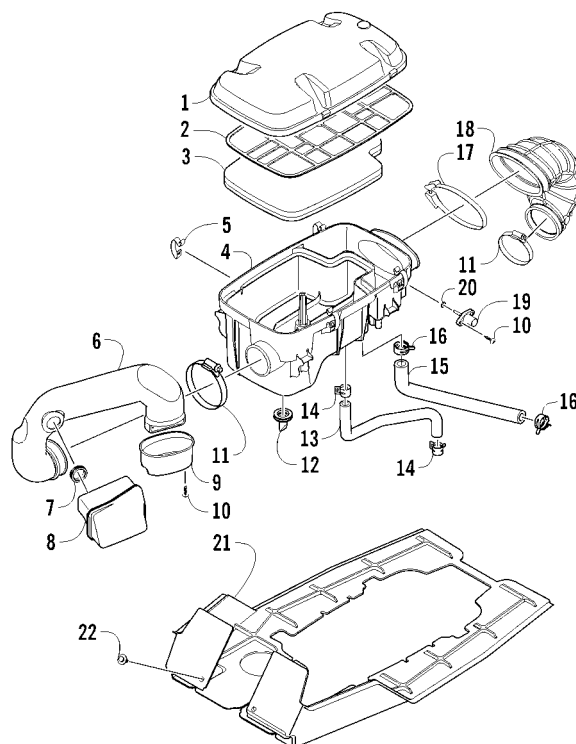

AIR INTAKE ASSEMBLY

0745-077


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0470-877	1		Cover, Intake	12	0470-442	1		Valve, Drain
2	0470-560	1		Screen, Air Filter	13	0410-172	1		Hose, Vent
3	0470-558	1		Filter, Air	14	1623-281	2		Clamp, Hose
4	0470-728	1		Housing, Intake	15	0470-896	1		Hose
5	0423-455	4		Clip, Spring	16	1623-289	2		Clamp
6	0470-749	1		Duct, Engine Intake	17	0423-554	1		Clamp, Boot
7	0423-763	1		Grommet	18	0470-511	1		Boot
8	0570-215	1		Resonator	19	0430-055	1		Sensor, Air Temperature (inc. 20)
9	0470-729	1		Boot	20	5507-224	1		● O-Ring
10	0423-342	4		Screw, Self-Tapping	21	2406-604	1		Panel, Shield
11	0423-019	2		Clamp, Boot	22	0623-362	2		Rivet, Reinstallable

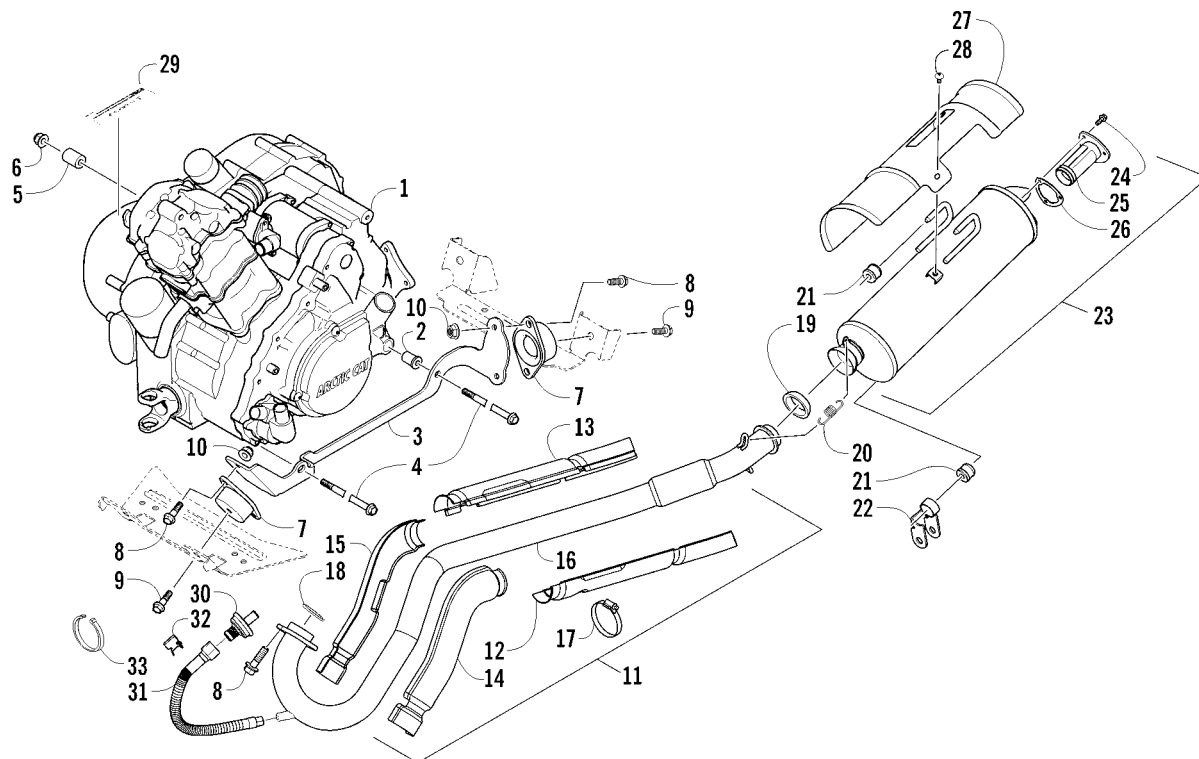

ENGINE AND EXHAUST

0745-098


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0800-073		1	Engine, A550F	17	0423-317		3	● Clamp
2	0801-180		4	Mount, Rubber - Engine	18	0412-338		1	Gasket, Exhaust Pipe
3	1506-740		1	Bracket, Engine - Right	19	0412-375		1	Seal, Exhaust
	1506-741		1	Bracket, Engine - Left	20	0612-668		2	Spring, Extension
4	0423-405		2	Screw, Cap	21	0412-577		3	Bushing
5	1423-025		1	Spacer, Engine	22	1506-732		1	Channel, Muffler Support
6	8428-002		2	Nut, Lock	23	0512-592	X	1	Muffler - Assembly (inc. 24-26)
7	2406-065		4	Mount, Engine	24	8408-616		3	● Screw, Cap
8	8408-820		10	Screw, Cap	25	0512-219		1	● Arrestor, Spark - Assembly
9	8408-012		4	Screw, Cap	26	0412-313		1	● Gasket, Spark Arrestor
10	8432-802		8	Nut, Lock	27	0412-373		1	Cover, Muffler
11	0512-536		1	Pipe, Exhaust - Assembly (inc. 12-17)	28	8477-610		3	Screw, Machine
12	0512-568		1	● Shield, Exhaust Pipe - Lower - Rear	29	0411-426		1	Decal, Warning - Clutch Cover
13	0512-567		1	● Shield, Exhaust Pipe - Upper - Rear	30	0512-577		1	Valve, Air
14	0412-349		1	● Shield, Exhaust Pipe - Inner - Front	31	0412-574		1	Hose
15	0412-348		1	● Shield, Exhaust Pipe - Outer - Front	32	0412-573		1	Bracket, Retaining
16	0512-537		1	● Pipe, Exhaust	33	0123-903		AR	Tie, Cable - 11.5 in.

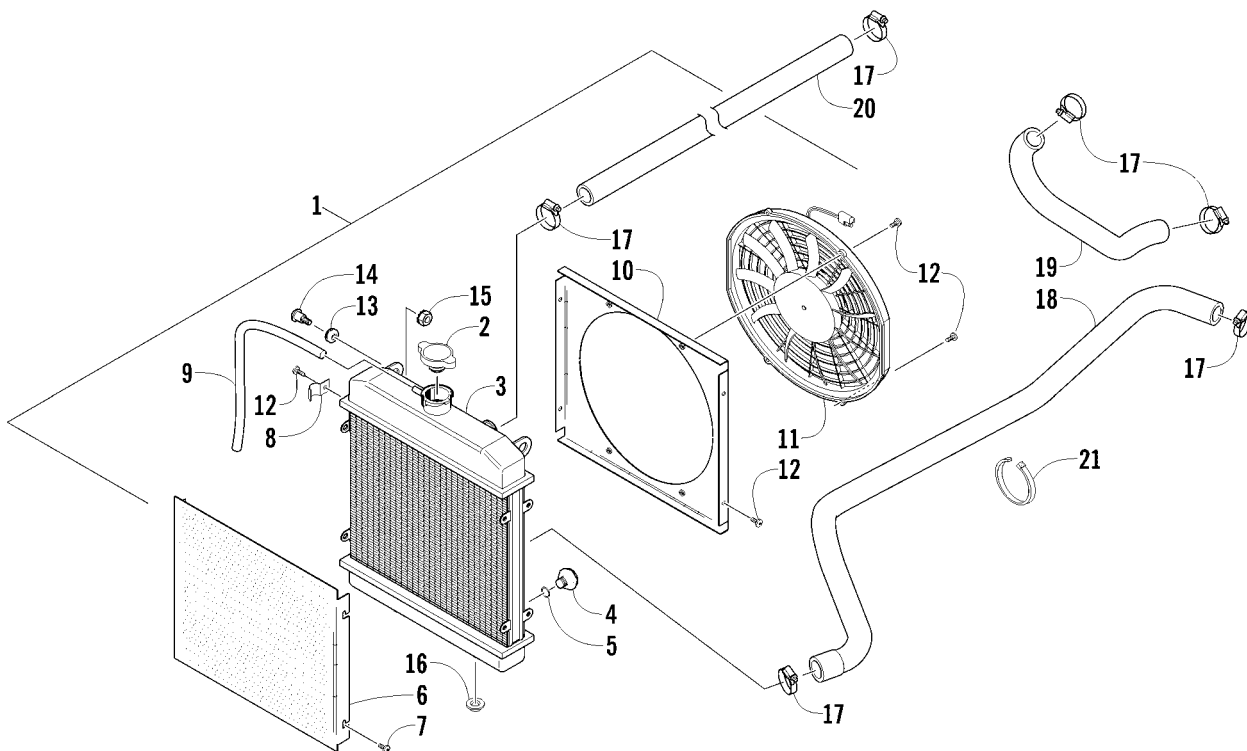

COOLING ASSEMBLY

0745-858


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0413-256	1	1	Radiator Assembly (inc. 2-13)	11	0413-123	1	1	● Fan, Cooling
2	0413-255	1	1	● Cap	12	0623-378	8	8	● Screw, Self-Tapping
3	0413-205	1	1	● Radiator	13	0423-030	2	2	● Grommet
4	0413-195	1	1	● Plug, Drain	14	0423-484	2	2	Screw, Shoulder
5	1602-213	1	1	● O-Ring	15	0623-038	2	2	Nut w/Washer
6	0413-007	1	1	● Screen	16	0423-028	2	2	Bushing, Stem
7	8475-512	4	4	● Screw, Machine	17	0423-496	6	6	Clamp, Hose
8	0423-351	1	1	● Clamp, Wire	18	0410-229	1	1	Hose, Coolant - Lower
9	0610-016	AR	AR	● Hose - 25 ft	19	0410-022	1	1	Hose, Coolant - Crossover
	0610-015	AR	AR	● Hose - 100 ft	20	0410-002	1	1	Hose, Coolant - Upper
10	0413-203	1	1	● Shroud, Fan	21	0123-903	AR	AR	Tie, Cable - 11.5 in.

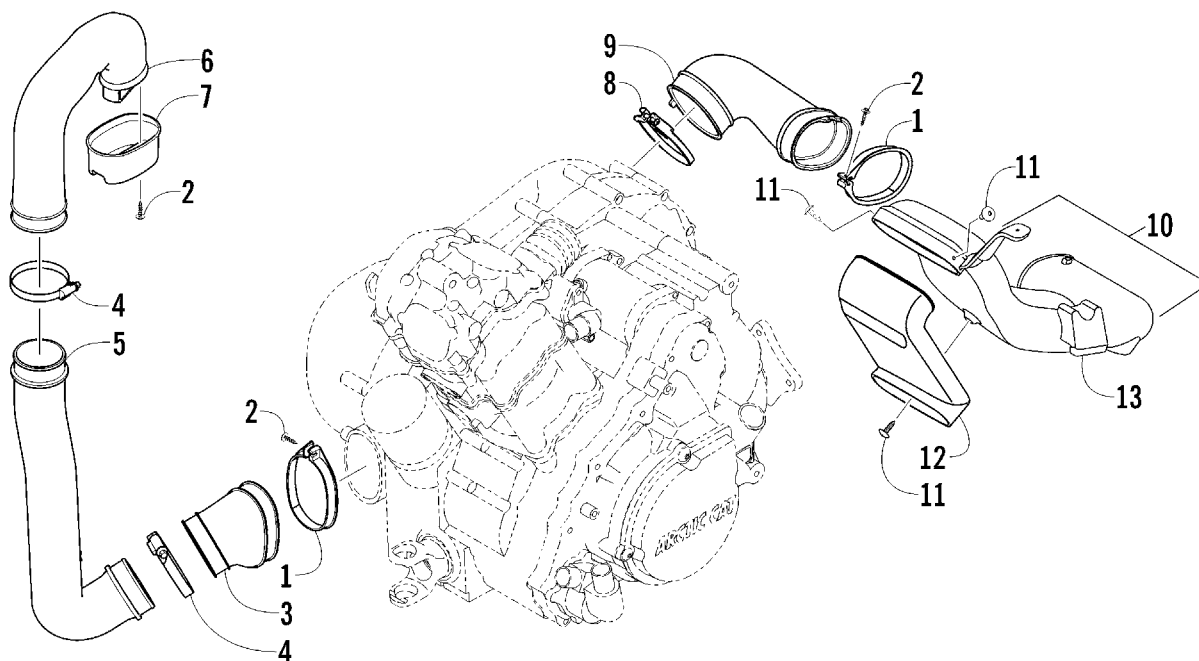

CASE/BELT COOLING ASSEMBLY

0744-433


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0423-550	2		Clamp	8	0423-730	1		Clamp
2	0423-342	4		Screw, Self-Tapping	9	0413-206	1		Boot, Duct - Air Out - Rear
3	0413-252	1		Boot, Duct - Air Intake - Front	10	0470-824	1		Duct, Air Out - Rear
4	0423-019	2		Clamp	(inc. three No. 11 and 12-13) ● Screw, Self-Tapping ● Duct ● Duct				
5	0413-250	1		Duct, Air Intake - Front - Lower					
6	0470-750	1		Duct, Air Intake - Front - Upper					
7	0470-729	1		Cup, Air Intake	11	0623-784	4		● Screw, Self-Tapping
					12	0470-778	1		● Duct
					13	0470-825	1		● Duct

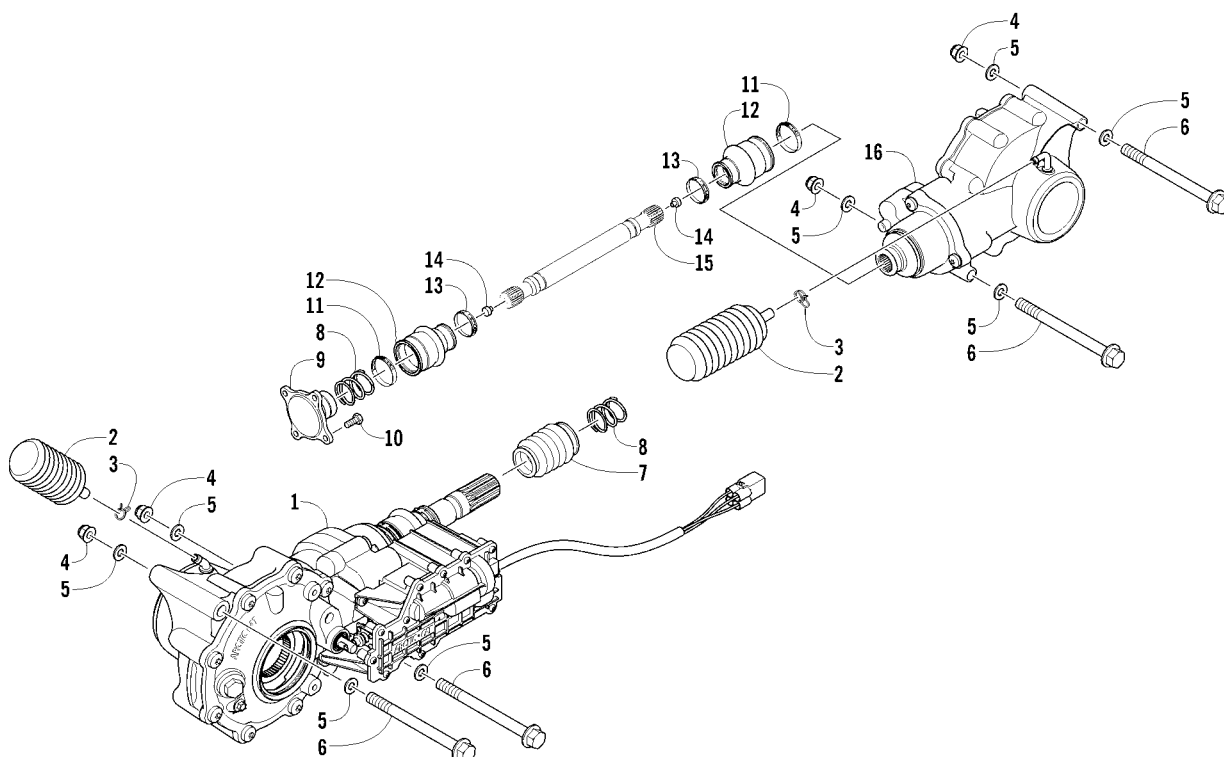

DRIVE TRAIN ASSEMBLY

0745-861


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	1502-878	X	1	Gearcase, Front	9	0402-950		1	Flange, Output
2	1402-620		2	Bladder, Gearcase	10	8408-820		4	Screw, Cap
3	0423-315		2	Clamp, Hose	11	0423-393		2	Clamp
4	8428-002		4	Nut, Lock	12	0402-985		2	Boot
5	0423-426		8	Washer	13	0423-411		2	Clamp
6	0423-404		4	Screw, Cap	14	0673-618		2	Bumper, Propeller Shaft
7	0402-966		1	Boot, Shaft	15	1402-092		1	Shaft, Propeller
8	1402-026		2	Spring	16	1502-879	X	1	Gearcase, Rear

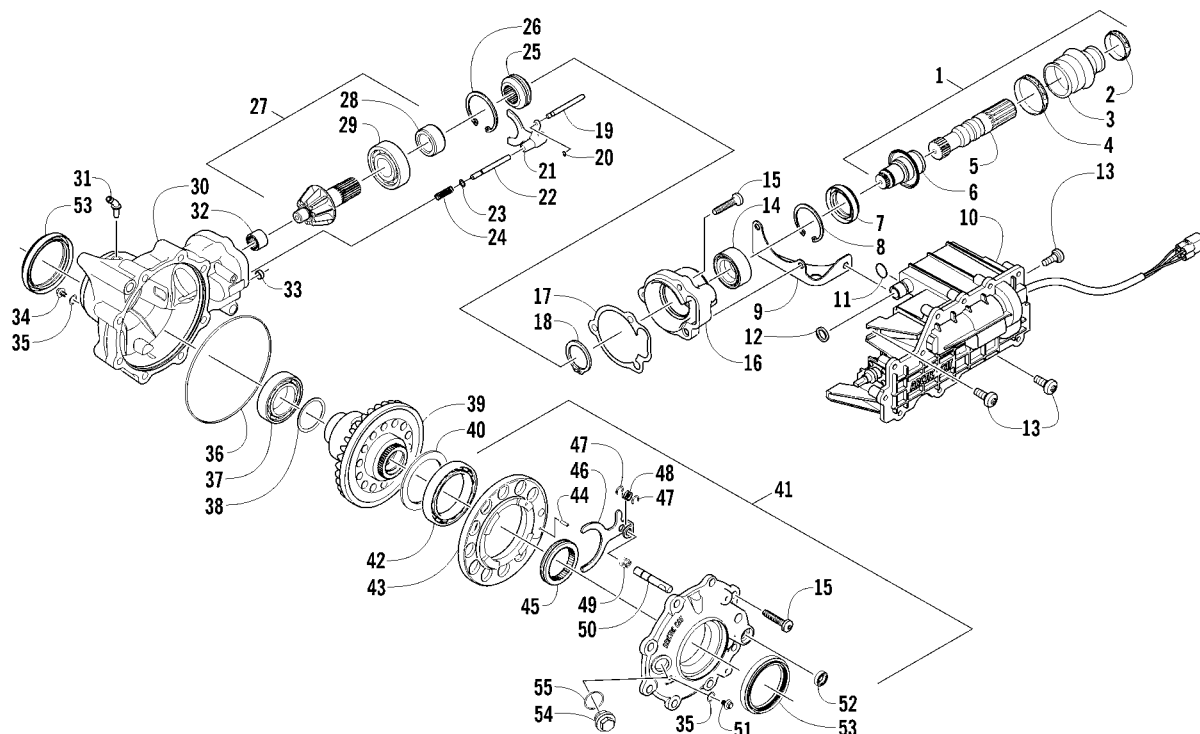

FRONT DRIVE GEARCASE ASSEMBLY

0745-863


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
-	1502-878	X	1	Complete Front Drive Gearcase Assembly	32	0402-328		1	Bearing
1	1502-083		1	Shaft, Propeller - Assembly (inc. 2-6)	33	0402-411		1	Pin, Dowel
2	0423-411		1	● Clamp	34	1402-210		1	Plug, Magnetic (inc. one No. 35)
3	0402-985		1	● Boot, Propeller Shaft	35	0423-153		2	● O-Ring
4	0423-393		1	● Clamp	36	0423-149		1	O-Ring
5	1402-045		1	● Shaft, Output	37	0402-393		1	Bearing
6	1502-085		1	● Shaft, Input	38	0402-405		AR	Shim, 41 x 49 x 1.3 mm
7	1402-011		1	Seal		0402-406		AR	Shim, 41 x 49 x 1.4 mm
8	0423-423		1	Ring, Retaining		0402-407		AR	Shim, 41 x 49 x 1.5 mm
9	1502-237		1	Bracket, Actuator		0402-408		AR	Shim, 41 x 49 x 1.6 mm
10	1502-909	X	1	Actuator (inc. 11)		0402-409		AR	Shim, 41 x 49 x 1.7 mm
11	1402-981		1	● O-Ring	39	1502-860	X	1	Gear, Ring - 36T
12	0423-892		1	O-Ring	40	1402-074		AR	Shim, 61 x 69 x 1.3 mm
13	0423-396		3	Screw, Self-Tapping		1402-075		AR	Shim, 61 x 69 x 1.4 mm
14	1402-043		1	Bearing		1402-076		AR	Shim, 61 x 69 x 1.5 mm
15	0423-118		11	Screw, Self-Tapping		1402-077		AR	Shim, 61 x 69 x 1.6 mm
16	0502-528		1	Housing, Pinion		1402-078		AR	Shim, 61 x 69 x 1.7 mm
17	0402-947		1	Gasket, Flange	41	1502-895	X	1	Cover, Gearcase (inc. one No. 35, 42-52, and one No. 53)
18	0423-417		1	Ring, Retaining	42	1402-053		1	● Bearing
19	0402-997		1	Shaft, Selector	43	0502-413		1	● Flange, Bearing
20	0423-402		1	Ring, Retaining	44	1402-079		1	● Pin, Parallel
21	0402-998		1	Fork, Selector	45	1402-042		1	● Collar, Sliding
22	0402-417		1	Shaft, Shuttle	46	1402-054		1	● Fork
23	0423-147		1	O-Ring	47	1402-058		2	● Ring, Retaining
24	0402-999		1	Spring, Return	48	1402-057		1	● Spring
25	0402-413		1	Coupler, Drive	49	1402-063		1	● Spring
26	1423-067	X	1	Ring, Retaining	50	1402-656		1	● Shaft, Lock
27	1502-863	X	1	Gear, Pinion - Assembly - 10T (inc. 28-29)	51	1402-211		1	● Plug, Oil Level (inc. one No. 35)
28	1402-977	X	1	● Collar, Retaining	52	1402-056		1	● Seal
29	0402-327		1	● Bearing	53	1402-950	X	2	● Seal
30	1502-856	X	1	Housing, Gearcase	54	0402-333		1	Plug, Fill (inc. 55)
31	1402-980	X	1	Fitting, Elbow	55	0423-154		1	● O-Ring

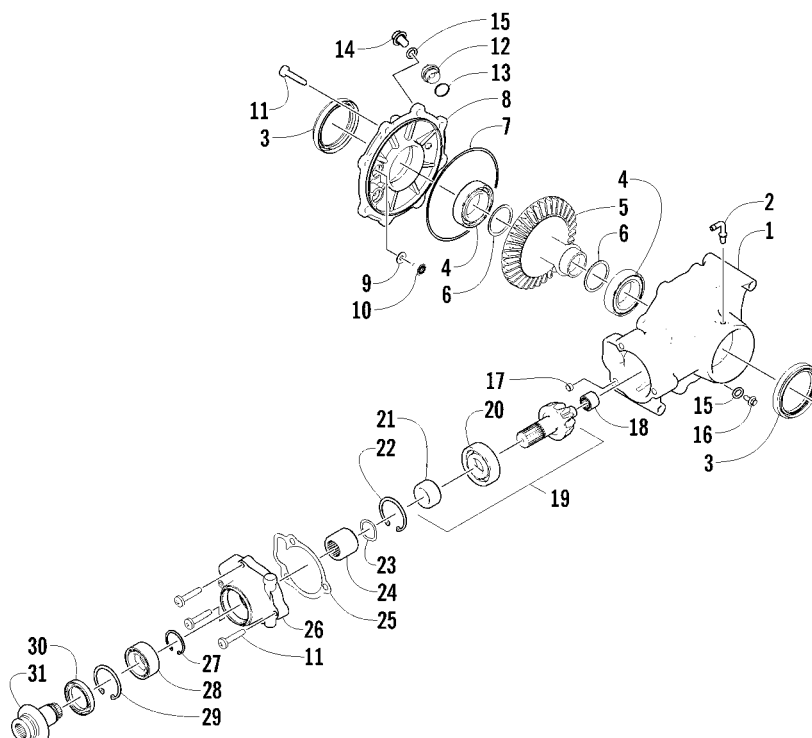

REAR DRIVE GEARCASE ASSEMBLY

0745-864


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
-	1502-879	X	1	Complete Rear Drive Gearcase Assembly	12	0402-333		1	Plug, Magnetic (inc. 13)
1	1502-896	X	1	Housing, Gearcase	13	0423-154		1	● O-Ring
2	1402-442		1	Fitting, Elbow	14	1402-211		1	Plug, Oil Level (inc. one No. 15)
3	1402-950	X	2	Seal	15	0423-153		2	● O-Ring
4	0402-393		2	Bearing	16	1402-210		1	Plug, Fill (inc. one No. 15)
5	1402-032		1	Gear, Ring - 36T	17	0402-411		1	Pin, Dowel
6	0402-405	AR		Shim, 41 x 49 x 1.3 mm	18	0402-328		1	Bearing
	0402-406	AR		Shim, 41 x 49 x 1.4 mm	19	1502-863	X	1	Gear, Pinion - Assembly - 10T (inc. 20-21)
	0402-407	AR		Shim, 41 x 49 x 1.5 mm	20	0402-327		1	● Bearing
	0402-408	AR		Shim, 41 x 49 x 1.6 mm	21	1402-977	X	1	● Collar, Retaining
	0402-409	AR		Shim, 41 x 49 x 1.7 mm	22	1423-067	X	1	Ring, Retaining
7	0423-149		1	O-Ring	23	0402-982		1	Washer, Wave
8	1502-897	X	1	Cover, Gearcase	24	0402-981		1	Collar, Shaft
9	0402-429	AR		Shim, 6.3 x 18 x 1.3 mm	25	0402-947		1	Gasket, Flange
	0402-430	AR		Shim, 6.3 x 18 x 1.4 mm	26	0502-529		1	Housing, Pinion
	0402-431	AR		Shim, 6.3 x 18 x 1.5 mm	27	0423-417		1	Ring, Retaining
	0402-432	AR		Shim, 6.3 x 18 x 1.6 mm	28	1402-043		1	Bearing
	0402-433	AR		Shim, 6.3 x 18 x 1.7 mm	29	0423-423		1	Ring, Retaining
10	0402-326		1	Button, Thrust	30	1402-011		1	Seal
11	0423-118		11	Screw, Self-Tapping	31	1502-085		1	Shaft, Input

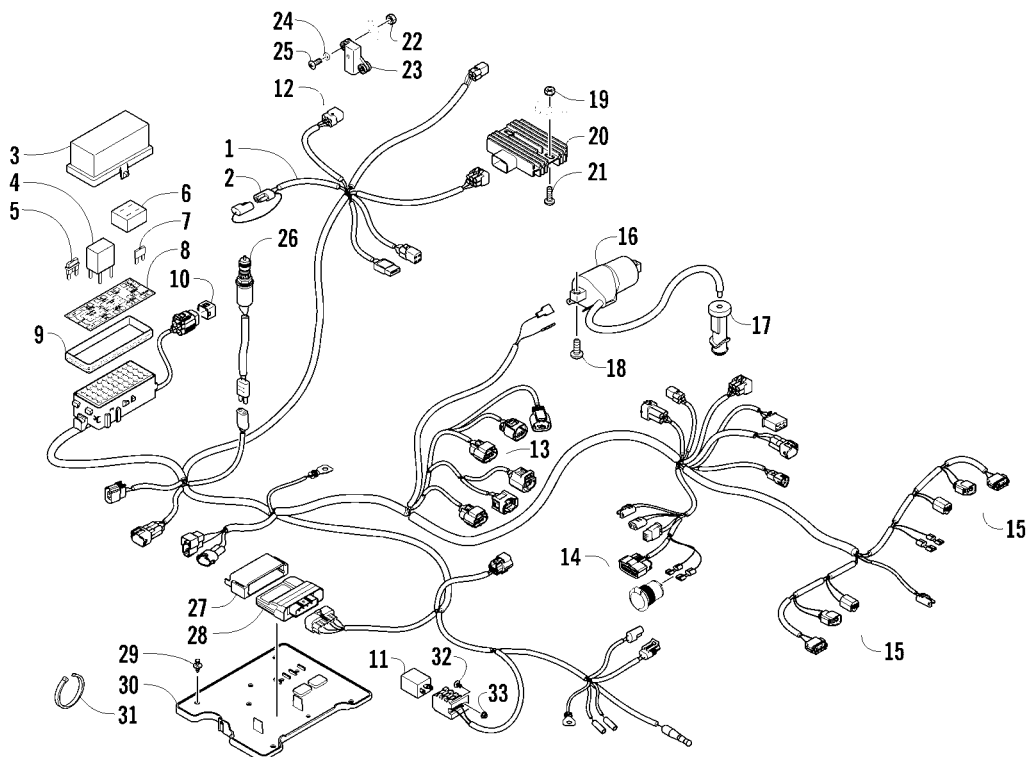

WIRING HARNESS ASSEMBLY

0745-767


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0486-348		1	Harness, Main (inc. 2-10)	16	0824-043		1	Coil, Ignition
2	0486-164		1	● Tether, Accessory Connector	17	0824-049		1	Cap, Spark Plug
3	0430-085		1	● Cover, Fuse Block	18	8476-620		2	Screw, Machine
4	0430-045		5	● Relay (4-Pin) - 20 Amp	19	0623-038		2	Nut w/Washer
5	0430-034		1	● Diode	20	0824-037		1	Regulator, Voltage
6	0430-037		1	● Holder, Fuse	21	8476-625		2	Screw, Machine
7	0430-032		5	● Fuse - 10 Amp	22	0423-493		2	Nut w/Washer
	0430-031		4	● Fuse - 15 Amp	23	0409-064		1	Sensor, Tilt
	0430-030		2	● Fuse - 30 Amp	24	0123-802		2	Washer
8	2411-080		1	● Decal, Fuse Block	25	8468-425		2	Screw, Machine
9	0430-086		1	● Seal	26	0409-089		1	Switch, Brake - Assembly
10	0430-097		1	● Cover, Diagnostics Connector	27	0430-076		1	Cushion, ECU
11	0430-049		1	Flasher	28	0530-041		1	ECU
12	1436-416		1	Repair Kit, Connector - Tilt Sensor	29	0623-362		3	Rivet, Reinstallable
13	1436-417		1	Repair Kit, Connector - Idle Speed Control	30	2406-643		1	Tray, Electrical
14	1436-415		1	Repair Kit, Connector - LCD Gauge	31	0123-788		AR	Tie, Cable - 8 in.
15	1436-424		AR	Repair Kit, Connector - Headlight/Turn Signal/Position		0123-903		AR	Tie, Cable - 11.5 in.
					32	8476-516		1	Screw, Machine
					33	8427-502		1	Nut, Lock

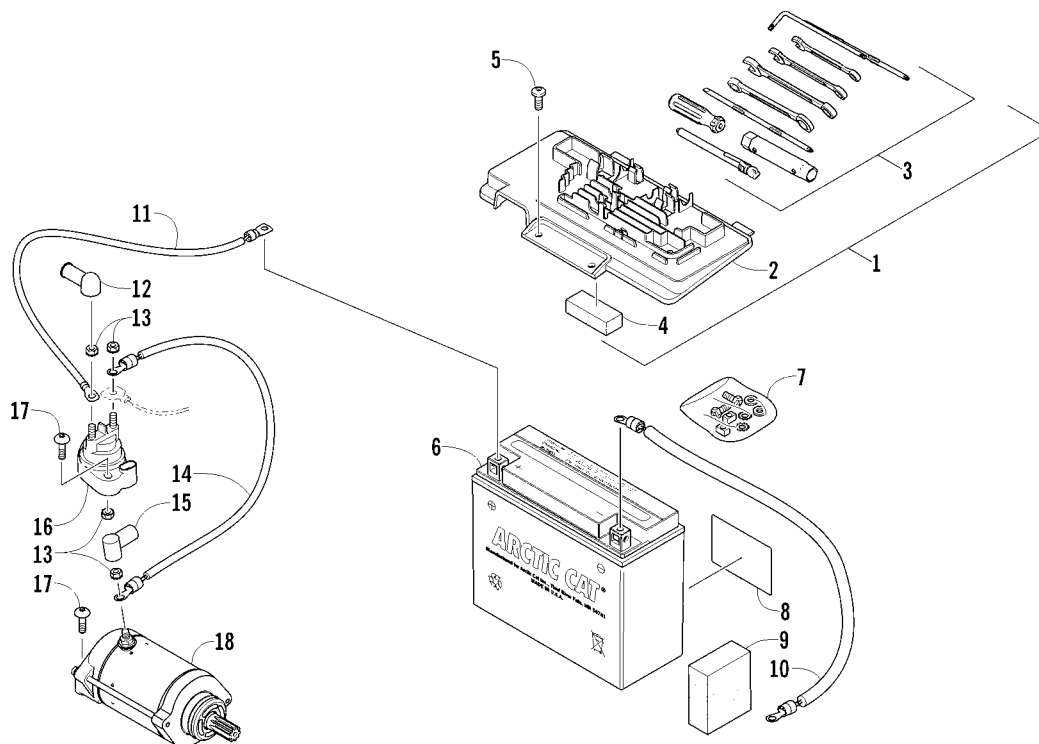

BATTERY AND STARTER ASSEMBLY

0745-257


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	5991-655		1	Battery Cover/Tool Tray Assembly (inc. 2-4)	10	0445-070		1	Cable, Battery/Ground
2	2406-815		1	● Cover, Battery	11	0445-062		1	Cable, Battery/Solenoid
3	0444-122		1	● Kit, Tool	12	0645-327		1	Boot, Terminal
4	0417-016		1	● Pad, Battery	13	0623-038		5	Nut w/Washer
5	8476-620		2	Screw, Machine	14	0445-064		1	Cable, Solenoid/Starter (inc. 15)
6	0645-480		1	Battery Assembly (inc. 7-8)	15	0645-019		1	● Boot, Terminal
7	0445-082		1	● Kit, Hardware	16	0445-058		1	Solenoid
8	0645-430		1	● Decal, Warning	17	8476-625		4	Screw, Machine
9	0417-017		1	Foam, Battery	18	0825-013		1	Motor, Starter - Assembly

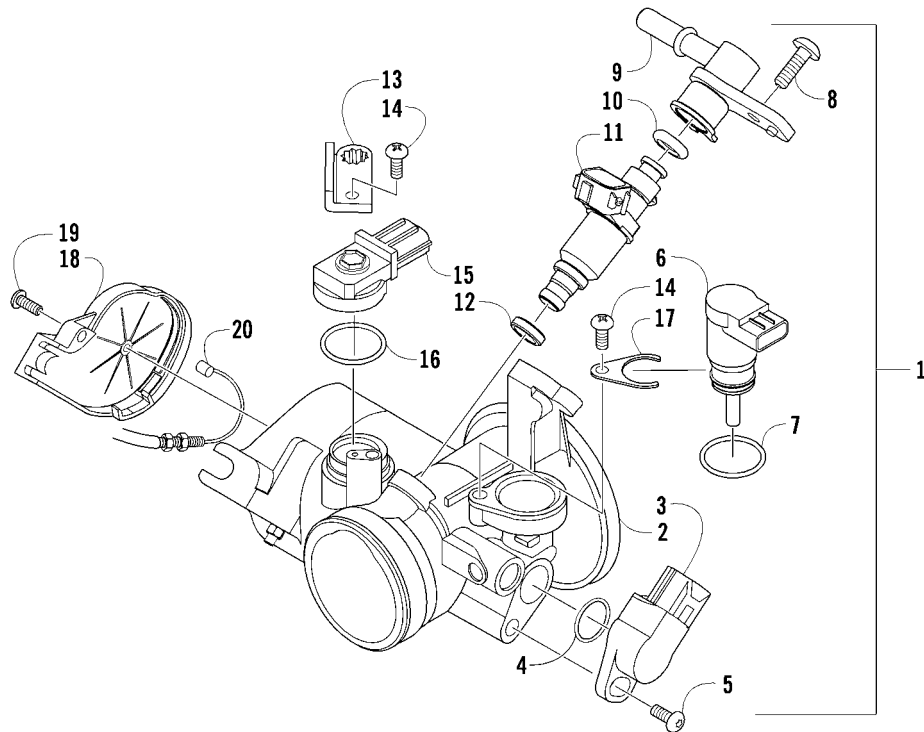

THROTTLE BODY ASSEMBLY

0742-670


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0470-753		1	Throttle - Assembly (inc. 2-19)	11	0470-762		1	● Injector, Fuel
2	—		1	● Throttle Body - Not a Service Part	12	0470-768		1	● Seal
3	0430-072		1	● Sensor, Throttle Position	13	5507-227		1	● Bracket, MAP Sensor
4	5507-234		1	● O-Ring	14	5507-117		2	● Screw, Machine
5	5507-231		1	● Screw, Machine	15	0430-073		1	● Sensor, MAP
6	0430-074		1	● Valve, ISC	16	5507-232		1	● O-Ring
7	5507-233		1	● O-Ring	17	5507-229		1	● Plate, ISC Valve
8	5507-238		1	● Screw, Machine	18	5507-223		1	● Cover
9	0470-687		1	● Rail, Fuel	19	5507-037		1	● Screw, Machine
10	0470-767		1	● O-Ring	20	0487-057		1	Cable, Throttle

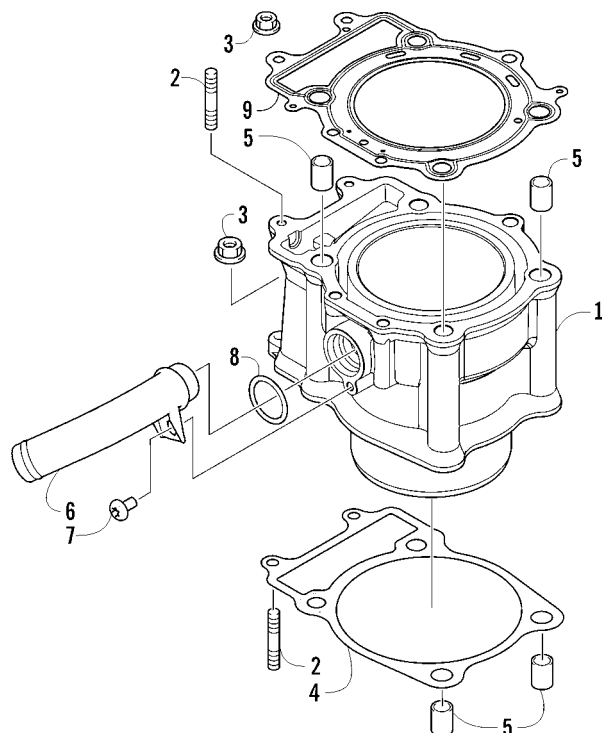

CYLINDER ASSEMBLY

0744-071


Ref	Part No.	New Qty	Description	Ref	Part No.	New Qty	Description
1	0804-051	1	Cylinder	6	0804-047	1	Union, Coolant Hose
2	0827-002	4	Bolt, Stud	7	8468-612	1	Screw, Machine
3	8424-604	4	Nut	8	0830-007	1	O-Ring
4	0830-084	1	Gasket, Base	9	0830-097	1	Gasket, Cylinder Head
5	0829-002	4	Pin, Dowel				

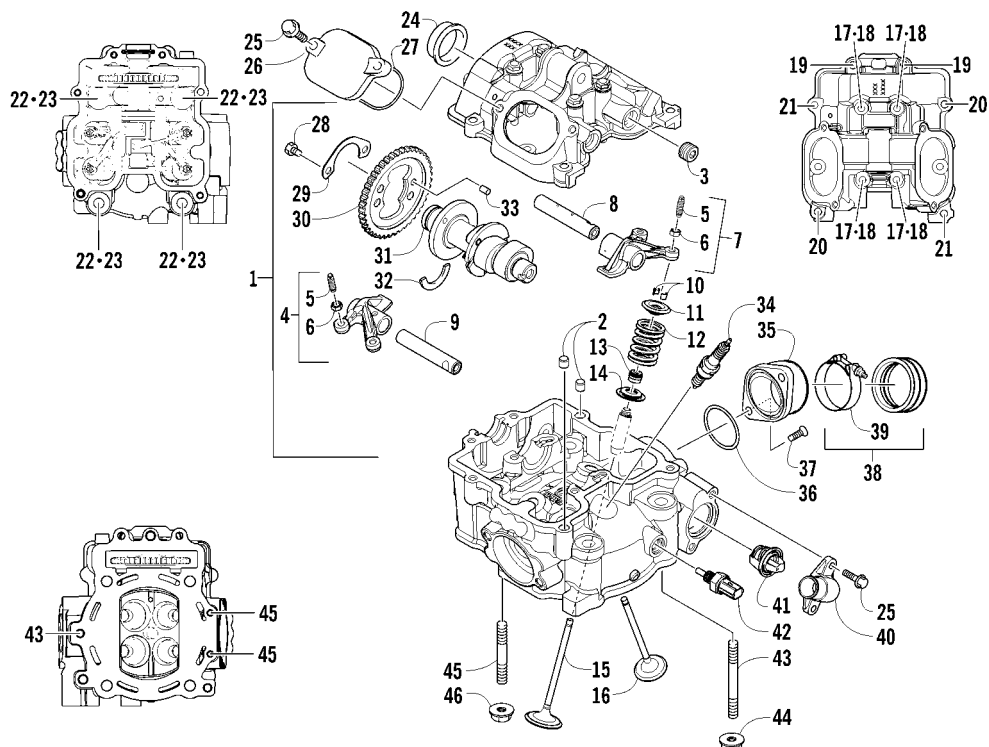

CYLINDER HEAD AND CAMSHAFT/VALVE ASSEMBLY

0745-901


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0808-175		1	Head, Cylinder - Assembly (inc. 2-17)	23	0830-147		4	Washer
2	0829-048		2	● Pin, Dowel	24	0808-077		1	Plug, Cylinder Head
3	0831-092	X	2	● Plug, Shaft	25	0826-007		6	Screw, Cap
4	0809-237		1	● Arm, Valve Rocker - Exhaust (inc. two No. 5-6)	26	0808-003		2	Cap, Inspection
5	0809-240		4	●● Screw, Adjuster	27	0830-167		2	O-Ring
6	0827-059		4	●● Nut	28	0826-034		2	Screw, Cap
7	0809-234		1	● Arm, Valve Rocker - Intake (inc. two No. 5-6)	29	0828-004		1	Plate, Retainer
8	0809-241		1	● Shaft, Rocker Arm - Intake	30	0809-212	X	1	Sprocket
9	0809-242		1	● Shaft, Rocker Arm - Exhaust	31	0809-245		1	Camshaft
10	0809-233		8	● Cotter, Valve	32	0809-003		1	C-Ring
11	0809-232		4	● Retainer, Spring	33	0829-049		1	Pin, Dowel
12	0809-231		4	● Spring, Valve	34	0217-799		1	Spark Plug - CPR8E
13	0830-186		4	● Seal, Oil	35	0470-668		1	Flange, Intake Manifold
14	0809-230		4	● Seat, Spring - Valve	36	0830-090		1	O-Ring
15	0809-228		2	● Valve, Intake	37	0826-008		2	Screw, Machine
16	0809-229		2	● Valve, Exhaust	38	0437-069		1	Boot (inc. 39)
17	0826-149		4	● Screw, Cap	39	1423-041		1	● Clamp
18	0830-155		4	Gasket	40	0808-008		1	Cover, Thermostat
19	0826-002		2	Screw, Cap	41	0808-078		1	Thermostat
20	0826-005		2	Screw, Cap	42	0808-124		1	Sensor, Engine Coolant Temperature
21	0826-006		2	Screw, Cap	43	0827-031		1	Bolt, Stud
22	0808-037		4	Screw, Cap	44	8424-804		1	Nut
					45	0827-030		2	Bolt, Stud
					46	8424-604		2	Nut

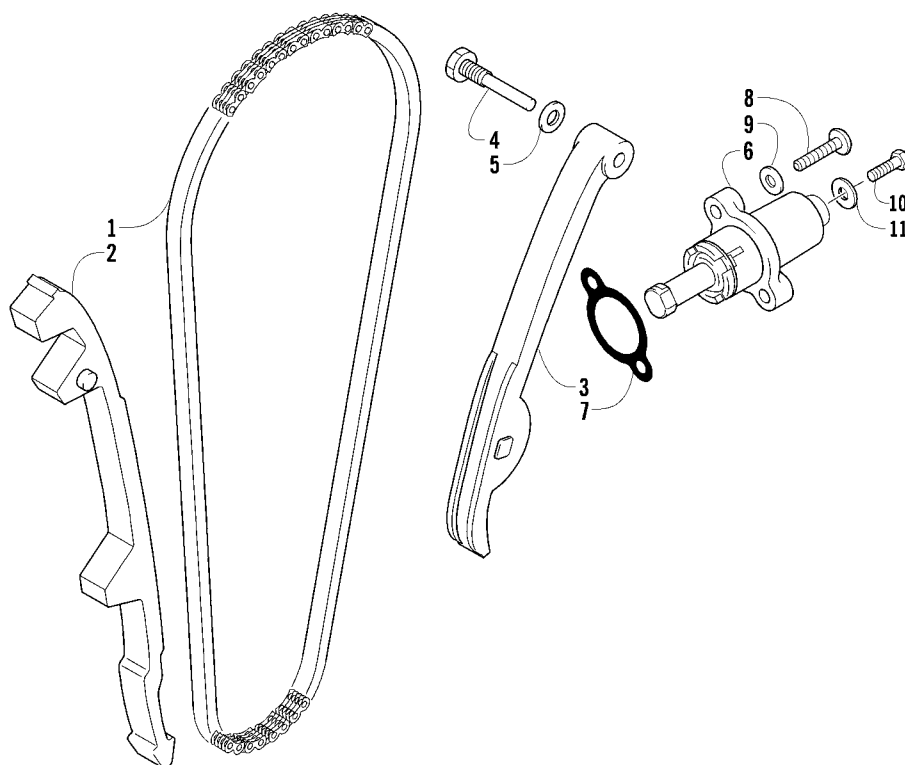

CAM CHAIN ASSEMBLY

0732-308

Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0810-001		1	Chain, Cam	7	0830-018		1	Gasket
2	0810-002		1	Guide, Chain	8	8468-625		2	Screw, Machine
3	0810-003		1	Tensioner, Chain	9	0830-107		2	Gasket
4	0826-036		1	Pivot, Tensioner	10	8400-610		1	Screw, Cap
5	0830-025		1	Washer, Crush	11	0828-129		1	Washer
6	0810-004		1	Adjuster, Tensioner - Assembly					

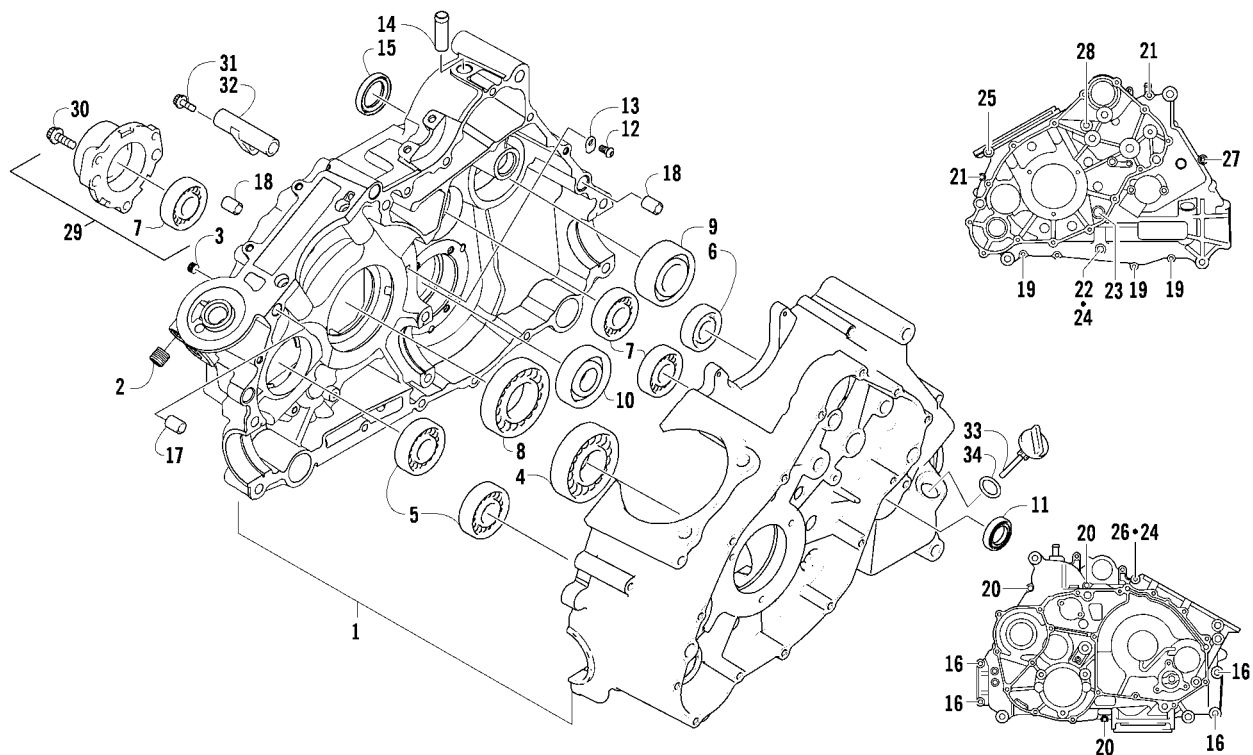


CRANKCASE ASSEMBLY

0743-953

Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0801-151		1	Crankcase Assembly (inc. 2-15)	19	8468-645		3	Screw, Machine
2	0812-064		2	● Plug	20	8468-655		3	Screw, Machine
3	0801-002		1	● Plug	21	8468-675		2	Screw, Machine
4	0832-043		1	● Bearing	22	8412-860		1	Screw, Cap
5	0832-044		2	● Bearing	23	0826-017		1	Screw, Cap
6	0832-049		1	● Bearing	24	0830-008		2	Gasket
7	0832-050		3	● Bearing	25	0826-019		1	Screw, Cap
8	0832-042		1	● Bearing	26	0826-018		1	Screw, Cap
9	0832-048		1	● Bearing	27	8468-695		1	Screw, Machine
10	0832-077		1	● Bearing	28	8468-680		1	Screw, Machine
11	0822-052		1	● Seal, Countershaft	29	0801-029		1	Housing, Secondary Shaft (inc. one No. 7)
12	0826-100		4	● Screw, Machine	30	0826-105		3	Screw, Cap
13	0822-010		4	● Retainer, Bearing	31	0826-038		1	Screw, Cap
14	0801-028		1	● Pipe, Breather	32	0801-069		1	Pipe, Breather
15	0830-035		1	● Seal, Driveshaft	33	0801-179		1	Stick, Oil Level
16	8412-850		4	Screw, Cap	34	0830-010		1	O-Ring
17	0829-003		1	Pin, Dowel					
18	0829-002		5	Pin, Dowel					

0739-932


33

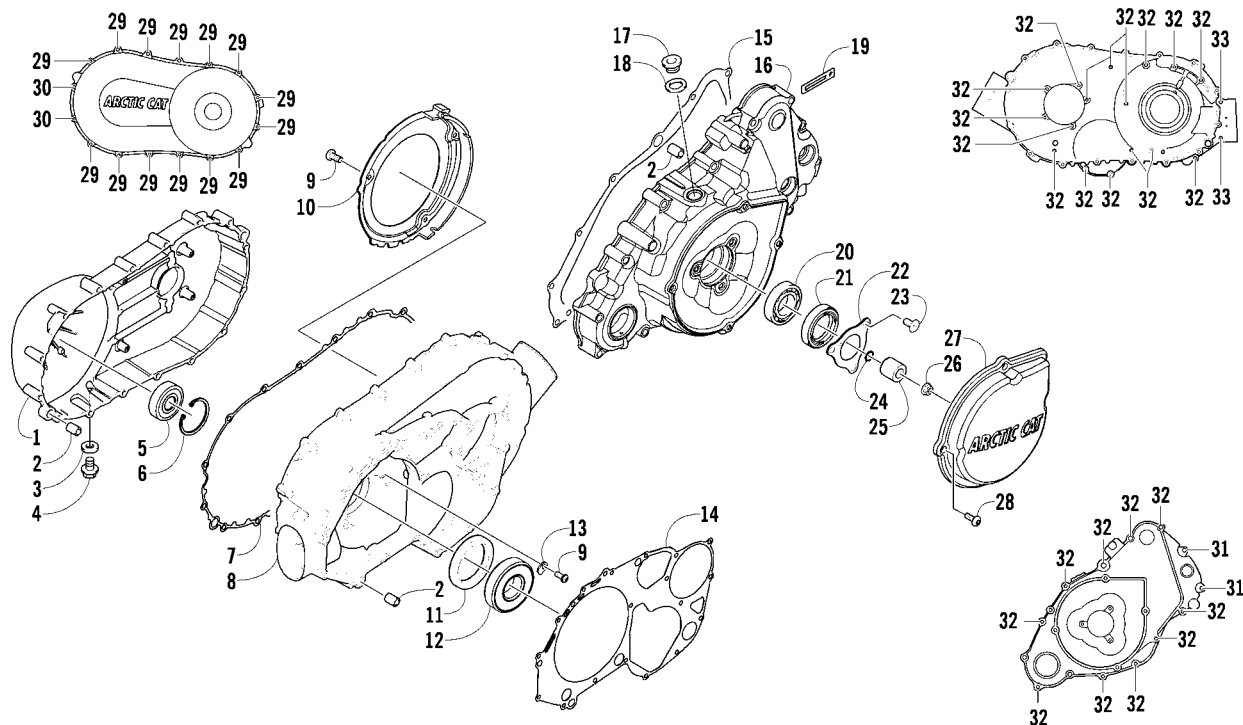

CLUTCH/V-BELT/MAGNETO COVER ASSEMBLY

0743-969


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0806-089		1	Cover, V-Belt	18	0830-015		1	Washer, Crush
2	0829-002		6	Pin, Dowel	19	3002-964		1	Clamp, Wire
3	0830-013		1	Washer, Crush	20	1602-981		1	Bearing
4	8408-812		1	Screw, Cap	21	0830-158		1	Seal
5	0832-060		1	Bearing	22	0805-008		1	Retainer, Seal
6	0831-078		1	Ring, Retaining	23	0826-031		3	Screw, Machine
7	0830-174		1	Gasket, V-Belt Cover	24	0830-108		1	O-Ring
8	0806-086		1	Cover, Clutch	25	0820-061		1	Bushing
9	0826-029		5	Screw, Machine	26	0827-008		1	Nut
10	0806-048		1	Plate, Air Intake	27	0820-062		1	Cover, Magneto
11	0830-188		1	Seal	28	8468-616		4	Screw, Machine
12	0832-009		1	Bearing	29	8468-645		14	Screw, Machine
13	0822-010		2	Retainer, Bearing	30	8468-655		2	Screw, Machine
14	0830-116		1	Gasket, Clutch Cover	31	8468-625		2	Screw, Machine
15	0830-128		1	Gasket, Magneto Cover	32	8468-640		26	Screw, Machine
16	0806-082		1	Cover, Magneto - Assembly	33	8468-675		2	Screw, Machine
17	0826-155		1	Plug					

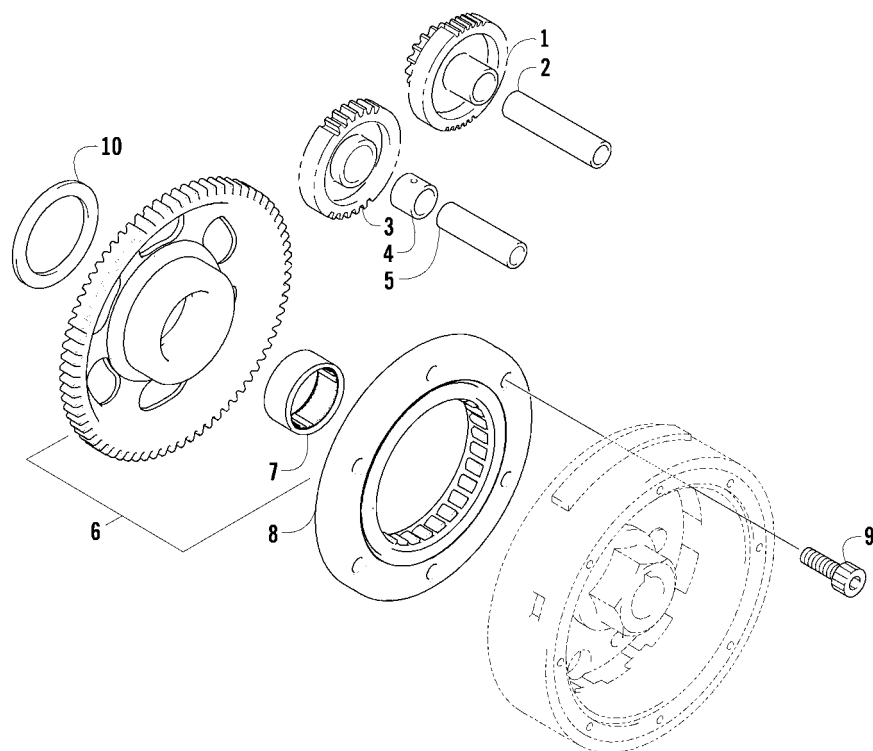

STARTER CLUTCH ASSEMBLY

0739-940


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0815-001	1		Gear, Starter Idler - No. 1	6	0815-004	1		Gear, Starter Clutch (inc. 7)
2	0829-031	1		Shaft, Starter Gear	7	0832-079	1		● Bearing
3	0815-002	1		Gear, Starter Idler - No. 2	8	0802-035	1		Clutch, Starter
4	0815-003	1		Spacer, Starter Idler Gear No. 2	9	0826-069	6		Screw, Machine
5	0829-032	1		Shaft, Starter Gear	10	0828-094	1		Washer

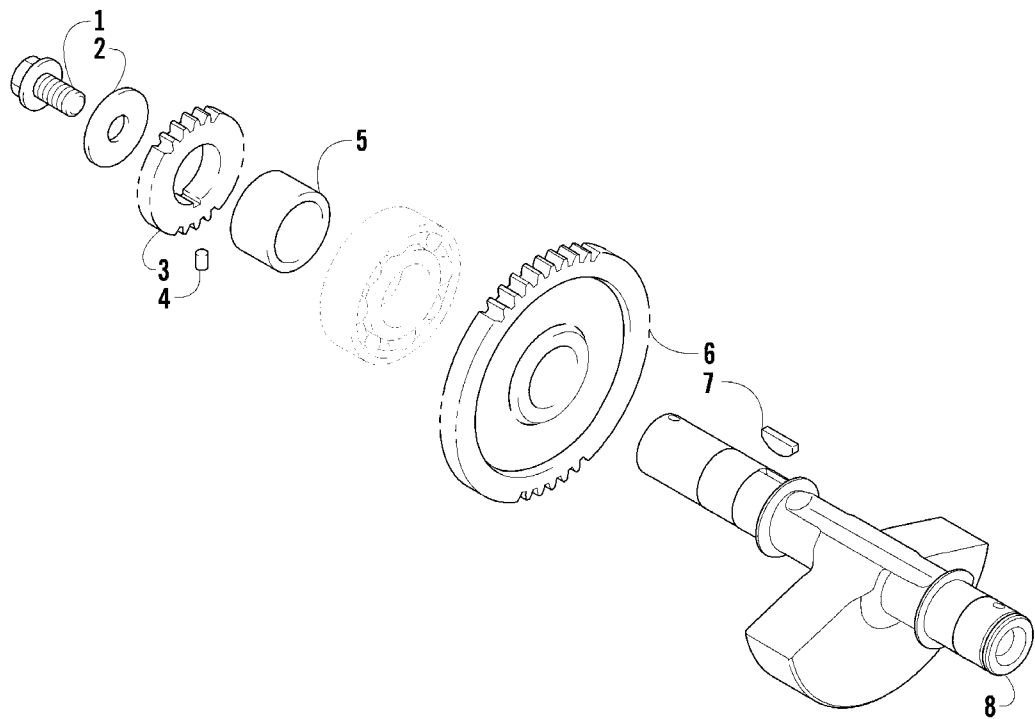

CRANK BALANCER ASSEMBLY

0739-941

Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0826-033		1	Screw, Cap	5	0811-004		1	Spacer
2	0828-003		1	Washer	6	0811-034		1	Gear, Driven
3	0811-003		1	Gear, Oil Pump Drive	7	0829-006		1	Key
4	0829-007		1	Pin, Dowel	8	0805-304	X	1	Balancer, Crank

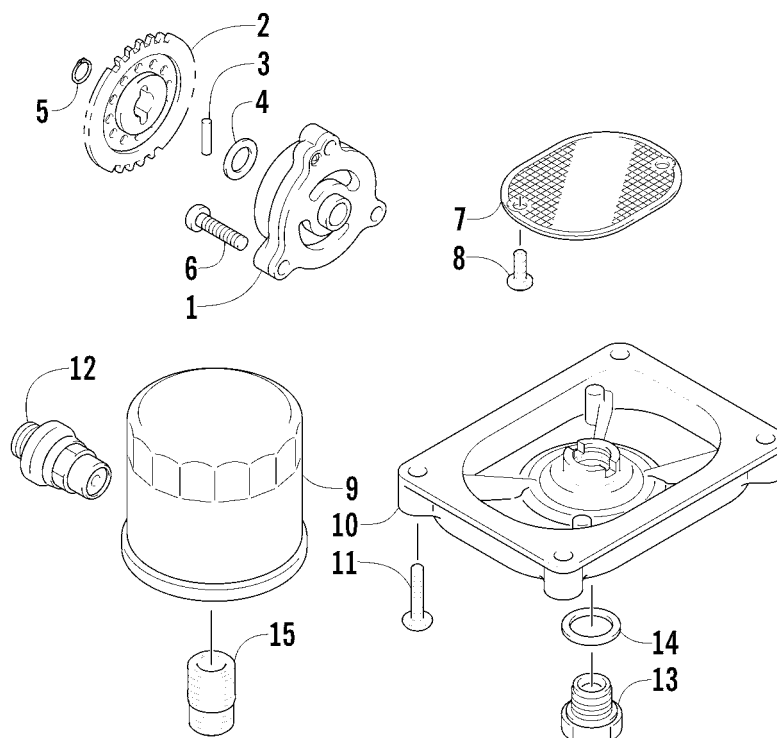


OIL FILTER/PUMP ASSEMBLY

0744-012

Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0812-023	1	1	Pump, Oil	9	0812-029	1	1	Filter, Oil
2	0812-083	1	1	Gear, Driven	10	0812-053	1	1	Cap, Oil Strainer
3	0829-009	1	1	Pin	11	8468-625	4	4	Screw, Machine
4	0828-007	1	1	Washer	12	0812-007	1	1	Valve, Oil-Relief - Assembly
5	0831-002	1	1	Ring, Retaining	13	0812-006	1	1	Plug, Drain
6	0826-039	3	3	Screw, Machine	14	0830-017	1	1	Gasket, Drain Plug
7	0812-057	1	1	Strainer, Oil	15	0812-008	1	1	Union, Oil Filter
8	0826-040	2	2	Screw, Machine					


38

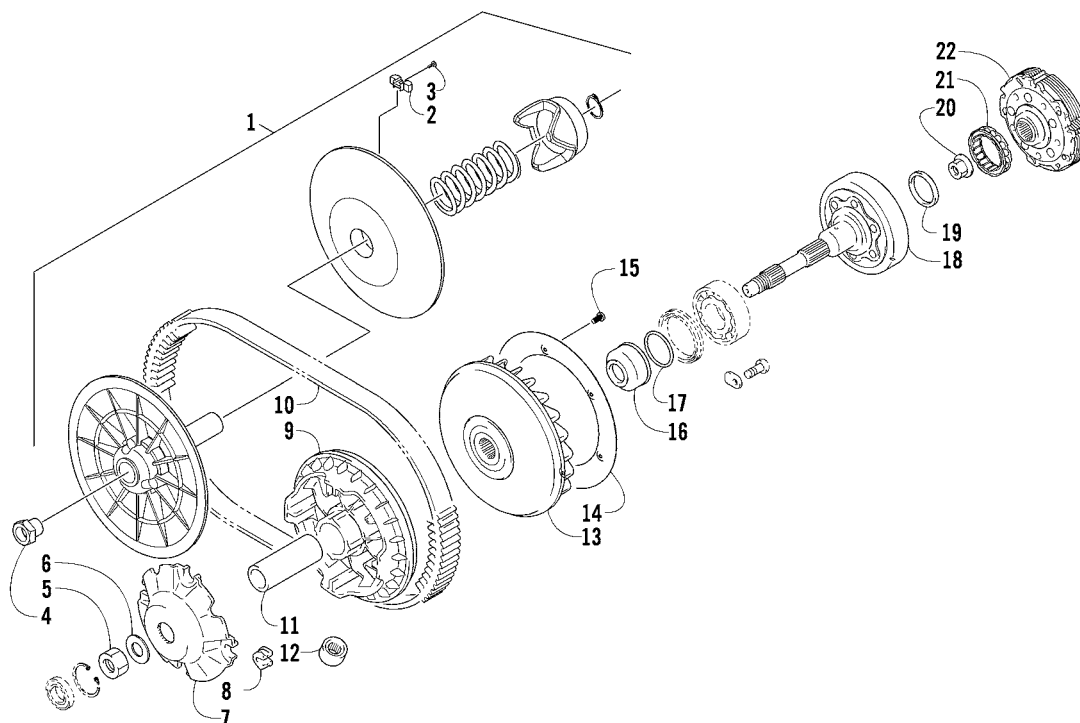

TRANSMISSION ASSEMBLY

0743-967


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0823-353	X	1	Pulley, Driven - Assembly (inc. 2-4)	12	0823-167		8	Roller
2	0823-176		3	● Shoe, Cam	13	0823-272	X	1	Face, Fixed Drive
3	0823-177		3	● Screw, Machine	14	0823-131		1	Shroud, Drive Face
4	0823-178		1	● Nut	15	0623-914		6	Screw, Self-Tapping
5	0827-010		1	Nut	16	0823-015		1	Spacer, Fixed Drive Face
6	0828-106		1	Washer	17	0470-531		1	O-Ring
7	0823-276	X	1	Plate, Movable Drive Face	18	0821-002		1	Housing, Clutch - Assembly
8	0823-277	X	4	Damper, Movable Drive Face	19	0830-189		1	Seal
9	0823-273	X	1	Face, Movable Drive	20	0827-011		1	Nut
10	0823-013		1	Belt, Drive	21	0823-018		1	Clutch, One-Way
11	0823-271	X	1	Spacer	22	0823-310		1	Clutch, Centrifugal - 6 Plate

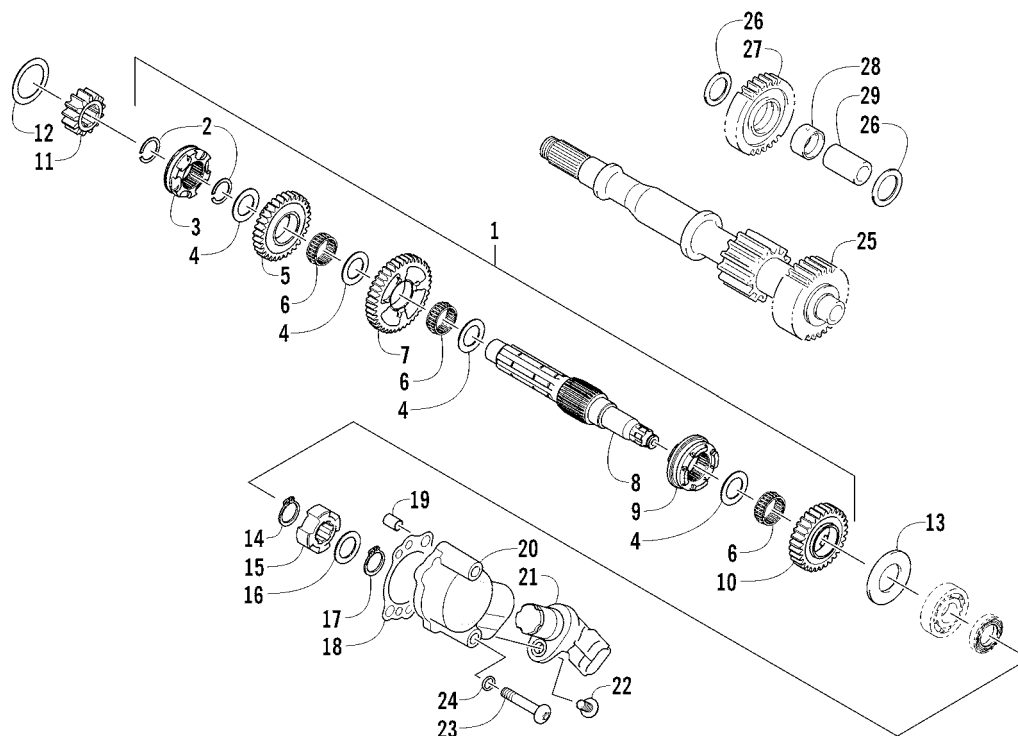

SECONDARY TRANSMISSION ASSEMBLY

0745-260


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0822-124		1	Countershaft Assembly (inc. 2-10)	16	0828-069		1	Washer, Thrust
2	0831-085		2	● Ring, Retaining	17	0831-039		1	Ring, Retaining
3	0822-120		1	● Gear Select, Reverse	18	0830-129		1	Gasket
4	0822-121		4	● Shim	19	0829-023		2	Pin, Dowel
5	0822-119		1	● Gear, Reverse Driven	20	0822-049		1	Housing, Speedometer Sensor
6	0832-082		3	● Bearing	21	0824-042		1	Sensor, Speedometer
7	0822-114		1	● Gear, Driven - Low	22	8468-620		1	Screw, Machine
8	0822-113		1	● Countershaft	23	8468-645		2	Screw, Machine
9	0822-116		1	● Gear Select, Sliding	24	0830-107		2	Gasket
10	0822-115		1	● Gear, Driven - High	25	0822-001		1	Driveshaft
11	0822-125		1	Gear, Drive	26	0828-016		2	Washer, Thrust
12	0828-019		1	Washer, Thrust	27	0822-011		1	Gear, Reverse Idle
13	0828-011		1	Washer	28	0822-012		1	Bushing
14	0831-040		1	Ring, Retaining	29	0822-015		1	Shaft, Reverse Idle
15	0822-050		1	Trigger, Speedometer Sensor					

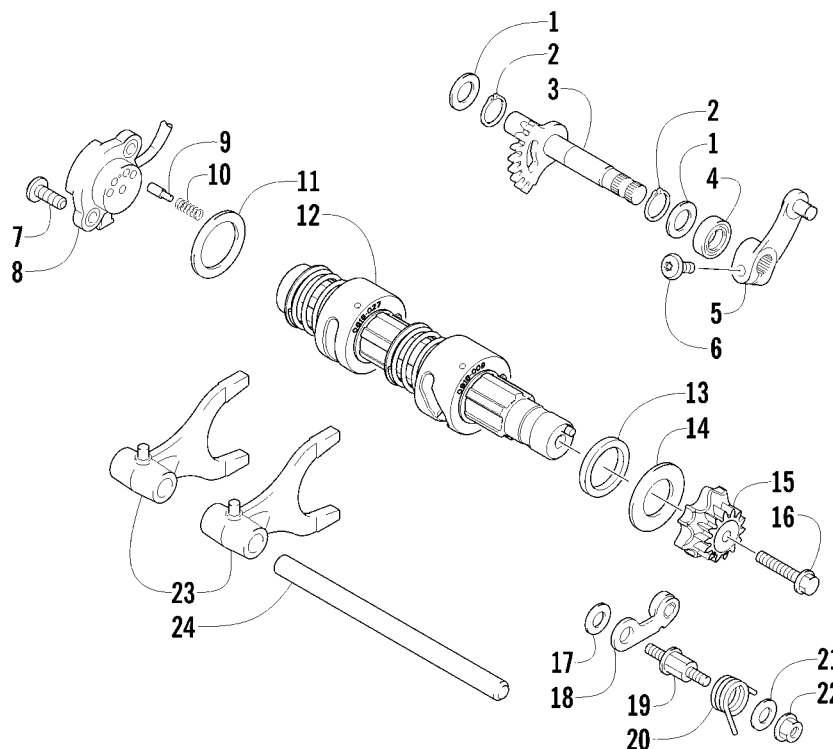

GEAR SHIFTING ASSEMBLY

0745-773


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0828-036		2	Washer	13	0828-131	X	1	Spacer
2	0831-010		2	Ring, Retaining	14	0828-037		1	Washer
3	0818-007		1	Shaft, Sub-Gear Shift	15	0818-089		1	Plate, Gear Shift Cam
4	0830-044		1	Seal, Sub-Gear Shift Shaft	16	0826-006		1	Screw, Cap
5	0818-014		1	Arm, Select	17	0828-038		1	Washer
6	8468-620		1	Screw, Machine	18	0818-002		1	Stopper, Cam
7	8470-520		2	Screw, Machine	19	0818-004		1	Support, Cam Stopper
8	0409-090		1	Switch, Gear Position	20	0818-090		1	Spring
9	0818-013		2	Contact	21	0828-035		1	Washer
10	0818-017		2	Spring	22	8424-602		1	Nut
11	0828-040		1	Washer	23	0818-072		2	Fork, Shift
12	0818-046		1	Shaft, Gear Shift - Assembly	24	0818-006		1	Shaft, Shift Fork

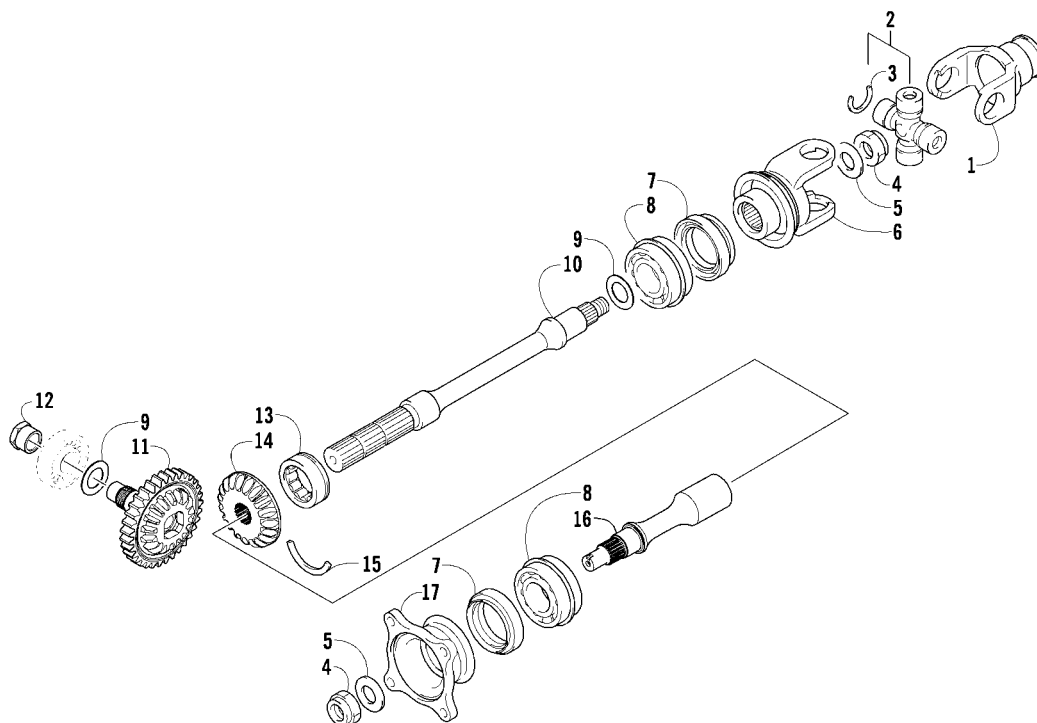

SECONDARY DRIVE ASSEMBLY

0743-766

Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0819-063		1	Yoke, Propeller Shaft Joint	10	0819-089		1	Shaft, Secondary Driven - Front
2	1402-164		1	Joint, Universal - Set (inc. 3)	11	0822-131		1	Gear, Secondary Drive
3	0423-450		4	● Ring, Retaining	12	0827-052		1	Nut
4	0827-013		2	Nut	13	0832-016		1	Bearing
5	0828-020		2	Washer	14	0822-106		1	Gear, Secondary Driven
6	0819-061		1	Yoke, Drive Output	15	0819-011		1	Ring, Driven Bearing
7	0830-043		2	Seal, Oil	16	0819-053		1	Shaft, Secondary Driven - Rear
8	0832-017		2	Bearing	17	0819-005		1	Flange, Output Joint
9	0828-021	AR		Shim, 25 x 34 x 0.25 mm					
	0828-022	AR		Shim, 25 x 34 x 0.30 mm					
	0828-023	AR		Shim, 25 x 34 x 0.70 mm					
	0828-024	AR		Shim, 25 x 34 x 0.90 mm					
	0828-025	AR		Shim, 25 x 34 x 0.95 mm					
	0828-026	AR		Shim, 25 x 34 x 1.00 mm					
	0828-027	AR		Shim, 25 x 34 x 1.05 mm					
	0828-028	AR		Shim, 25 x 34 x 1.10 mm					
	0828-029	AR		Shim, 25 x 34 x 1.15 mm					

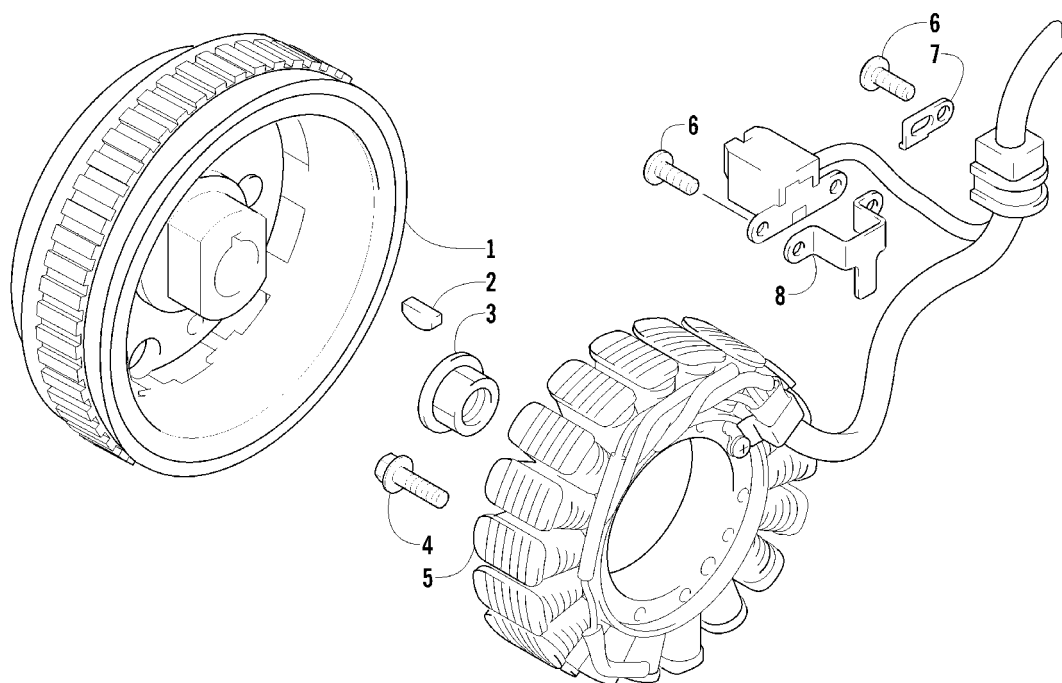

MAGNETO ASSEMBLY

0746-022

Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0802-048	1	1	Rotor/Flywheel	5	0802-041	1	1	Stator - Assembly
2	0829-012	1	1	Key	6	8470-510	3	3	Screw, Machine
3	0827-014	1	1	Nut	7	0802-015	1	1	Clamp - No. 1
4	8409-632	3	3	Screw, Cap	8	0802-016	1	1	Clamp - No. 2

