



Illustrated Parts Manual

2013



Prowler XTZ

Model Number U2013P4W1PUSU

Model Number U2013P4W1POSU - International


TABLE OF CONTENTS

2013 Prowler XTZ

(Model No. U2013P4W1PUSU) (Model No. U2013P4W1POSU - International)

HOOD AND HEADLIGHT ASSEMBLY	1
CONSOLE AND FLOOR PANEL ASSEMBLY	2
CARGO BOX AND TAILGATE ASSEMBLY	3
FRAME AND RELATED PARTS	4
TILT FRAME ASSEMBLY	5
SEAT ASSEMBLY	6
ROPS AND TAILLIGHT ASSEMBLY	7
DASH ASSEMBLY	8
STEERING ASSEMBLY	9
FRONT SUSPENSION ASSEMBLY	10
REAR SUSPENSION ASSEMBLY	11
SWAY BAR ASSEMBLY	12
WHEEL AND TIRE ASSEMBLY	13
FRONT BRAKE ASSEMBLY	14
REAR AND PARKING BRAKE ASSEMBLY	15
ACCELERATOR ASSEMBLY	16
GAS TANK ASSEMBLY	17
SHIFTER ASSEMBLY	18
AIR INTAKE ASSEMBLY	19
ENGINE AND EXHAUST	20
COOLING ASSEMBLY	21
DRIVE TRAIN ASSEMBLY	22
FRONT DRIVE GEARCASE ASSEMBLY	23
REAR DRIVE GEARCASE ASSEMBLY	24
WIRING HARNESS ASSEMBLY	25
BATTERY AND STARTER MOTOR ASSEMBLY	26
THROTTLE BODY ASSEMBLY	27
CYLINDER ASSEMBLY	28
CYLINDER HEAD AND CAMSHAFT/VALVE ASSEMBLY	29
CAM CHAIN ASSEMBLY	30
CRANKCASE ASSEMBLY	31
CRANKSHAFT AND PISTON ASSEMBLY	32
STARTER CLUTCH ASSEMBLY	33
OIL PUMP ASSEMBLY	34
WATER PUMP ASSEMBLY	35
TRANSMISSION ASSEMBLY	36
SECONDARY TRANSMISSION ASSEMBLY	37
GEAR SHIFTING ASSEMBLY	38
SECONDARY DRIVE ASSEMBLY	39
MAGNETO ASSEMBLY	40
MAGNETO SIDE ENGINE COVERS	41
CLUTCH SIDE ENGINE COVERS	42


■ **NOTE:** The illustrations used in this Parts Manual are for reference to replacement part numbers only and are not to be used for assembly. For assembly procedures, use an Arctic Cat Service Manual. For a complete list of related items, refer to the current accessory catalog.

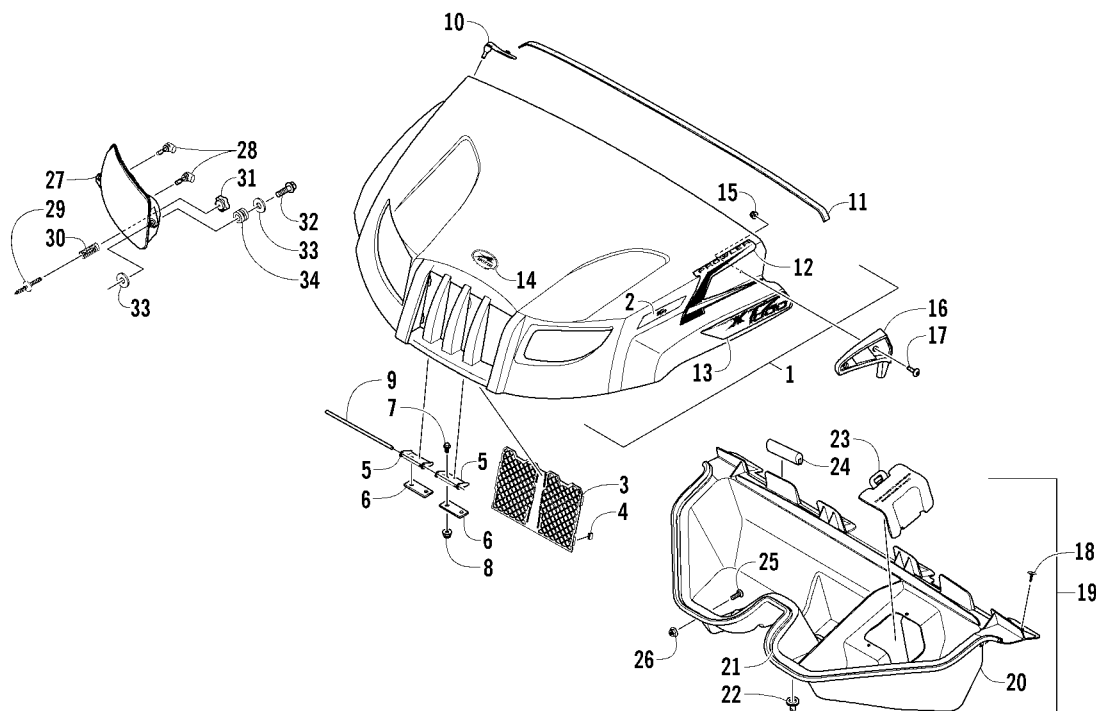

HOOD AND HEADLIGHT ASSEMBLY

0746-856

Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	4506-481		1	Hood - Assembly - Orange (inc. 2)	17	0423-356		4	Screw, Shoulder
2	0411-818		1	● Decal, Reflector - Right - Amber	18	0423-545		4	Screw, Shoulder
	0411-819		1	● Decal, Reflector - Left - Amber	19	4506-037		1	Storage, Under-Hood - Assembly (inc. 20-23)
3	1406-733		1	Screen, Grille	20	2416-520		1	● Box, Storage
4	0123-987		8	Clip, U	21	1406-946		1	● Seal, Storage Box
5	2516-606		2	Bracket, Hood	22	0470-442		1	● Valve, Drain
6	2506-868	AR		Shim, Hood	23	1406-944		1	● Cover, Access - Master Cylinder
7	8408-820		4	Screw, Cap	24	0417-014	AR		Trim, Dash Support
8	8427-802		4	Nut, Lock	25	8476-616		2	Screw, Machine
9	1406-915		1	Pin, Hood	26	8424-602		2	Nut
10	2606-624		2	Strap, Hold-Down	27	0509-044		1	Headlight Assembly - Right (inc. 28)
11	0417-013		1	Trim, Hood/Dash		0509-035		1	Headlight Assembly - Left (inc. 28)
12	3411-222	X	1	Decal, Hood - "Prowler" - Right	28	0409-055		4	● Bulb, Headlight
	3411-223	X	1	Decal, Hood - "Prowler" - Left	29	0423-514		2	Stud, Adjuster
13	3411-224	X	1	Decal, Hood - "XTZ 1000" - Right	30	0423-522		2	Spring, Adjuster
	3411-225	X	1	Decal, Hood - "XTZ 1000" - Left	31	0423-513		2	Knob, Adjuster
14	9611-751	X	1	Decal, "Arctic Cat"	32	0623-785		4	Screw, Self-Tapping
15	8427-602		4	Nut, Lock	33	8050-217		8	Washer
16	2416-512		1	Louver - Right	34	0423-447		4	Grommet
	2416-513		1	Louver - Left					

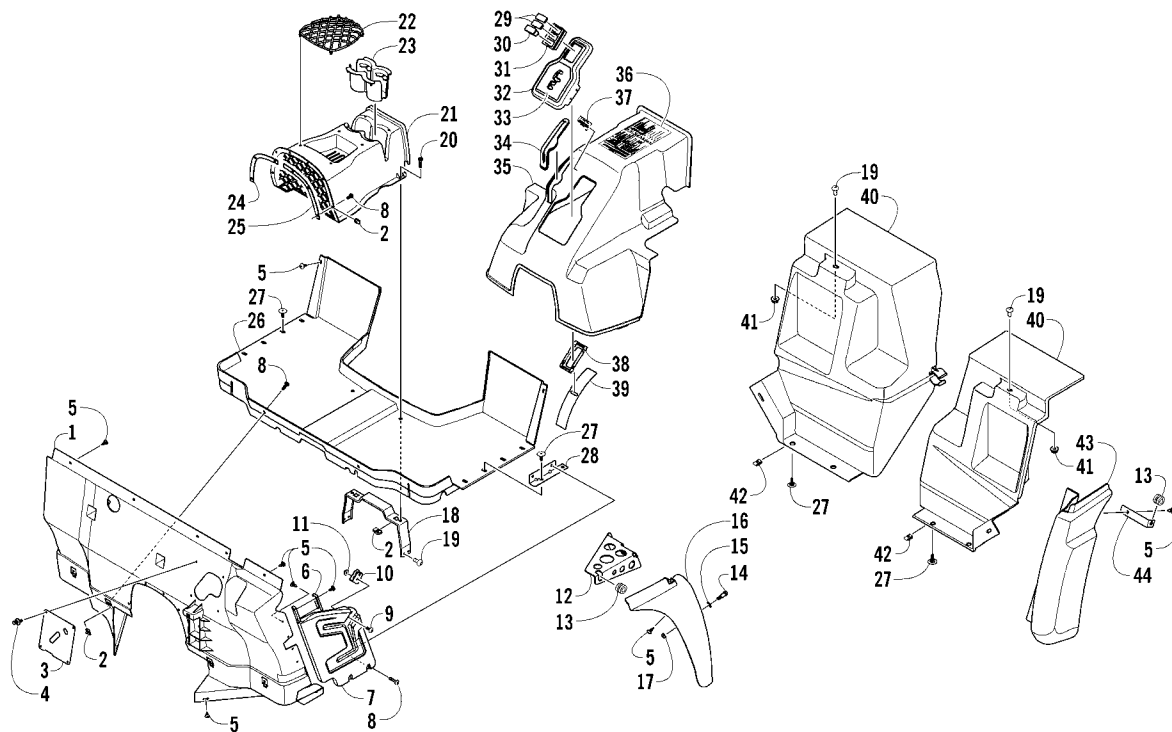


CONSOLE AND FLOOR PANEL ASSEMBLY

0746-858

Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	4506-021		1	Panel, Fender - Inner	24	0417-019		1	Foam, Console
2	0423-577		15	Clip, U-Nut	25	0417-018		1	Foam, Console
3	0405-427		1	Boot, Steering	26	2416-085		1	Floor
4	0623-362		4	Rivet, Reinstallable	27	0423-545		12	Screw, Shoulder
5	0623-784	AR		Screw, Self-Tapping	28	4506-260		1	Bracket, Side Panel - Right
6	4506-596		2	Cap, Reinforcement		4506-261		1	Bracket, Side Panel - Left
7	2416-848		2	Panel, Side	29	0409-070		2	Plug, Switch-Hole
8	8468-625		14	Screw, Machine	30	0409-071		1	Switch, Reverse Override
9	0423-419		4	Screw, Machine	31	0409-069		1	Panel, Switch-Mount
10	2416-846		2	Latch, Side Restraint	32	1502-520		1	Gate, Shift (inc. 33)
11	0423-540		4	Nut, Lock	33	1411-985		1	● Decal, Shift Gate
12	2506-066		1	Bracket, Support - Right	34	2406-960		1	Boot, Parking Brake Lever
13	2506-067		1	Bracket, Support - Left	35	2406-951		1	Console, Center
14	0423-447		4	Grommet	36	2411-879		1	Decal, Warning - Console
15	0623-855		2	Screw, Shoulder	37	2411-094		1	Decal, Brake Lever
16	8050-217		2	Washer	38	1402-793		1	Slide, Shift Gate
17	2506-586		1	Fender, Front - Right - Orange	39	1402-794		1	Slide, Shift
18	2506-587		1	Fender, Front - Left - Orange	40	2416-018		1	Panel, Splash - Right
19	8048-366		2	Nut, Lock		2416-019		1	Panel, Splash - Left
20	2516-313		1	Bracket, Support	41	8424-602		2	Nut
21	8476-616		6	Screw, Machine	42	0423-466		4	Clip, U-Nut
22	8468-670		2	Screw, Machine	43	2516-008		1	Fender, Rear - Lower - Right - Orange
23	2416-081		1	Console - Front		2516-009		1	Fender, Rear - Lower - Left - Orange
	2416-111		1	Net, Storage	44	2516-326		2	Bracket, Fender Support - Lower
	2416-109		1	Insert, Cupholder					

0746-859


3

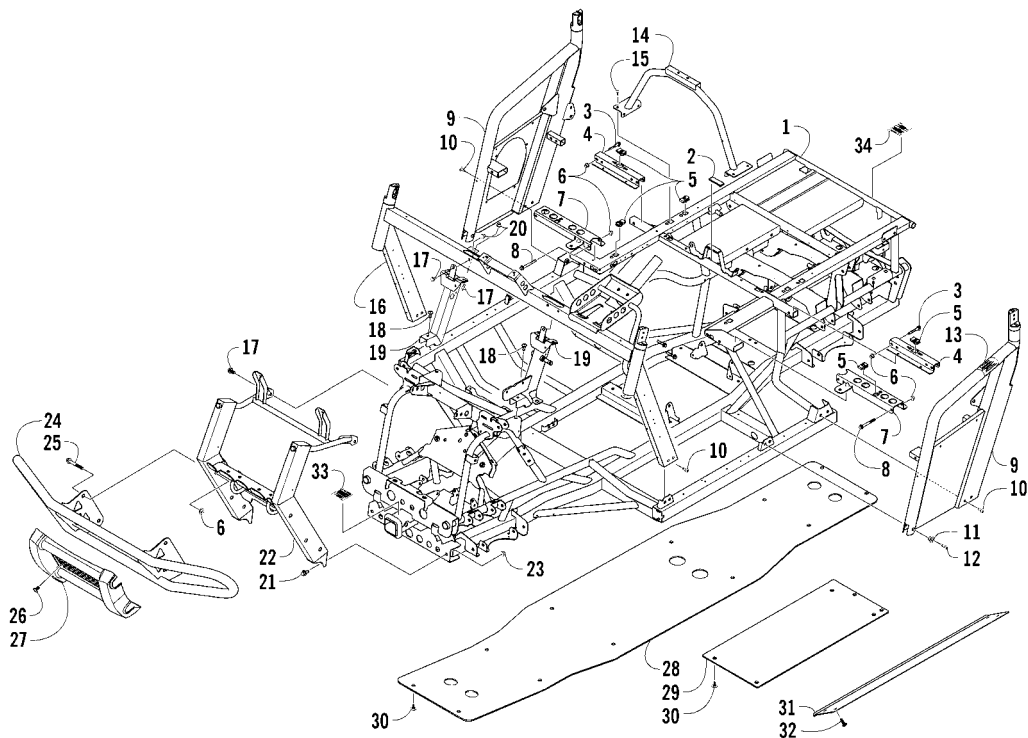

FRAME AND RELATED PARTS

0746-862


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	4506-616		1	Frame, Main (inc. 2)	18	8476-820		2	Screw, Machine
2	0406-879		1	● Bumper, Seat	19	0505-688		1	Bracket, Steering Support - Right
3	8408-850		6	Screw, Cap		1502-930		1	Bracket, Steering Support - Left
4	1506-842		2	Bracket, Seat Support - Rear	20	8424-802		6	Nut
5	0423-577		12	Clip, U-Nut	21	8409-020		2	Screw, Cap
6	8427-802		14	Nut, Lock	22	2516-556		1	Bracket, Mounting - Bumper
7	2516-644		1	Bracket, Seat Support - Front - Right	23	8427-002		2	Nut, Lock
	2516-645		1	Bracket, Seat Support - Front - Left	24	2506-779		1	Bumper
8	8408-870		4	Screw, Cap	25	8408-860		4	Screw, Cap
9	5506-186	X	1	Support, Overhead - Right	26	8477-616		4	Screw, Machine
	5506-187	X	1	Support, Overhead - Left	27	2406-713		1	Fascia, Bumper - Front
10	0423-817		8	Screw, Machine	28	2416-076		1	Plate, Skid - Center
11	1423-051		2	Spacer	29	1406-721		2	Panel, Belly - Side
12	0423-886		2	Screw, Machine	30	0423-545		20	Screw, Shoulder
13	2411-522		1	Decal, Warning - ROPS	31	2506-612		2	Plate, Skid - Side
14	2506-638		1	Support, ROPS	32	0423-849		8	Screw, Self-Tapping
15	8476-616		4	Screw, Machine	33	1411-122		1	Decal, Warning - Towing - Front
16	4506-869	X	1	Support, Steering	34	1411-123		1	Decal, Warning - Towing - Rear
17	8408-820		8	Screw, Cap					

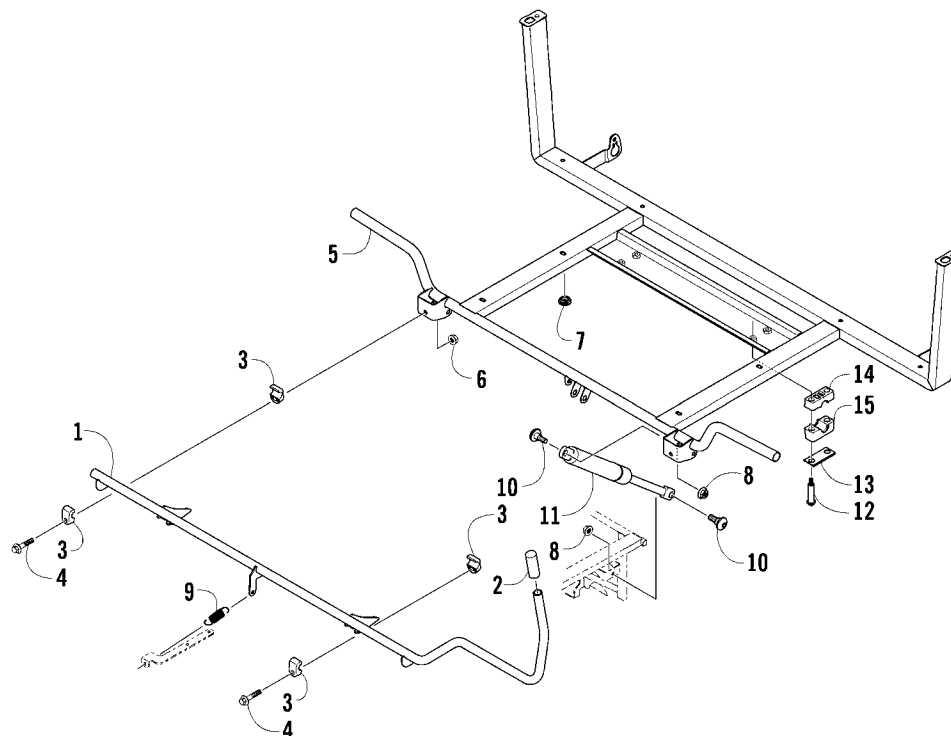

TILT FRAME ASSEMBLY

0743-177


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	2506-919		1	Rod, Cargo Box Latch	9	2416-086		1	Spring
2	1406-736		1	Grip, Latch Rod	10	0423-356		2	Screw, Shoulder
3	1406-674		4	Bushing, Pivot	11	2506-194		1	Support, Lift
4	8408-840		2	Screw, Cap	12	0423-505		4	Screw, Shoulder
5	2506-197		1	Frame, Box	13	0405-166		2	Cap, Housing
6	8427-802		2	Nut, Lock	14	0405-138		2	Housing, Lower
7	0423-628		4	Grommet	15	0405-139		2	Housing, Upper
8	8427-602		2	Nut, Lock					

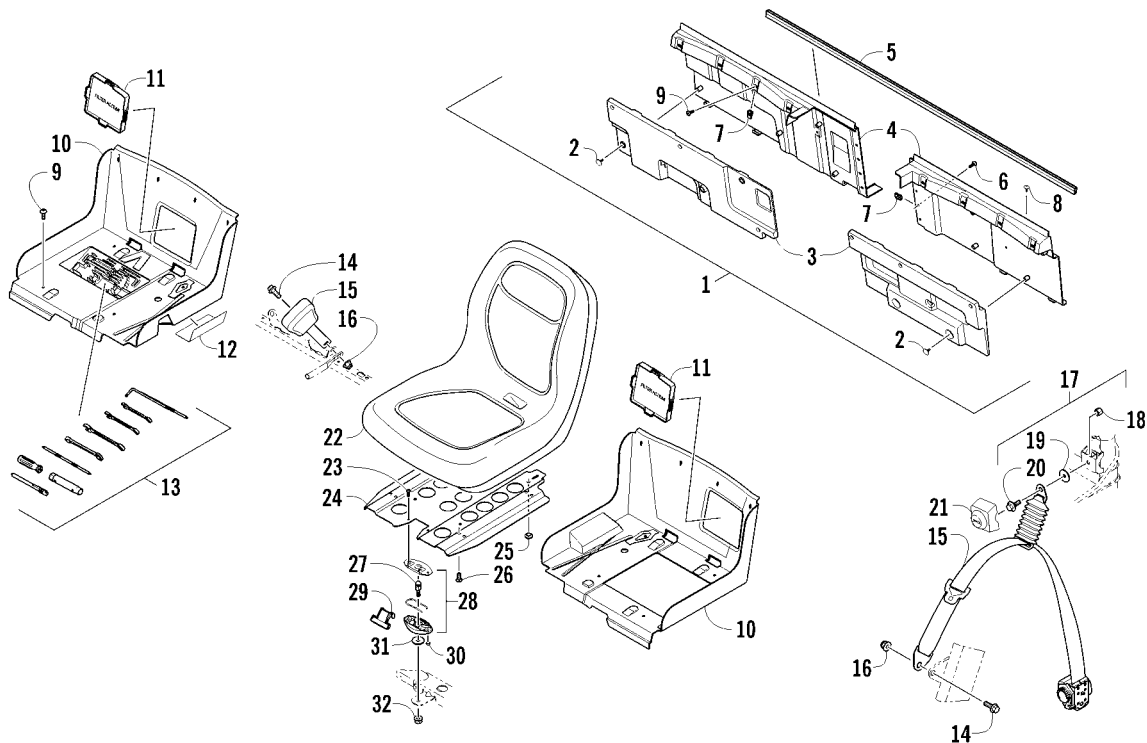

SEAT ASSEMBLY

0746-199


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	2516-094		1	Panel, Seat - Assembly (inc. 2-6 and five No. 7)	15	5506-196	X	2	Belt, Seat
2	0623-544		11	● Clip, Retaining	16	1423-184	X	6	Nut, Lock
3	2516-146		1	● Panel, Seat - Front Right	17	0423-915		2	Screw, Shoulder - Assembly (inc. 18-20)
	2516-147		1	● Panel, Seat - Front Left	18	—		2	● Nut, Lock - Not a Service Part
4	2406-912		1	● Panel, Seat - Rear Right	19	—		2	● Washer - Not a Service Part
	2406-913		1	● Panel, Seat - Rear Left	20	—		2	● Screw, Shoulder - Not a Service Part
5	2406-915		1	● Seal, Seat Panel	21	2416-638		2	Cover, Seat Belt
6	8476-620		5	● Screw, Machine	22	1506-925		2	Seat, Low-Back
7	0423-577		13	● Clip, U-Nut	23	8468-620		4	Screw, Machine
8	0623-784		3	Screw, Self-Tapping	24	2506-780		2	Plate, Base - Seat
9	8477-620		16	Screw, Machine	25	0406-877		8	Bumper, Seat
10	2406-910		1	Base, Seat - Right	26	8468-820		8	Screw, Machine
	2406-911		1	Base, Seat - Left	27	0423-559		2	Stud, Latch - Seat
11	2416-091		2	Cover, Access - Air Filter	28	2706-164		2	Latch - Assembly (inc. 298)
12	0412-560	AR		Foil, Protective	29	2606-854		2	● Lever, Release - Seat Latch
13	0444-122		1	Tool Kit - Assembly	30	0623-038		4	Nut w/Washer
14	1423-182	X	6	Screw, Cap	31	0423-073		2	Washer
					32	8424-002		2	Nut

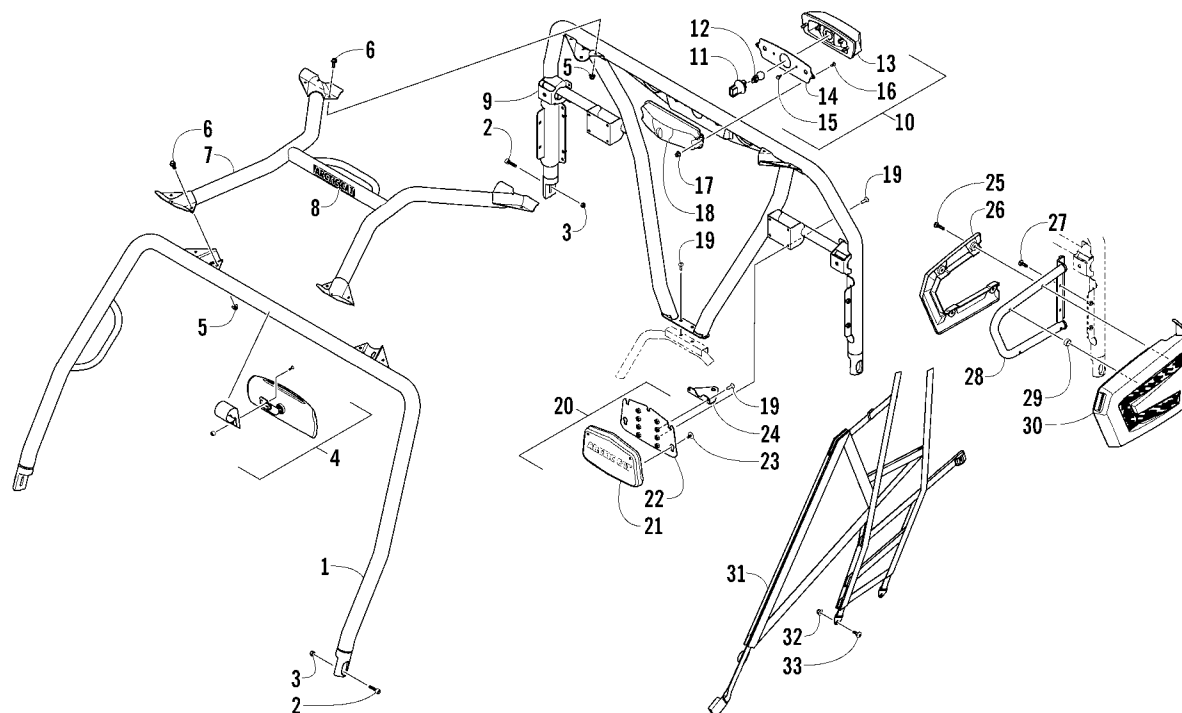

ROPS AND TAILLIGHT ASSEMBLY

0746-863


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	4506-859	X	1	ROPS - Front	20	1506-795		2	Pad, Headrest - Assembly (inc. 21-23)
2	1423-140		8	Screw, Cap	21	1406-884		2	● Pad, Headrest
3	1423-161	X	8	Nut, Lock	22	1506-722		2	● Mount, Headrest
4	1436-414		1	Kit, Mirror	23	0623-544		10	● Clip, Retaining
5	8427-002		8	Nut, Lock	24	4506-296		1	Bracket, Mounting - Flag
6	1423-151	X	8	Screw, Cap	25	8477-640		8	Screw, Machine
7	4506-865	X	1	Support, ROPS	26	4406-186	X	1	Panel, Side Restraint - Inner Right
8	0411-501		1	Decal, "Arctic Cat"		4406-187	X	1	Panel, Side Restraint - Inner Left
9	4506-830	X	1	ROPS - Rear	27	8477-620		8	Screw, Machine
10	0509-022		1	Taillight Assembly (inc. 11-13)	28	4506-824	X	1	Support, Side Restraint - Right
11	0409-057		1	● Socket, Taillight		4506-825	X	1	Support, Side Restraint - Left
12	0409-056		1	● Bulb, Taillight	29	1423-174	X	2	Spacer
13	0509-025		1	● Housing, Taillight	30	4406-108	X	1	Panel, Side Restraint - Outer Right
14	2406-069		1	Bracket, Taillight Mounting		4406-109	X	1	Panel, Side Restraint - Outer Left
15	0623-301		2	Screw, Self-Tapping	31	4406-188	X	1	Restraint, Side - Right
16	8468-616		2	Screw, Machine		4406-189	X	1	Restraint, Side - Left
17	8427-602		2	Nut, Lock	32	1423-171	X	4	Nut, Lock
18	2516-893		1	Cover, Taillight	33	1423-173	X	4	Screw, Shoulder
19	0423-361		10	Screw, Machine					

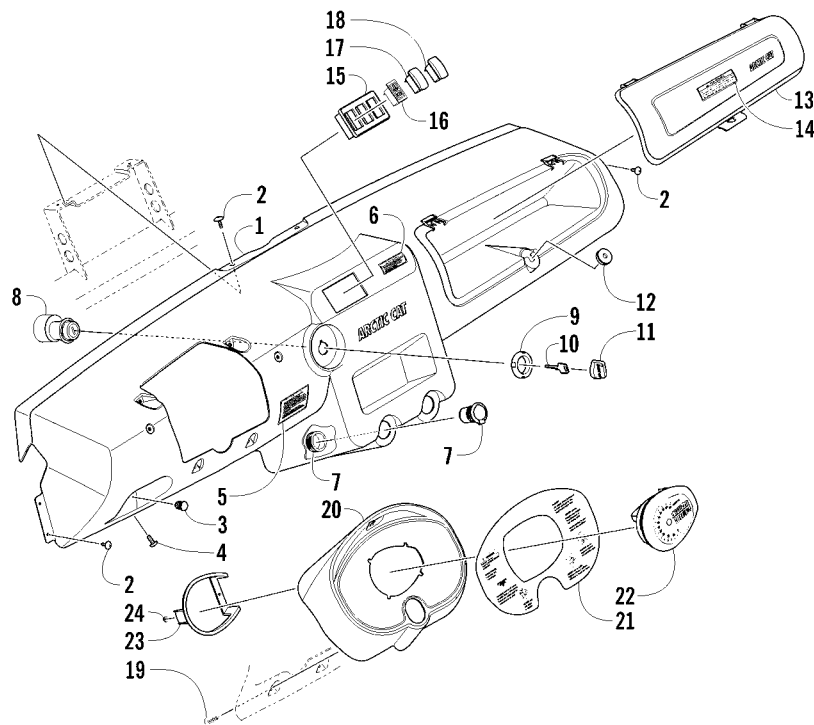

DASH ASSEMBLY

0745-936


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	4506-357		1	Panel, Dash	12	0423-541		1	Grommet, Latch - Glove Box
2	0623-784		8	Screw, Self-Tapping	13	4506-420		1	Cover, Glove Box (inc. 14)
3	1623-697		1	Plug	14	2411-512		1	● Decal, Warning - Passenger
4	0423-419		3	Screw, Machine	15	0409-069		1	Panel, Switch-Mount
5	1411-904		1	Decal, Starting	16	0420-117		1	Light, Indicator
6	1411-124		1	Decal, Warning - Differential Lock	17	0409-067		1	Switch, Light
7	0641-897		2	Outlet, Accessory - 12V	18	0409-061		1	Switch, 2WD/4WD/Differential Lock
8	0430-089		1	Switch, Ignition (inc. 9-11)	19	0423-342		6	Screw, Self-Tapping
9	0430-050		1	● Nut, Retaining	20	1406-727		1	Pod, Instrument
10	0430-042		1	● Key, Ignition - Series (Y Series - Left-Side Cut)	21	1411-125		1	Decal, Warning - Dash
	0430-043		1	● Key, Ignition - Series (Z Series - Right-Side Cut)	22	0520-159		1	Gauge, Analog/LCD
11	0430-054		1	● Cover, Key	23	0420-065		1	Bracket, Retaining
					24	0423-493		2	Nut w/Washer

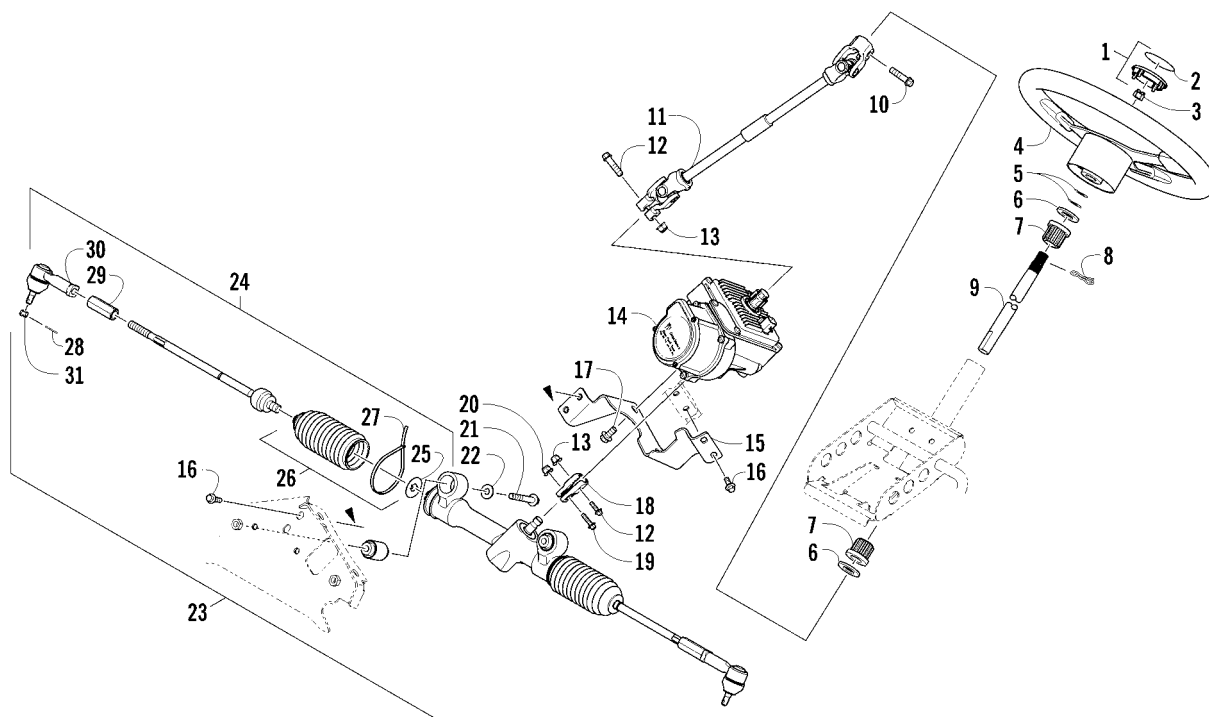

STEERING ASSEMBLY

0746-015


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0505-690		1	Cap, Steering Wheel (inc. 2)	17	8409-020		4	Screw, Cap
2	1411-798		1	● Decal, Steering Wheel	18	0405-440		1	Coupler, Steering
3	0423-884		1	Nut	19	1423-053		1	Screw, Cap
4	0405-398		1	Wheel, Steering - Assembly	20	8427-802		1	Nut, Lock
5	0828-071		2	Washer	21	8408-070		2	Screw, Cap
6	0423-558		2	Washer	22	0623-728		2	Washer
7	0405-155		2	Bushing	23	0505-689		1	Housing, Rack and Pinion (inc. 24-30)
8	1423-045		1	Clip, Retaining	24	0505-772	X	2	● Tie Rod - Assembly (inc. 25-30)
9	0405-321		1	Shaft, Upper Steering	25	0405-428		2	●● Plate, Retaining
10	1423-047		1	Screw, Cap	26	0505-745		2	●●● Kit, Tie Rod Boot (inc. 27-28)
11	0405-435		1	Shaft, Steering - Assembly	27	0123-903		2	●●● Tie, Cable - 11.5 in.
12	1423-076		2	Screw, Cap	28	0623-175		2	●●● Pin, Cotter
13	8427-602		2	Nut, Lock	29	0505-640		2	●● Kit, Nut (inc. 28)
14	0505-808	X	1	Assembly, Electronic Power Steering	30	0505-743		2	●● Kit, Tie Rod End (inc. 28)
15	4506-152		1	Bracket, Mounting	31	0423-072		2	Nut
16	8408-816		4	Screw, Cap					

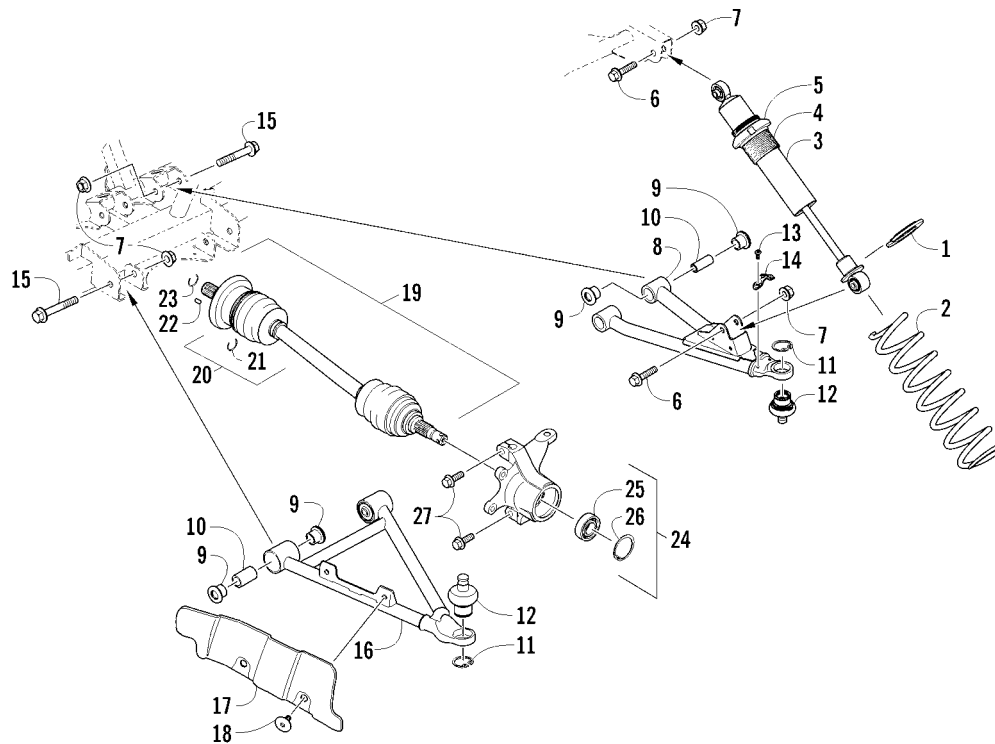

FRONT SUSPENSION ASSEMBLY

0745-671

Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0423-920		2	Retainer, Spring	16	0503-376		1	A-Arm, Lower Right - Black (inc. 9-12)
2	0503-437		2	Spring, Suspension - White		0503-377		1	A-Arm, Lower Left - Black (inc. 9-12)
3	0403-215		2	Shock Absorber (inc. 4)	17	1406-034		1	Guard, Boot - Right - Black
4	0423-917		2	● Sleeve, Shock - Threaded		1406-035		1	Guard, Boot - Left - Black
5	0423-919		2	Nut, Spring Retainer	18	0423-545		4	Screw, Shoulder
6	8409-055		4	Screw, Cap	19	1502-803		1	Axle - Front - Right (inc. 20-23)
7	8428-002		12	Nut, Lock		1502-802		1	Axle - Front - Locking - Left (inc. 20-23)
8	0503-432		1	A-Arm, Upper Right - Black (inc. 9-12)	20	1436-419		2	● Repair Kit, Boot (inc. 21)
	0503-433		1	A-Arm, Upper Left - Black (inc. 9-12)	21	1441-988		2	● Clip, Retaining
9	0403-208		16	● Bushing	22	1402-885		4	● Pin, Detent
10	0403-214		8	● Axle	23	1402-889		2	● Clip, Retaining
11	0423-009		4	● Ring, Retaining	24	0505-580		1	Knuckle - Assembly - Right (inc. 25-26)
12	0405-483		4	● Ball Joint		0505-581		1	Knuckle - Assembly - Left (inc. 25-26)
13	0423-946		4	Screw, Self-Tapping	25	1402-809		2	● Bearing
14	1502-594		2	Clamp, Routing	26	0423-423		2	● Ring, Retaining
15	8409-075		8	Screw, Cap	27	0423-998		4	Screw, Shoulder

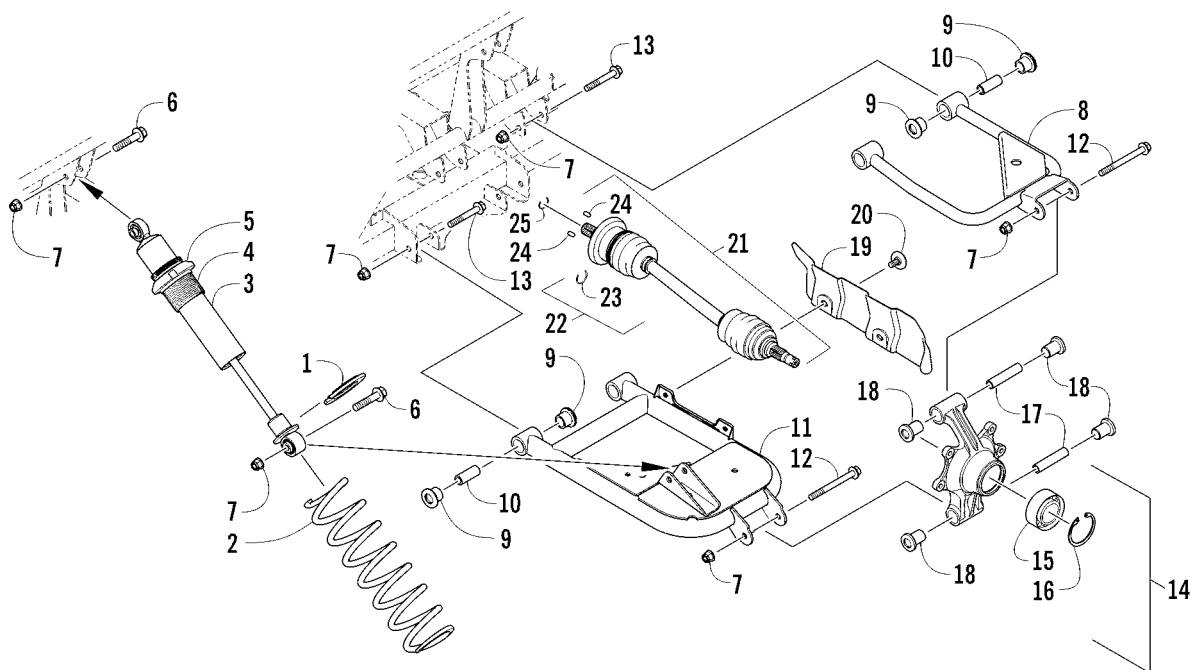


REAR SUSPENSION ASSEMBLY

0745-672

Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0423-920		2	Retainer, Spring	12	8409-000		4	Screw, Cap
2	0504-629		2	Spring, Suspension - White	13	8409-075		8	Screw, Cap
3	0404-182		2	Shock Absorber (inc. 4)	14	0504-613		2	Knuckle, Rear - Assembly (inc. 15-18)
4	0423-917		2	● Sleeve, Shock - Threaded	15	1402-809		2	● Bearing
5	0423-919		2	Nut, Spring Adjuster	16	0423-423		2	● Ring, Retaining
6	8409-060		4	Screw, Cap	17	0403-213		4	● Axle
7	8428-002		16	Nut, Lock	18	0403-206		8	● Bushing
8	0504-730	X	1	A-Arm, Rear - Upper Right - Black (inc. 9-10)	19	1406-068		1	Guard, Boot - Right - Black
	0504-731	X	1	A-Arm, Rear - Upper Left - Black (inc. 9-10)		1406-069		1	Guard, Boot - Left - Black
9	0403-208		16	● Bushing	20	0423-545		4	Screw, Shoulder
10	0403-214		8	● Axle	21	1502-801		2	Axle, Drive (inc. 22-25)
11	0504-592		1	A-Arm, Rear - Lower Right - Black (inc. 9-10)	22	1436-419		2	● Repair Kit, Boot (inc. 23)
	0504-593		1	A-Arm, Rear - Lower Left - Black (inc. 9-10)	23	1441-988		2	● Clip, Retaining
					24	1402-884		4	● Pin, Detent
					25	1402-890		2	● Clip, Retaining




12

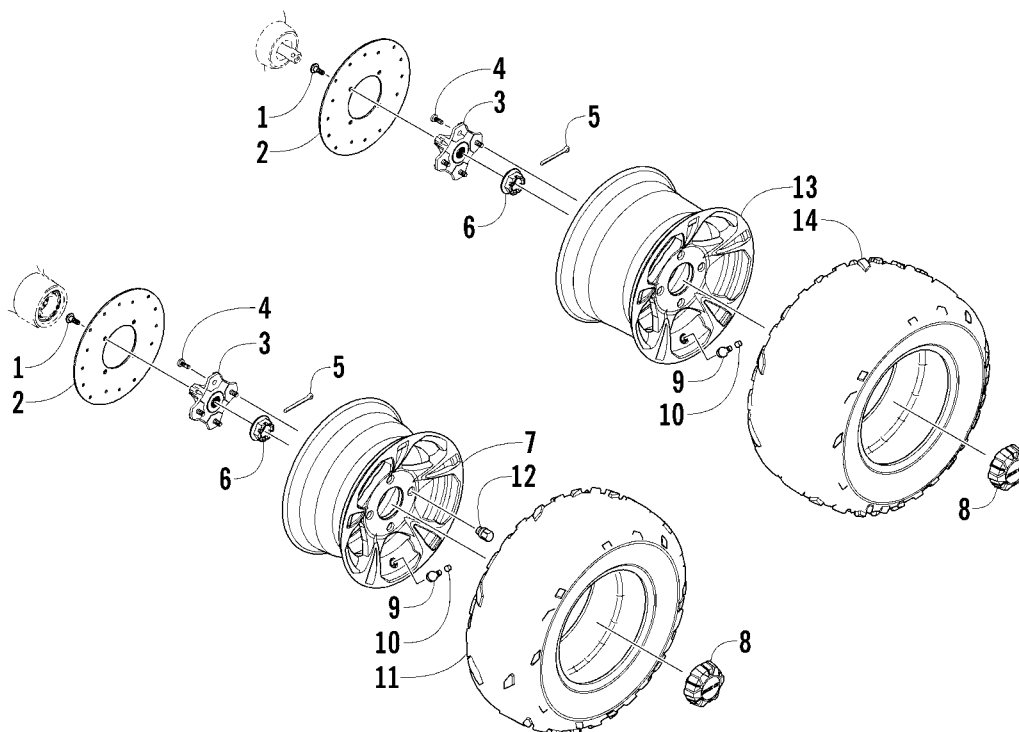

WHEEL AND TIRE ASSEMBLY

0746-873


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0423-557		16	Screw, Shoulder	7	2402-070	X	2	Wheel - Front (inc. 8)
2	1436-418		2	Disc, Brake - Front	8	2402-084	X	4	● Cap, Wheel
	1436-164		2	Disc, Brake - Rear	9	0402-064		4	Stem, Valve (inc. 10)
3	1502-433		2	Hub, Wheel - Front (inc. 4)	10	0402-140		4	● Cap, Valve Stem
	1502-437		2	Hub, Wheel - Rear (inc. 4)	11	1402-937		2	Tire - Front
4	0402-974		16	● Stud	12	0423-618		16	Nut, Lug - Chrome
5	0423-407		4	Pin, Cotter	13	2402-071	X	2	Wheel - Rear (inc. 8)
6	0423-607		4	Nut, Castle	14	1402-938		2	Tire - Rear

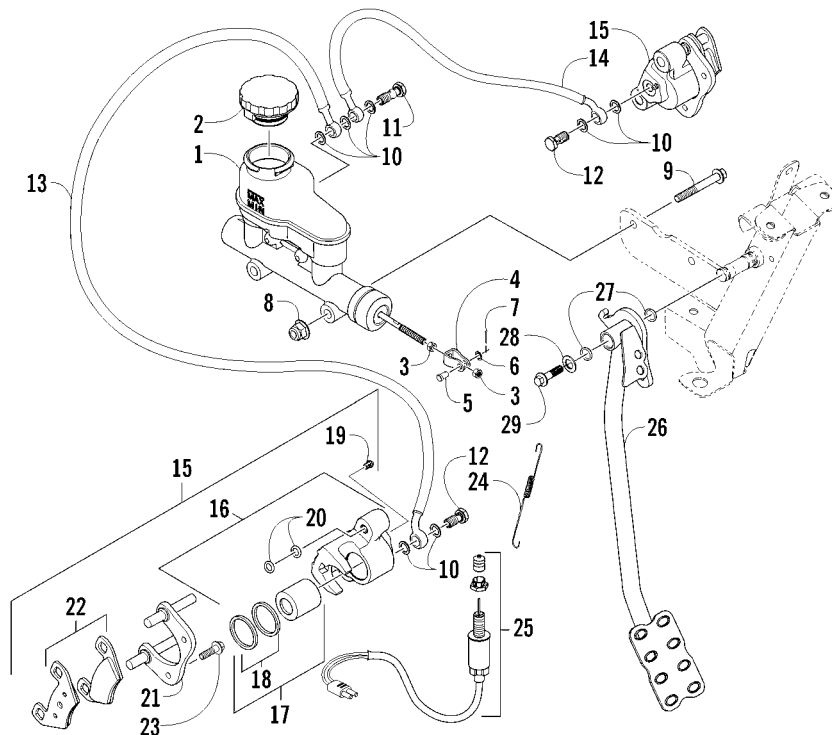

FRONT BRAKE ASSEMBLY

0745-378

Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0502-786		1	Cylinder, Master Brake - Assembly (inc. 2-4)	16	1436-160		1	● Housing, Caliper - Assembly - Front Right (inc. 17-19)
2	0405-225		1	● Cap, Reservoir		1436-161		1	● Housing, Caliper - Assembly - Front Left (inc. 17-19)
3	0402-592		2	● Nut	17	0502-606		2	●● Piston/Seal Set (inc. 18)
4	1402-520		1	● Clevis	18	0502-607		2	●●● Seal Set
5	1402-377		1	Pin, Clevis	19	0502-609		2	●● Valve, Bleed
6	8050-217		1	Washer	20	0502-608		2	● O-Ring, Guide - Set
7	0117-868		1	Pin, Cotter	21	0502-960		2	● Bracket Assembly
8	8424-802		2	Nut	22	1502-694		2	● Pad, Brake - Set
9	8408-860		2	Screw, Cap	23	8408-826		4	Screw, Cap
10	0423-178		7	Washer, Crush	24	0502-785		1	Spring, Brake Switch
11	0423-610		1	Bolt, Double Banjo-Fitting	25	0409-089		1	Switch, Brake - Assembly
12	0423-413		2	Bolt, Banjo-Fitting	26	1502-692		1	Lever, Brake
13	1402-389		1	Hose, Brake - Left	27	1602-213		2	O-Ring
14	1402-290		1	Hose, Brake - Right	28	0623-044		1	Washer
15	1502-730		1	Caliper, Brake - Front Right (inc. 16-22)	29	8408-822		1	Screw, Cap
	1502-731		1	Caliper, Brake - Front Left (inc. 16-22)					

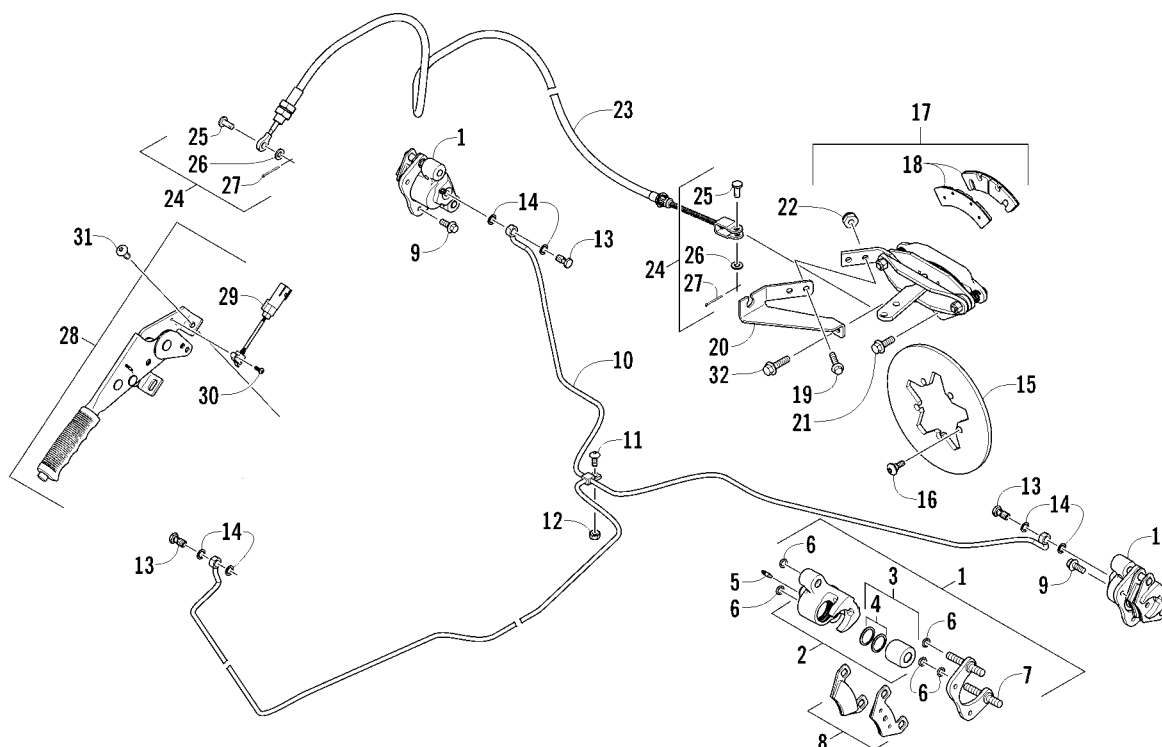


REAR AND PARKING BRAKE ASSEMBLY

0744-136

Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	1436-422	1	1	Caliper, Brake - Right (inc. 2-8 and two No. 9)	15	1402-914	1	1	Disc, Brake
	1436-423	1	1	Caliper, Brake - Left (inc. 2-8 and two No. 9)	16	0423-557	5	5	Screw, Shoulder
2	1436-160	1	1	● Housing, Caliper - Assembly - Right (inc. 3-5)	17	1502-581	1	1	Caliper, Parking Brake (inc. 18)
	1436-161	1	1	● Housing, Caliper - Assembly - Left (inc. 3-5)	18	1502-582	1	1	● Pad, Brake - Set
3	0502-606	2	2	●● Piston/Seal Set (inc. 4)	19	8408-825	2	2	Screw, Cap
4	0502-607	2	2	●●● Seal Set	20	1502-579	1	1	Bracket, Mounting - Cable
5	0502-609	2	2	●● Valve, Bleed	21	8408-836	1	1	Screw, Cap
6	0502-608	2	2	● O-Ring, Guide - Set	22	8432-802	2	2	Nut, Lock
7	0502-605	2	2	● Bracket Assembly	23	0487-061	1	1	Cable, Parking Brake
8	1502-694	2	2	● Pad, Brake - Set	24	0423-894	2	2	Pin, Retaining - Assembly (inc. 25-27)
9	8408-821	4	4	● Screw, Cap	25	0423-989	2	2	● Pin
10	1402-845	1	1	Hose, Brake	26	0423-990	2	2	● Washer
11	8476-616	1	1	Screw, Machine	27	0423-991	2	2	● Pin, Cotter
12	0623-038	1	1	Nut w/Washer	28	1502-497	1	1	Lever, Parking Brake - Assembly (inc. 29-30)
13	0423-413	3	3	Bolt, Banjo-Fitting	29	0409-131	1	1	● Switch, Limiter
14	0423-178	6	6	Washer, Crush	30	0423-992	1	1	● Screw, Machine
					31	8468-820	2	2	Screw, Machine
					32	8408-841	1	1	Screw, Cap


16

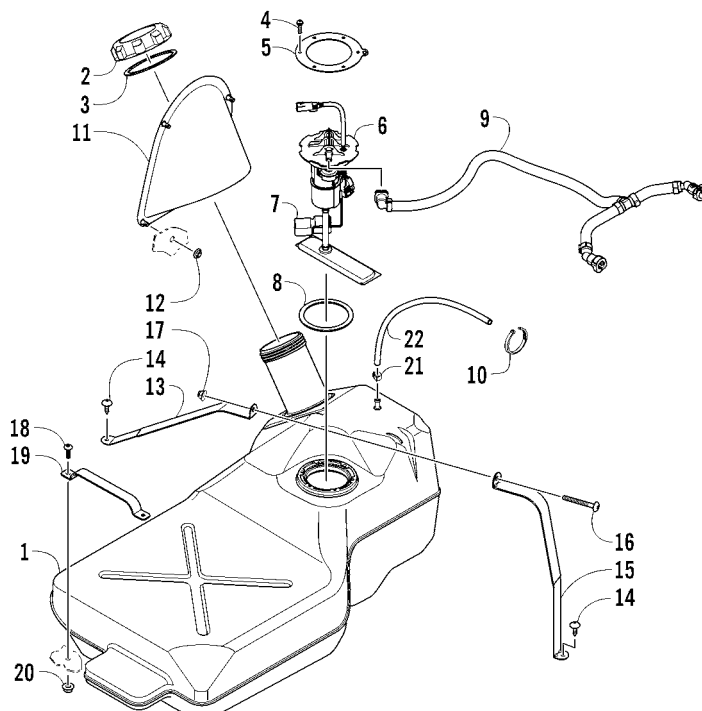


GAS TANK ASSEMBLY

0745-674

Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0570-309		1	Tank, Gas - Assembly (inc. 2-5)	12	0423-357		4	Nut, Stamped
2	0470-541		1	● Cap, Gas Tank (inc. 3)	13	0470-829		1	Bracket, Hold-Down - Right
3	1670-228		1	●● Gasket, Gas Tank Cap	14	0623-784		2	Screw, Self-Tapping
4	0423-898		6	● Screw, Self-Tapping	15	0470-830		1	Bracket, Hold-Down - Left
5	2670-042		1	● Plate, Retaining	16	8476-650		1	Screw, Machine
6	0570-334		1	Pump, Fuel - Assembly (inc. 7-8)	17	8427-602		1	Nut, Lock
7	2670-235		1	● Float	18	8476-620		2	Screw, Machine
8	0470-838		1	● Seal	19	0470-544		1	Bracket, Hold-Down - Front
9	0570-293		1	Hose, Gasline	20	0623-038		2	Nut w/Washer
10	0123-788	AR		Tie, Cable - 8 in.	21	0423-688		1	Clamp, Hose
11	1406-886		1	Insert, Gas Tank Cap	22	0410-070		AR	Hose, Gasline - 25 ft

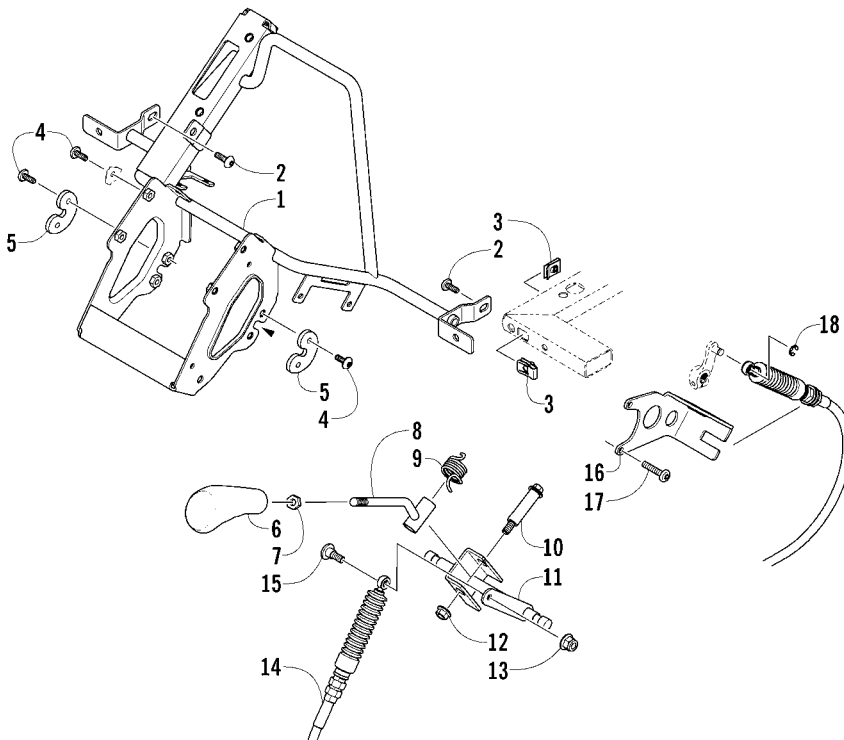


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	1502-516		1	Mount, Shift	10	0423-505		1	Screw, Shoulder
2	8476-620		4	Screw, Machine	11	1502-666		1	Axle, Shift
3	0423-577		4	Clip, U-Nut	12	8424-802		1	Nut
4	8477-616		8	Screw, Machine	13	8427-602		1	Nut, Lock
5	1402-275		2	Retainer, Shift Linkage	14	0487-063		1	Cable, Shift
6	2402-005	X	1	Knob, Shift	15	0423-356		1	Screw, Shoulder
7	0423-885		1	Nut	16	2516-609		1	Bracket, Shift Cable
8	1502-510		1	Lever, Shift	17	8468-635		2	Screw, Machine
9	1402-880		1	Spring	18	0124-057		1	E-Ring

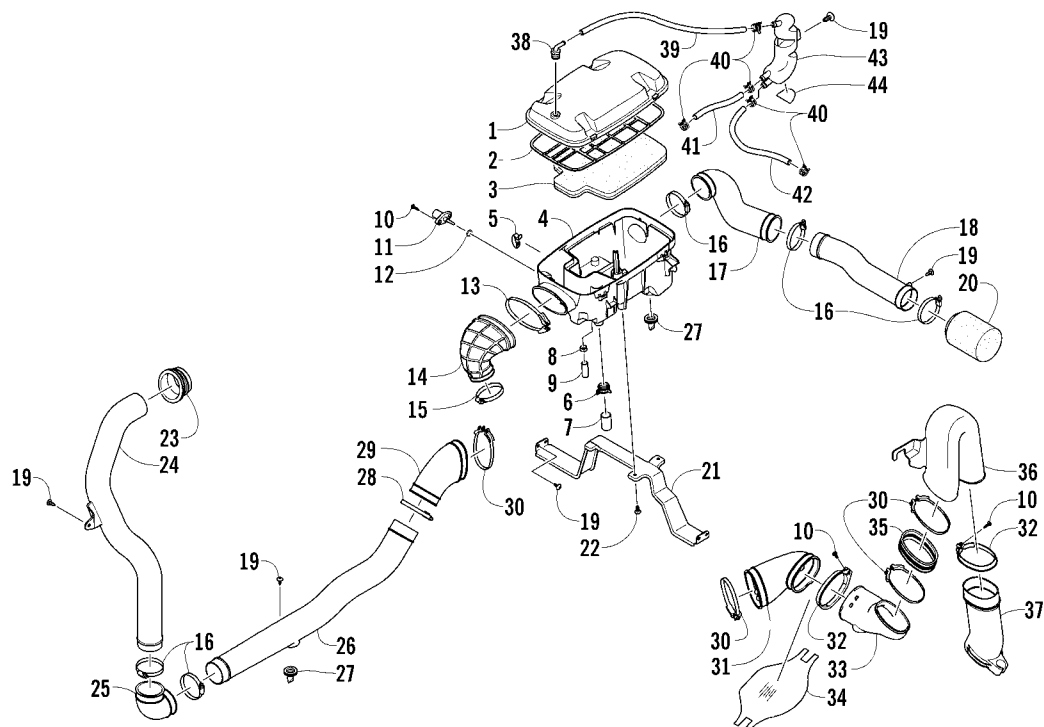

AIR INTAKE ASSEMBLY

0746-875


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0470-861		1	Cover, Air Intake	23	2416-088		1	Boot, Air-In
2	0470-560		1	Screen, Air Filter	24	0413-237		1	Duct, Air-In
3	0470-558		1	Filter, Air	25	0413-098		1	Boot, Air-In
4	0470-728		1	Housing, Air Intake	26	0413-236		1	Duct, Air-In
5	0423-455		4	Clip, Spring	27	0470-442		2	Valve, Drain
6	1623-287		1	Clamp, Hose	28	0423-018		1	Clamp
7	0423-766		1	Cap, Drain	29	0413-233		1	Boot, Air-In
8	0610-563		1	Clamp, Hose	30	0423-730		4	Clamp
9	0470-863		1	Valve, Drain	31	0413-234		1	Boot, Air-Out
10	0423-342		5	Screw, Self-Tapping	32	0423-550		2	Clamp
11	0430-055		1	Sensor, Air Temperature (inc. 12)	33	0413-247		1	Duct, Air-Out
12	5507-224		1	● O-Ring	34	0412-576		1	Foil, Protective
13	0423-554		1	Clamp	35	0413-248		1	Boot, Air-Out
14	0413-225		1	Boot, Intake	36	0413-235		1	Duct, Air-Out
15	0423-066		1	Clamp	37	0413-226		1	Duct, Air-Out
16	0423-019		5	Clamp	38	0470-881		1	Fitting, Elbow
17	0413-232		1	Duct, Intake	39	0410-187		1	Hose, Vent
18	0413-219		1	Duct, Intake	40	1623-281		5	Clamp, Hose
19	0623-784		8	Screw, Self-Tapping	41	0410-221		1	Hose, Vent
20	0470-834		1	Filter, Intake	42	0410-220		1	Hose, Vent
21	2516-166		1	Bracket, Support	43	0470-857		1	Separator, Oil
22	8476-616		2	Screw, Machine	44	1441-822		1	Foil, Protective

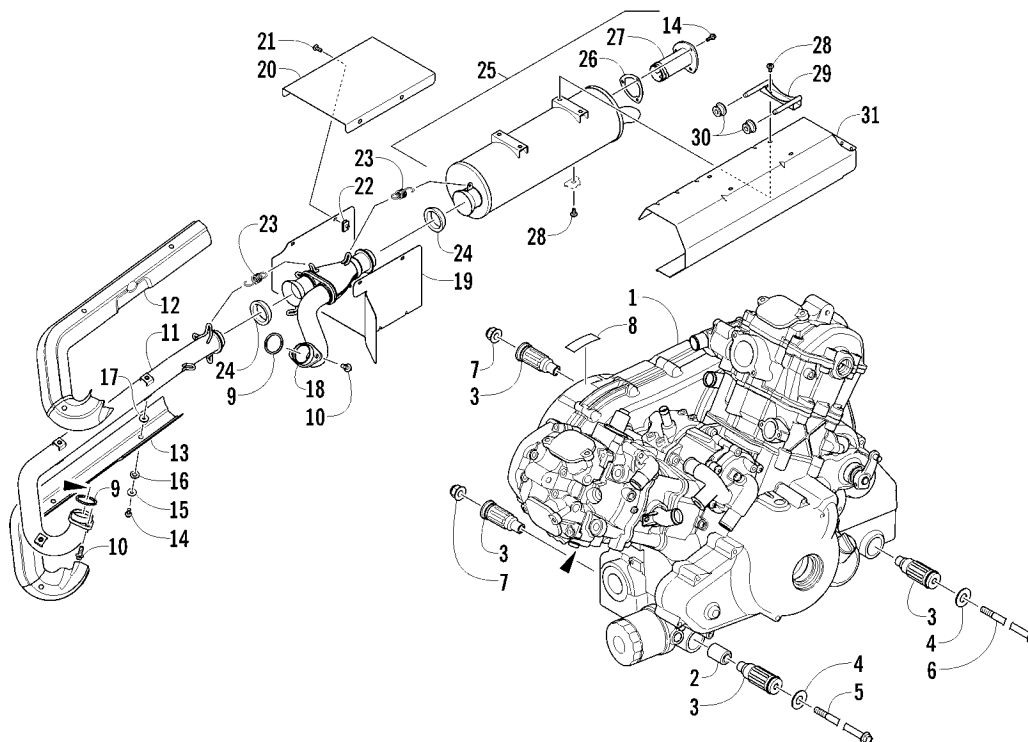

ENGINE AND EXHAUST

0745-212


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0800-095		1	Engine, A950GH2 (inc. 2-3)	17	0423-908		6	Isolator
2	0801-128		1	● Spacer, Engine Mount	18	0512-519		1	Pipe, Exhaust - Rear
3	0801-091		4	● Mount, Engine	19	0412-543		1	Shield, Exhaust Pipe - Rear
4	0423-426		2	Washer	20	0412-561		1	Shield, Heat
5	0423-734		1	Screw, Cap	21	8476-616		4	Screw, Machine
6	0423-451		1	Screw, Cap	22	0423-577		4	Clip, U-Nut
7	8428-002		2	Nut, Lock	23	0612-668		6	Spring, Extension
8	0411-426		1	Decal, Warning - Clutch Cover	24	0412-375		2	Seal, Exhaust Pipe
9	0412-338		2	Gasket, Exhaust Pipe	25	0512-500		1	Muffler - Assembly (inc. 26-27 and three No. 14)
10	8408-820		4	Screw, Cap	26	0412-313		1	● Gasket, Spark Arrester
11	0512-517		1	Pipe, Exhaust - Front	27	0512-219		1	● Arrester, Spark - Assembly
12	0512-528		1	Shield, Exhaust Pipe - Upper	28	8476-612		6	Screw, Machine
13	0512-529		1	Shield, Exhaust Pipe - Lower	29	0412-553		2	Bracket, Muffler Support
14	8408-616		9	Screw, Cap	30	0412-544		4	Bushing
15	8050-222		6	Washer	31	0412-551		1	Cover, Muffler
16	0423-909		6	Isolator					

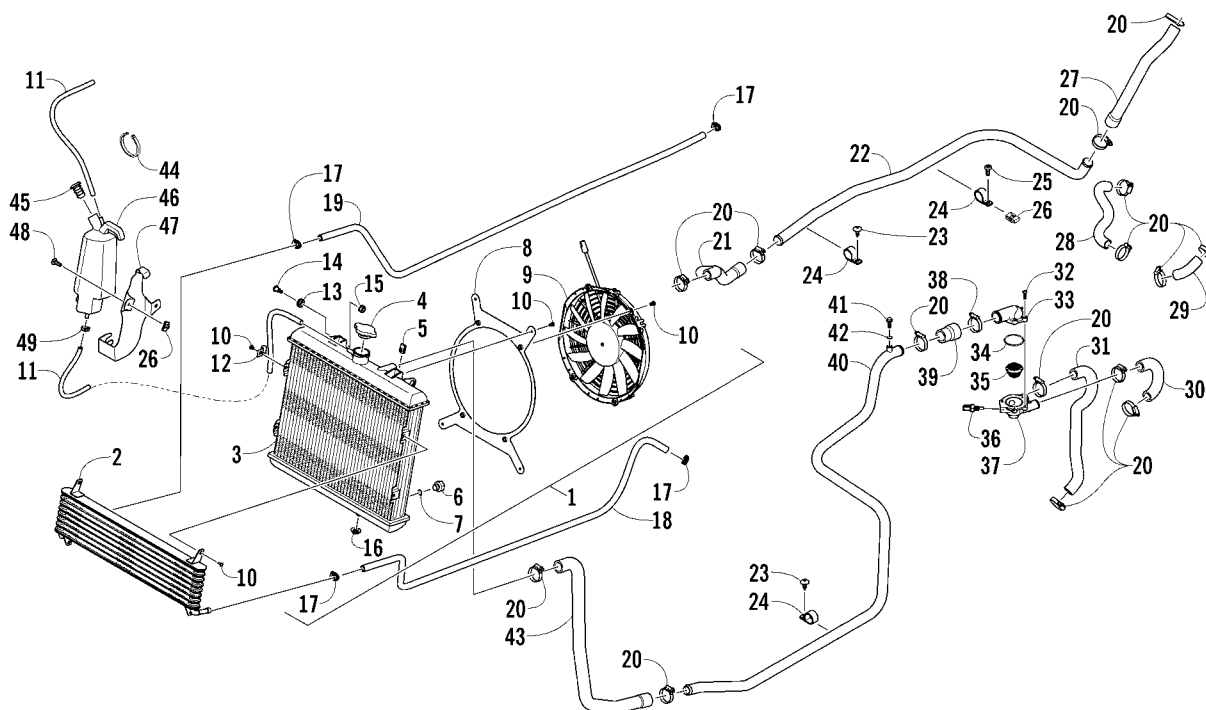

COOLING ASSEMBLY

0747-121


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0513-036		1	Radiator Assembly (inc. 2-13)	27	0410-252		1	Hose, Coolant - Coolant Pipe/Water Pump
2	0413-241		1	● Cooler, Oil	28	0410-116		1	Hose, Coolant - Crossover
3	0413-216		1	● Radiator	29	0410-115		1	Hose, Coolant - Crossover
4	0413-255		1	● Cap, Radiator	30	0410-191		1	Hose, Coolant - Cylinder/Thermostat
5	1623-637		4	● Clip, U-Nut	31	0410-190		1	Hose, Coolant - Cylinder/Thermostat
6	0413-195		1	● Plug, Drain	32	8470-520		4	Screw, Machine
7	1602-213		1	● O-Ring	33	0808-092		1	Cover, Thermostat
8	0413-217		1	● Bracket, Mounting - Fan	34	0830-173		1	O-Ring
9	0413-123		1	● Fan, Cooling	35	0808-093		1	Thermostat
10	8470-510		12	● Screw, Machine	36	0808-124		1	Sensor, Engine Coolant Temperature
11	0610-011	AR		● Hose - 25 ft	37	0808-189		1	Housing, Thermostat
12	0423-351		1	● Clamp, Routing	38	1623-093		1	Clamp, Hose
13	0423-030		2	● Grommet	39	0410-189		1	Hose, Coolant - Thermostat/Coolant Pipe
14	0423-484		2	Screw, Shoulder	40	0510-597		1	Pipe, Coolant w/Bleed Valve
15	0623-038		2	Nut w/Washer	41	0423-984		1	Screw, Bleed
16	0423-028		2	Bushing, Stem	42	0423-921		1	O-Ring
17	0423-632		4	Clamp, Hose	43	0410-092		1	Hose, Coolant - Coolant Pipe/Radiator
18	0410-183		1	Hose, Oil Cooler - In	44	0623-751	AR		Cable Tie - 11.75 in.
19	0410-184		1	Hose, Oil Cooler - Out	45	0623-316	AR		Tie, Cable - 14 in.
20	0423-496		15	Clamp, Hose	46	0413-087		1	Plug
21	0410-251		1	Hose, Coolant - Radiator/Coolant Pipe	47	0413-086		1	Bottle, Overflow
22	0410-249		1	Pipe, Coolant	48	0410-199		1	Bracket, Mounting - Overflow Bottle
23	0623-784		2	Screw, Self-Tapping	49	8476-616		1	Screw, Machine
24	0423-594		3	Clamp, Routing		0124-045		1	Clamp, Hose
25	8476-620		1	Screw, Machine					
26	0423-577		2	Clip, U-Nut					

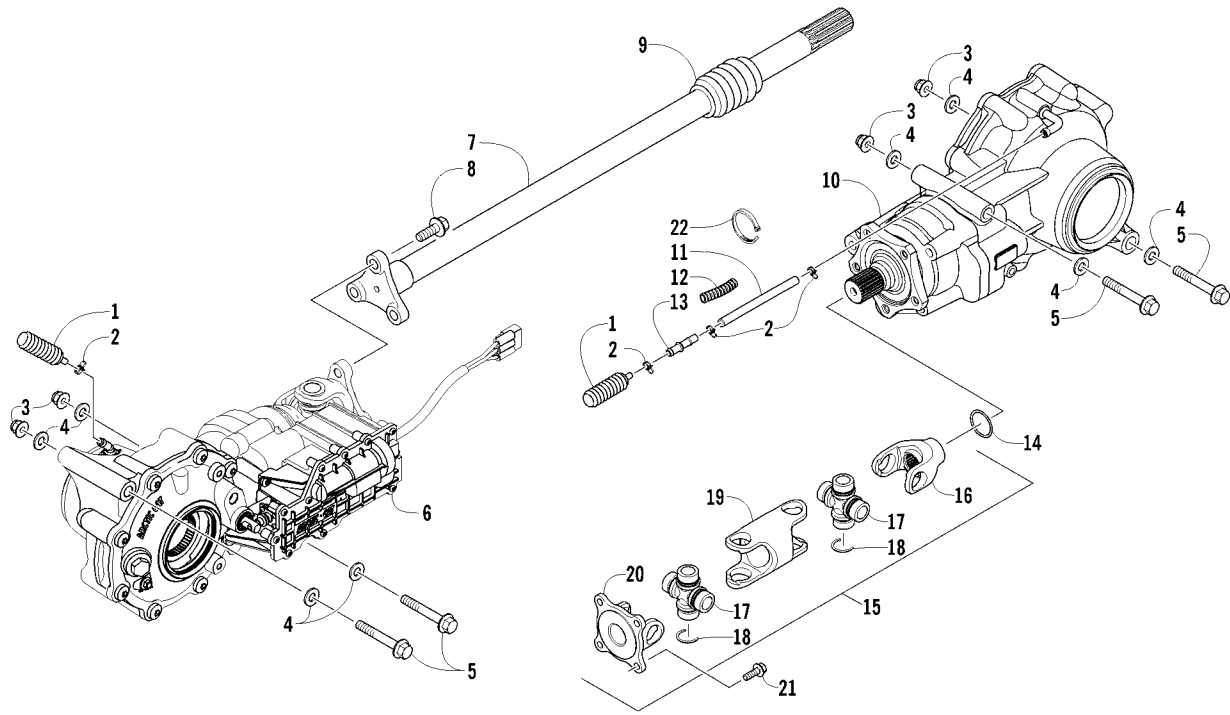

DRIVE TRAIN ASSEMBLY

0746-017


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	1402-620		2	Bladder, Gearcase	12	0419-392		AR	Conduit, Flexible - 3 ft
2	0423-315		4	Clamp, Hose	13	0470-702		1	Fitting, Vent
3	8428-002		4	Nut, Lock	14	1402-203		1	O-Ring
4	0423-426		8	Washer	15	1502-560		1	Driveshaft, Rear - Assembly (inc. 16-20)
5	0423-404		4	Screw, Cap	16	0502-522		1	● Yoke, Slip
6	1502-890		1	Gearcase, Front	17	0402-944		2	● Joint, Universal (inc. 18)
7	1402-795		1	Driveshaft, Front	18	0423-395		8	●● Ring, Retaining
8	8409-025		3	Screw, Cap	19	1502-561		1	● Driveshaft, Rear
9	0402-966		1	Boot, Shaft	20	1402-689		1	● Yoke, Flange
10	1502-891		1	Gearcase, Rear	21	8408-820		4	Screw, Cap
11	0410-070		AR	Hose, Vent - 25 ft	22	0123-788		AR	Tie, Cable - 8 in.

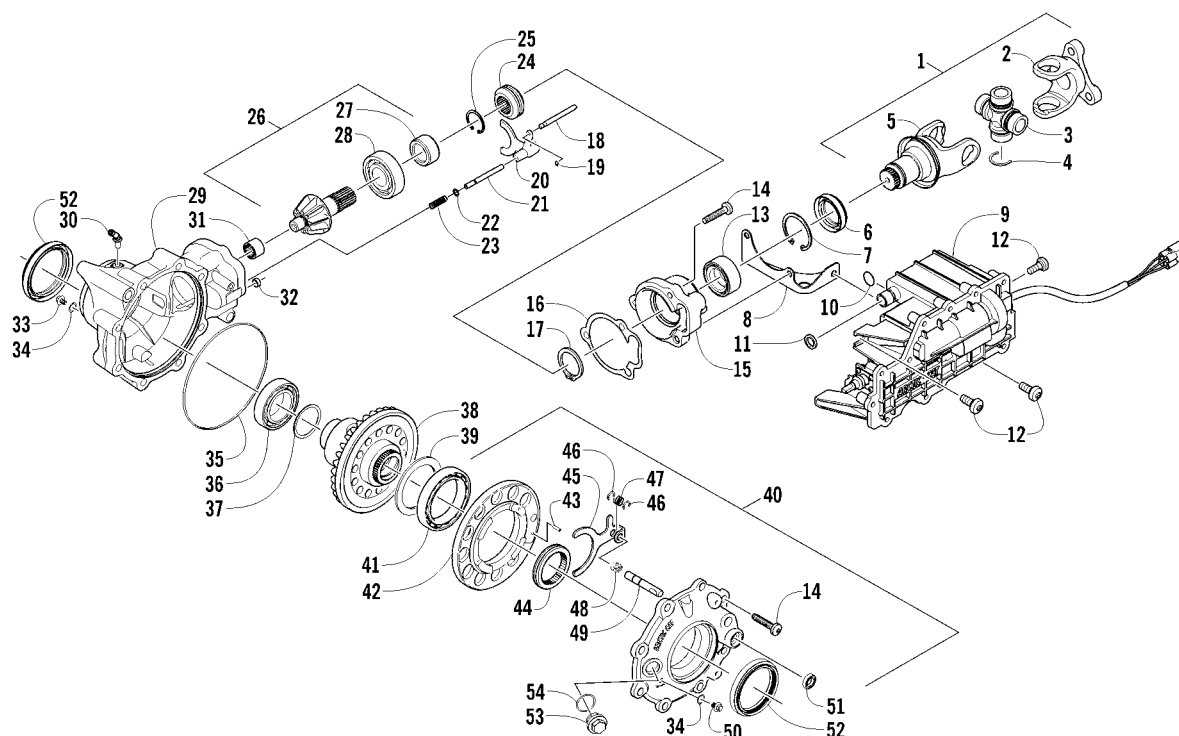

FRONT DRIVE GEARCASE ASSEMBLY

0746-021


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
-	1502-890		1	Complete Front Drive Gearcase Assembly	31	0402-328		1	Bearing
1	1502-559		1	Shaft, Coupler - Assembly (inc. 2-5)	32	0402-411		1	Pin, Dowel
2	0502-331		1	● Coupler, Driveshaft	33	1402-210		1	Plug, Magnetic (inc. one No. 34)
3	0402-944		1	● Joint, Universal (inc. 4)	34	0423-153		2	● O-Ring
4	0423-395		4	●● Ring, Retaining	35	0423-149		1	O-Ring
5	0502-518		1	● Yoke, Slip	36	0402-393		1	Bearing
6	1402-011		1	Seal	37	0402-405		AR	Shim, 41 x 49 x 1.3 mm
7	0423-423		1	Ring, Retaining		0402-406		AR	Shim, 41 x 49 x 1.4 mm
8	1502-237		1	Bracket, Actuator		0402-407		AR	Shim, 41 x 49 x 1.5 mm
9	1502-909		1	Actuator (inc. 10)		0402-408		AR	Shim, 41 x 49 x 1.6 mm
10	1402-981		1	● O-Ring		0402-409		AR	Shim, 41 x 49 x 1.7 mm
11	0423-892		1	O-Ring	38	1502-859		1	Gear, Ring - 34T
12	0423-396		3	Screw, Self-Tapping	39	1402-074		AR	Shim, 61 x 69 x 1.3 mm
13	1402-043		1	Bearing		1402-075		AR	Shim, 61 x 69 x 1.4 mm
14	0423-118		11	Screw, Self-Tapping		1402-076		AR	Shim, 61 x 69 x 1.5 mm
15	0502-528		1	Housing, Pinion		1402-077		AR	Shim, 61 x 69 x 1.6 mm
16	0402-947		1	Gasket		1402-078		AR	Shim, 61 x 69 x 1.7 mm
17	0423-417		1	Ring, Retaining	40	1502-895		1	Cover, Gearcase (inc. one No. 34, 41-51, and one No. 52)
18	0402-997		1	Shaft, Selector	41	1402-053		1	● Bearing
19	0423-402		1	Ring, Retaining	42	0502-413		1	● Flange, Bearing
20	0402-998		1	Fork, Selector	43	1402-079		1	● Pin, Alignment
21	0402-417		1	Shaft, Shuttle	44	1402-042		1	● Collar, Sliding
22	0423-147		1	O-Ring	45	1402-054		1	● Fork
23	0402-999		1	Spring, Return	46	1402-058		2	● Ring, Retaining
24	0402-413		1	Coupler, Drive	47	1402-057		1	● Spring
25	1423-067		1	Ring, Retaining	48	1402-063		1	● Spring
26	1502-851		1	Gear, Pinion - Assembly - 11T (inc. 27-28)	49	1402-656		1	● Shaft, Lock
27	1402-977		1	● Collar, Retaining	50	1402-211		1	● Plug, Oil Level (inc. one No. 34)
28	0402-327		1	● Bearing	51	1402-056		1	● Seal
29	1502-856		1	Housing, Gearcase	52	1402-950		2	● Seal
30	1402-980		1	Fitting, Elbow	53	0402-333		1	Plug, Fill (inc. 54)
					54	0423-154		1	● O-Ring

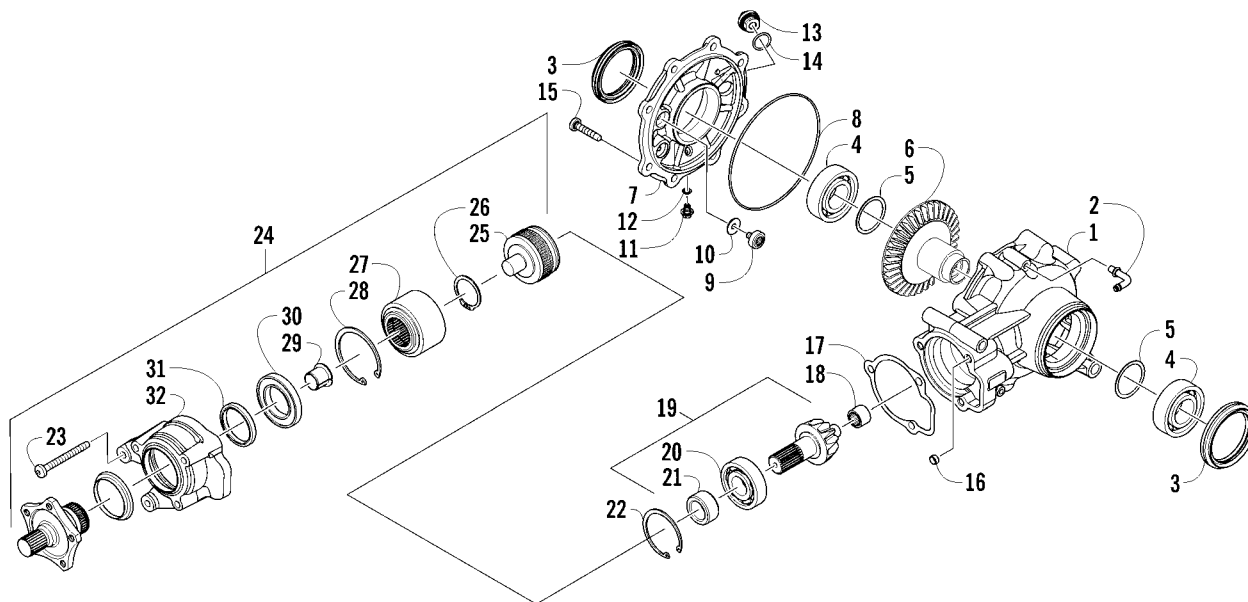

REAR DRIVE GEARCASE ASSEMBLY

0746-023


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
-	1502-891		1	Complete Rear Drive Gearcase Assembly	13	0402-333		1	Plug, Fill (inc. 14)
1	1502-900		1	Housing, Gearcase	14	0423-154		1	● O-Ring
2	1402-442		1	Fitting, Elbow	15	0423-118		8	Screw, Self-Tapping
3	1402-950		2	Seal	16	0402-411		1	Pin, Dowel
4	0402-393		2	Bearing	17	0402-947		1	Gasket
5	0402-405	AR		Shim, 41 x 49 x 1.3 mm	18	0402-328		1	Bearing
	0402-406	AR		Shim, 41 x 49 x 1.4 mm	19	1502-851		1	Gear, Pinion - Assembly - 11T (inc. 20-21)
	0402-407	AR		Shim, 41 x 49 x 1.5 mm	20	0402-327		1	● Bearing
	0402-408	AR		Shim, 41 x 49 x 1.6 mm	21	1402-977		1	● Collar, Retaining
	0402-409	AR		Shim, 41 x 49 x 1.7 mm	22	1423-067		1	Ring, Retaining
6	1402-033		1	Gear, Ring - 34T	23	0423-834		3	Screw, Self-Tapping
7	1502-588		1	Cover, Gearcase	24	1502-563		1	Shaft, Input (inc. 25-32)
8	0423-149		1	O-Ring	25	1502-564		1	● Cartridge, Clutch - Assembly
9	0402-326		1	Button, Thrust	26	0423-799		1	● Ring, Retaining - External
10	0402-429	AR		Shim, 6.3 x 18 x 1.3 mm	27	1402-682		1	● Basket, Clutch
	0402-430	AR		Shim, 6.3 x 18 x 1.4 mm	28	0423-798		1	● Ring, Retaining - Internal
	0402-431	AR		Shim, 6.3 x 18 x 1.5 mm	29	1402-678		1	● Bearing, Flange
	0402-432	AR		Shim, 6.3 x 18 x 1.6 mm	30	1402-677		1	● Bearing
	0402-433	AR		Shim, 6.3 x 18 x 1.7 mm	31	1402-687		1	● Seal
11	1402-210		1	Plug, Magnetic (inc. 12)	32	1502-565		1	● Housing, Input
12	0423-153		1	● O-Ring					

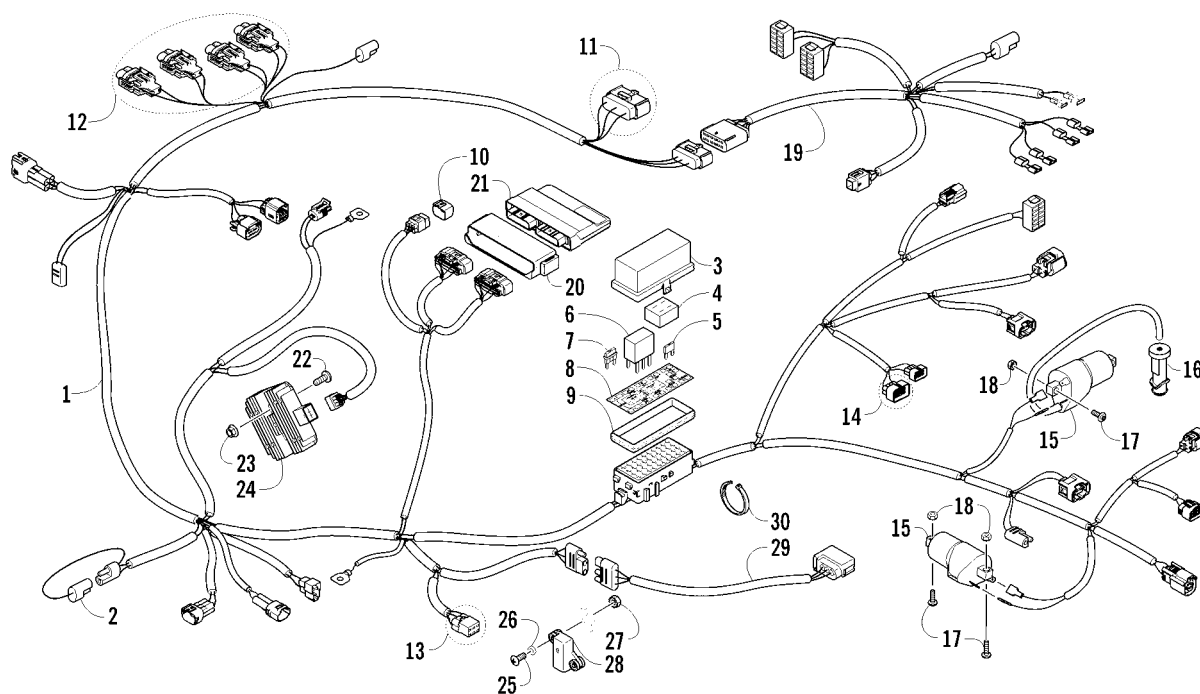

WIRING HARNESS ASSEMBLY

0745-675


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0486-391		1	Harness, Main (inc. 2-10)	16	0824-049		2	Cap, Spark Plug
2	0486-164		1	● Tether, Accessory Connector	17	8476-620		3	Screw, Machine
3	0430-085		1	● Cover, Fuse Block	18	0623-038		3	Nut w/Washer
4	0430-037		1	● Holder, Fuse	19	0486-399		1	Harness, Console
5	0430-032		5	● Fuse - 10 Amp	20	0430-059		1	Cushion, ECM
	0430-031		4	● Fuse - 15 Amp	21	0530-025		1	ECM
	0430-030		3	● Fuse - 30 Amp	22	8476-625		2	Screw, Machine
6	0430-045		6	● Relay (4-Pin) - 20 Amp	23	8424-602		2	Nut
7	0430-034		2	● Diode	24	0824-037		1	Regulator, Voltage
8	2411-213		1	● Decal, Fuse Block	25	8468-425		2	Screw, Machine
9	0430-086		1	● Seal	26	0123-802		2	Washer
10	0430-097		1	● Cover, Diagnostics Connector	27	0423-493		2	Nut w/Washer
11	1436-415		1	Repair Kit, Connector - LCD Gauge	28	0409-064		1	Sensor, Tilt
12	1436-289	AR		Repair Kit, Connector - Headlight	29	0486-403		1	Harness, Adapter - Taillight
13	1436-416		1	Repair Kit, Connector - Tilt Sensor	30	0123-788	AR		Tie, Cable - 8 in.
14	1436-417		1	Repair Kit, Connector - Idle Speed Control		0123-903	AR		Tie, Cable - 11.5 in.
15	0824-043		2	Coil, Ignition - Assembly		0623-144	AR		Tie, Cable - 17.5 in.

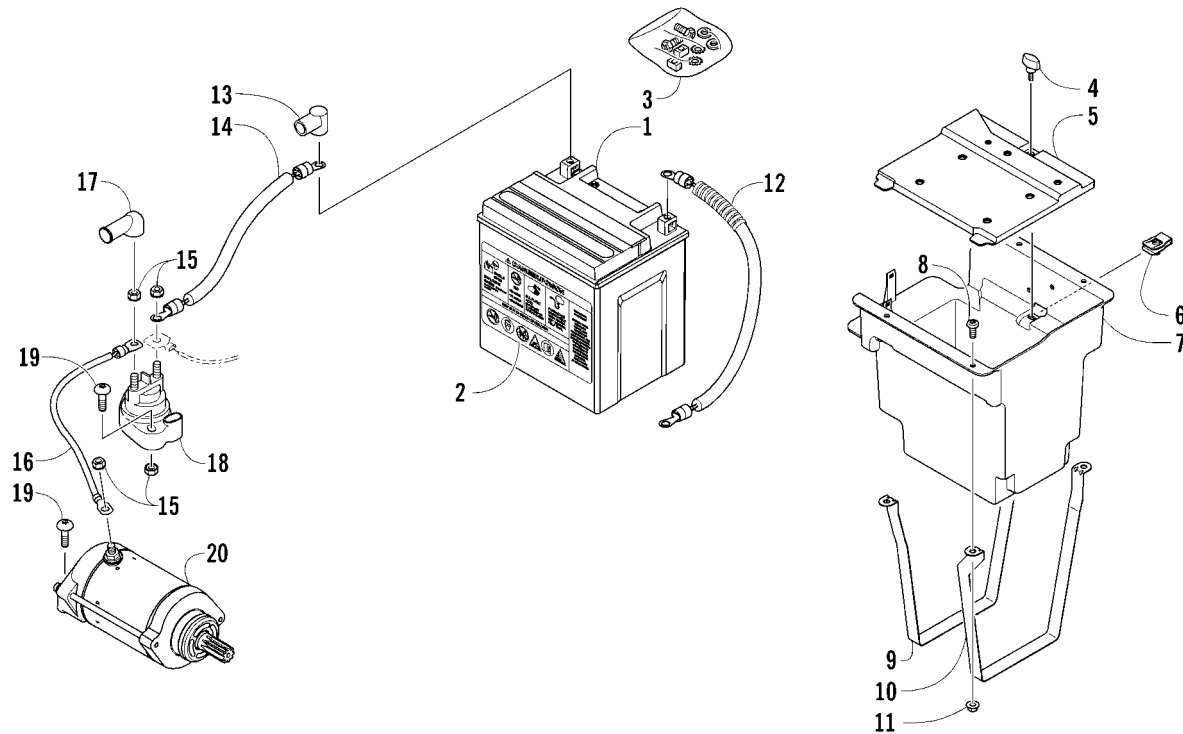

BATTERY AND STARTER MOTOR ASSEMBLY

0746-876


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0645-398	X	1	Battery (inc. 2-3)	11	8424-602		4	Nut
2	0645-430		1	● Decal, Warning	12	0445-079		1	Cable, Battery/Ground
3	0445-082		1	● Kit, Hardware	13	0645-019		1	Boot, Terminal
4	1441-624		1	Screw, Thumb	14	0445-078		1	Cable, Battery/Solenoid
5	2406-949		1	Cover, Battery Box	15	0623-038		5	Nut w/Washer
6	0423-577		1	Clip, U-Nut	16	0445-080		1	Cable, Solenoid/Starter
7	2406-914		1	Box, Battery	17	0645-327		1	Boot, Terminal - Solenoid
8	8476-616		4	Screw, Machine	18	0445-058		1	Solenoid
9	0470-854		1	Hold-Down, Battery Box - Right	19	8476-625		4	Screw, Machine
10	0470-855		1	Hold-Down, Battery Box - Left	20	0825-015		1	Motor, Starter - Assembly

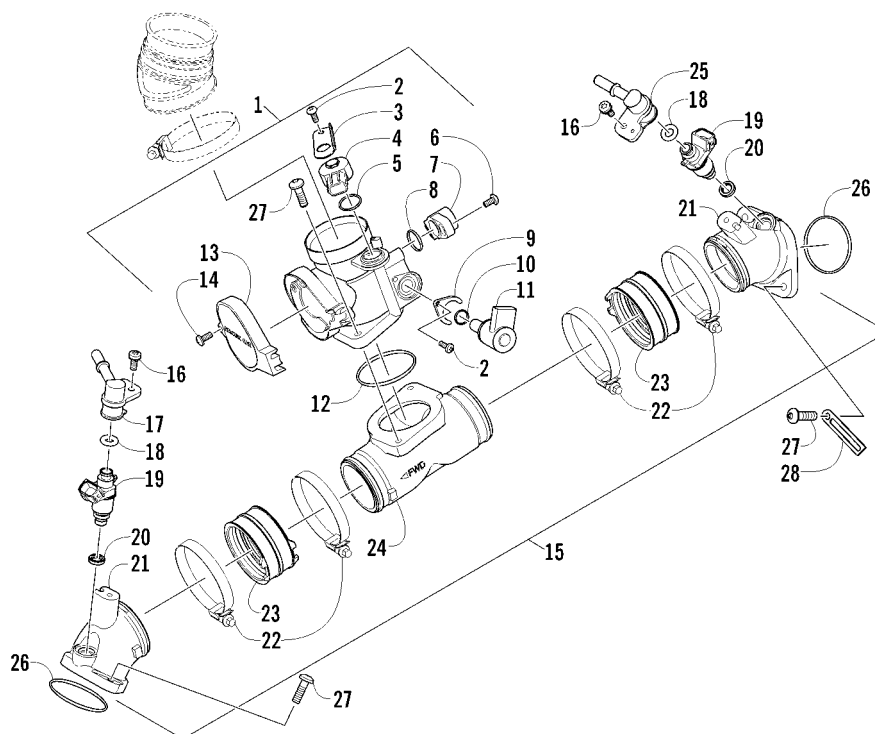

THROTTLE BODY ASSEMBLY

0744-676


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0470-686		1	Throttle - Assembly (inc. 2-14)	15	0570-319		1	Manifold, Intake - Assembly (inc. 16-25)
2	5507-117		2	● Screw, Machine	16	0423-371		2	● Screw, Machine
3	5507-227		1	● Bracket, MAP Sensor	17	0470-893		1	● Rail, Fuel - Front Cylinder
4	0430-073		1	● Sensor, MAP	18	0470-767		2	● O-Ring, Fuel Injector
5	5507-232		1	● O-Ring, MAP Sensor	19	0470-688		2	● Injector, Fuel
6	5507-231		1	● Screw, Machine	20	0470-768		2	● Ring, Seal - Fuel Injector
7	0430-072		1	● Sensor, Throttle Position	21	0570-140		2	● Manifold, Intake
8	5507-234		1	● O-Ring, Throttle Position Sensor	22	0423-066		4	● Clamp
9	5507-229		1	● Plate, ISC Valve	23	0470-660		2	● Boot, Intake - Manifold
10	5507-233		1	● O-Ring, ISC Valve	24	0570-156		1	● Plenum, Intake
11	0430-074		1	● Valve, ISC	25	0470-764		1	● Rail, Fuel - Rear Cylinder
12	5507-235		1	● O-Ring	26	0830-090		2	O-Ring
13	5507-223		1	● Cover	27	0826-008		6	Screw, Machine
14	5507-037		1	● Screw, Machine	28	1623-984	X	1	Clamp, Routing - Optional

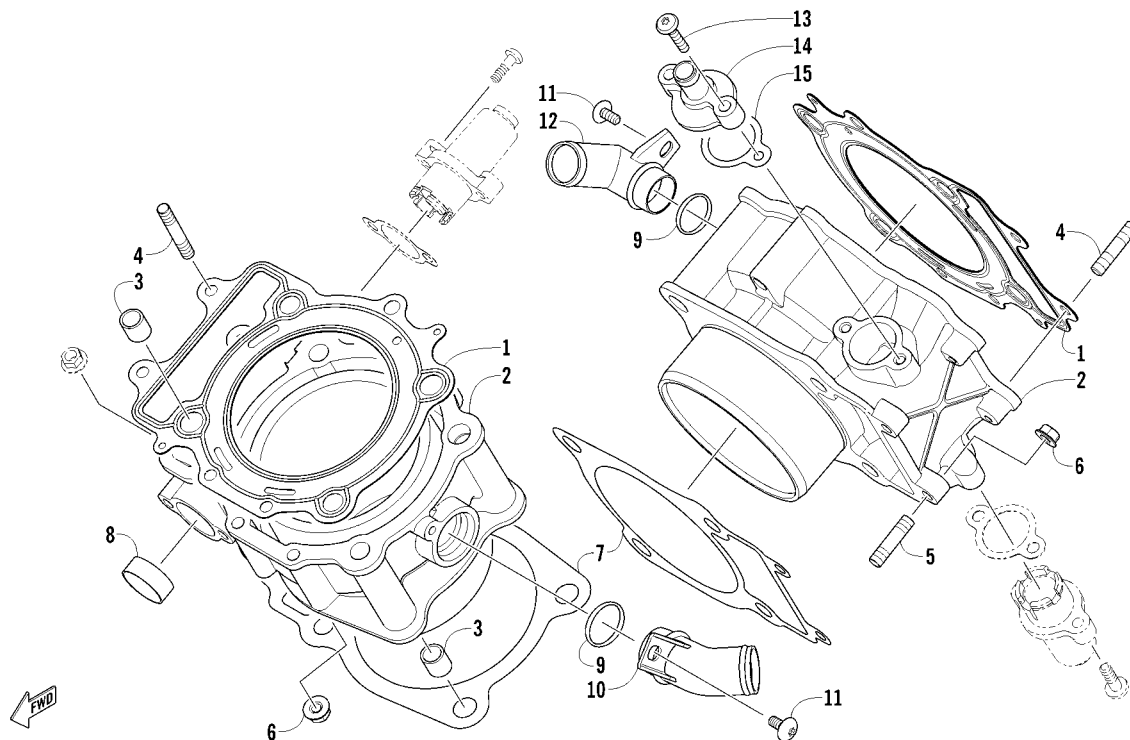

CYLINDER ASSEMBLY

0745-047

Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0830-209		2	Gasket, Head	9	0830-007		2	O-Ring
2	0804-031		2	Cylinder	10	0804-046		1	Union, Coolant Hose
3	0829-002		8	Pin, Dowel	11	8468-612		2	Screw, Machine
4	0827-002		4	Bolt, Stud	12	0804-030		1	Union, Coolant Hose
5	0827-018		4	Bolt, Stud	13	8468-620		2	Screw, Machine
6	8424-604		8	Nut	14	0801-174		1	Cover, Breather
7	0830-193		2	Gasket, Base	15	0830-134		1	Gasket
8	0804-037		1	Plug, Cylinder					

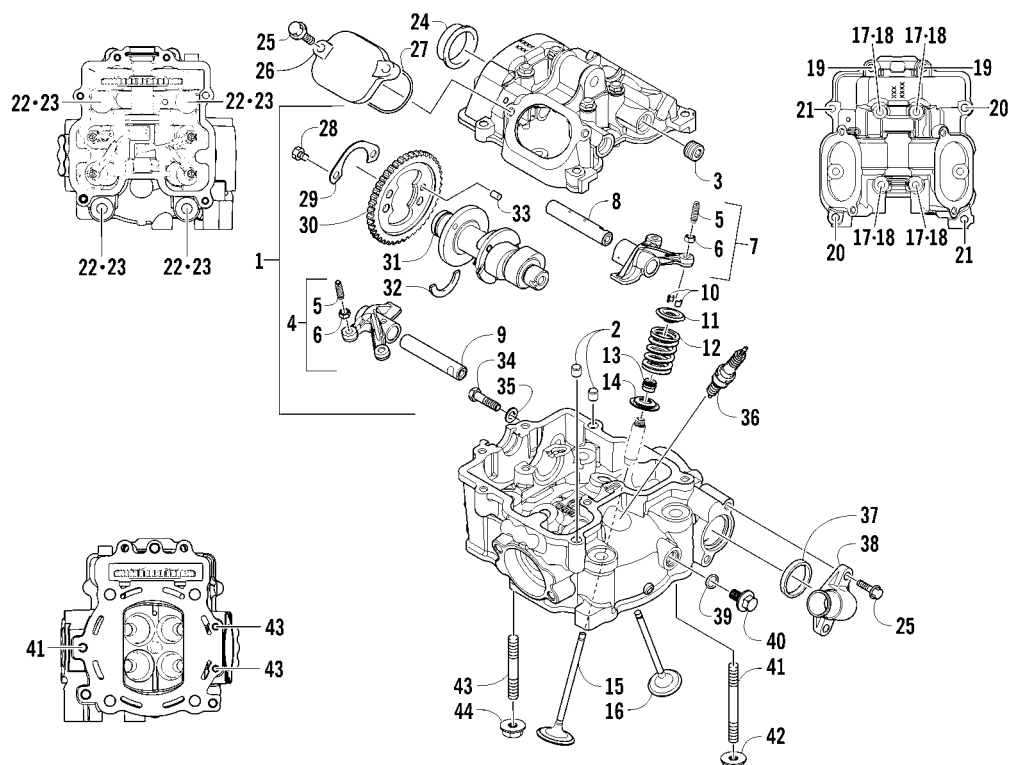


CYLINDER HEAD AND CAMSHAFT/VALVE ASSEMBLY

0745-535

Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0808-175	2		Head, Cylinder - Assembly (inc. 2-17)	23	0830-147	8		Washer
2	0829-048	4		● Pin, Dowel	24	0808-077	2		Plug, Cylinder Head
3	0831-092	4		● Plug, Shaft	25	0826-007	12		Screw, Cap
4	0809-237	2		● Arm, Valve Rocker - Exhaust (inc. two No. 5-6)	26	0808-003	4		Cap, Inspection
5	0809-240	8		●● Screw, Adjuster	27	0830-167	4		O-Ring
6	0827-059	8		●● Nut	28	0826-034	4		Screw, Cap
7	0809-234	2		● Arm, Valve Rocker - Intake (inc. two No. 5-6)	29	0828-004	2		Plate, Retainer
8	0809-241	2		● Shaft, Rocker Arm - Intake	30	0809-212	2		Sprocket
9	0809-242	2		● Shaft, Rocker Arm - Exhaust	31	0809-246	1		Camshaft, Front Cylinder
10	0809-233	16		● Cotter, Valve		0809-248	1		Camshaft, Rear Cylinder
11	0809-232	8		● Retainer, Spring	32	0809-003	2		C-Ring
12	0809-231	8		● Spring, Valve	33	0829-049	2		Pin, Dowel
13	0830-186	8		● Seal, Oil	34	8400-812	2		Screw, Cap
14	0809-230	8		● Seat, Spring - Valve	35	0830-025	2		Washer, Crush
15	0809-228	4		● Valve, Intake	36	0217-799	2		Spark Plug - CPR8E
16	0809-229	4		● Valve, Exhaust	37	0830-120	2		Seal
17	0826-149	8		● Screw, Cap	38	0808-008	2		Cover, Thermostat
18	0830-155	8		Gasket	39	0830-213	2		O-Ring
19	0826-002	4		Screw, Cap	40	0826-157	2		Screw, Cap
20	0826-005	4		Screw, Cap	41	0827-062	2		Bolt, Stud
21	0826-006	4		Screw, Cap	42	8424-804	2		Nut
22	0808-090	8		Screw, Cap	43	0827-030	4		Bolt, Stud
					44	8424-604	4		Nut

30

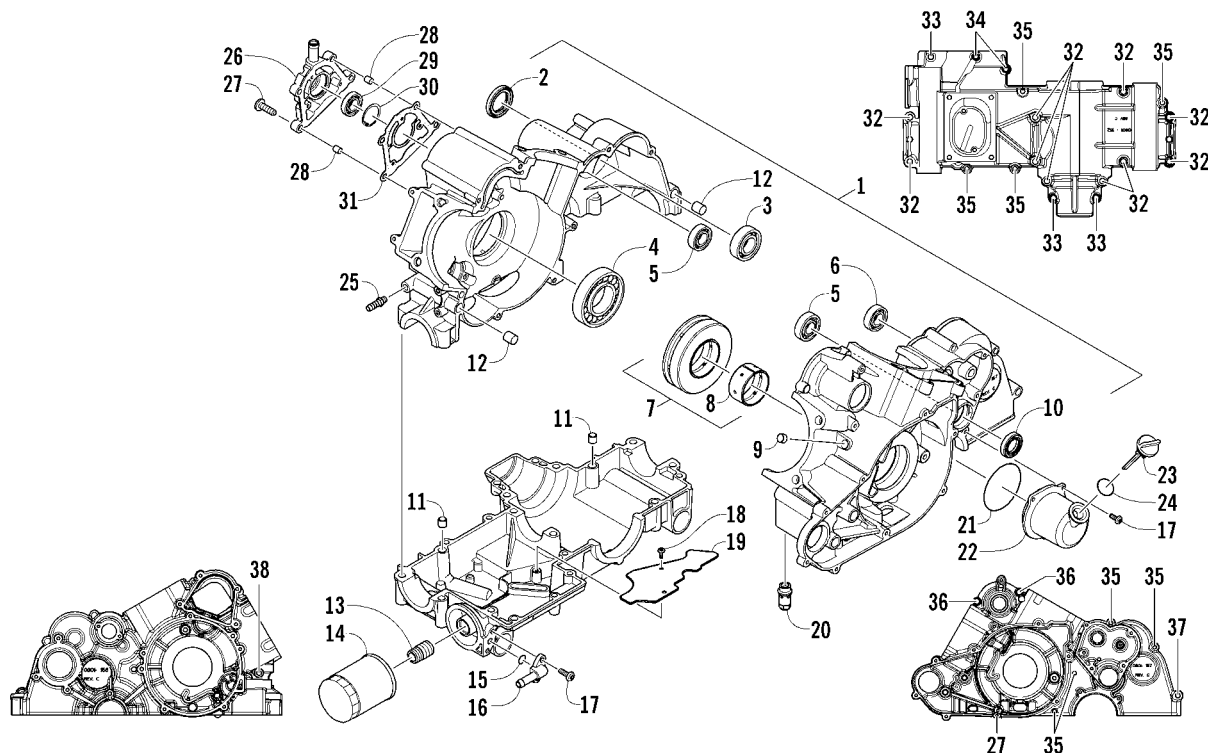


CRANKCASE ASSEMBLY

0746-877

Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0801-211	X	1	Crankcase - Assembly (inc. 2-13)	20	0812-052		1	Valve, Oil-Relief - Assembly
2	0830-035		1	● Seal, Driveshaft	21	0830-162		1	O-Ring, Oil Filler Cover
3	0832-048		1	● Bearing	22	0812-081		1	Cover, Oil Filler
4	0832-042		1	● Bearing	23	0801-179		1	Stick, Oil Level
5	0832-050		2	● Bearing	24	0830-010		1	O-Ring
6	0832-049		1	● Bearing	25	0812-078		1	Fitting, Oil - Threaded
7	0832-055		1	● Bearing - Assembly (inc. 8)	26	0801-193		1	Cover, Breather
8	0832-057		1	● ● Bearing	27	8468-625		5	Screw, Machine
9	0801-002		1	● Plug, Engine Case	28	0829-048		2	Pin, Dowel
10	0822-052		1	● Seal, Countershaft - Right	29	0832-084		1	Bearing
11	0829-003		2	● Pin, Dowel	30	0831-086		1	Circlip
12	0829-002		2	● Pin, Dowel	31	0830-191		1	Gasket, Breather
13	0812-008		1	● Union, Oil Filter	32	8412-860		10	Screw, Cap
14	0812-029		1	Filter, Oil	33	8412-830		3	Screw, Cap
15	0830-172		1	O-Ring	34	8468-640		2	Screw, Machine
16	0812-060		1	Fitting, Oil	35	8468-660		8	Screw, Machine
17	8468-616		5	Screw, Machine	36	8468-630		2	Screw, Machine
18	0623-914		2	Screw, Self-Tapping	37	8412-875		1	Screw, Cap
19	0812-079		1	Plate, Oil Sump	38	8412-850		1	Screw, Cap


32

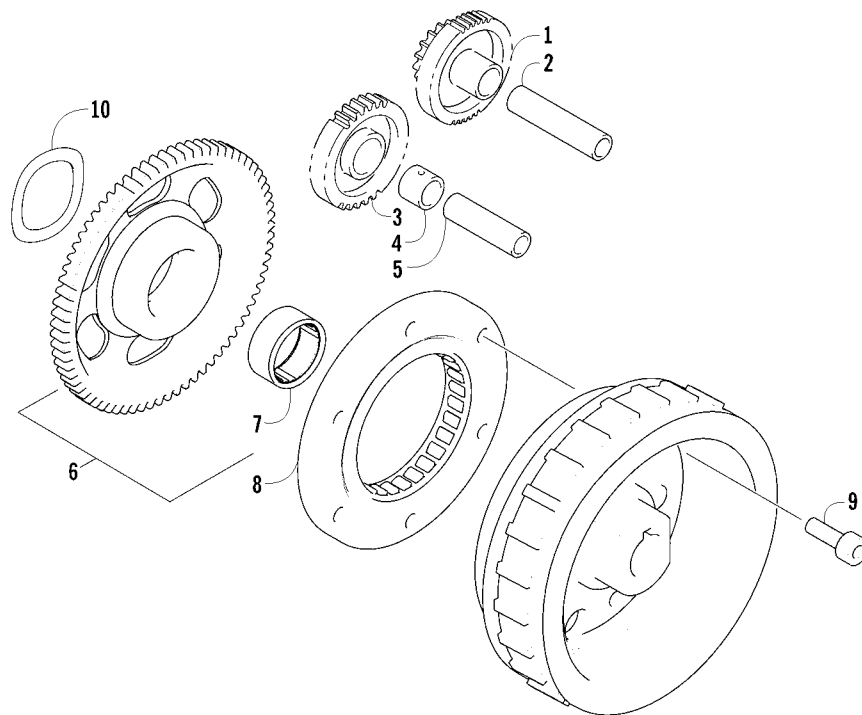

STARTER CLUTCH ASSEMBLY

0745-071


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0815-026	1		Gear, Starter Idler - No. 1	6	0815-004	1		Gear, Starter Clutch (inc. 7)
2	0829-031	1		Shaft, Starter Gear	7	0832-079	1		● Bearing
3	0815-002	1		Gear, Starter Idler - No. 2	8	0802-035	1		Clutch, Starter
4	0815-003	1		Spacer, Starter Idler Gear No. 2	9	0826-069	6		Screw, Cap
5	0829-032	1		Shaft, Starter Gear	10	0828-113	1		Washer, Wave

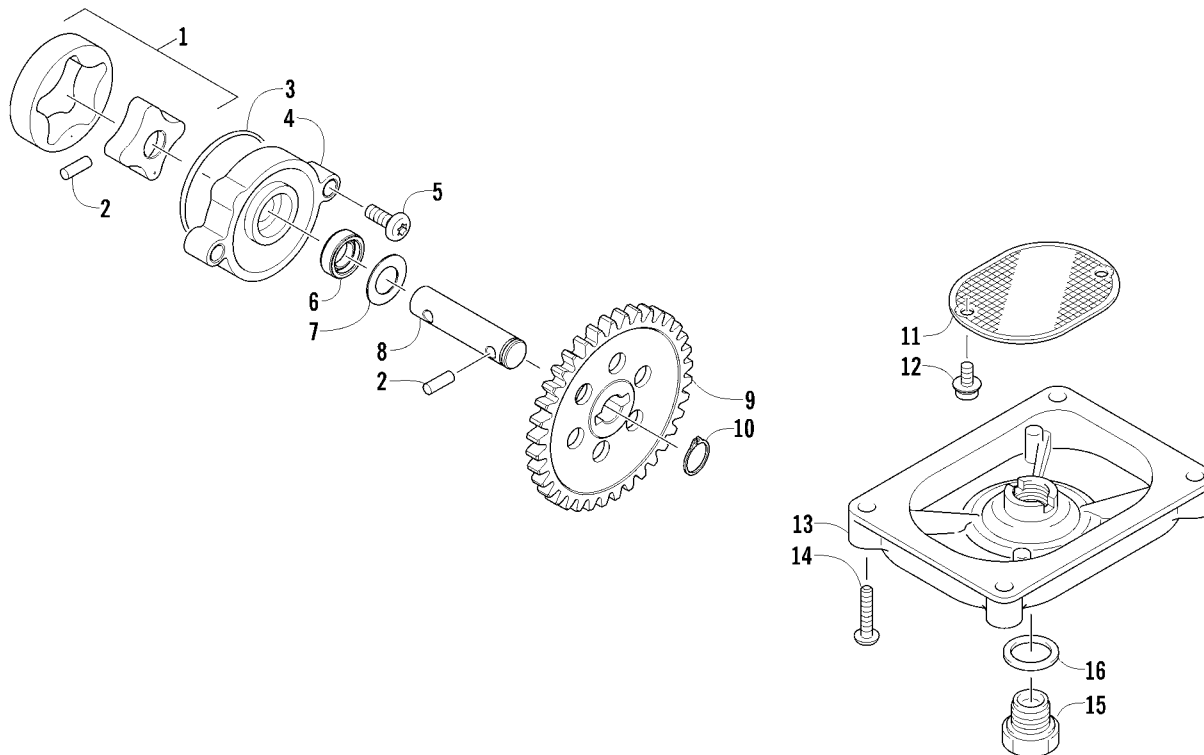

OIL PUMP ASSEMBLY

0745-052


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0812-041		1	Gerotor - Set	9	0812-045		1	Gear, Driven
2	0829-009		2	Pin, Dowel	10	0831-002		1	Ring, Retaining
3	0812-048		1	O-Ring	11	0812-057		1	Strainer, Oil
4	0812-040		1	Housing, Oil Pump	12	0826-040		2	Screw, Machine
5	8468-625		2	Screw, Machine	13	0812-053		1	Cap, Oil Strainer
6	0812-047		1	Seal, Oil Pump	14	8468-625		4	Screw, Machine
7	0828-007		1	Shim	15	0812-006		1	Plug, Drain
8	0812-046		1	Shaft, Oil Pump	16	0830-017		1	Gasket, Drain Plug

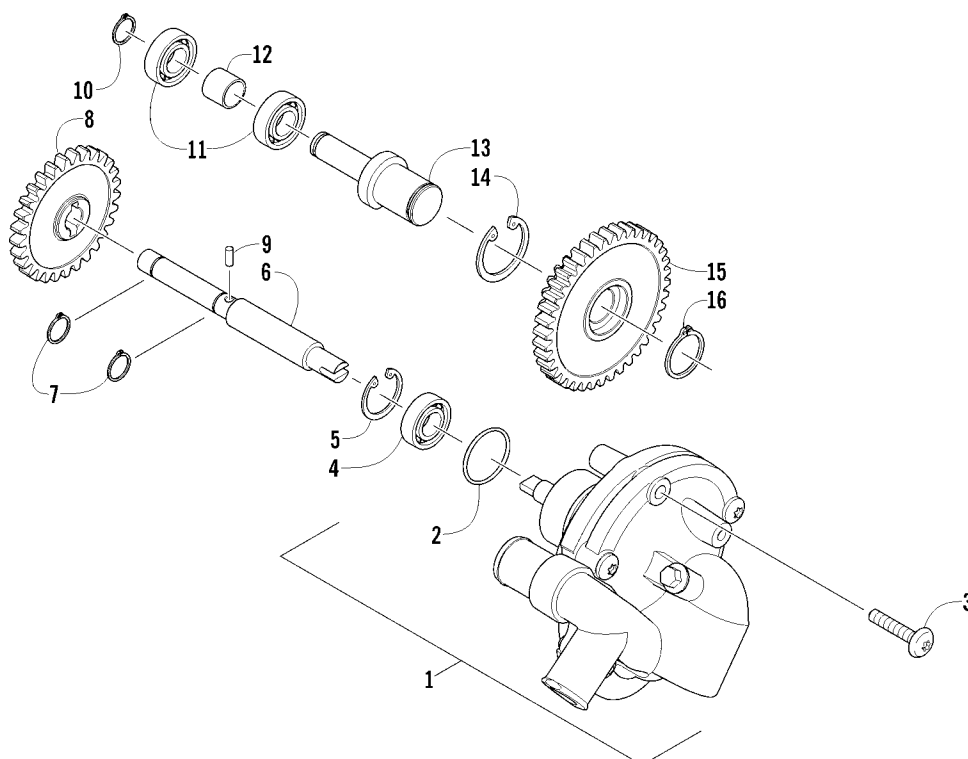

WATER PUMP ASSEMBLY

0745-053


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0813-059	1		Pump, Water - Assembly (inc. 2)	9	0829-009	1		Pin, Dowel
2	0830-029	1		● O-Ring	10	0831-002	1		Ring, Retaining
3	8468-650	2		Screw, Machine	11	0832-046	2		Bearing
4	0832-084	1		Bearing	12	0813-028	1		Spacer, Idler - Water Pump
5	0831-086	1		Circlip	13	0813-026	1		Shaft, Water Pump Idler Gear
6	0813-041	1		Shaft, Driven Gear	14	0831-004	1		Ring, Retaining
7	0831-010	2		Ring, Retaining	15	0813-027	1		Gear, Idler - Water Pump - Drive
8	0813-043	1		Gear, Driven	16	0831-040	1		Ring, Retaining

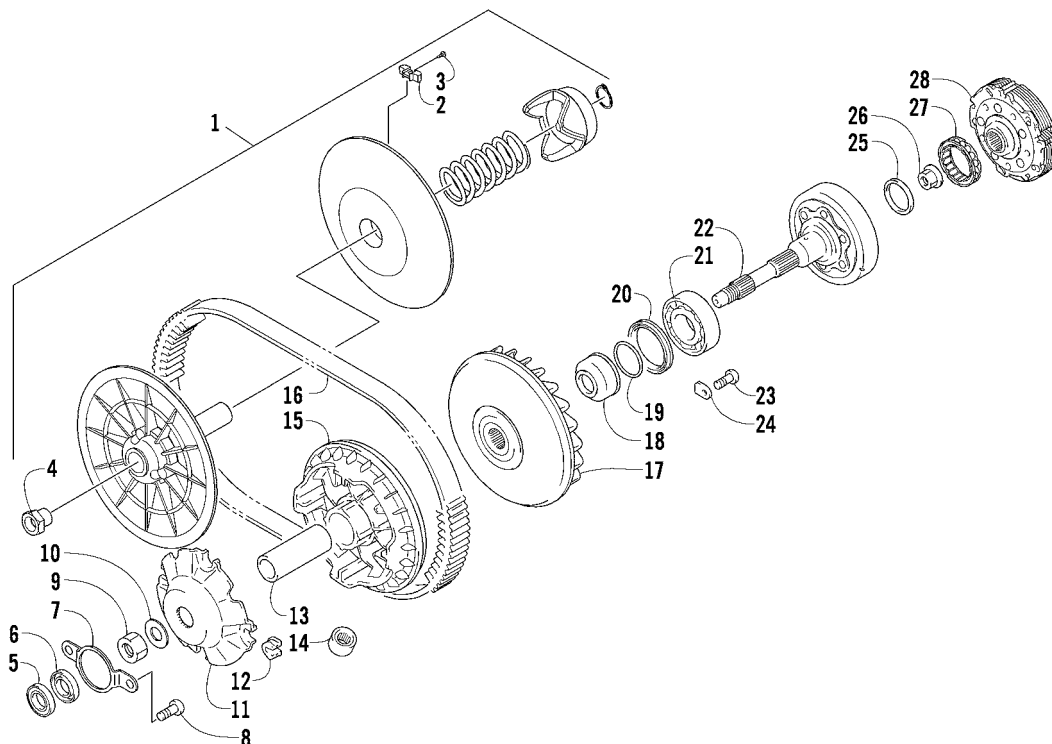

TRANSMISSION ASSEMBLY

0742-982


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0823-353		1	Pulley, Driven - Assembly (inc. 2-4)	15	0823-273		1	Face, Movable Drive
2	0823-176		3	● Shoe, Cam	16	0823-231		1	Belt, Drive
3	0823-177		3	● Screw, Machine	17	0823-272		1	Face, Fixed Drive
4	0823-178		1	● Nut, Driven Pulley	18	0823-015		1	Spacer, Fixed Drive Face
5	0832-010		1	Bearing	19	0470-531		1	O-Ring
6	0830-176		1	Seal	20	0830-188		1	Seal, Clutch Housing - Right
7	0823-020		1	Retainer, Bearing	21	0832-009		1	Bearing
8	0826-031		2	Screw, Machine	22	0821-002		1	Housing, Clutch
9	0827-010		1	Nut	23	0826-029		2	Screw, Machine
10	0828-106		1	Washer	24	0822-010		2	Retainer, Bearing
11	0823-276		1	Plate, Movable Drive Face	25	0830-189		1	Seal, Clutch Housing - Left
12	0823-277		4	Damper, Movable Drive Face	26	0827-011		1	Nut
13	0823-358		1	Spacer, Movable Drive Face	27	0823-018		1	Clutch, One-Way
14	0823-170		8	Roller, Movable Drive Face	28	0823-310		1	Clutch, Centrifugal - 6 Plate

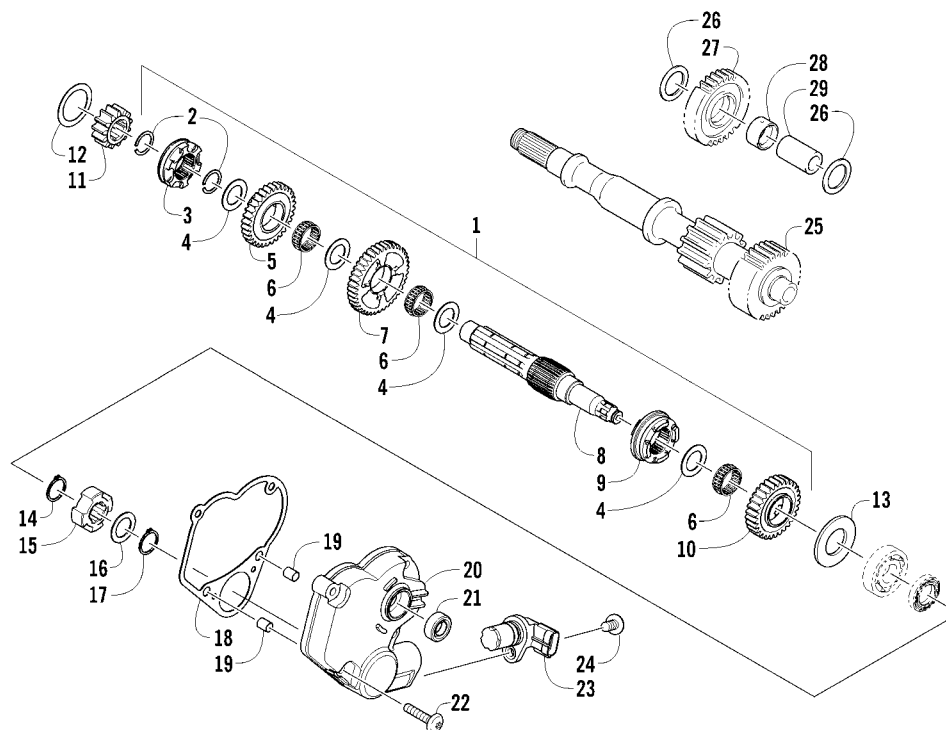

SECONDARY TRANSMISSION ASSEMBLY

0745-540


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0822-124	1	1	Countershaft Assembly (inc. 2-10)	16	0828-069	1	1	Washer, Thrust
2	0831-085	2	2	● Ring, Retaining	17	0831-039	1	1	Ring, Retaining
3	0822-120	1	1	● Gear Select, Reverse	18	0830-194	1	1	Gasket
4	0822-121	4	4	● Shim	19	0829-048	2	2	Pin, Dowel
5	0822-119	1	1	● Gear, Reverse Driven	20	0806-105	1	1	Housing, Speedometer Sensor
6	0832-082	3	3	● Bearing	21	0830-044	1	1	Seal
7	0822-114	1	1	● Gear, Driven - Low	22	8468-630	4	4	Screw, Machine
8	0822-113	1	1	● Countershaft	23	0824-042	1	1	Sensor, Speedometer
9	0822-116	1	1	● Gear Select, Sliding	24	8468-620	1	1	Screw, Machine
10	0822-115	1	1	● Gear, Driven - High	25	0822-001	1	1	Driveshaft
11	0822-125	1	1	Gear, Drive	26	0828-016	2	2	Washer, Thrust
12	0828-019	1	1	Washer, Thrust	27	0822-011	1	1	Gear, Reverse Idle
13	0828-011	1	1	Washer	28	0822-012	1	1	Bushing
14	0831-040	1	1	Ring, Retaining	29	0822-015	1	1	Shaft, Reverse Idle
15	0822-050	1	1	Trigger, Speedometer Sensor					

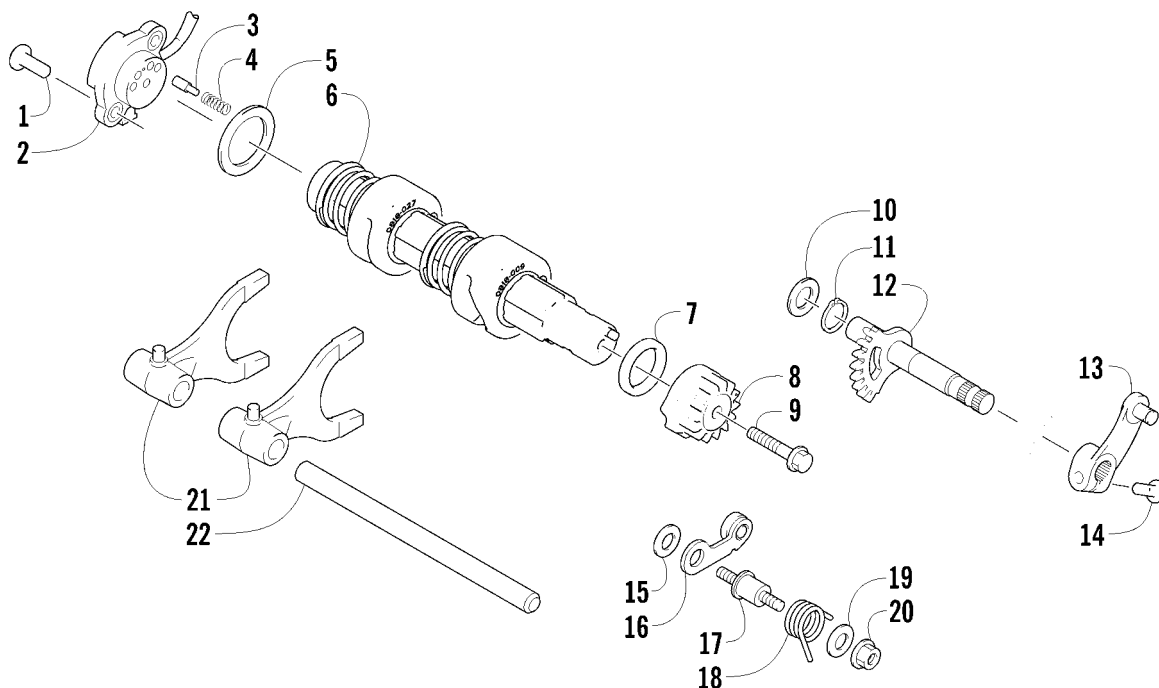

GEAR SHIFTING ASSEMBLY

0746-025

Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	8470-516		2	Screw, Machine	12	0818-095		1	Shaft, Sub-Gear Shift
2	0409-091		1	Switch, Gear Position	13	0818-014		1	Arm, Shift
3	0818-013		2	Contact	14	8468-620		1	Screw, Machine
4	0818-017		2	Spring	15	0828-038		1	Washer
5	0828-040		1	Washer	16	0818-002		1	Stopper, Cam
6	0818-046		1	Shaft, Gear Shift - Assembly	17	0818-004		1	Support, Cam Stopper
7	0828-131		1	Spacer	18	0818-090		1	Spring
8	0818-055		1	Cam, Gear Shift	19	0828-035		1	Washer
9	0826-006		1	Screw, Cap	20	8424-602		1	Nut
10	0828-036		1	Washer	21	0818-072		2	Fork, Shift
11	0831-010		1	Ring, Retaining	22	0818-006		1	Shaft, Shift Fork

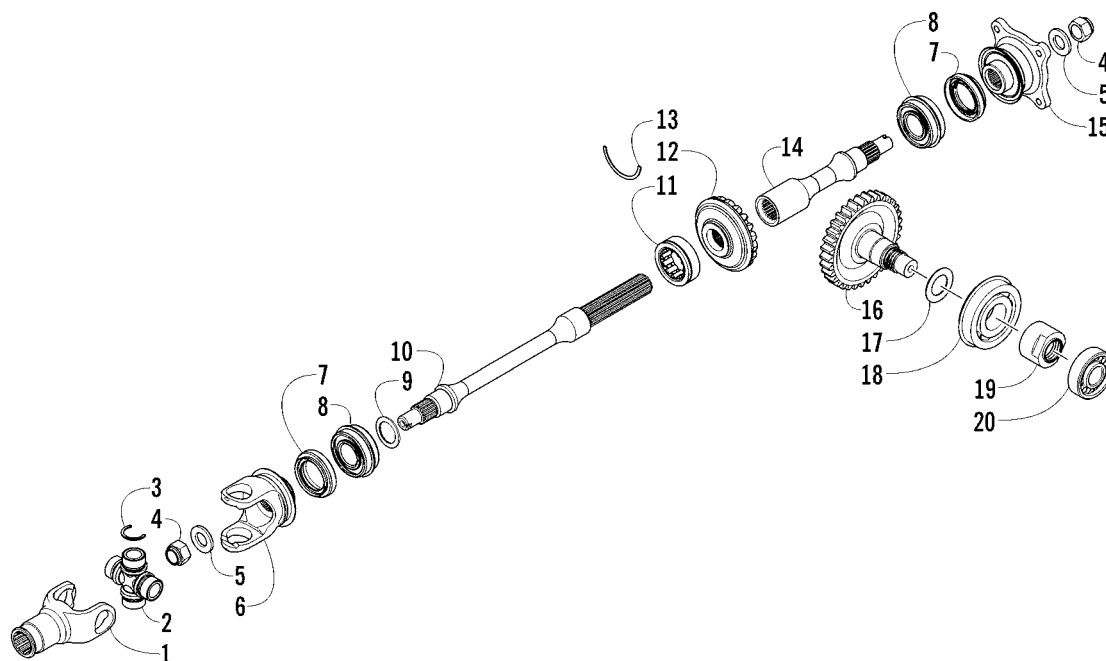


SECONDARY DRIVE ASSEMBLY

0745-215

Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0502-829	1	1	Yoke, Drive Output	11	0832-016	1	1	Bearing, Driven Gear
2	0402-944	1	1	Joint, Universal - Set (inc. 3)	12	0822-106	1	1	Gear, Secondary Driven
3	0423-395	4	4	● Ring, Retaining	13	0819-011	1	1	Ring, Driven Bearing
4	0827-013	2	2	Nut	14	0819-053	1	1	Shaft, Secondary Driven - Rear
5	0828-020	2	2	Washer	15	0819-005	1	1	Flange, Output Joint
6	0502-828	1	1	Yoke, Propeller Shaft Joint	16	0822-132	1	1	Gear, Secondary Drive
7	0830-043	2	2	Seal, Oil	17	0828-119	AR		Shim, 30 x 48 x 0.25 mm
8	0832-017	2	2	Bearing		0828-120	AR		Shim, 30 x 48 x 0.30 mm
9	0828-021	AR		Shim, 25 x 34 x 0.25 mm		0828-121	AR		Shim, 30 x 48 x 0.35 mm
	0828-022	AR		Shim, 25 x 34 x 0.30 mm		0828-122	AR		Shim, 30 x 48 x 0.90 mm
	0828-023	AR		Shim, 25 x 34 x 0.70 mm		0828-123	AR		Shim, 30 x 48 x 0.95 mm
	0828-024	AR		Shim, 25 x 34 x 0.90 mm		0828-124	AR		Shim, 30 x 48 x 1.00 mm
	0828-025	AR		Shim, 25 x 34 x 0.95 mm		0828-125	AR		Shim, 30 x 48 x 1.05 mm
	0828-026	AR		Shim, 25 x 34 x 1.00 mm		0828-126	AR		Shim, 30 x 48 x 1.10 mm
	0828-027	AR		Shim, 25 x 34 x 1.05 mm		0828-127	AR		Shim, 30 x 48 x 1.15 mm
	0828-028	AR		Shim, 25 x 34 x 1.10 mm	18	0832-083	1	1	Bearing
	0828-029	AR		Shim, 25 x 34 x 1.15 mm	19	0827-060	1	1	Nut
10	0819-115	1	1	Shaft, Secondary Driven - Front	20	0832-050	1	1	Bearing

40

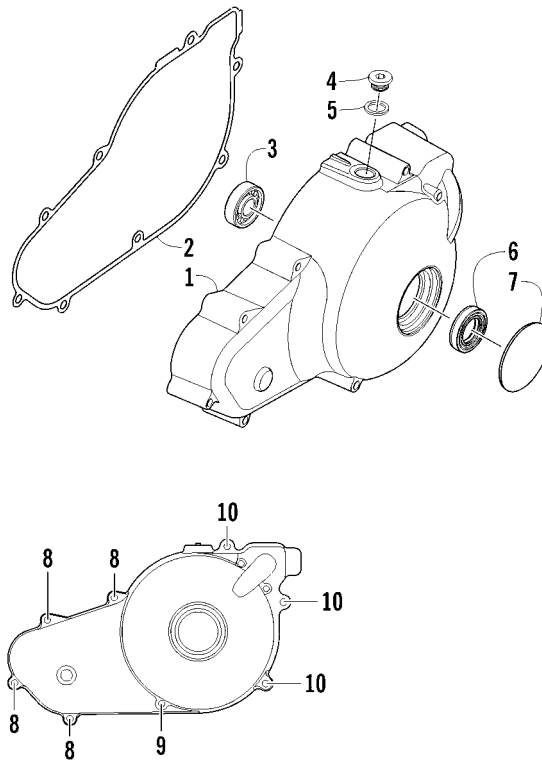

MAGNETO SIDE ENGINE COVERS

0745-061

Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0806-107	1	1	Cover, Magneto	6	0830-176	1	1	Seal, Cap
2	0830-132	1	1	Gasket, Magneto Cover	7	0806-066	1	1	Cap, Magneto Cover
3	0832-010	1	1	Bearing	8	8468-650	4	4	Screw, Machine
4	0826-155	1	1	Plug, Check	9	8468-695	1	1	Screw, Machine
5	0830-015	1	1	Washer, Crush	10	8468-665	3	3	Screw, Machine

42

