

2014 ARCTIC CAT[®]

ILLUSTRATED PARTS MANUAL



1000 XT EFT

Model Number A2014AGW1PETX

ARCTIC CAT[®]
SHARE OUR PASSION.™

www.arcticcat.com


TABLE OF CONTENTS

2014 ATV 1000 XT EFT

(Model No. A2014AGW1PETX)

FRONT RACK, BODY PANEL, AND HEADLIGHT ASSEMBLIES	1
REAR RACK, BODY PANEL, AND FOOTWELL ASSEMBLIES	2
FRAME AND RELATED PARTS	3
WINCH ASSEMBLY	4
LICENSE PLATE HOLDER ASSEMBLY	5
SEAT ASSEMBLY	6
STEERING ASSEMBLY	7
HANDLEBAR ASSEMBLY	8
INSTRUMENT POD ASSEMBLY	9
FRONT SUSPENSION ASSEMBLY	10
REAR SUSPENSION ASSEMBLY	11
SWAYBAR ASSEMBLY	12
WHEEL AND TIRE ASSEMBLY	13
HYDRAULIC BRAKE ASSEMBLY	14
PARKING BRAKE ASSEMBLY	15
GAS TANK ASSEMBLY	16
SHIFT LEVER ASSEMBLY	17
AIR INTAKE ASSEMBLY	18
ENGINE AND EXHAUST	19
COOLING ASSEMBLY	20
CASE/BELT COOLING ASSEMBLY	21
DRIVE TRAIN ASSEMBLY	22
FRONT DRIVE GEARCASE ASSEMBLY	23
REAR DRIVE GEARCASE ASSEMBLY	24
WIRING HARNESS ASSEMBLY	25
BATTERY AND STARTER ASSEMBLY	26
THROTTLE BODY ASSEMBLY	27
CYLINDER ASSEMBLY	28
CYLINDER HEAD AND CAMSHAFT/VALVE ASSEMBLY	29
CAM CHAIN ASSEMBLY	30
CRANKCASE ASSEMBLY	31
CRANKSHAFT AND PISTON ASSEMBLY	32
STARTER CLUTCH ASSEMBLY	33
OIL PUMP ASSEMBLY	34
WATER PUMP ASSEMBLY	35
TRANSMISSION ASSEMBLY	36
SECONDARY TRANSMISSION ASSEMBLY	37
GEAR SHIFTING ASSEMBLY	38
SECONDARY DRIVE ASSEMBLY	39
MAGNETO ASSEMBLY	40
MAGNETO SIDE ENGINE COVERS	41
CLUTCH SIDE ENGINE COVERS	42


■ **NOTE:** The illustrations used in this Parts Manual are for reference to replacement part numbers only and are not to be used for assembly. For assembly procedures, use an Arctic Cat Service Manual. For a complete list of related items, refer to the current accessory catalog.

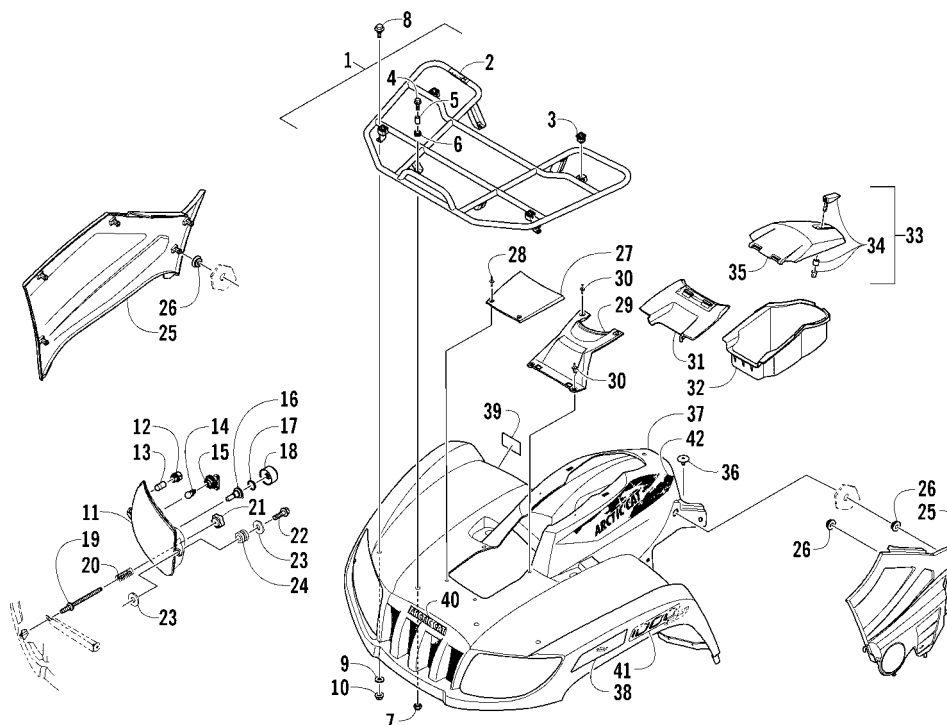

FRONT RACK, BODY PANEL, AND HEADLIGHT ASSEMBLIES

0747-728


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	2506-106		1	Rack, Front - Assembly (inc. 2-3)	23	8050-217		8	Washer
2	0411-576		1	● Decal, Warning - Load	24	0423-447		4	Grommet
3	0441-592		4	● Bushing	25	2406-588		1	Panel, Side - Lower - Right
4	8410-835		4	Screw, Cap		2406-589		1	Panel, Side - Lower - Left
5	0423-669		4	Spacer	26	0423-678		8	Grommet
6	0423-465		4	Grommet	27	1406-358		1	Cover, Access
7	8432-802		4	Nut, Lock	28	0423-535		2	Rivet, Reinstallable
8	0423-654		2	Screw, Shoulder	29	1406-484		1	Cover, Steering Post
9	8050-222		2	Washer	30	0623-362		4	Rivet, Reinstallable
10	8427-602		2	Nut, Lock	31	0470-513		1	Cover, Storage Box
11	0509-036		1	Headlight Assembly - Right (inc. 12-18)	32	1406-573		1	Box, Storage
	0509-037		1	Headlight Assembly - Left (inc. 12-18)	33	2506-234		1	Lid, Storage Box w/Latch (inc. 34-35)
12	0409-102		2	● Socket, Position Bulb	34	1406-599		1	● Latch, Storage Box
13	0409-101		2	● Bulb, Position	35	0470-514		1	● Lid, Storage Box
14	0409-099		2	● Bulb, Turn Signal	36	0423-101		2	Screw, Shoulder
15	0409-100		2	● Socket, Turn Signal Bulb	37	5506-314	X	1	Panel, Fender - Green
16	0409-096		2	● Bulb, Headlight	38	0411-818		1	Decal, Reflector - Right - Amber
17	0409-097		2	● Retainer, Spring		0411-819		1	Decal, Reflector - Left - Amber
18	0409-098		2	● Boot, Rubber	39	1411-906		1	Decal, Warning - Throttle
19	0423-514		2	Stud, Adjuster - Headlight	40	1411-725		1	Decal, "Arctic Cat"
20	0423-522		2	Spring, Adjuster	41	3411-539	X	2	Decal, "1000 EFI"
21	0423-513		2	Knob, Adjuster	42	3411-518	X	1	Decal, Side - Upper Right
22	0623-785		4	Screw, Self-Tapping		3411-519	X	1	Decal, Side - Upper Left

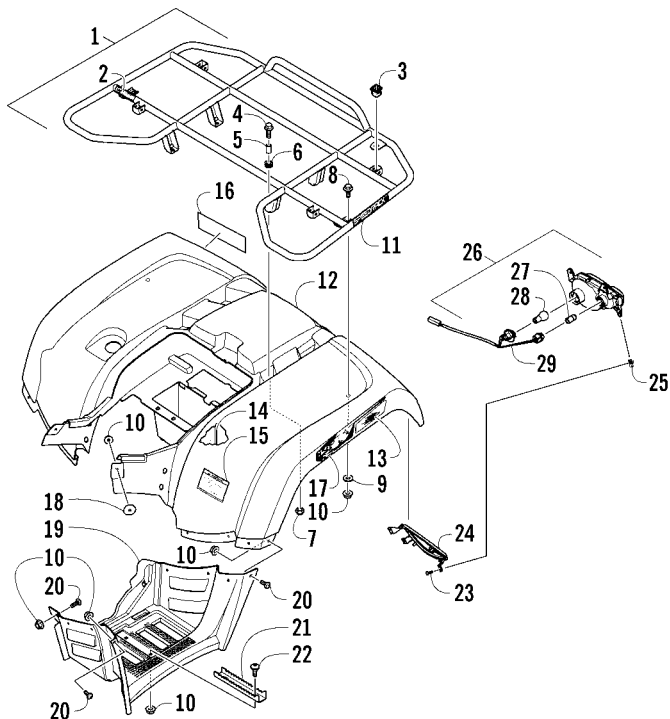

REAR RACK, BODY PANEL, AND FOOTWELL ASSEMBLIES

0747-729


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	2506-125		1	Rack, Rear - Assembly (inc. 2-3)	18	0423-101		2	Screw, Shoulder
2	0411-648		1	● Decal, Warning - Load	19	2506-450		1	Footwell - Right
3	0441-592		4	● Bushing, Rack		1406-519		1	Footwell - Left
4	8410-835		4	Screw, Cap	20	0423-419		18	Screw, Machine
5	0423-669		4	Spacer	21	1506-125		2	Footpeg
6	0423-465		4	Grommet	22	0423-355		4	Screw, Shoulder
7	8432-802		4	Nut, Lock	23	8476-516		6	Screw, Machine
8	0423-654		2	Screw, Shoulder	24	0409-112		1	Bezel, Taillight - Right
9	8050-222		2	Washer		0409-113		1	Bezel, Taillight - Left
10	8427-602		26	Nut, Lock	25	3304-061		6	Clip, U-Nut
11	0411-965		2	Decal, "Speedrack"	26	3313-392		1	Taillight Assembly - Right (inc. 27-29)
12	4506-983		1	Panel, Fender - Rear - Black		3313-393		1	Taillight Assembly - Left (inc. 27-29)
13	1411-592		1	Decal, Reflector - Right - Red	27	3313-506		2	● Bulb, Turn Signal
	1411-593		1	Decal, Reflector - Left - Red	28	3303-849		2	● Bulb, Taillight
14	0470-658		1	Foil, Protective	29	3313-509	X	1	● Harness, Taillight - Right
15	2411-609		1	Decal, Warning - Tire Pressure		3313-507	X	1	● Harness, Taillight - Left
16	1411-725		1	Decal, "Arctic Cat"					
17	3411-528	X	1	Decal, "XT" - Right					
	3411-529	X	1	Decal, "XT" - Left					

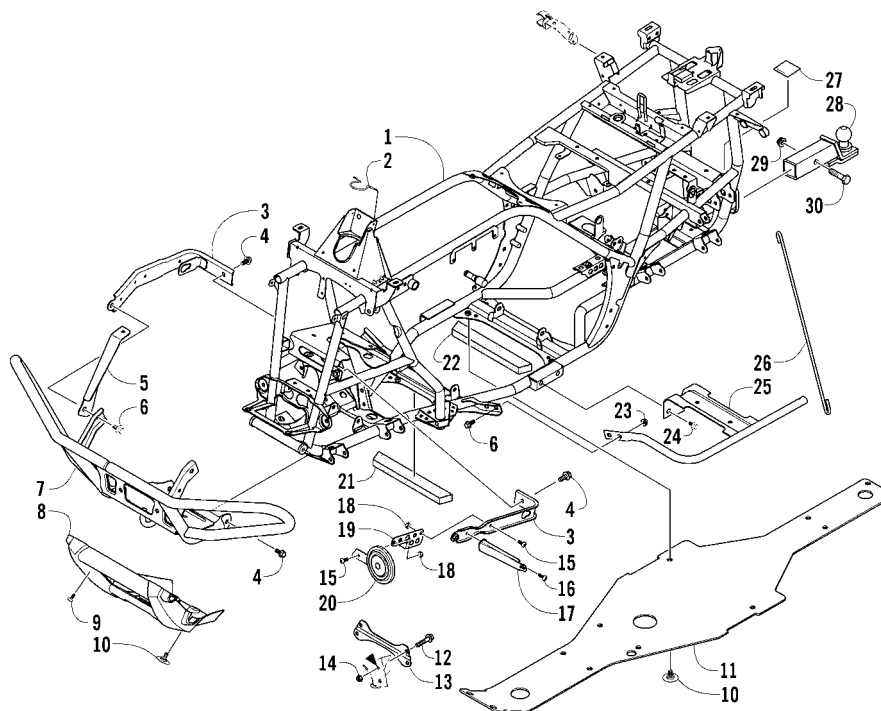

FRAME AND RELATED PARTS

0746-717

Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	4506-855		1	Frame, Main	16	8477-620		1	Screw, Machine
2	2416-401		1	Clip, Routing	17	2416-162		1	Bracket, Support - Right
3	2506-813		1	Channel, Mounting - Bumper - Right		2416-163		1	Bracket, Support - Left
	2506-285		1	Channel, Mounting - Bumper - Left	18	0623-038		3	Nut w/Washer
4	8409-020		4	Screw, Cap	19	2406-321		1	Bracket, Mounting - Horn
5	1506-562		1	Bracket, Mounting - Bumper - Right	20	0430-053		1	Horn, Electric - 12V
	1506-563		1	Bracket, Mounting - Bumper - Left	21	2506-701		1	Pad, Foam
6	8408-816		6	Screw, Cap	22	0406-289		1	Pad, Foam
7	1506-855		1	Bumper, Front	23	8424-802		4	Nut
8	1406-360		1	Fascia, Bumper - Front	24	8409-016		4	Screw, Cap
9	0423-419		2	Screw, Machine	25	2506-449		1	Footrest - Right
10	0423-101		12	Screw, Shoulder		1506-379		1	Footrest - Left
11	2406-648		1	Panel, Belly	26	2506-423		2	Rod, Support
12	8409-025		2	Screw, Cap	27	1411-077		1	Decal, Warning - Towing
13	2516-852		1	Brace, A-Arm	28	0541-857		1	Mount, Ball Hitch (inc. 29-30)
14	0423-744		2	Nut, Lock	29	0423-690		1	● Nut, Lock
15	8477-616		2	Screw, Machine	30	0423-693		1	● Screw, Cap

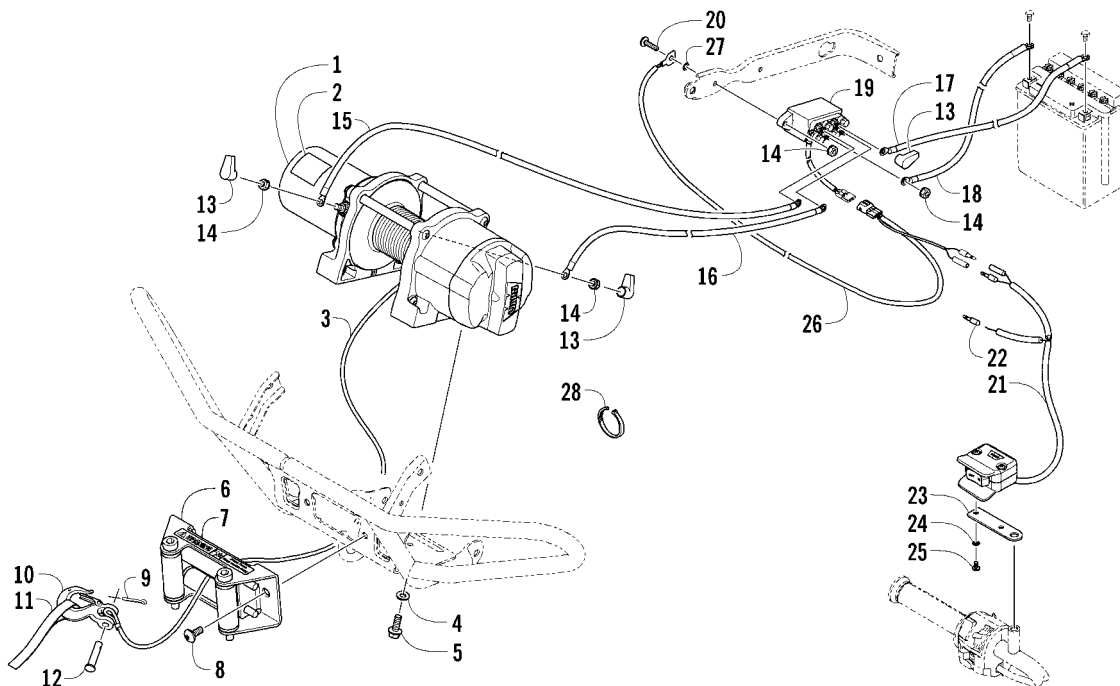

WINCH ASSEMBLY


0745-322

Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	1441-657		1	Winch (inc. 2-3)	16	0445-069		1	Cable, Winch/Solenoid - Blue
2	1411-826		1	● Decal, Warning	17	0445-087		1	Cable, Solenoid/Battery - Red
3	0441-061		1	● Cable, Winch	18	1441-112		1	Cable, Solenoid/Battery - Black
4	8051-246		4	Washer, Lock	19	0409-066		1	Solenoid
5	8408-820		4	Screw, Cap	20	8476-625		2	Screw, Machine
6	0441-403		1	Roller, Winch (inc. 7)	21	0505-552		1	Switch, Winch - Assembly (inc. 22-27)
7	0411-474		1	● Decal, Warning - Pinch Point	22	1441-428		1	● Connector, Harness
8	8468-820		2	Screw, Machine	23	0505-551		1	● Bracket, Winch Switch
9	0623-175		1	Pin, Cotter	24	8052-093		2	● Washer, Internal Tooth Lock
10	1441-833		1	Hook, Winch	25	8009-243		2	● Screw, Machine
11	1441-781		1	Strap	26	0486-276		1	● Harness, Adapter - Solenoid
12	1441-834		1	Pin	27	8053-212		1	● Washer, External Tooth Lock
13	0645-019		3	Boot, Terminal	28	0123-788		AR	Tie, Cable - 8 in.
14	0623-038		8	Nut w/Washer		0123-903		AR	Tie, Cable - 11.5 in.
15	0445-068		1	Cable, Winch/Solenoid - Yellow					



Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	2506-914		1	Mount, License Plate	5	0123-950		2	Screw, Self-Tapping
2	3304-772		1	Light, License Plate Assembly (inc. 3-4)	6	8432-802		2	Nut, Lock
3	3305-399		2	● Screw, Self-Tapping	7	8050-247		2	Washer
4	3303-847		1	● Bulb	8	8468-820		2	Screw, Machine


6

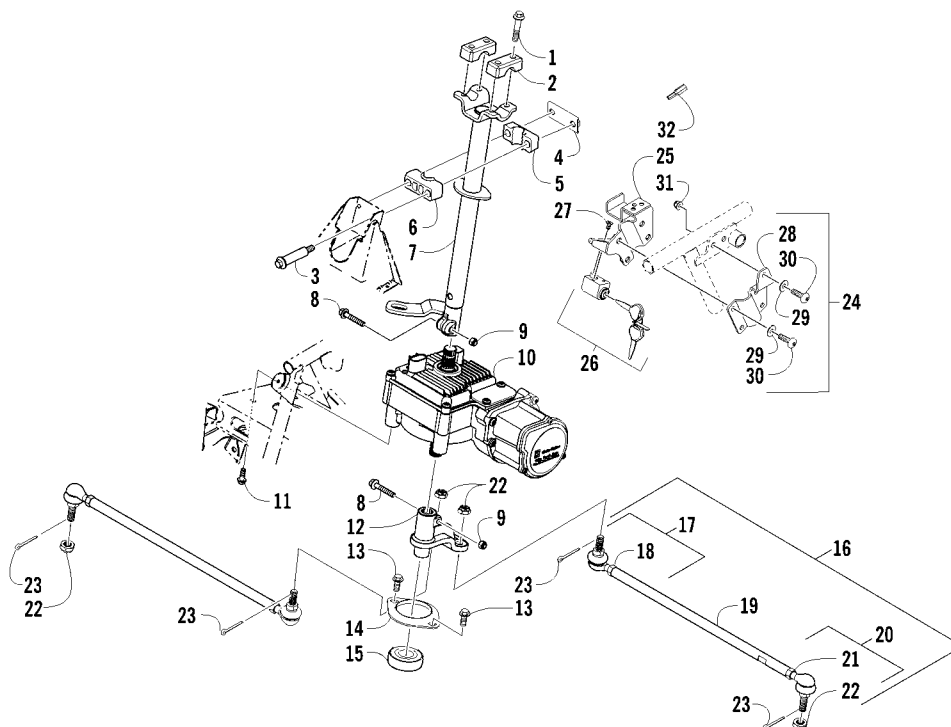

STEERING ASSEMBLY

0745-656


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	8408-835		4	Screw, Cap	18	0423-013		2	●● Nut - Left-Hand Thread
2	0405-035		2	Cap, Steering Adjuster	19	0405-281		2	● Tie Rod
3	0423-505		2	Screw, Shoulder	20	0505-874	X	2	● End, Tie Rod - Right-Hand Thread - Kit (inc. 21)
4	0505-484		1	Cap, Housing	21	8420-002		2	●● Nut - Right-Hand Thread
5	0405-260		1	Housing, Upper	22	0423-157		4	Nut, Lock
6	0405-259		1	Housing, Lower	23	0623-175		4	Pin, Cotter
7	0505-712		1	Post, Steering	24	0505-770		1	Lock, Steering - Assembly (inc. 25-31)
8	8020-045		2	Screw, Cap	25	0505-710		1	● Mount, Steering Lock
9	8040-366		2	Nut, Lock	26	3306-182		1	● Lock, Steering
10	0505-831		1	Assembly, Electronic Power Steering	27	1423-059		2	● Screw, Machine
11	8409-020		4	Screw, Cap	28	0405-409		1	● Mount, Steering Lock
12	0505-664		1	Arm, Steering	29	8050-247		5	● Washer
13	8408-816		2	Screw, Cap	30	1423-112		5	● Screw, Cap
14	0602-233		1	Flange, Bearing	31	8424-802		1	● Nut
15	0405-052		1	Bearing w/Inverted Oil Seal	32	2441-251		1	Tool, Anti-Tamper - Optional
16	0505-872	X	2	Tie Rod - Assembly (inc. 17-21)					
17	0505-875	X	2	● End, Tie Rod - Left-Hand Thread - Kit (inc. 18)					

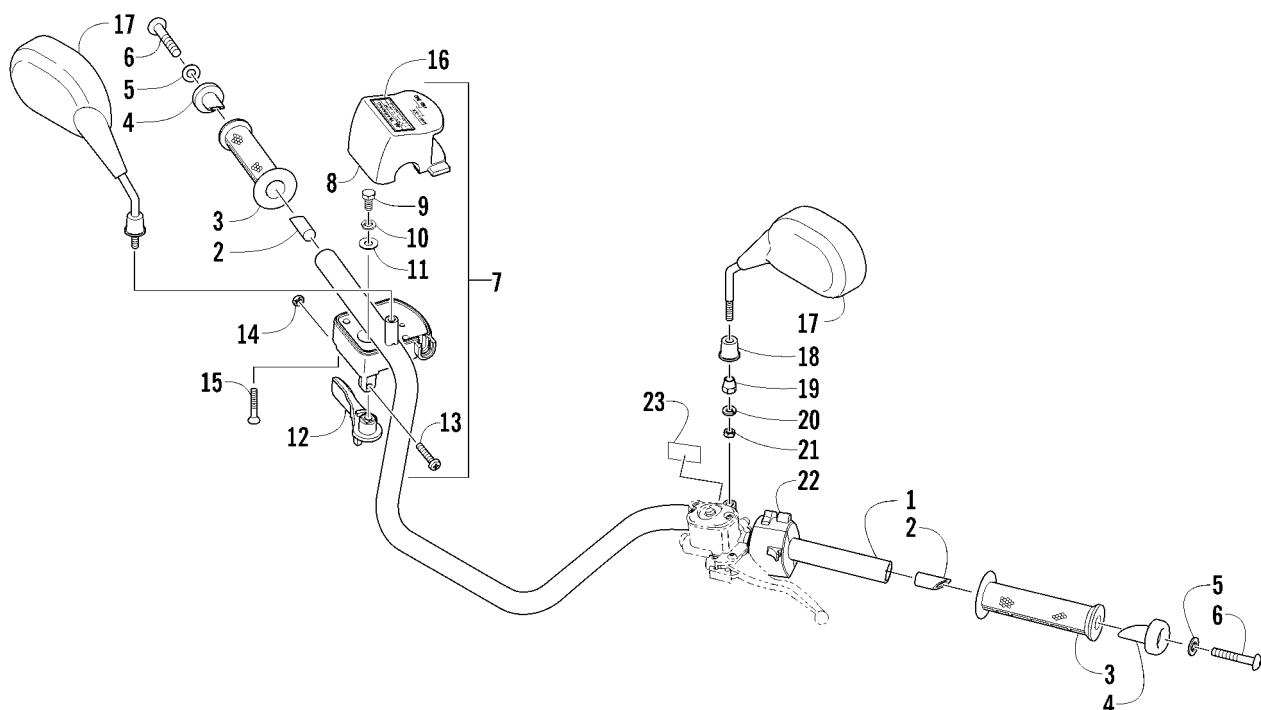

HANDLEBAR ASSEMBLY

0745-005


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0505-522		1	Handlebar	13	3423-014		1	● Screw, Machine
2	0405-218		2	Plug, Handlebar	14	3423-327		1	● Nut
3	0405-147		2	Grip, Handlebar	15	3423-199		2	● Screw, Machine
4	0405-149		2	End Cap, Handlebar	16	0411-966		1	Decal, Warning - Differential Lock
5	8050-247		2	Washer	17	2406-630		1	Mirror - Right (inc. 18-21)
6	8477-845		2	Screw, Machine		2406-631		1	Mirror - Left (inc. 18-21)
7	0509-054		1	Case, Throttle - Assembly (inc. 8-15)	18	0423-985		2	● Cover
8	0409-141		1	● Cover, Throttle Case w/Switch	19	0423-986		2	● Nut, Adjuster
9	3007-392		1	● Screw, Cap	20	0423-987		2	● Washer, Lock
10	3004-447		1	● Washer, Lock	21	0423-988		2	● Nut
11	3003-030		1	● Washer	22	0409-081		1	Switch, Control - Assembly
12	0409-133		1	● Lever, Throttle	23	1411-865		1	Decal, Warning - Brake Lever Lock

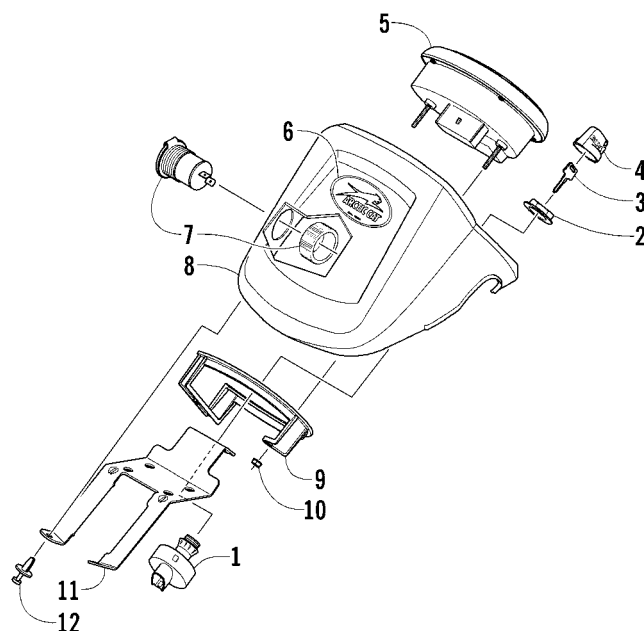

INSTRUMENT POD ASSEMBLY

0746-654


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0430-090	1	1	Switch, Ignition - Assembly (inc. 2-4)	6	9611-752	1	1	Decal, "Arctic Cat"
2	0430-050	1	1	● Nut, Retaining	7	0641-897	1	1	Outlet, Accessory - 12V
3	0430-042	1	1	● Key, Ignition (Y Series - Left-Side Cut)	8	0505-697	1	1	Instrument Pod - Black
	0430-043	1	1	● Key, Ignition (Z Series - Right-Side Cut)	9	0420-065	1	1	Bracket, Retaining
4	0430-054	1	1	● Cover, Key	10	0423-493	2	2	Nut w/Washer
5	0520-201	1	1	Gauge, LCD	11	2506-470	1	1	Bracket, Mounting - Instrument Pod
					12	0423-535	2	2	Rivet, Reinstallable

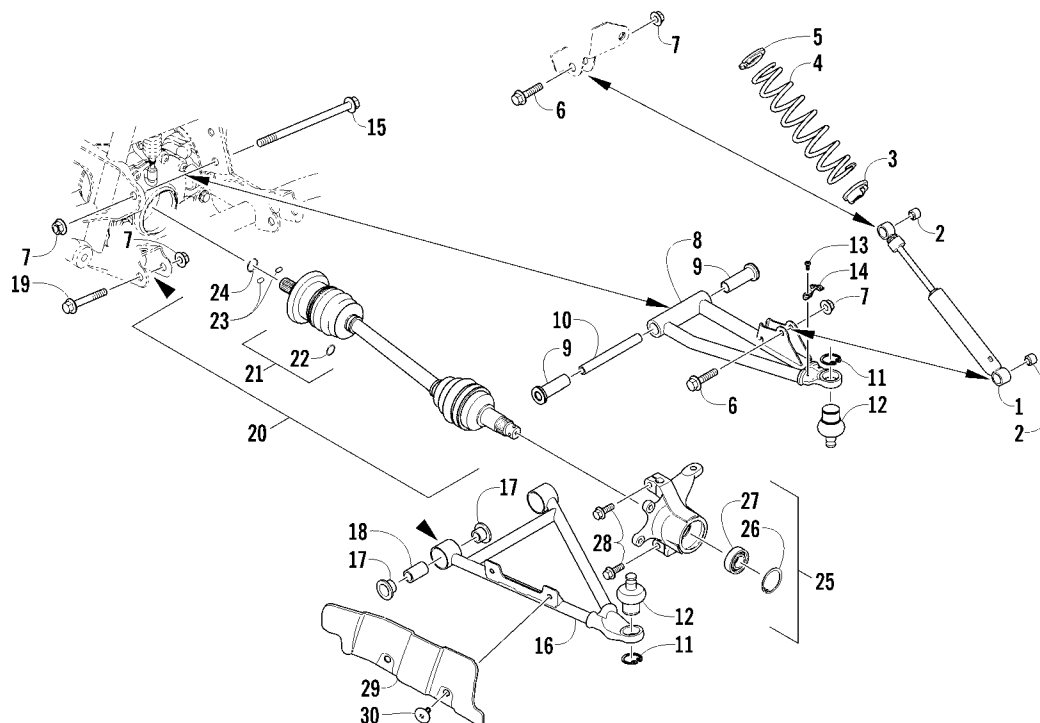

FRONT SUSPENSION ASSEMBLY

0745-247

Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0403-188		2	Shock Absorber (inc. 2)	17	0403-208		8	● Bushing
2	0403-182		4	● Bushing	18	0403-214		4	● Axle
3	0403-288		2	Cam, Spring Adjuster	19	8409-075		4	Screw, Cap
4	0503-511		2	Spring, Suspension - White	20	1502-806		1	Axle, Drive - Right (inc. 21-24)
5	1603-889		2	Retainer, Spring		1502-805		1	Axle, Drive - Locking - Left (inc. 21-24)
6	8409-040		4	Screw, Cap	21	1436-410		2	● Repair Kit, Boot (inc. 22)
7	0423-744		10	Nut, Lock	22	1441-988		2	● Clip, Retaining
8	0503-416		1	A-Arm, Upper Right - Black (inc. 9-12)	23	1402-885		4	● Pin, Detent
	0503-417		1	A-Arm, Upper Left - Black (inc. 9-12)	24	1402-889		2	● Clip, Retaining
9	0403-207		4	● Bushing	25	0505-578		1	Knuckle - Assembly - Right (inc. 26-27)
10	0403-080		2	● Axle		0505-579		1	Knuckle - Assembly - Left (inc. 26-27)
11	0423-009		4	● Ring, Retaining	26	0423-423		2	● Ring, Retaining
12	0405-483		4	● Ball Joint	27	1402-809		2	● Bearing
13	0423-946		4	Screw, Self-Tapping	28	0423-998		4	Screw, Shoulder
14	1502-594		2	Clamp, Routing	29	1406-034		1	Guard, Boot - Right - Black
15	0423-334		2	Screw, Cap		1406-035		1	Guard, Boot - Left - Black
16	0503-376		1	A-Arm, Lower Right - Black (inc. 17-18 and two No. 11-12)	30	0423-545		4	Screw, Shoulder
	0503-377		1	A-Arm, Lower Left - Black (inc. 17-18 and two No. 11-12)					

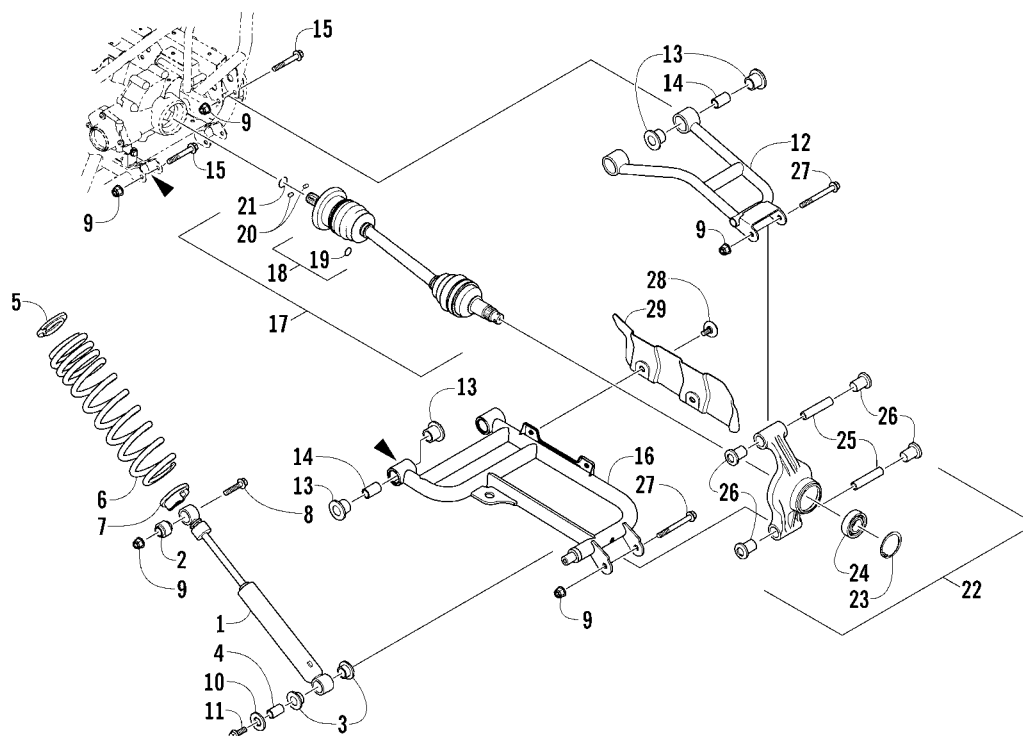


REAR SUSPENSION ASSEMBLY

0746-655

Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0404-274	2		Shock Absorber (inc. 2-4)	16	0504-718	1		A-Arm, Rear - Lower Right - Black (inc. 13-14)
2	0403-182	2		● Bushing		0504-719	1		A-Arm, Rear - Lower Left - Black (inc. 13-14)
3	0603-955	4		● Bushing	17	1502-804	2		Axle, Drive (inc. 18-21)
4	1603-219	2		● Sleeve	18	1436-410	2		● Repair Kit, Boot (inc. 19)
5	1603-889	2		Retainer, Spring	19	1441-988	2		● Clip, Retaining
6	0504-750	2		Spring, Suspension - White	20	1402-884	4		● Pin, Detent
7	0404-057	2		Cam, Spring Adjuster	21	1402-890	2		● Clip, Retaining
8	8409-040	1		Screw, Cap - Right	22	0504-630	1		Knuckle, Right - Assembly (inc. 23-26)
	8409-050	1		Screw, Cap - Left		0504-551	1		Knuckle, Left - Assembly (inc. 23-26)
9	0423-744	14		Nut, Lock	23	0423-423	2		● Ring, Retaining
10	0423-087	2		Washer	24	1402-809	2		● Bearing
11	8408-820	2		Screw, Cap	25	0403-213	4		● Axle
12	0504-582	1		A-Arm, Rear - Upper Right - Black (inc. 13-14)	26	0403-206	8		● Bushing
	0504-583	1		A-Arm, Rear - Upper Left - Black (inc. 13-14)	27	8409-000	4		Screw, Cap
13	0403-208	16		● Bushing	28	0423-545	4		Screw, Shoulder
14	0403-214	8		● Axle	29	1406-068	1		Guard, Boot - Rear - Right - Black
15	8409-075	8		Screw, Cap		1406-069	1		Guard, Boot - Rear - Left - Black




12

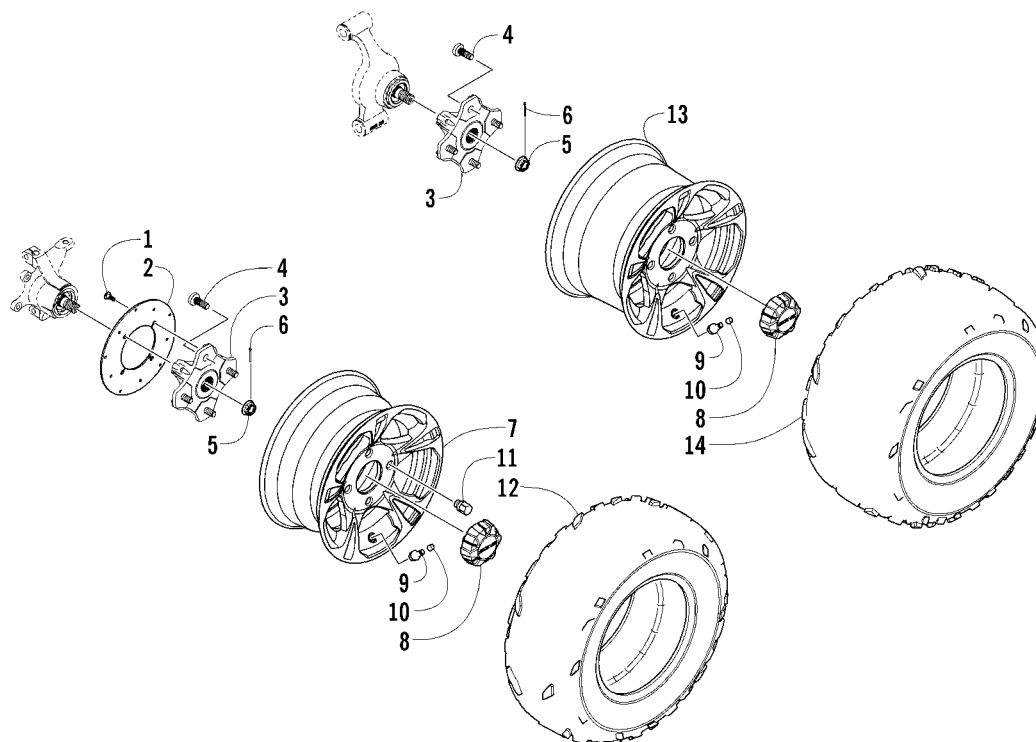

WHEEL AND TIRE ASSEMBLY

0746-718


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0423-557		12	Screw, Shoulder	8	2402-084		4	● Cap, Wheel
2	1436-164		3	Disc, Brake	9	0402-064		4	Stem, Valve (inc. 10)
3	1502-437		4	Hub, Wheel (inc. 4)	10	0402-140		4	● Cap, Valve Stem
4	0402-974		16	● Stud	11	0423-618		16	Nut, Lug - Chrome
5	0423-607		4	Nut, Castle	12	1402-935		2	Tire - Front
6	0423-407		4	Pin, Cotter	13	2402-069		2	Wheel - Rear - Aluminum (inc. 8)
7	2402-068		2	Wheel - Front - Aluminum (inc. 8)	14	1402-936		2	Tire - Rear

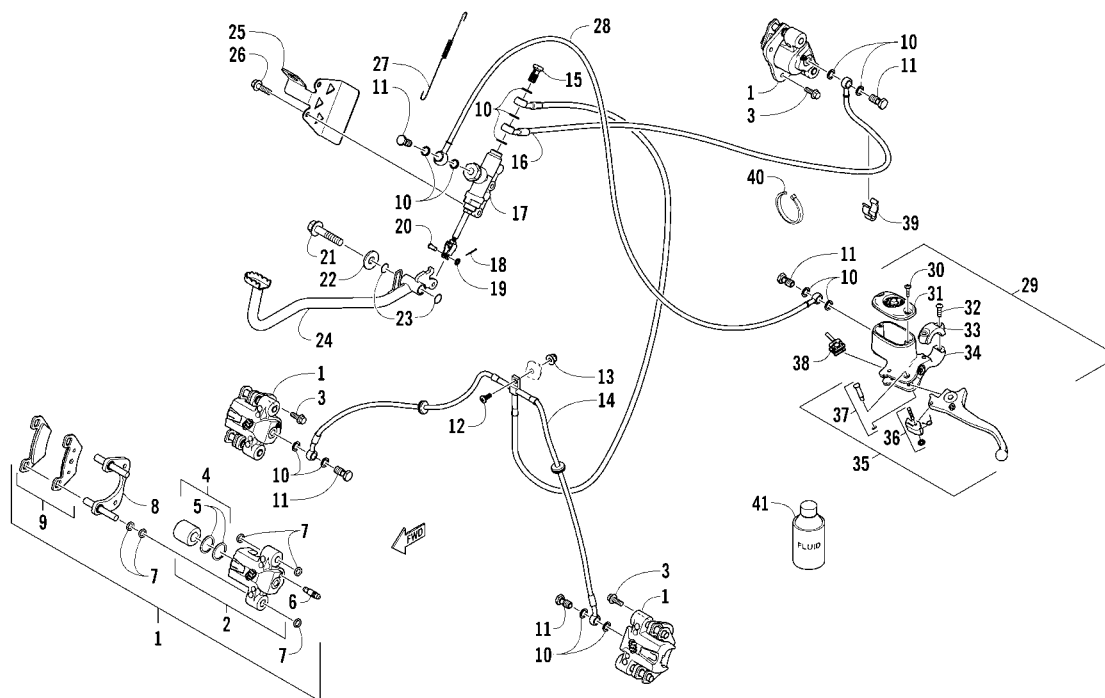

HYDRAULIC BRAKE ASSEMBLY

0747-091


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	1436-422		1	Caliper, Brake - Right Front (inc. 2-9)	18	0117-868		1	Pin, Cotter
	1436-423		1	Caliper, Brake - Left Front (inc. 2-9)	19	8050-217		1	Washer
	1436-423		1	Caliper, Brake - Rear (inc. 2-9)	20	1402-377		1	Pin, Clevis
2	1436-160		1	● Housing, Caliper - Assembly - Right Front (inc. 3-6)	21	8408-816		1	Screw, Cap
	1436-161		1	● Housing, Caliper - Assembly - Left Front (inc. 3-6)	22	8050-252		1	Washer
	1436-161		1	● Housing, Caliper - Assembly - Rear (inc. 3-6)	23	1602-213		2	O-Ring
3	8408-821		6	●● Screw, Cap	24	1502-162		1	Lever, Brake
4	0502-606		3	●● Piston/Seal Set (inc. 5)	25	1502-164		1	Bracket, Switch
5	0502-607		3	●●● Seal Set	26	8408-625		2	Screw, Cap
6	0502-609		3	●● Valve, Bleed	27	0502-785		1	Spring, Brake Switch
7	0502-608		3	● O-Ring, Guide - Set	28	1402-592		1	Hose, Brake
8	0502-605		3	● Bracket Assembly	29	0502-914		1	Brake Assembly (inc. 30-38)
9	1502-694		3	● Pad, Brake - Set	30	0502-566		1	● Screw, Machine - Kit
10	0423-178		13	Washer, Crush	31	0502-868		1	● Cover, Reservoir
11	0423-413		5	Bolt, Banjo-Fitting	32	0502-568		1	● Screw, Machine - Kit
12	8476-625		1	Screw, Machine	33	0502-869		1	● Clamp, Master Cylinder
13	8427-602		1	Nut, Lock	34	0502-704		1	● Master Cylinder Assembly
14	1502-148		1	Hose, Brake - Assembly	35	0502-866		1	● Lever Assembly - Kit (inc. 36-37)
15	0423-610		1	Bolt, Banjo-Fitting - Double	36	0502-867		1	●● Lock, Brake Lever - Kit
16	1402-594		1	Hose, Brake	37	0502-580		1	●● Lever Pin - Kit
17	1502-147		1	Brake Assembly	38	0502-564		1	● Switch, Brake
					39	1502-115		2	Clip, Brake Hose
					40	0123-788		AR	Tie, Cable - 8 in.
					41	5639-848		AR	Fluid, Brake - 12 oz

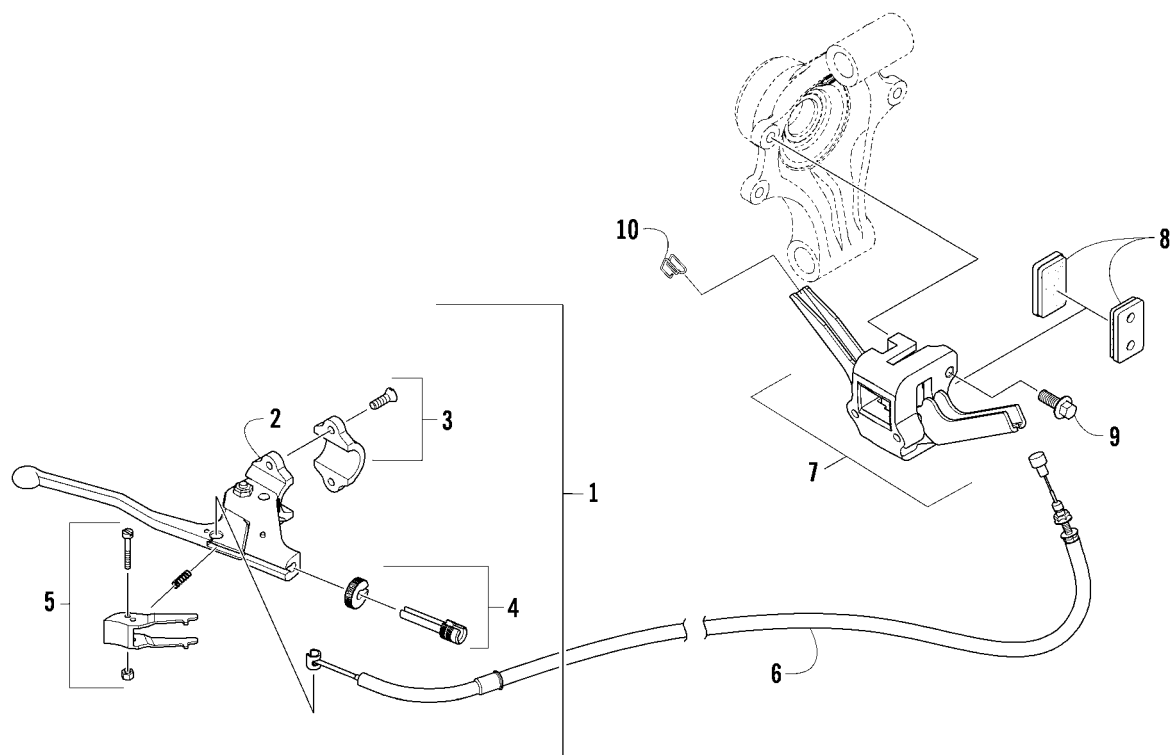

PARKING BRAKE ASSEMBLY

0743-214


Ref	Part No.	New Qty	Description	Ref	Part No.	New Qty	Description
1	1502-278	1	Lever, Parking Brake - Assembly (inc. 2-6)	6	0487-055	1	● Cable, Brake - Rear
2	1502-429	1	● Lever, Parking Brake - Kit	7	1502-865	1	Mechanical Brake Assembly (inc. 8)
3	1502-432	1	● Clamp, Handlebar - Kit	8	1402-602	2	● Pad, Brake
4	1502-430	1	● Adjuster, Thumb Nut - Kit	9	8408-826	2	Screw, Cap
5	1502-431	1	● Lock, Parking Brake Lever - Kit	10	0402-379	1	Wire Form, Cable

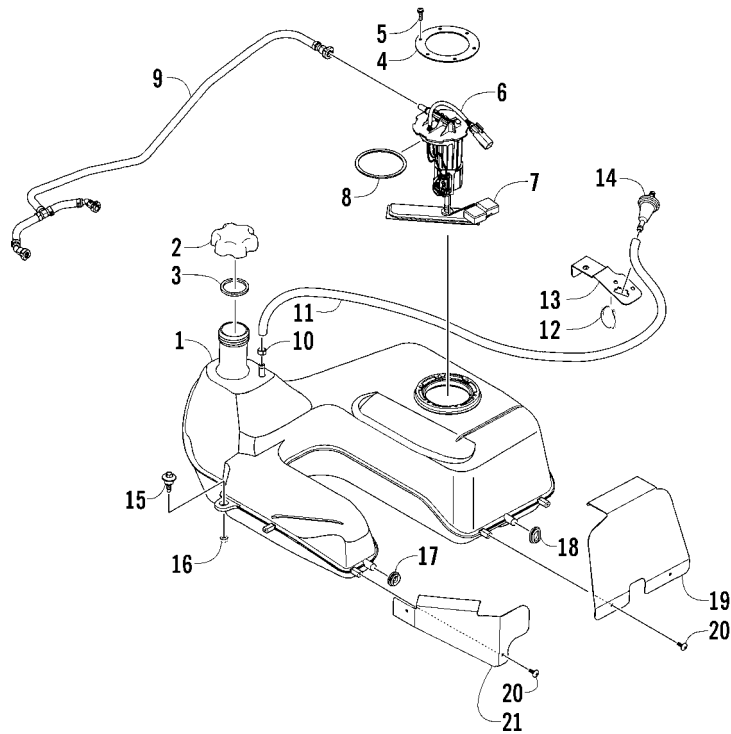

GAS TANK ASSEMBLY

0747-092


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0570-307		1	Tank, Gas - Assembly (inc. 2-5)	12	0123-788		AR	Tie, Cable - 8 in.
2	0470-438		1	● Cap, Gas Tank (inc. 3)	13	0470-980		1	Bracket, Filter Mounting
3	0109-733		1	●● Gasket, Gas Tank Cap	14	0470-988		1	Filter, In-Line
4	2670-042		1	● Plate, Retaining	15	0423-732		2	Screw, Shoulder
5	0423-898		6	● Screw, Self-Tapping	16	0623-038		1	Nut w/Washer
6	0570-322		1	Pump, Fuel - Assembly (inc. 7-8)	17	0423-460		1	Grommet
7	2670-235		1	● Float	18	0423-806		1	Grommet
8	0470-838		1	● Seal	19	0470-710		1	Shield, Heat - Gas Tank - Rear
9	0570-278		1	Hose, Fuel - Assembly	20	0623-797		4	Screw, Self-Tapping
10	0423-688		AR	Clamp, Hose	21	0470-709		1	Shield, Heat - Gas Tank - Front
11	0410-070		AR	Hose, Gasline - 25 ft					

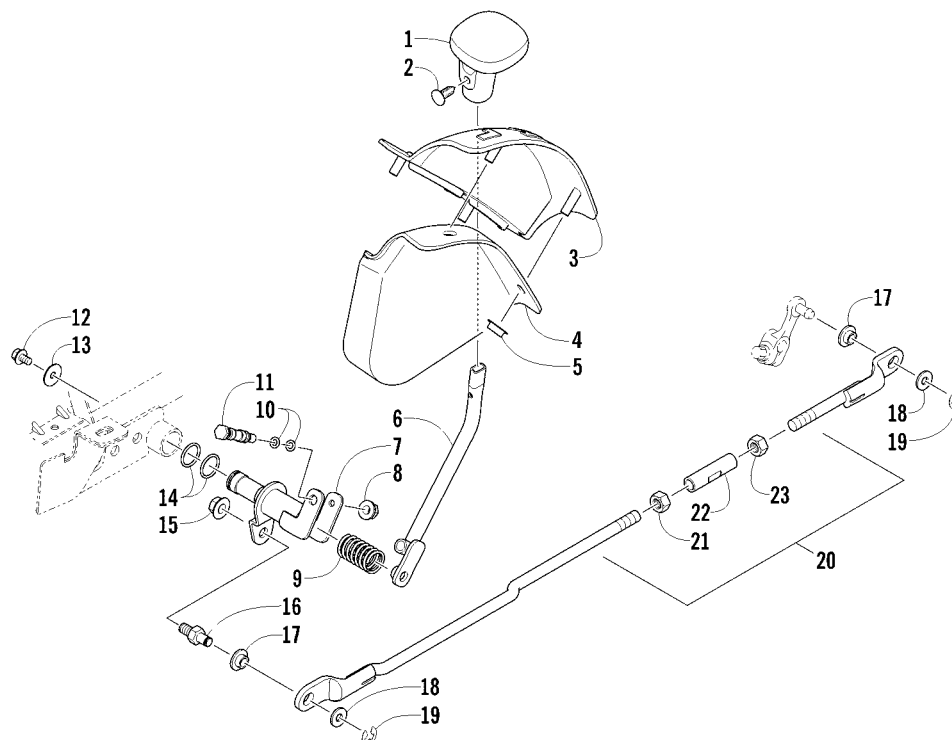

SHIFT LEVER ASSEMBLY

0745-046


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0402-843	1	1	Knob, Shift	13	0423-087	1	1	Washer
2	0423-345	1	1	Clip, Retaining	14	0423-299	2	2	O-Ring
3	1402-576	1	1	Plate, Shift	15	8424-802	1	1	Nut
4	2406-345	1	1	Shield, Shift Plate	16	1402-621	1	1	Pin, Mounting - Shift Linkage
5	0423-357	4	4	Nut, Stamped	17	0423-091	2	2	Bushing
6	1502-977	1	1	Lever, Shift	18	0623-094	2	2	Washer
7	1502-332	1	1	Actuator, Shift Lever	19	0423-169	2	2	E-Ring
8	8424-602	1	1	Nut	20	1502-227	1	1	Linkage, Shift - Assembly (inc. 21-23)
9	2402-117	1	1	Spring, Shift Lever	21	0623-294	1	1	● Nut, Hex - Right-Hand Thread
10	0423-182	2	2	O-Ring	22	1402-619	1	1	● Coupler
11	0402-675	1	1	Axle, Pivot	23	0123-917	1	1	● Nut, Hex - Left-Hand Thread
12	8408-812	1	1	Screw, Cap					

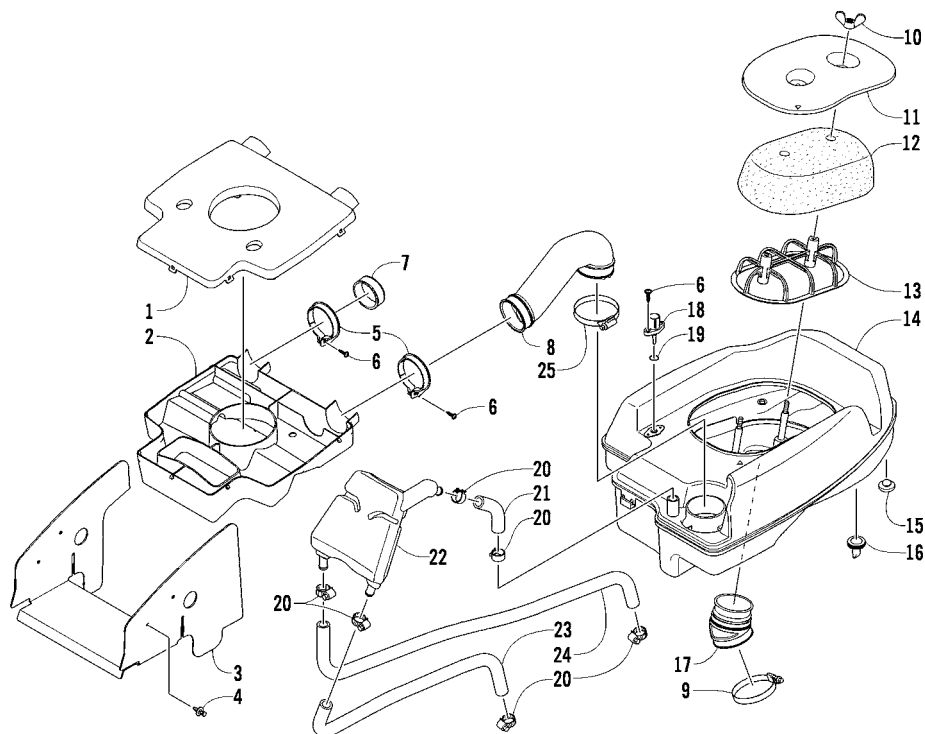

AIR INTAKE ASSEMBLY

0744-449


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0413-091		1	Diverter, Air - Top	14	0570-221		1	Housing, Air Intake
2	0413-093		1	Diverter, Air - Bottom	15	0406-877		4	Bumper
3	2406-509		1	Shroud, Splash	16	0470-858		2	Valve, Drain
4	0623-362		2	Rivet, Reinstallable	17	0470-638		1	Boot, Throttle Body
5	0423-551		2	Clamp	18	0430-055		1	Sensor, Air Temperature (inc. 19)
6	0423-342		4	Screw, Self-Tapping	19	5507-224		1	● O-Ring
7	0413-096		1	Cap, Air Intake - Diverter	20	0623-028		6	Clamp, Hose
8	0470-583		1	Boot, Air Intake	21	0410-198		1	Hose, Separator Tank
9	0423-019		1	Clamp	22	0470-718		1	Tank, Separator
10	0423-716		2	Wing Nut	23	0410-196		1	Hose, Crankcase
11	0470-832		1	Cover, Air Intake	24	0410-208		1	Hose, Crankcase
12	0470-828		1	Filter, Air	25	0423-066		1	Clamp, Hose
13	0470-731		1	Support, Air Filter					

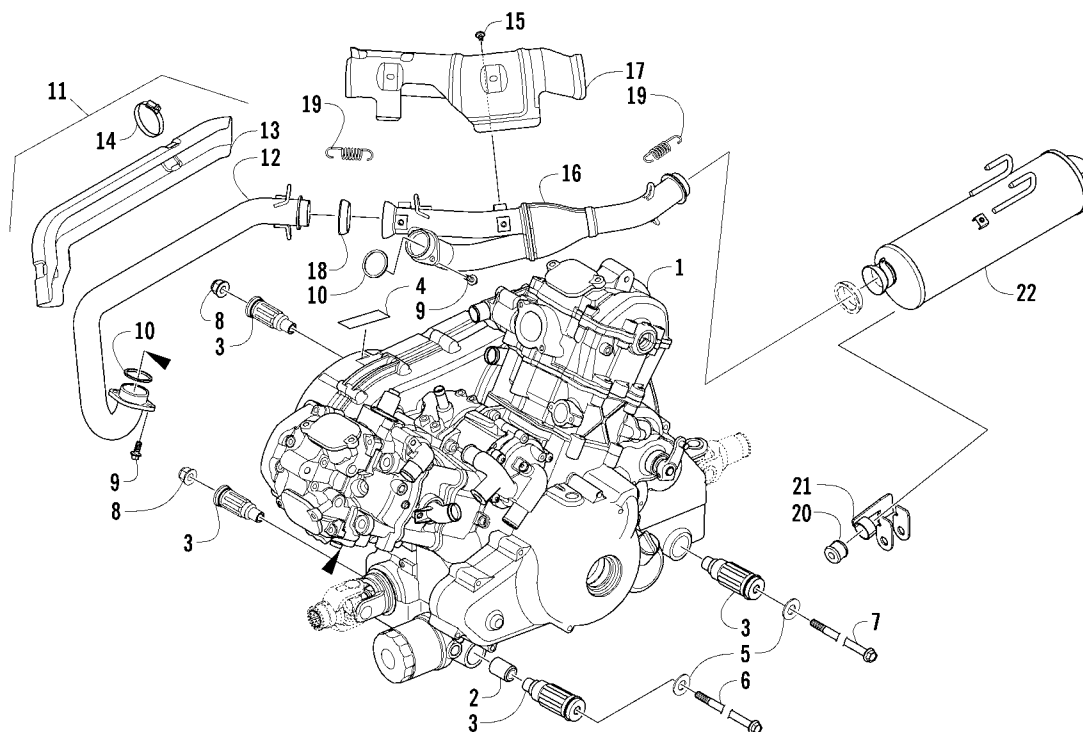

ENGINE AND EXHAUST

0746-512


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0800-097		1	Engine, A950H (inc. 2-3)	13	0412-400		1	● Shield, Exhaust Pipe
2	0801-128		1	● Spacer, Engine Mount	14	0423-317		2	● Clamp
3	0801-091		4	● Mount, Engine	15	8477-610		4	Screw, Machine
4	0411-426		1	Decal, Warning - Clutch Cover	16	0512-477		1	Pipe, Exhaust - Rear
5	0423-426		2	Washer	17	0412-403		1	Shield, Exhaust Pipe - Rear
6	0423-734		1	Screw, Cap	18	0412-375		2	Seal, Exhaust Pipe
7	0423-451		1	Screw, Cap	19	0612-668		4	Spring, Extension
8	8428-002		2	Nut, Lock	20	0412-577		3	Bushing
9	8408-820		4	Screw, Cap	21	2506-631		1	Channel, Muffler Support
10	0412-338		2	Gasket, Exhaust Pipe	22	-		1	Muffler - Assembly - Not Serviced Individually
11	0512-433		1	Pipe, Exhaust - Assembly (inc. 12-14)					
12	0512-349		1	● Pipe, Exhaust					

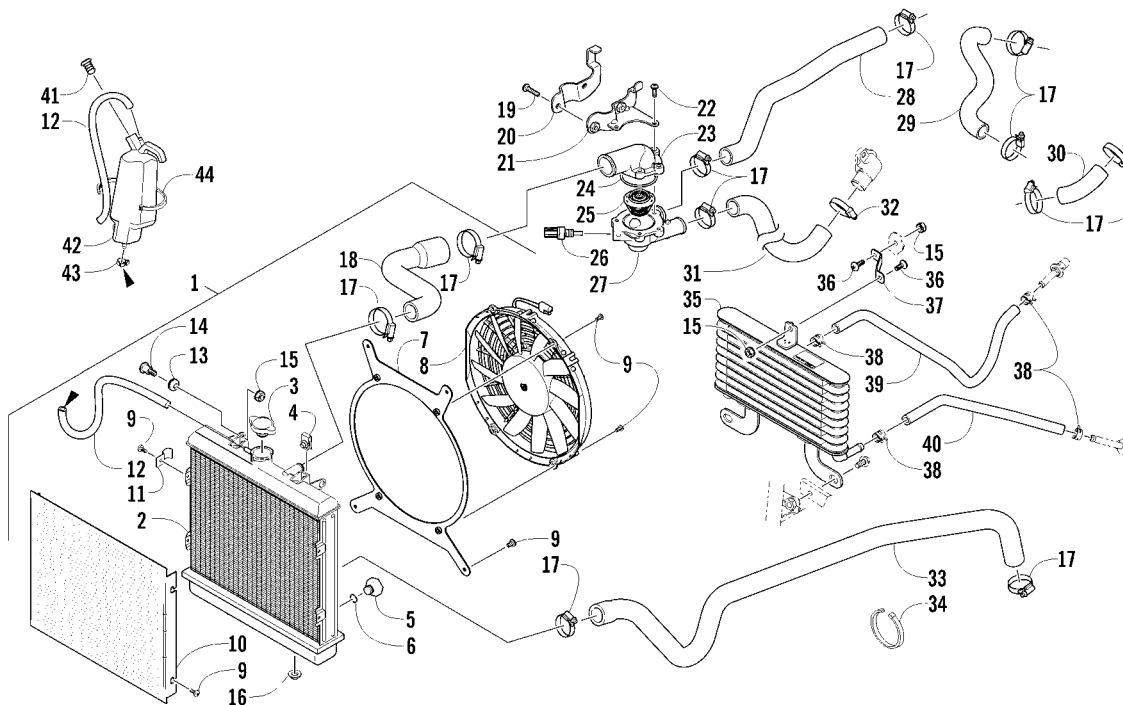

COOLING ASSEMBLY

0745-701


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0413-258		1	Radiator Assembly (inc. 2-13)	23	0808-092		1	Cover, Thermostat
2	0413-216		1	● Radiator	24	0830-173		1	O-Ring
3	0413-255		1	● Cap, Radiator	25	0808-093		1	Thermostat
4	1623-637		4	● Clip, U-Nut	26	0808-124		1	Sensor, Engine Coolant Temperature
5	0413-195		1	● Plug, Drain	27	0808-189		1	Housing, Thermostat
6	1602-213		1	● O-Ring	28	0410-195		1	Hose, Coolant - No. 2
7	0413-217		1	● Bracket, Mounting - Fan	29	0410-116		1	Hose, Coolant
8	0413-123		1	● Fan, Cooling	30	0410-115		1	Hose, Coolant - Crossover
9	8470-510		12	● Screw, Machine	31	0410-233		1	Hose, Coolant - No. 1
10	0413-214		1	● Screen, Radiator	32	1623-093		1	Clamp, Hose
11	0423-351		1	● Clamp, Wire	33	0410-229		1	Hose, Coolant - Lower
12	0610-011	AR		● Hose - 25 ft	34	0623-751	AR		Tie, Cable - 11.5 in.
13	0423-030		2	● Grommet	35	0413-211		1	Cooler, Oil
14	0423-484		2	Screw, Shoulder	36	8476-612		2	Screw, Machine
15	0623-038		4	Nut w/Washer	37	0513-022		1	Bracket, Mounting - Oil Cooler - Upper
16	0423-028		2	Bushing, Stem	38	0423-632		4	Clamp, Hose
17	0423-496		11	Clamp, Hose	39	0410-149		1	Hose, Oil Cooler - In
18	0410-232		1	Hose, Coolant - Radiator/Thermostat - Upper	40	0410-219		1	Hose, Oil Cooler - Out
19	8476-616		2	Screw, Machine	41	0413-087		1	Plug
20	0413-290		1	Plate, Backing	42	0413-086		1	Bottle, Overflow
21	0513-045		1	Bracket, Mounting - Thermostat	43	0124-045		1	Clamp, Hose
22	8470-520		4	Screw, Machine	44	0623-316	AR		Tie, Cable - 14 in.

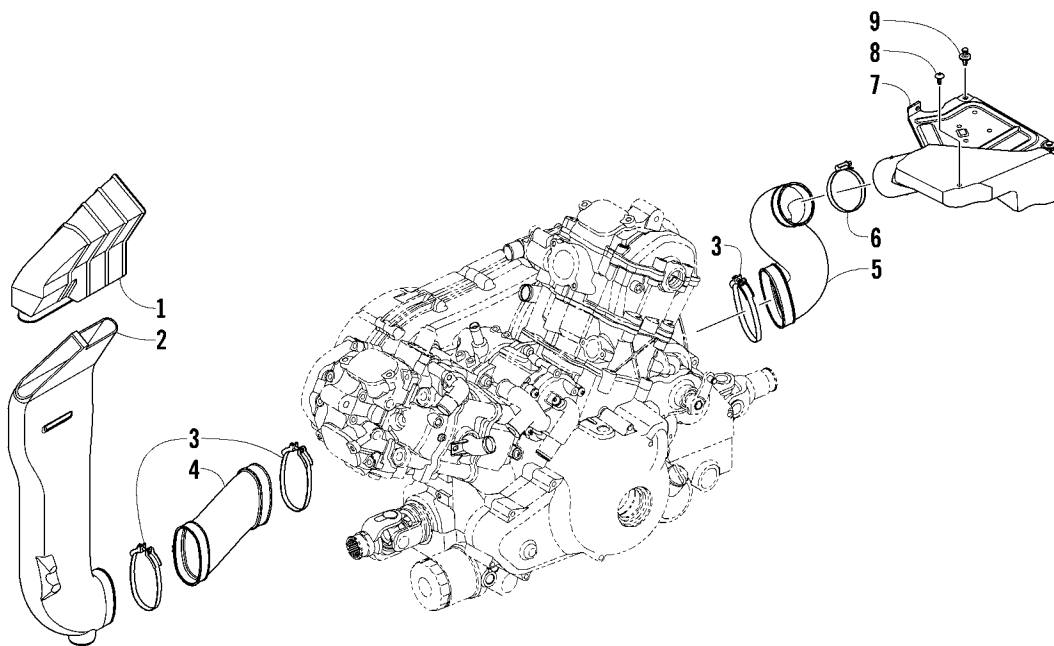

CASE/BELT COOLING ASSEMBLY

0744-451


Ref	Part No.	New Qty	Description	Ref	Part No.	New Qty	Description
1	0413-137	1	Shroud, Air - Air In	6	0423-019	1	Clamp
2	0413-138	1	Duct, Cooling - Air In	7	0413-302	1	Duct, Cooling - Air Out
3	0423-730	3	Clamp	8	0623-797	1	Screw, Self-Tapping
4	0413-139	1	Boot, Cooling - Air In	9	0623-362	2	Rivet, Reinstallable
5	0413-135	1	Boot, Cooling - Air Out				

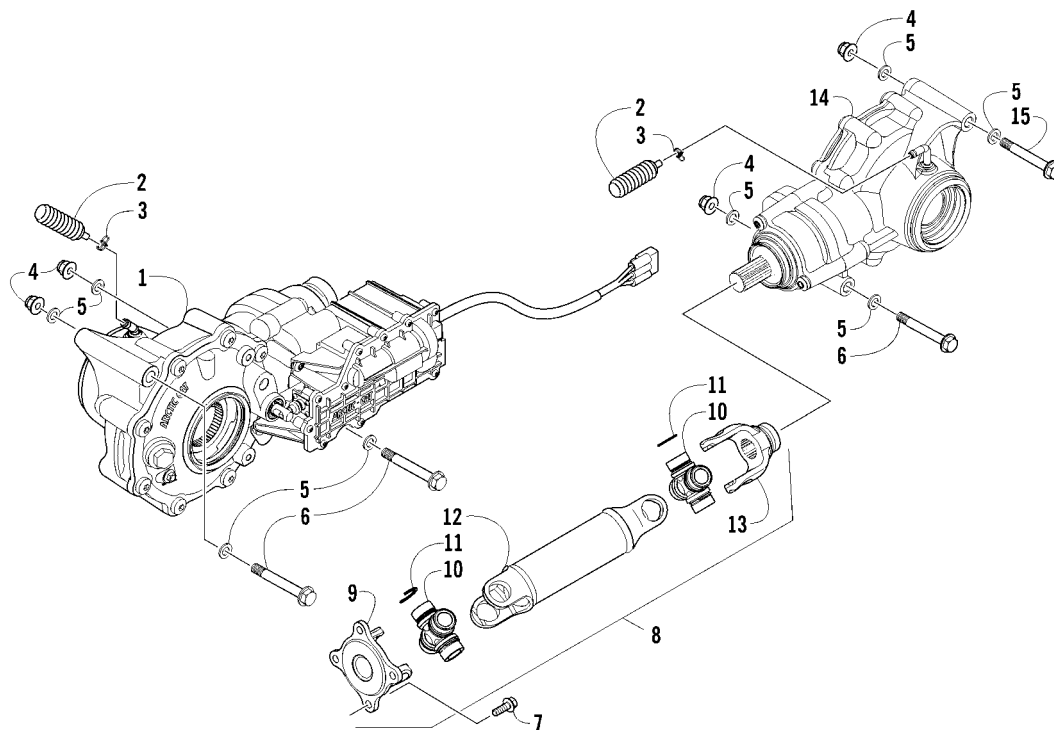

DRIVE TRAIN ASSEMBLY

0746-188


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	2502-084	X	1	Gearcase, Front	9	1402-689		1	● Yoke, Flange
2	1402-620		2	Hose, Gearcase	10	0402-944		2	● Joint, Universal (inc. 11)
3	0423-315		2	Clamp, Hose	11	0423-395		8	●● Ring, Retaining
4	8428-002		4	Nut, Lock	12	1502-099		1	● Driveshaft, Rear
5	0423-426		8	Washer	13	1402-567		1	● Yoke, Slip
6	0423-404		3	Screw, Cap	14	2502-085	X	1	Gearcase, Rear
7	8408-820		4	Screw, Cap	15	0423-830		1	Screw, Cap
8	1502-098		1	Driveshaft, Rear - Assembly (inc. 9-13)					

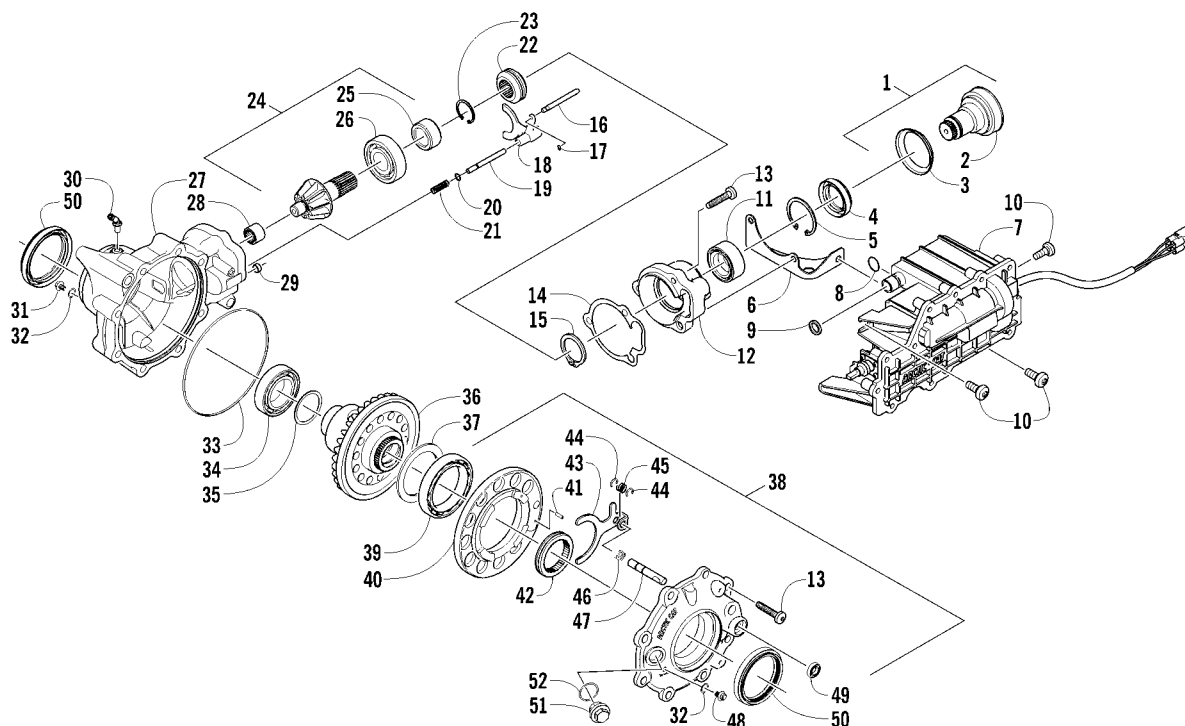

FRONT DRIVE GEARCASE ASSEMBLY

0746-189


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
-	2502-084	X	1	Complete Front Drive Gearcase Assembly	30	2402-160	X	1	Fitting, Elbow
1	0502-923		1	Shaft, Propeller - Assembly (inc. 2-3)	31	1402-210		1	Plug, Magnetic (inc. one No. 32)
2	1402-438		1	● Shaft, Input	32	0423-153		2	● O-Ring
3	1402-168		1	● Deflector	33	0423-149		1	O-Ring
4	1402-011		1	Seal	34	0402-393		1	Bearing
5	0423-423		1	Ring, Retaining	35	0402-405		AR	Shim, 41 x 49 x 1.3 mm
6	1502-237		1	Bracket, Actuator		0402-406		AR	Shim, 41 x 49 x 1.4 mm
7	1502-909		1	Actuator (inc. 8)		0402-407		AR	Shim, 41 x 49 x 1.5 mm
8	1402-981		1	● O-Ring		0402-408		AR	Shim, 41 x 49 x 1.6 mm
9	0423-892		1	O-Ring		0402-409		AR	Shim, 41 x 49 x 1.7 mm
10	0423-396		3	Screw, Self-Tapping	36	1502-859		1	Gear, Ring - 34T
11	1402-043		1	Bearing	37	1402-074		AR	Shim, 61 x 69 x 1.3 mm
12	0502-528		1	Housing, Pinion		1402-075		AR	Shim, 61 x 69 x 1.4 mm
13	0423-118		11	Screw, Self-Tapping		1402-076		AR	Shim, 61 x 69 x 1.5 mm
14	0402-947		1	Gasket		1402-077		AR	Shim, 61 x 69 x 1.6 mm
15	0423-417		1	Ring, Retaining		1402-078		AR	Shim, 61 x 69 x 1.7 mm
16	0402-997		1	Shaft, Selector	38	2502-104	X	1	Cover, Gearcase (inc. one No. 32, 39-49, and one No. 50)
17	0423-402		1	Ring, Retaining	39	1402-053		1	● Bearing
18	0402-998		1	Fork, Selector	40	0502-413		1	● Flange, Bearing
19	0402-417		1	Shaft, Shuttle	41	1402-079		1	● Pin, Alignment
20	0423-147		1	O-Ring	42	1402-042		1	● Collar, Sliding
21	0402-999		1	Spring, Return	43	1402-054		1	● Fork
22	0402-413		1	Coupler, Drive	44	1402-058		2	● Ring, Retaining
23	1423-067		1	Ring, Retaining	45	1402-057		1	● Spring
24	1502-851		1	Gear, Pinion - Assembly - 11T (inc. 25-26)	46	1402-063		1	● Spring
25	1402-977		1	● Collar, Retaining	47	1402-656		1	● Shaft, Lock
26	0402-327		1	● Bearing	48	1402-211		1	● Plug, Oil Level (inc. one No. 32)
27	1502-856		1	Housing, Gearcase	49	1402-056		1	● Seal
28	0402-328		1	Bearing	50	2402-150	X	2	● Seal
29	0402-411		1	Pin, Dowel	51	0402-333		1	Plug, Fill (inc. 52)
					52	0423-154		1	● O-Ring

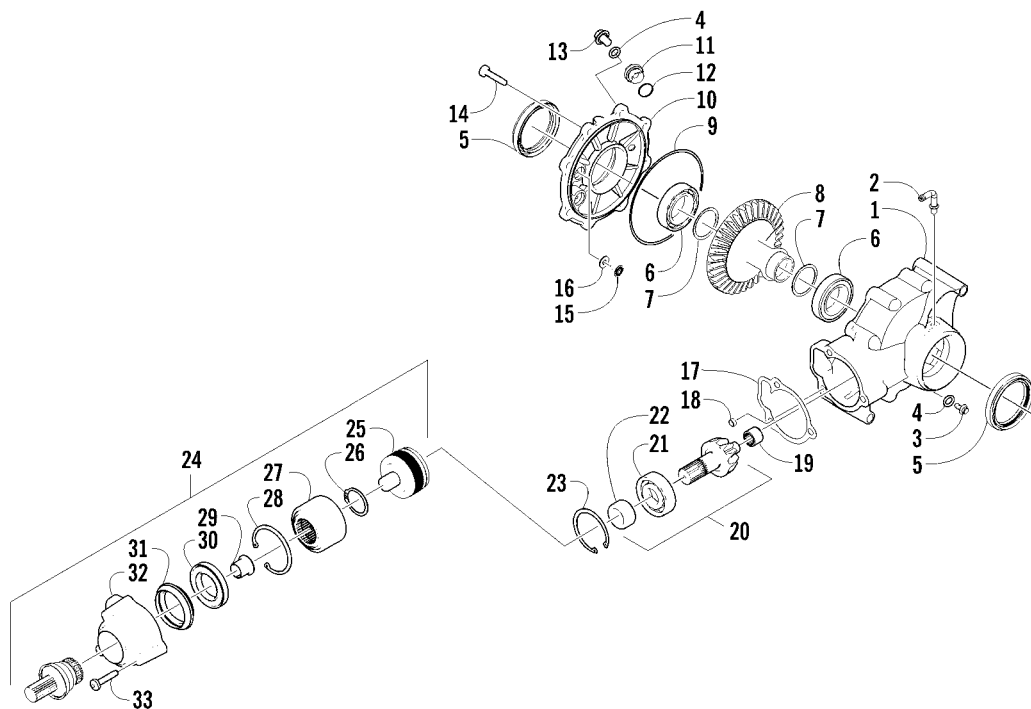

REAR DRIVE GEARCASE ASSEMBLY

0746-191


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
-	2502-085	X	1	Complete Rear Drive Gearcase Assembly	17	0402-947		1	Gasket
1	1502-896		1	Housing, Gearcase	18	0402-411		1	Pin, Dowel
2	2402-162	X	1	Fitting, Elbow	19	0402-328		1	Bearing
3	1402-210		1	Plug, Magnetic (inc. one No. 4)	20	1502-851		1	Gear, Pinion - Assembly - 11T (inc. 21-22)
4	0423-153		2	● O-Ring	21	0402-327		1	● Bearing
5	2402-150	X	2	Seal	22	1402-977		1	● Collar, Retaining
6	0402-393		2	Bearing	23	1423-067		1	Ring, Retaining
7	0402-405	AR		Shim, 41 x 49 x 1.3 mm	24	1502-655		1	Shaft, Input (inc. 25-32)
	0402-406	AR		Shim, 41 x 49 x 1.4 mm	25	1502-564		1	● Cartridge, Clutch - Assembly
	0402-407	AR		Shim, 41 x 49 x 1.5 mm	26	0423-799		1	● Ring, Retaining - External
	0402-408	AR		Shim, 41 x 49 x 1.6 mm	27	1402-682		1	● Basket, Clutch
	0402-409	AR		Shim, 41 x 49 x 1.7 mm	28	0423-798		1	● Ring, Retaining - Internal
8	1402-033		1	Gear, Ring - 34T	29	1402-678		1	● Bearing, Flange
9	0423-149		1	O-Ring	30	1402-677		1	● Bearing
10	1502-897		1	Cover, Gearcase	31	1402-687		1	● Seal
11	0402-333		1	Plug, Fill (inc. 12)	32	1502-285		1	● Housing, Input
12	0423-154		1	● O-Ring	33	0423-834		3	Screw, Self-Tapping
13	1402-211		1	Plug, Oil Level (inc. one No. 4)					
14	0423-118		8	Screw, Self-Tapping					
15	0402-326		1	Button, Thrust					
16	0402-429	AR		Shim, 6.3 x 18 x 1.3 mm					
	0402-430	AR		Shim, 6.3 x 18 x 1.4 mm					
	0402-431	AR		Shim, 6.3 x 18 x 1.5 mm					
	0402-432	AR		Shim, 6.3 x 18 x 1.6 mm					
	0402-433	AR		Shim, 6.3 x 18 x 1.7 mm					

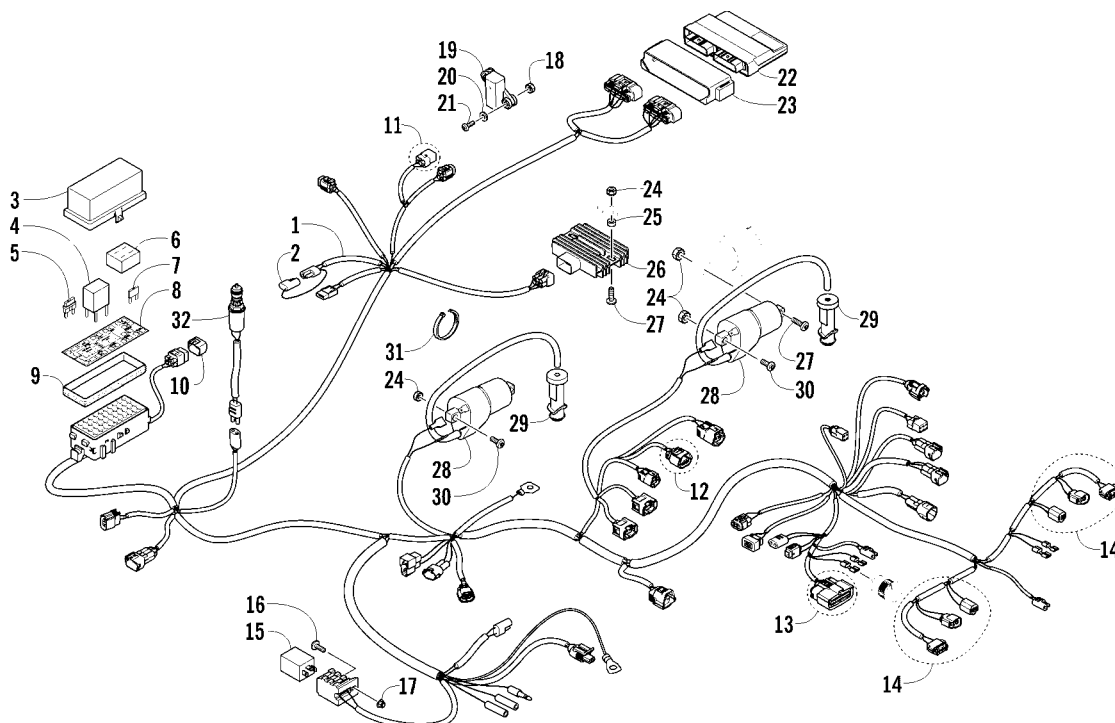

WIRING HARNESS ASSEMBLY

0745-703


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0486-373	1		Harness, Main (inc. 2-10)	16	8476-516	1		Screw, Machine
2	0486-164	1		● Tether, Accessory Connector	17	8427-502	1		Nut, Lock
3	0430-085	1		● Cover, Fuse Block	18	0423-493	2		Nut w/Washer
4	0430-045	6		● Relay (4-Pin) - 20 Amp	19	0409-064	1		Sensor, Tilt
5	0430-034	2		● Diode	20	0123-802	2		Washer
6	0430-037	1		● Holder, Fuse	21	8468-425	2		Screw, Machine
7	0430-032	5		● Fuse - 10 Amp	22	0530-033	1		ECM
	0430-031	4		● Fuse - 15 Amp	23	0430-059	1		Cushion, ECM
	0430-030	3		● Fuse - 30 Amp	24	0623-038	5		Nut w/Washer
8	2411-213	1		● Decal, Fuse Block	25	0423-036	2		Spacer
9	0430-086	1		● Seal	26	0824-037	1		Regulator, Voltage
10	0430-097	1		● Cover, Diagnostics Connector	27	8476-630	3		Screw, Machine
11	1436-416	1		Repair Kit, Connector - Tilt Sensor	28	0824-043	2		Coil, Ignition - Assembly
12	1436-417	1		Repair Kit, Connector - Idle Speed Control	29	0824-049	2		Cap, Spark Plug
13	1436-415	1		Repair Kit, Connector - LCD Gauge	30	8476-620	2		Screw, Machine
14	1436-424	AR		Repair Kit, Connector - Headlight/Turn Signal/Position	31	0123-788	AR		Tie, Cable - 8 in.
15	0430-049	1		Control, Turn Signal		0123-903	AR		Tie, Cable - 11.5 in.
					32	0409-089	1		Switch, Brake - Assembly

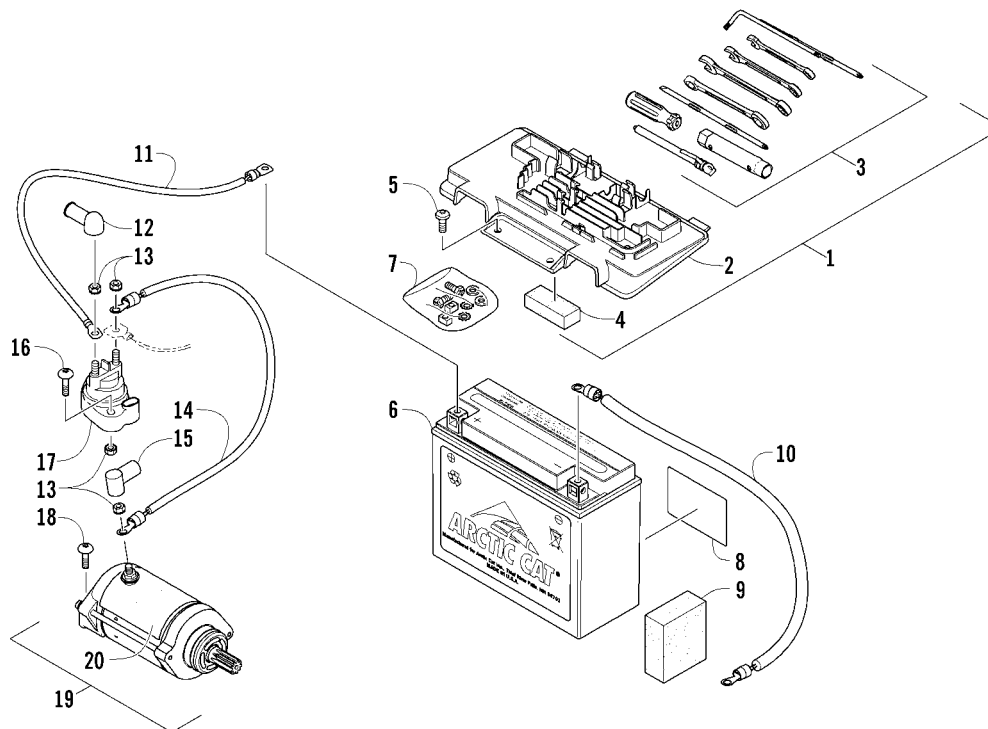

BATTERY AND STARTER ASSEMBLY

0747-816


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	5993-040		1	Battery Cover/Tool Tray Assembly (inc. 2-4)	11	0445-062		1	Cable, Battery/Solenoid
2	4406-136		1	● Cover, Battery	12	0645-327		1	Boot, Terminal
3	0444-122		1	● Kit, Tool	13	0623-038		5	Nut w/Washer
4	0417-016		1	● Pad, Foam	14	0445-066		1	Cable, Solenoid/Starter (inc. 15)
5	8476-620		2	Screw, Machine	15	0645-019		1	● Boot, Terminal
6	0645-480		1	Battery Assembly (inc. 7-8)	16	8476-630		2	Screw, Machine
7	0445-082		1	● Kit, Hardware	17	0445-058		1	Solenoid
8	0645-430		1	● Decal, Warning	18	8476-625		2	Screw, Machine
9	0417-012		1	Pad, Foam	19	0825-027		1	Motor, Starter - Assembly (inc. 20)
10	0445-063		1	Cable, Battery/Ground	20	0412-677		1	● Shield, Heat - Starter

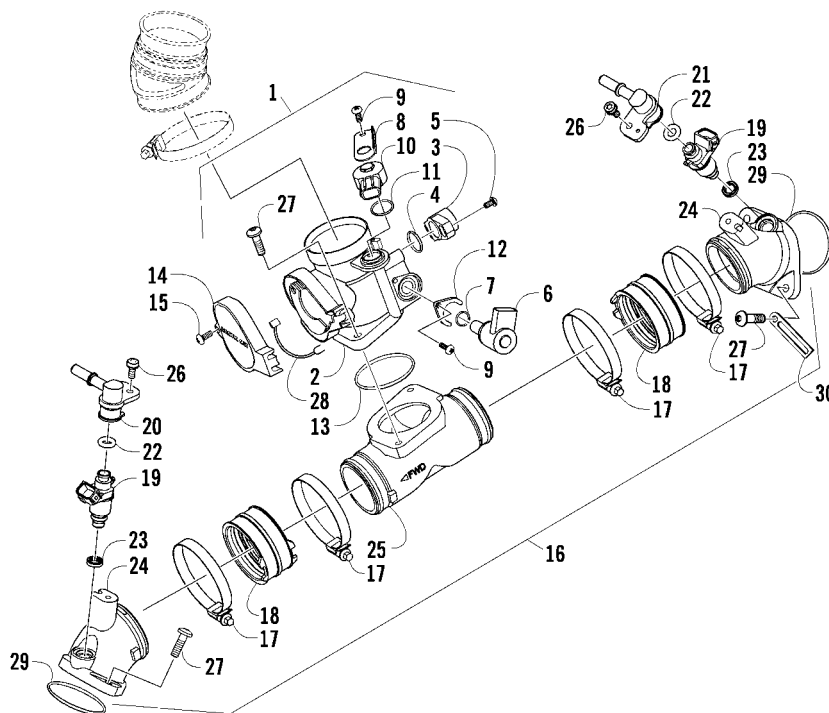

THROTTLE BODY ASSEMBLY

0742-977


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0470-686		1	Throttle - Assembly (inc. 2-15)	16	0570-230		1	Manifold, Intake - Assembly (inc. 17-26)
2	—		1	● Throttle Body - Not a Service Part	17	0423-066		4	● Clamp
3	0430-072		1	● Sensor, Throttle Position	18	0470-660		2	● Boot, Intake - Manifold
4	5507-234		1	● O-Ring, Throttle Position Sensor	19	0470-688		2	● Injector, Fuel
5	5507-231		1	● Screw, Machine	20	0470-763		1	● Rail, Fuel - Front Cylinder
6	0430-074		1	● Valve, ISC	21	0470-764		1	● Rail, Fuel - Rear Cylinder
7	5507-233		1	● O-Ring, ISC Valve	22	0470-767		2	● O-Ring, Fuel Injector
8	5507-227		1	● Bracket, MAP Sensor	23	0470-768		2	● Ring, Seal - Fuel Injector
9	5507-117		2	● Screw, Machine	24	0570-140		2	● Manifold, Intake
10	0430-073		1	● Sensor, MAP	25	0570-156		1	● Plenum, Intake
11	5507-232		1	● O-Ring, MAP Sensor	26	0423-371		2	● Screw, Machine
12	5507-229		1	● Plate, ISC Valve	27	0826-008		6	Screw, Machine
13	5507-235		1	● O-Ring	28	0487-046		1	Cable, Throttle
14	5507-223		1	● Cover	29	0830-090		2	O-Ring
15	5507-037		1	● Screw, Machine	30	1623-984		1	Clamp, Routing

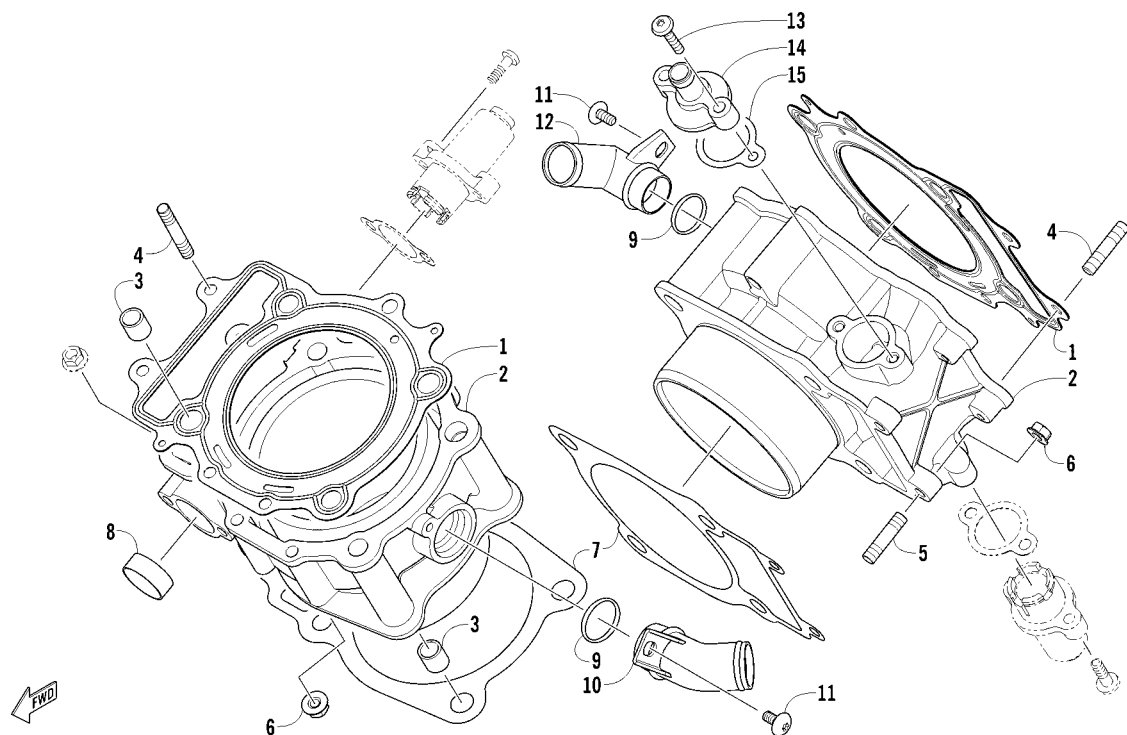

CYLINDER ASSEMBLY

0745-047

Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0830-209		2	Gasket, Head	9	0830-007		2	O-Ring
2	0804-064	X	2	Cylinder	10	0804-046		1	Union, Coolant Hose
3	0829-002		8	Pin, Dowel	11	8468-616		2	Screw, Machine
4	0827-002		4	Bolt, Stud	12	0804-030		1	Union, Coolant Hose
5	0827-018		4	Bolt, Stud	13	8468-620		2	Screw, Machine
6	8424-604		8	Nut	14	0801-174		1	Cover, Breather
7	0830-193		2	Gasket, Base	15	0830-134		1	Gasket
8	0804-037		1	Plug, Cylinder					

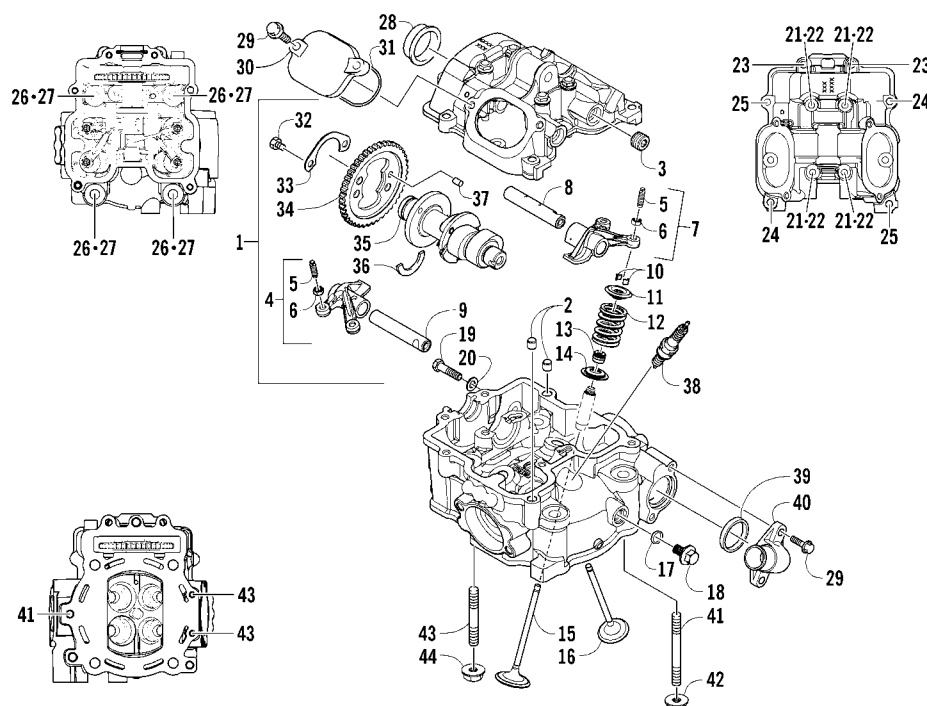


CYLINDER HEAD AND CAMSHAFT/VALVE ASSEMBLY

0746-494

Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0808-227	X	2	Head, Cylinder - Assembly (inc. 2-21)	23	0826-002		4	Screw, Cap
2	0829-062		4	● Pin, Dowel	24	0826-005		4	Screw, Cap
3	0831-092		4	● Plug, Shaft	25	0826-006		4	Screw, Cap
4	0809-319	X	2	● Arm, Valve Rocker - Exhaust (inc. two No. 5-6)	26	0808-090		8	Screw, Cap
5	0809-240		8	●● Screw, Adjuster	27	0830-147		8	Washer
6	0827-059		8	●● Nut	28	0808-077		2	Plug, Cylinder Head
7	0809-318	X	2	● Arm, Valve Rocker - Intake (inc. two No. 5-6)	29	0826-007		12	Screw, Cap
8	0809-241		2	● Shaft, Rocker Arm - Intake	30	0808-003		4	Cap, Inspection
9	0809-242		2	● Shaft, Rocker Arm - Exhaust	31	0830-004		4	O-Ring
10	0809-233		16	● Cotter, Valve	32	0826-034		4	Screw, Cap
11	0809-232		8	● Retainer, Spring	33	0828-004		2	Plate, Retainer
12	0809-231		8	● Spring, Valve	34	0809-212		2	Sprocket
13	0830-186		8	● Seal, Oil	35	0809-246		1	Camshaft, Front Cylinder
14	0809-006		8	● Seat, Spring - Valve		0809-248		1	Camshaft, Rear Cylinder
15	0809-228		4	● Valve, Intake	36	0809-003		2	C-Ring
16	0809-229		4	● Valve, Exhaust	37	0829-049		2	Pin, Dowel
17	0830-213		2	● O-Ring	38	0217-799		2	Spark Plug - CPR8E
18	0826-157		2	● Screw, Cap	39	0830-120		2	Seal
19	8400-812		2	● Screw, Cap	40	0808-008		2	Cover, Thermostat
20	0830-025		2	● Washer, Crush	41	0827-062		2	Bolt, Stud
21	0826-149		8	● Screw, Cap	42	8424-804		2	Nut
22	0830-155		8	Gasket	43	0827-030		4	Bolt, Stud
					44	8424-604		4	Nut



Ref	Part No.	New Qty	Description	Ref	Part No.	New Qty	Description
1	0810-001	2	Chain, Cam	6	0830-134	2	Gasket
2	0810-069	2	Guide, Chain	7	8468-620	4	Screw, Machine
3	0810-070	2	Tensioner, Chain	8	8400-610	2	Screw, Cap
4	0826-106	2	Pivot, Tensioner	9	0828-129	2	Washer
5	0810-004	2	Adjuster, Tensioner - Assembly				

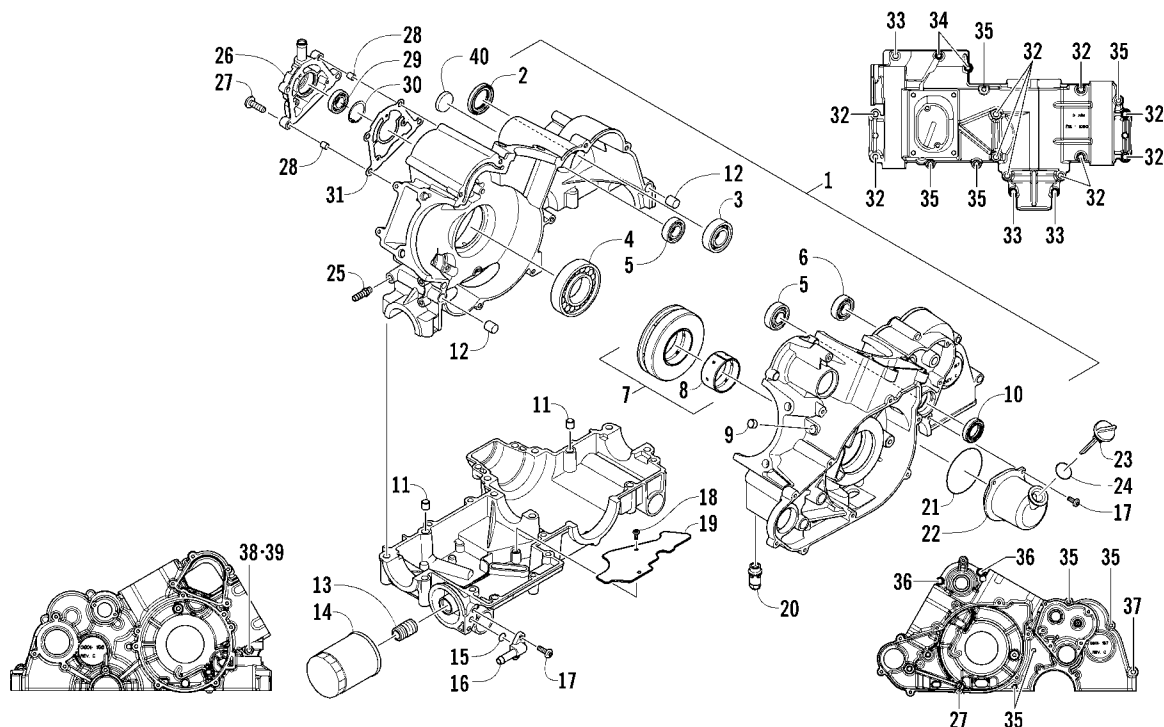


CRANKCASE ASSEMBLY

0747-609

Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0801-211		1	Crankcase - Assembly (inc. 2-13)	21	0830-162		1	O-Ring, Oil Filler Cover
2	0830-035		1	● Seal, Driveshaft	22	0812-081		1	Cover, Oil Filler
3	0832-048		1	● Bearing	23	0801-179		1	Stick, Oil Level
4	0832-042		1	● Bearing	24	0830-010		1	O-Ring
5	0832-050		2	● Bearing	25	0812-078		1	Fitting, Oil - Threaded
6	0832-049		1	● Bearing	26	0801-193		1	Cover, Breather
7	0832-055		1	● Bearing - Assembly (inc. 8)	27	8468-625		5	Screw, Machine
8	0832-057		1	● Bearing	28	0829-062		2	Pin, Dowel
9	0801-002		1	● Plug, Engine Case	29	0832-084		1	Bearing
10	0822-052		1	● Seal, Countershaft - Right	30	0831-086		1	Circlip
11	0829-003		2	● Pin, Dowel	31	0830-191		1	Gasket, Breather
12	0829-002		2	● Pin, Dowel	32	8412-860		10	Screw, Cap
13	0812-066		1	● Union, Oil Filter	33	8412-830		3	Screw, Cap
14	0812-029		1	Filter, Oil	34	8468-640		2	Screw, Machine
15	0830-172		1	O-Ring	35	8468-660		8	Screw, Machine
16	0812-060		1	Fitting, Oil	36	8468-630		2	Screw, Machine
17	8468-616		5	Screw, Machine	37	8412-875		1	Screw, Cap
18	0623-914		2	Screw, Self-Tapping	38	8412-850		1	Screw, Cap
19	0801-218	X	1	Plate, Oil Sump	39	0830-008		1	Gasket
20	0812-052		1	Valve, Oil-Relief - Assembly					


32

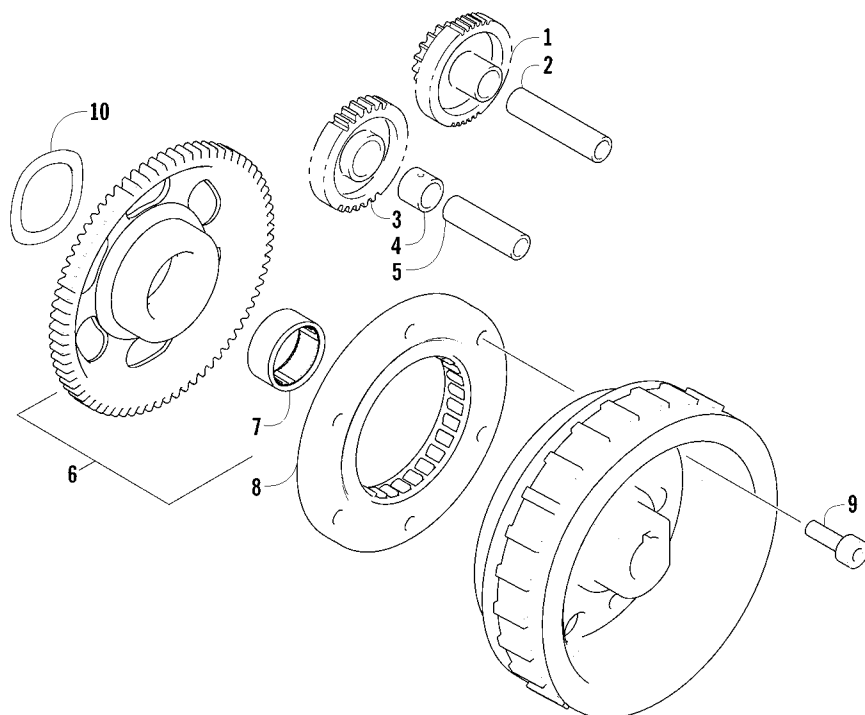

STARTER CLUTCH ASSEMBLY

0745-071


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0815-032	X	1	Gear, Starter Idler - No. 1	6	0815-004		1	Gear, Starter Clutch (inc. 7)
2	0829-031		1	Shaft, Starter Gear	7	0832-079		1	● Bearing
3	0815-002		1	Gear, Starter Idler - No. 2	8	0802-035		1	Clutch, Starter
4	0815-003		1	Spacer, Starter Idler Gear No. 2	9	0826-069		6	Screw, Cap
5	0829-032		1	Shaft, Starter Gear	10	0828-113		1	Washer, Wave

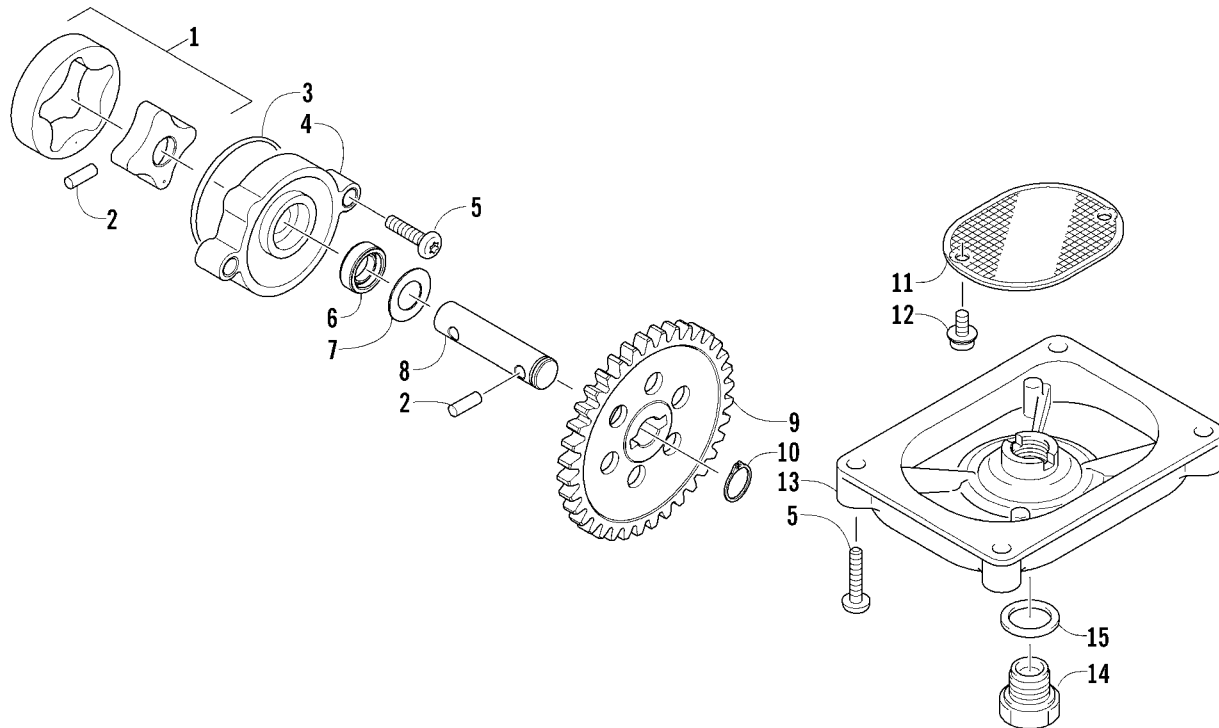

OIL PUMP ASSEMBLY

0746-500


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0812-041		1	Gerotor - Set	9	0812-045		1	Gear, Driven
2	0829-009		2	Pin, Dowel	10	0831-002		1	Ring, Retaining
3	0812-048		1	O-Ring	11	0812-057		1	Strainer, Oil
4	0812-040		1	Housing, Oil Pump	12	0826-040		2	Screw, Machine
5	8468-625		6	Screw, Machine	13	0812-053		1	Cap, Oil Strainer
6	0812-047		1	Seal, Oil Pump	14	0812-006		1	Plug, Drain
7	0828-007		1	Shim	15	0830-017		1	Gasket, Drain Plug
8	0812-046		1	Shaft, Oil Pump					

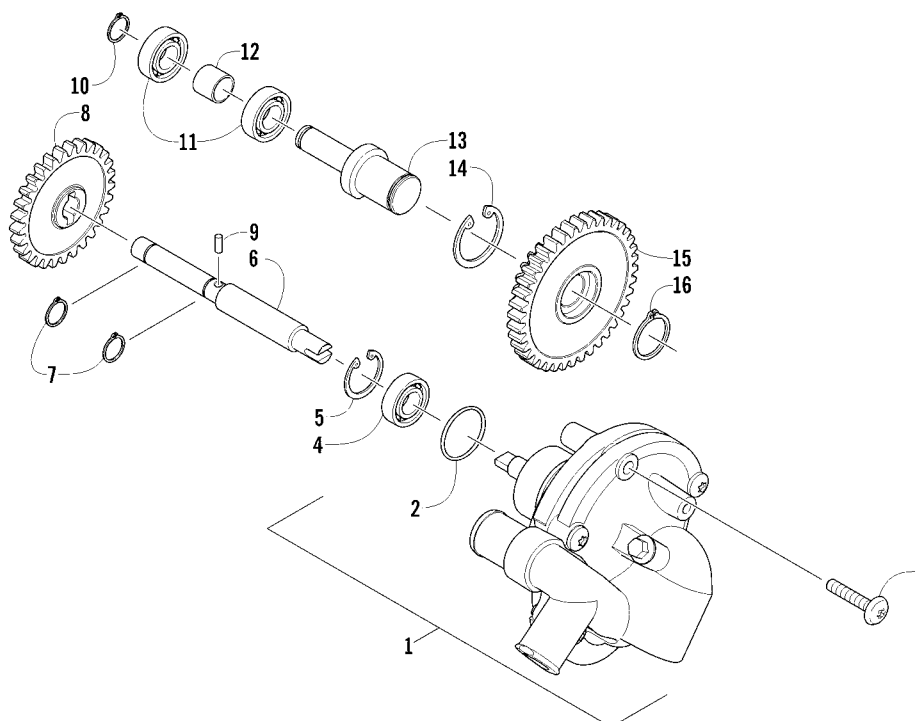

WATER PUMP ASSEMBLY

0745-053


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0813-059	1	1	Pump, Water - Assembly (inc. 2)	9	0829-009	1	1	Pin, Dowel
2	0830-029	1	1	● O-Ring	10	0831-002	1	1	Ring, Retaining
3	8468-650	2	2	Screw, Machine	11	0832-046	2	2	Bearing
4	0832-084	1	1	Bearing	12	0813-028	1	1	Spacer, Idler - Water Pump
5	0831-086	1	1	Circlip	13	0813-026	1	1	Shaft, Water Pump Idler Gear
6	0813-041	1	1	Shaft, Driven Gear	14	0831-004	1	1	Ring, Retaining
7	0831-010	2	2	Ring, Retaining	15	0813-027	1	1	Gear, Idler - Water Pump - Drive
8	0813-043	1	1	Gear, Driven	16	0831-040	1	1	Ring, Retaining

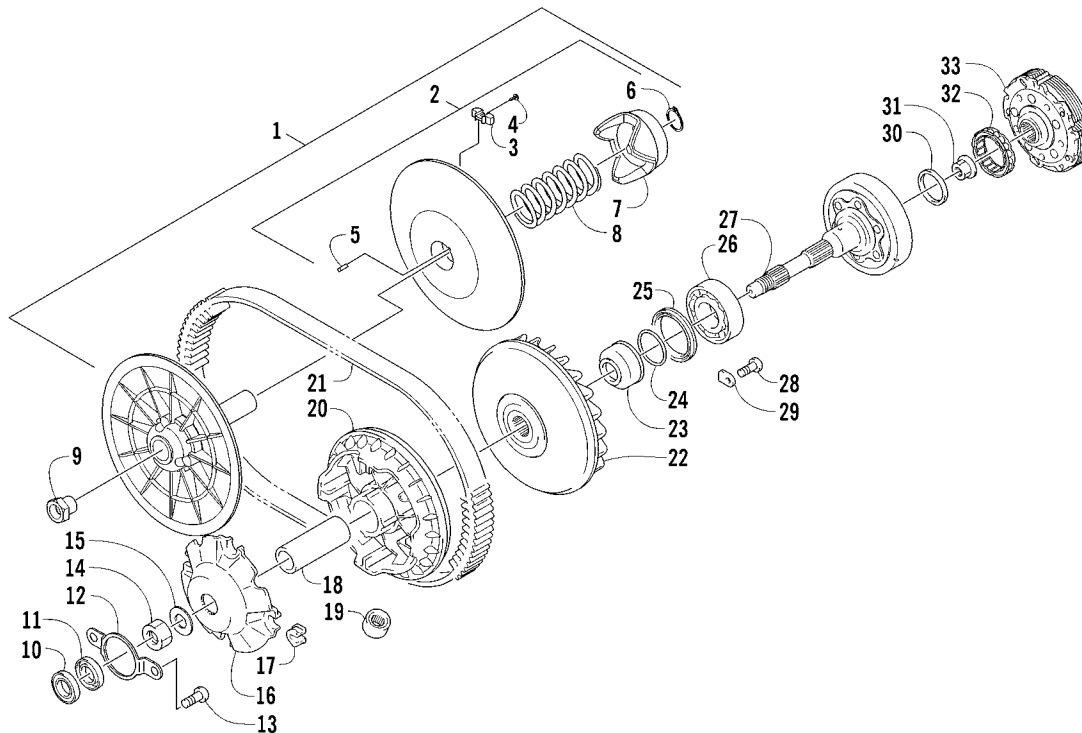

TRANSMISSION ASSEMBLY

0747-817


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0823-432	X	1	Pulley, Driven - Assembly (inc. 2-9)	18	0823-358		1	Spacer, Movable Drive Face
2	0823-456	X	1	● Pulley, Driven - Uncalibrated (inc. 3-6)	19	0823-170		8	Roller, Movable Drive Face
3	0823-454	X	3	●● Shoe, Cam	20	0823-273		1	Face, Movable Drive
4	0823-177		3	●● Screw, Machine	21	0823-231		1	Belt, Drive
5	0823-383	X	1	●● Key	22	0823-272		1	Face, Fixed Drive
6	0823-455	X	1	●● Ring, Snap - External	23	0823-015		1	Spacer, Fixed Drive Face
7	0823-453		1	● Cam	24	0470-531		1	O-Ring
8	0823-377		1	● Spring - Black	25	0830-188		1	Seal, Clutch Housing - Right
9	0823-178		1	● Nut, Driven Pulley	26	0832-009		1	Bearing
10	0832-010		1	Bearing	27	0821-002		1	Housing, Clutch
11	0830-176		1	Seal	28	0826-029		2	Screw, Machine
12	0823-020		1	Retainer, Bearing	29	0822-010		2	Retainer, Bearing
13	0826-031		2	Screw, Machine	30	0830-189		1	Seal, Clutch Housing - Left
14	0827-010		1	Nut	31	0827-011		1	Nut
15	0828-106		1	Washer	32	0823-018		1	Clutch, One-Way
16	0823-276		1	Plate, Movable Drive Face	33	0823-484	X	1	Clutch, Centrifugal - 6 Plate
17	0823-277		4	Damper, Movable Drive Face					

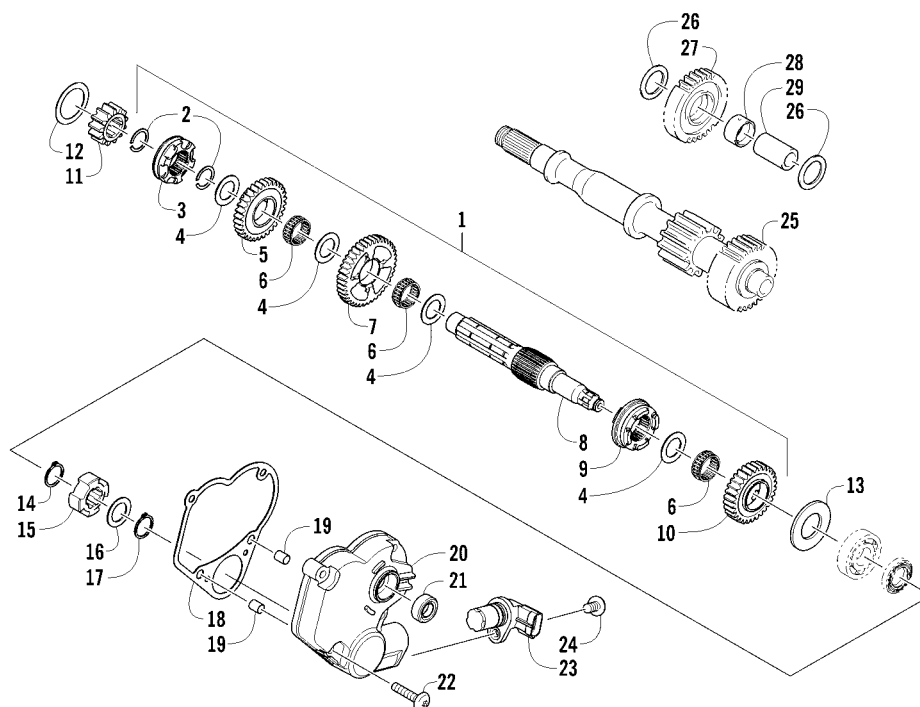

SECONDARY TRANSMISSION ASSEMBLY

0745-540


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0822-124	1	1	Countershaft Assembly (inc. 2-10)	16	0828-069	1	1	Washer, Thrust
2	0831-085	2	2	● Ring, Retaining	17	0831-039	1	1	Ring, Retaining
3	0822-120	1	1	● Gear Select, Reverse	18	0830-194	1	1	Gasket
4	0822-121	4	4	● Shim	19	0829-062	2	2	Pin, Dowel
5	0822-119	1	1	● Gear, Reverse Driven	20	0806-105	1	1	Housing, Speedometer Sensor
6	0832-082	3	3	● Bearing	21	0830-044	1	1	Seal
7	0822-114	1	1	● Gear, Driven - Low	22	8468-630	4	4	Screw, Machine
8	0822-113	1	1	● Countershaft	23	0824-042	1	1	Sensor, Speedometer
9	0822-116	1	1	● Gear Select, Sliding	24	8468-620	1	1	Screw, Machine
10	0822-115	1	1	● Gear, Driven - High	25	0822-001	1	1	Driveshaft
11	0822-125	1	1	Gear, Drive	26	0828-016	2	2	Washer, Thrust
12	0828-019	1	1	Washer, Thrust	27	0822-011	1	1	Gear, Reverse Idle
13	0828-011	1	1	Washer	28	0822-012	1	1	Bushing
14	0831-040	1	1	Ring, Retaining	29	0822-015	1	1	Shaft, Reverse Idle
15	0822-050	1	1	Trigger, Speedometer Sensor					

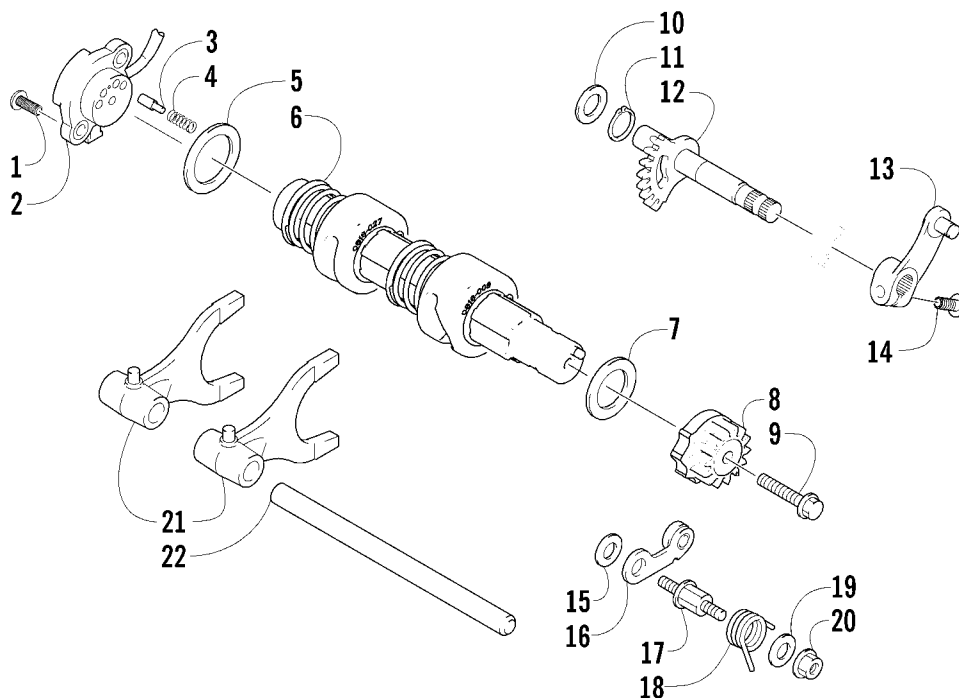

GEAR SHIFTING ASSEMBLY

0746-501

Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	8470-516		2	Screw, Machine	12	0818-095		1	Shaft, Sub-Gear Shift
2	0409-091		1	Switch, Gear Position	13	0818-014		1	Arm, Shift
3	0818-013		2	Contact	14	8468-620		1	Screw, Machine
4	0818-017		2	Spring	15	0828-038		1	Washer
5	0828-040		1	Washer	16	0818-002		1	Stopper, Cam
6	0818-046		1	Shaft, Gear Shift - Assembly	17	0818-004		1	Support, Cam Stopper
7	0828-131		1	Spacer	18	0818-090		1	Spring
8	0818-055		1	Cam, Gear Shift	19	0828-035		1	Washer
9	0826-006		1	Screw, Cap	20	8424-602		1	Nut
10	0828-036		1	Washer	21	0818-072		2	Fork, Shift
11	0831-010		1	Ring, Retaining	22	0818-006		1	Shaft, Shift Fork

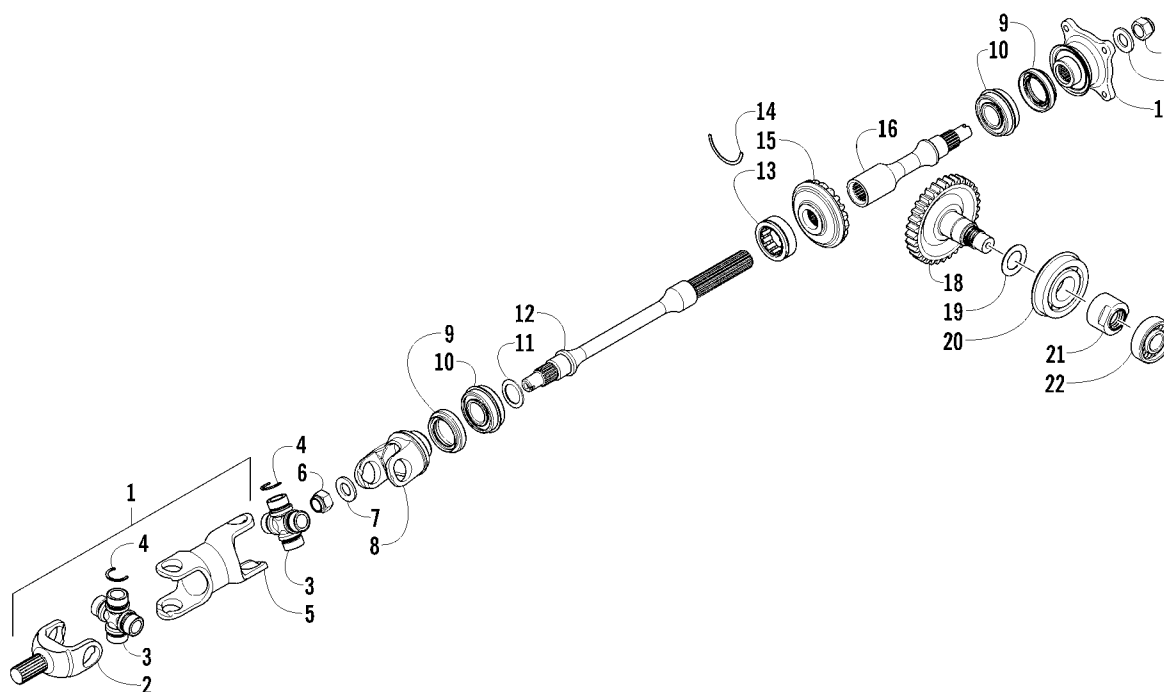


SECONDARY DRIVE ASSEMBLY

0745-058

Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	1502-342		1	Driveshaft, Front - Assembly (inc. 2, one No. 3, four No. 4, and 5)	12	0819-115		1	Shaft, Secondary Driven - Front
2	1402-701		1	● Yoke, Slip	13	0832-016		1	Bearing, Driven Gear
3	0402-944		2	● Joint, Universal - Set (inc. 4)	14	0819-011		1	Ring, Driven Bearing
4	0423-395		8	●● Ring, Retaining	15	0822-106		1	Gear, Secondary Driven
5	1502-341		1	● Driveshaft, Front	16	0819-053		1	Shaft, Secondary Driven - Rear
6	0827-013		2	Nut	17	0819-005		1	Flange, Output Joint - Rear
7	0828-020		2	Washer	18	0822-132		1	Gear, Secondary Drive
8	1502-325		1	Yoke, Propeller Shaft Joint	19	0828-119		AR	Shim, 30 x 48 x 0.25 mm
9	0830-043		2	Seal, Oil		0828-120		AR	Shim, 30 x 48 x 0.30 mm
10	0832-017		2	Bearing		0828-121		AR	Shim, 30 x 48 x 0.35 mm
11	0828-021		AR	Shim, 25 x 34 x 0.25 mm		0828-122		AR	Shim, 30 x 48 x 0.90 mm
	0828-022		AR	Shim, 25 x 34 x 0.30 mm		0828-123		AR	Shim, 30 x 48 x 0.95 mm
	0828-023		AR	Shim, 25 x 34 x 0.70 mm		0828-124		AR	Shim, 30 x 48 x 1.00 mm
	0828-024		AR	Shim, 25 x 34 x 0.90 mm		0828-125		AR	Shim, 30 x 48 x 1.05 mm
	0828-025		AR	Shim, 25 x 34 x 0.95 mm		0828-126		AR	Shim, 30 x 48 x 1.10 mm
	0828-026		AR	Shim, 25 x 34 x 1.00 mm		0828-127		AR	Shim, 30 x 48 x 1.15 mm
	0828-027		AR	Shim, 25 x 34 x 1.05 mm	20	0832-083		1	Bearing
	0828-028		AR	Shim, 25 x 34 x 1.10 mm	21	0827-060		1	Nut
	0828-029		AR	Shim, 25 x 34 x 1.15 mm	22	0832-050		1	Bearing


40

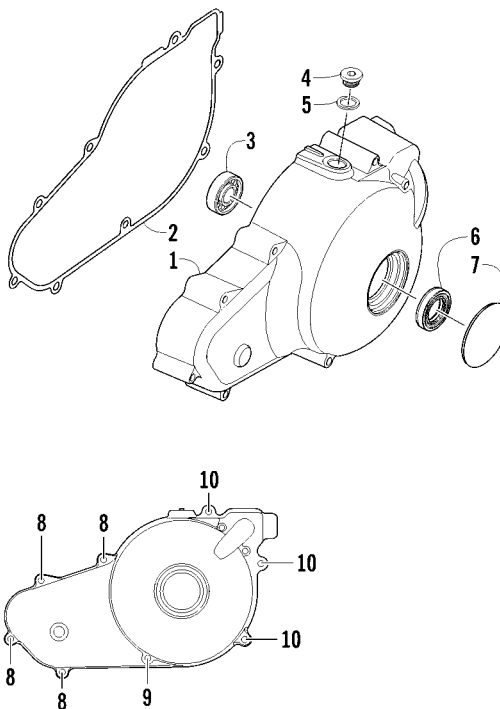

MAGNETO SIDE ENGINE COVERS

0745-061

Ref	Part No.	New Qty	Description	Ref	Part No.	New Qty	Description
1	0806-107	1	Cover, Magneto	6	0830-176	1	Seal, Cap
2	0830-132	1	Gasket, Magneto Cover	7	0806-066	1	Cap, Magneto Cover
3	0832-010	1	Bearing	8	8468-650	4	Screw, Machine
4	0826-155	1	Plug, Check	9	8468-695	1	Screw, Machine
5	0830-015	1	Washer, Crush	10	8468-665	3	Screw, Machine

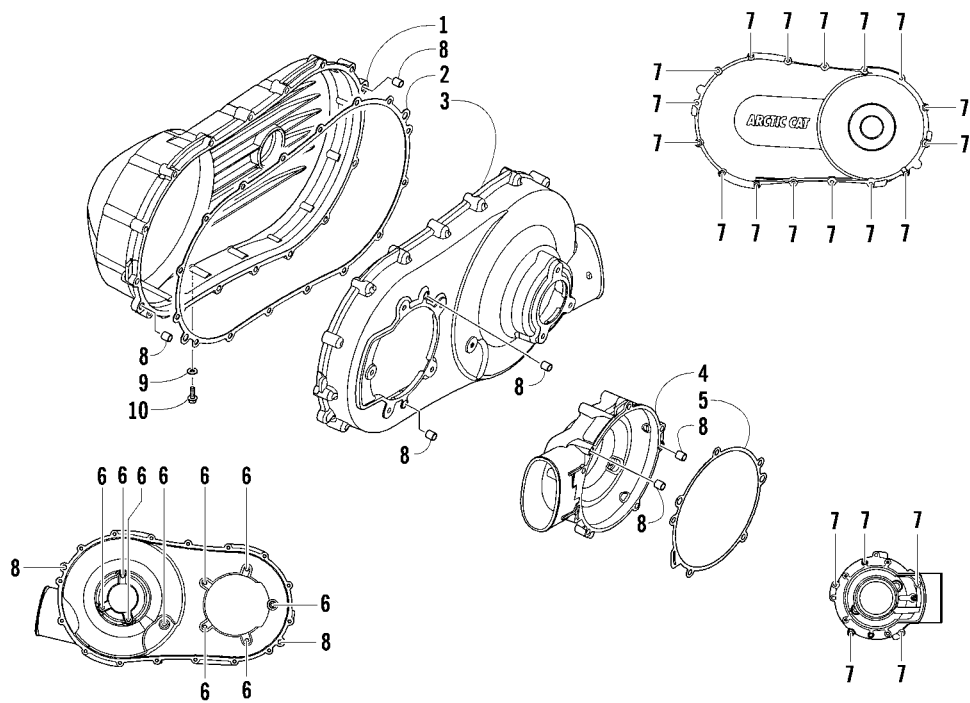

CLUTCH SIDE ENGINE COVERS

0742-232

Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0806-112		1	Cover, Outside	6	8468-617		9	Screw, Machine
2	0830-137		1	Gasket, Cover	7	8468-630		21	Screw, Machine
3	0806-110		1	Cover, Inside	8	0829-062		6	Pin, Dowel
4	0806-147		1	Cover, Clutch	9	0830-013		1	Washer, Crush
5	0830-218		1	Gasket, Clutch Cover	10	8408-812		1	Screw, Cap

