

2014 ARCTIC CAT® ILLUSTRATED PARTS MANUAL



Wildcat 4X

Model Number U2014WFW1PUSE

Model Number U2014WFW1PUSX

Model Number U2014WFW1PUSD

Model Number U2014WFW1POSE - International

Model Number U2014WFW1POSX - International

Model Number U2014WFW1POSD - International

ARCTIC CAT®
SHARE OUR PASSION.™

www.arcticcat.com

TABLE OF CONTENTS

2014 Wildcat 4X


(Model No. U2014WFW1PUSE) (Model No. U2014WFW1POSE - Int.)

(Model No. U2014WFW1PUSX) (Model No. U2014WFW1POSX - Int.)

(Model No. U2014WFW1PUSD) (Model No. U2014WFW1POSD - Int.)

FRONT PANEL ASSEMBLY	1
SIDE PANEL ASSEMBLY	2
DASH ASSEMBLY	3
FRONT CONSOLE AND FLOOR PANEL ASSEMBLY	4
REAR CONSOLE AND FLOOR PANEL ASSEMBLY	5
FRONT SEAT ASSEMBLY	6
REAR SEAT ASSEMBLY	7
CARGO BOX AND TAILLIGHT ASSEMBLY	8
FRAME, HEADLIGHTS, AND RELATED PARTS	9
ROPS ASSEMBLY	10
FRONT DOOR ASSEMBLY	11
REAR DOOR ASSEMBLY	12
STEERING ASSEMBLY	13
RACK AND PINION ASSEMBLY	14
FRONT SUSPENSION ASSEMBLY	15
FRONT SUSPENSION SHOCK ABSORBER	16
REAR SUSPENSION ASSEMBLY	17
REAR SUSPENSION SHOCK ASSEMBLY	18
REAR SUSPENSION SHOCK ABSORBER	19
WHEEL AND TIRE ASSEMBLY	20
HYDRAULIC BRAKE ASSEMBLY	21
ACCELERATOR ASSEMBLY	22
SHIFTER ASSEMBLY	23
GAS TANK ASSEMBLY	24
AIR INTAKE ASSEMBLY	25
CASE/BELT COOLING ASSEMBLY	26
ENGINE AND EXHAUST	27
COOLING ASSEMBLY	28
OIL COOLER ASSEMBLY	29
DRIVE TRAIN ASSEMBLY	30
FRONT DRIVE GEARCASE ASSEMBLY	31
REAR DRIVE GEARCASE ASSEMBLY	32
WIRING HARNESS ASSEMBLY	33
BATTERY AND STARTER MOTOR ASSEMBLY	34
THROTTLE BODY ASSEMBLY	35
CYLINDER ASSEMBLY	36
CYLINDER HEAD AND CAMSHAFT/VALVE ASSEMBLY	37
CAM CHAIN ASSEMBLY	38
CRANKCASE ASSEMBLY	39
CRANKSHAFT AND PISTON ASSEMBLY	40
STARTER CLUTCH ASSEMBLY	41
OIL PUMP ASSEMBLY	42
WATER PUMP ASSEMBLY	43
CLUTCH ASSEMBLY	44
SECONDARY TRANSMISSION ASSEMBLY	45
GEAR SHIFTING ASSEMBLY	46
SECONDARY DRIVE ASSEMBLY	47
MAGNETO ASSEMBLY	48
MAGNETO SIDE ENGINE COVERS	49
CLUTCH SIDE ENGINE COVERS	50


■ **NOTE:** The illustrations used in this Parts Manual are for reference to replacement part numbers only and are not to be used for assembly. For assembly procedures, use an Arctic Cat Service Manual. For a complete list of related items, refer to the current accessory catalog.

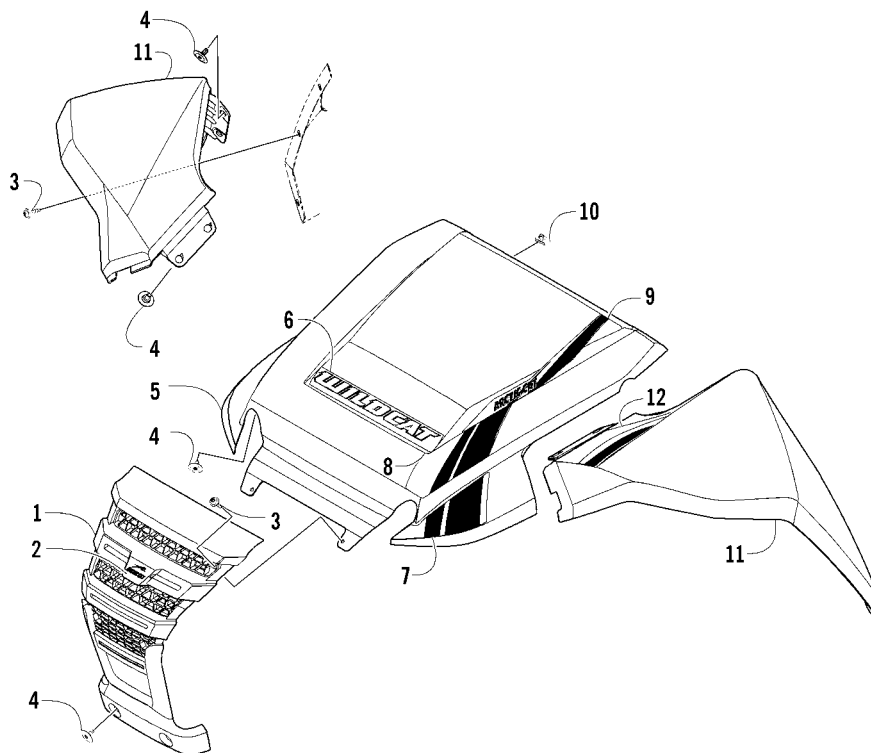

FRONT PANEL ASSEMBLY

0747-995


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	2416-685		1	Fascia, Front - Black	10	0423-577		2	Clip, U-Nut
2	2411-943		1	Decal, "Arctic Cat"	11	5506-140	X	1	Fender, Front - Right - Red (1PUSE/1POSE)
3	0423-609		6	Screw, Machine		5506-141	X	1	Fender, Front - Left - Red (1PUSE/1POSE)
4	0423-101		12	Screw, Shoulder		5506-278	X	1	Fender, Front - Right - Green (1PUSX/1POSX)
5	5506-417	X	1	Hood - White		5506-279	X	1	Fender, Front - Left - Green (1PUSX/1POSX)
6	3411-619	X	1	Decal, "Wildcat" (1PUSE/1POSE)		5506-418	X	1	Fender, Front - Right - Blue (1PUSD/1POSD)
	3411-620	X	1	Decal, "Wildcat" (1PUSX/1POSX)		5506-419	X	1	Fender, Front - Left - Blue (1PUSD/1POSD)
	3411-637	X	1	Decal, "Wildcat" (1PUSD/1POSD)	12	3411-644	X	1	Decal, Fender Front - Right (1PUSE/1POSE)
7	3411-638	X	1	Decal, Hood Fwd - Right (1PUSE/1POSE)		3411-645	X	1	Decal, Fender,Front - Left (1PUSE/1POSE)
	3411-639	X	1	Decal, Hood Fwd - Left (1PUSE/1POSE)		3411-668	X	1	Decal, Fender Front - Right (1PUSX/1POSX)
	3411-662	X	1	Decal, Hood Fwd - Right (1PUSX/1POSX)		3411-669	X	1	Decal, Fender,Front - Left (1PUSX/1POSX)
	3411-663	X	1	Decal, Hood Fwd - Left (1PUSX/1POSX)		3411-692	X	1	Decal, Fender Front - Right (1PUSD/1POSD)
	3411-686	X	1	Decal, Hood Fwd - Right (1PUSD/1POSD)		3411-693	X	1	Decal, Fender,Front - Left (1PUSD/1POSD)
	3411-687	X	1	Decal, Hood Fwd - Left (1PUSD/1POSD)					
8	3411-640	X	1	Decal, Hood Mid - Right (1PUSE/1POSE)					
	3411-641	X	1	Decal, Hood Mid - Left (1PUSE/1POSE)					
	3411-664	X	1	Decal, Hood Mid - Right (1PUSX/1POSX)					
	3411-665	X	1	Decal, Hood Mid - Left (1PUSX/1POSX)					
	3411-688	X	1	Decal, Hood Mid - Right (1PUSD/1POSD)					
	3411-689	X	1	Decal, Hood Mid - Left (1PUSD/1POSD)					
9	3411-642	X	1	Decal, Hood Rear - Right (1PUSE/1POSE)					
	3411-643	X	1	Decal, Hood Rear - Left (1PUSE/1POSE)					
	3411-666	X	1	Decal, Hood Rear - Right (1PUSX/1POSX)					
	3411-667	X	1	Decal, Hood Rear - Left (1PUSX/1POSX)					
	3411-690	X	1	Decal, Hood Rear - Right (1PUSD/1POSD)					
	3411-691	X	1	Decal, Hood Rear - Left (1PUSD/1POSD)					

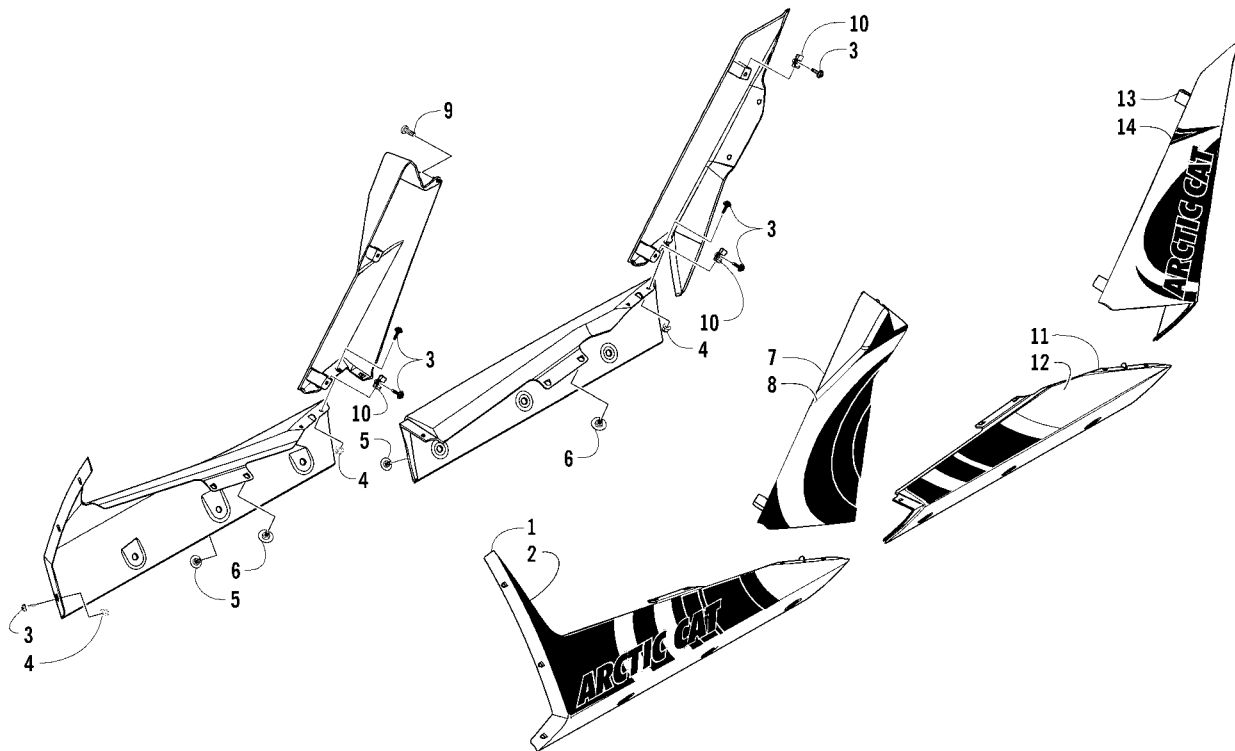

SIDE PANEL ASSEMBLY

0747-996


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	2416-988		1	Panel, Side - Lower Front - Right - Black	9	0423-419		2	Screw, Machine
	2416-989		1	Panel, Side - Lower Front - Left - Black	10	0423-577		8	Clip, U-Nut
2	3411-852	X	1	Decal, Panel - Lower Front - Right - Red (1PUSE/1POSE)	11	4506-844		1	Panel, Side - Lower Rear - Right - Black
	3411-853	X	1	Decal, Panel - Lower Front - Left - Red (1PUSE/1POSE)		4506-845		1	Panel, Side - Lower Rear - Left - Black
	3411-878	X	1	Decal, Panel - Lower Front - Right - Green (1PUSX/1POSX)	12	3411-862	X	1	Decal, Panel - Lower Rear - Right (1PUSE/1POSE)
	3411-879	X	1	Decal, Panel - Lower Front - Left - Green (1PUSX/1POSX)		3411-863	X	1	Decal, Panel - Lower Rear - Left (1PUSE/1POSE)
	3411-902	X	1	Decal, Panel - Lower Front - Right - Blue (1PUSD/1POSD)		3411-888	X	1	Decal, Panel - Lower Rear - Right (1PUSX/1POSX)
	3411-903	X	1	Decal, Panel - Lower Front - Left - Blue (1PUSD/1POSD)		3411-889	X	1	Decal, Panel - Lower Rear - Left (1PUSX/1POSX)
3	0423-609		16	Screw, Machine		3411-912	X	1	Decal, Panel - Lower Rear - Right (1PUSD/1POSD)
4	8427-602		12	Nut, Lock		3411-913	X	1	Decal, Panel - Lower Rear - Left (1PUSD/1POSD)
5	1423-133		12	Screw, Shoulder	13	2416-990		1	Panel, Side - Upper Rear - Right - Black
6	0423-101		8	Screw, Shoulder		2416-991		1	Panel, Side - Upper Rear - Left - Black
7	4406-174		1	Panel, Side - Upper Front - Right - Black	14	3411-860	X	1	Decal, Panel - Upper Rear - Right (1PUSE/1POSE)
	4406-175		1	Panel, Side - Upper Front - Left - Black		3411-861	X	1	Decal, Panel - Upper Rear - Left (1PUSE/1POSE)
8	3411-854	X	1	Decal, Panel - Upper Front - Right (1PUSE/1POSE)		3411-886	X	1	Decal, Panel - Upper Rear - Right (1PUSX/1POSX)
	3411-855	X	1	Decal, Panel - Upper Front - Left (1PUSE/1POSE)		3411-887	X	1	Decal, Panel - Upper Rear - Left (1PUSX/1POSX)
	3411-880	X	1	Decal, Panel - Upper Front - Right (1PUSX/1POSX)		3411-910	X	1	Decal, Panel - Upper Rear - Right (1PUSD/1POSD)
	3411-881	X	1	Decal, Panel - Upper Front - Left (1PUSX/1POSX)		3411-911	X	1	Decal, Panel - Upper Rear - Left (1PUSD/1POSD)
	3411-904	X	1	Decal, Panel - Upper Front - Right (1PUSD/1POSD)					
	3411-905	X	1	Decal, Panel - Upper Front - Left (1PUSD/1POSD)					

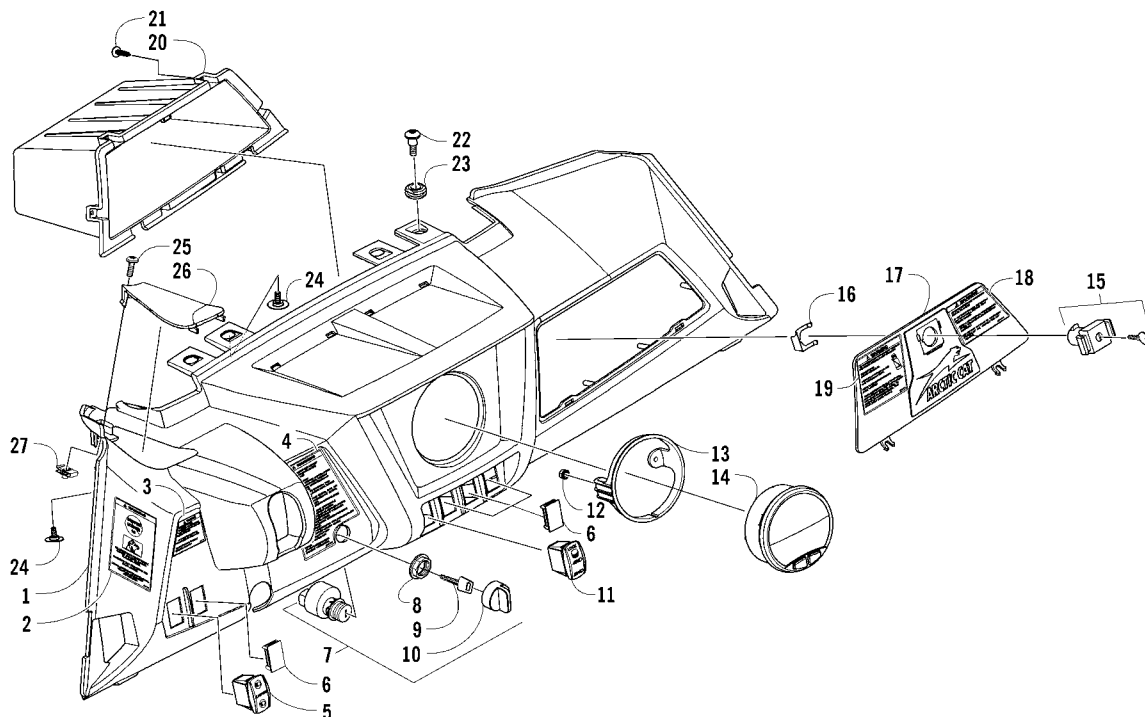

DASH ASSEMBLY

0746-552


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	5506-268		1	Panel, Dash (inc. 2-4)	13	0620-322		1	Bracket, Retaining
2	3411-259		1	● Decal, Warning - Age	14	0520-215	X	1	Gauge, Analog/LCD
3	2411-893		1	● Decal, Warning - Dash - Left	15	2416-985		1	Latch, Glove Box
4	3411-258		1	● Decal, Warning - Dash - Right	16	2416-984		1	Clip, Retaining
5	0409-149		1	Switch, Light	17	5506-191		1	Cover, Glove Box (inc. 18-19)
6	0409-070		4	Plug, Switch-Hole	18	2411-970		1	● Decal, Warning - Occupant - Right
7	0430-089		1	Switch, Ignition (inc. 8-10)	19	3411-255		1	● Decal, Warning - Occupant - Left
8	0430-050		1	● Nut, Retaining	20	2416-842		1	Box, Glove
9	0430-042		1	● Key, Ignition - (Y Series - Left-Side Cut)	21	0423-342		6	Screw, Self-Tapping
	0430-043		1	● Key, Ignition - (Z Series - Right-Side Cut)	22	0423-356		2	Screw, Shoulder
10	0430-054		1	● Cover, Key	23	1423-104		2	Grommet
11	0409-148		1	Switch, 2WD/4WD/Differential Lock	24	1423-133		4	Screw, Shoulder
12	0423-493		2	Nut w/Washer	25	8477-620		1	Screw, Machine
					26	2416-840		1	Panel, Access - Master Cylinder
					27	0423-577		3	Clip, U-Nut

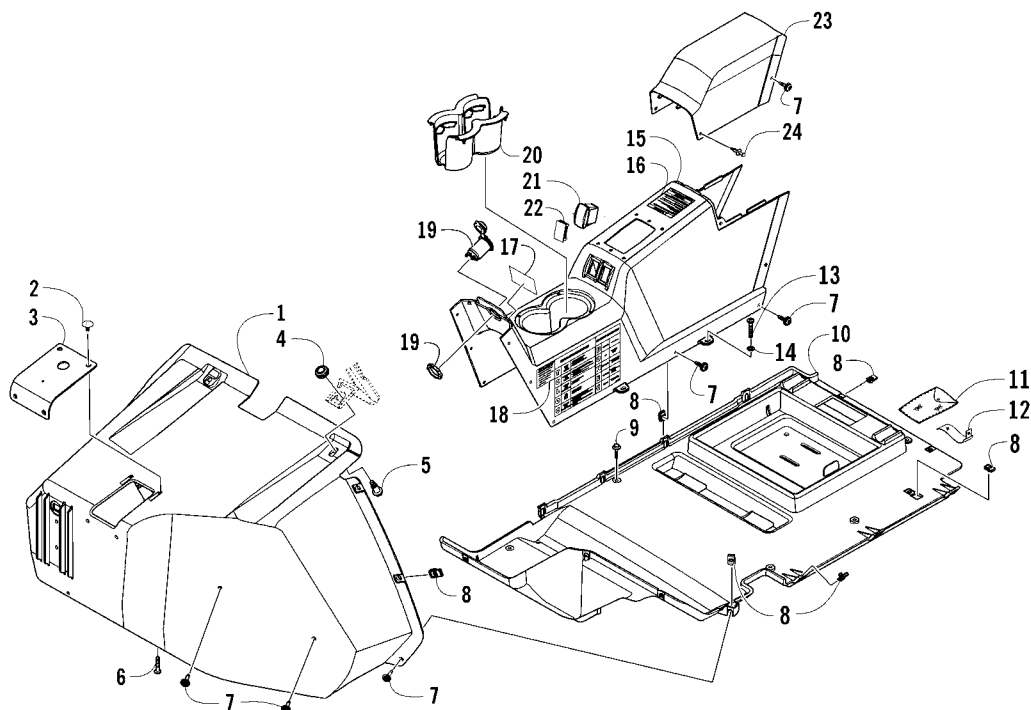

FRONT CONSOLE AND FLOOR PANEL ASSEMBLY

0748-164


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	2416-592		1	Panel, Fender - Inner Right	12	0707-582		1	Retainer, Tool Kit
	2416-593		1	Panel, Fender - Inner Left	13	8468-635		4	Screw, Machine
2	0623-544		4	Clip, Retaining	14	8050-223		4	Washer
3	2416-983		1	Panel, Filler - Brake Pedal	15	5506-247		1	Console - Front (inc. 16-18)
4	1423-104		4	Grommet	16	3411-262		1	● Decal, Warning - Reverse
5	1423-125		4	Screw, Shoulder	17	2411-311		1	● Decal, Starting Instruction
6	1423-083		4	Screw, Self-Tapping	18	2411-940		1	● Decal, Pre-Ride
7	0423-609		20	Screw, Machine	19	0641-897		1	Outlet, Accessory - 12V
8	0423-577		38	Clip, U-Nut	20	2416-109		1	Insert, Cupholder
9	1423-142		16	Screw, Cap w/Washer	21	0409-071		1	Switch, Override
10	2416-516		1	Panel, Floor - Right	22	0409-070		1	Plug, Switch-Hole
	2416-517		1	Panel, Floor - Left	23	2416-841		1	Cover, Access - Battery
11	2516-863		1	Kit, Tool	24	0623-362		2	Rivet, Reinstallable

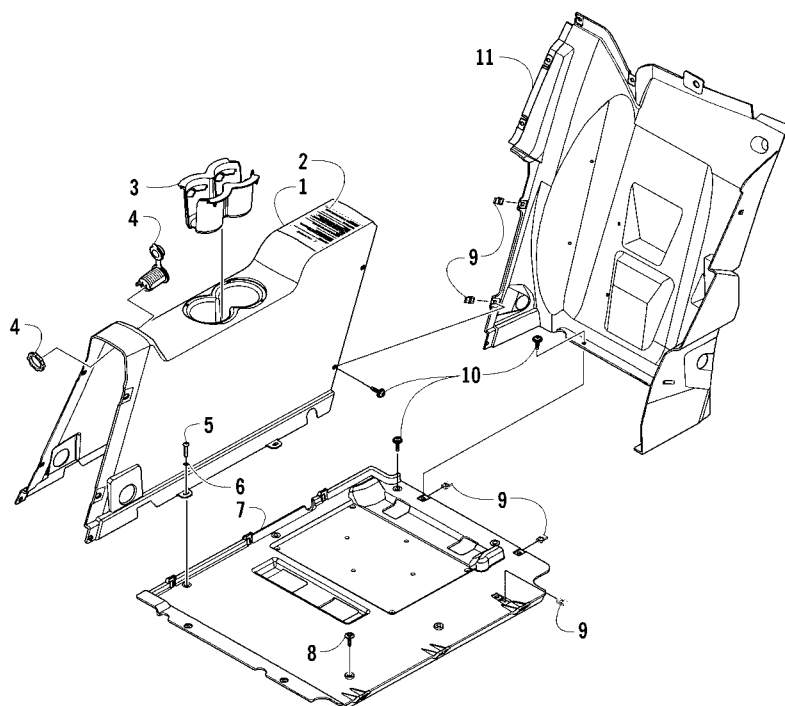

REAR CONSOLE AND FLOOR PANEL ASSEMBLY

0747-222


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	5506-264		1	Console - Rear (inc. 2)	8	1423-142		6	Screw, Cap w/Washer
2	3411-327		1	● Decal, Warning - Passenger	9	0423-577		25	Clip, U-Nut
3	2416-109		1	Insert, Cupholder	10	0423-609		19	Screw, Machine
4	0641-897		1	Outlet, Accessory - 12V	11	4406-228		1	Panel, Splash - Right
5	8468-635		4	Screw, Machine		4406-229		1	Panel, Splash - Left
6	8050-223		4	Washer					
7	4406-110		1	Panel, Floor - Right					
	4406-111		1	Panel, Floor - Left					

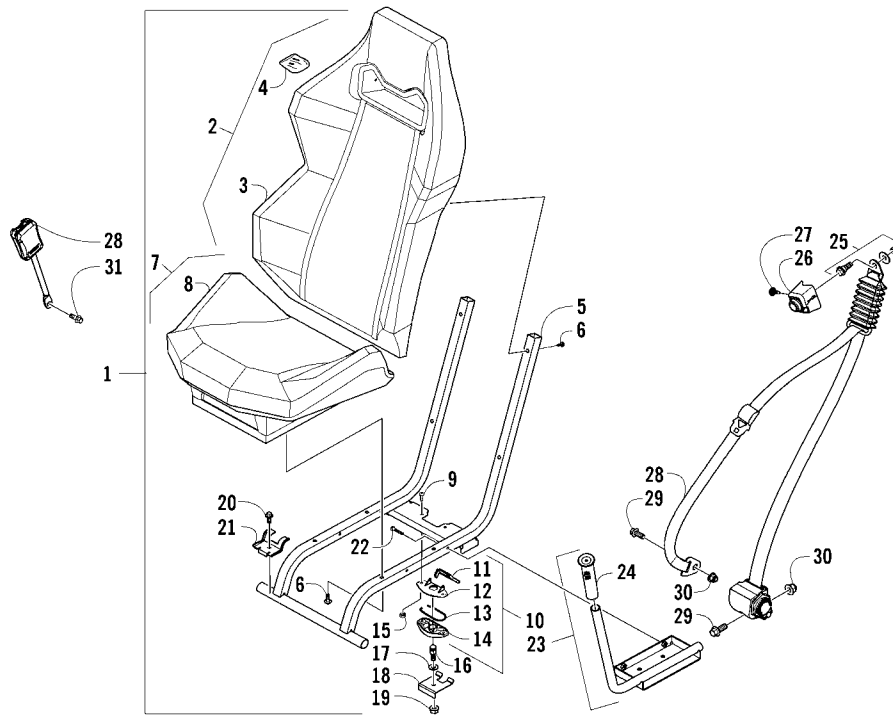

FRONT SEAT ASSEMBLY

0748-166


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	5506-227		2	Seat - Assembly - Blk/Red (inc. 2-15) (1PUSE/1POSE)	9	8468-620		4	● Screw, Machine
	5506-261	X	2	Seat - Assembly - Blk/Grn (inc. 2-15) (1PUSX/1POSX)	10	2706-164		2	● Latch, Seat - Assembly (inc. 11-14)
	5506-434	X	2	Seat - Assembly - Blk/Blue (inc. 2-15) (1PUSE/1POSE)	11	2606-854		2	●● Lever, Seat Latch
2	5506-209	X	2	● Back, Seat - Blk/Red (inc. 3-4) (1PUSE/1POSE)	12	1673-635		2	●● Cover, Seat Latch
	5506-262	X	2	● Back, Seat - Blk/Grn (inc. 3-4) (1PUSX/1POSX)	13	0673-023		2	●● Clip, Spring
	5506-431	X	2	● Back, Seat - Blk/Blue (inc. 3-4) (1PUSE/1POSE)	14	1673-634		2	●● Back, Seat Latch
3	5506-639	X	1	●● Cover, Seat Back - Blk/Red (1PUSE/1POSE)	15	0623-038		4	● Nut w/Washer
	5506-642	X	1	●● Cover, Seat Back - Blk/Grn (1PUSX/1POSX)	16	0423-559		2	Stud, Latch - Seat
	5506-645	X	1	●● Cover, Seat Back - Blk/Blue (1PUSE/1POSE)	17	8050-282		2	Washer
4	1423-265	X	1	●● Kit, Seat Hardware	18	5506-253		2	Guard, Seat Latch
5	5506-069		2	● Frame, Seat - Black	19	8424-002		2	Nut
6	8468-617		16	● Screw, Machine	20	8408-821		4	Screw, Cap
7	5506-208	X	2	● Base, Seat - Blk/Red (inc. 8) (1PUSE/1POSE)	21	5506-078		4	Bracket, Hold-Down
	5506-263	X	2	● Base, Seat - Blk/Grn (1PUSX/1POSX)	22	8477-635		2	Screw, Machine
	5506-430	X	2	● Base, Seat - Blk/Blue (1PUSE/1POSE)	23	5506-173		1	Handle - Assembly (inc. 24)
8	5506-638	X	1	●● Cover, Seat Base - Blk/Red (1PUSE/1POSE)	24	4606-945		1	● Grip
	5506-643	X	1	●● Cover, Seat Base - Blk/Grn (1PUSX/1POSX)	25	0423-915		2	Screw, Shoulder - Assembly
	5506-644	X	1	●● Cover, Seat Base - Blk/Blue (1PUSE/1POSE)	26	2416-936		1	Cover, Seat Belt - Right
						2416-937		1	Cover, Seat Belt - Left
					27	0623-784		4	Screw, Self-Tapping
					28	5506-160		2	Belt, Seat - Assembly
					29	1423-182		4	Screw, Cap
					30	1423-184		4	Nut, Lock
					31	1423-183		2	Screw, Cap

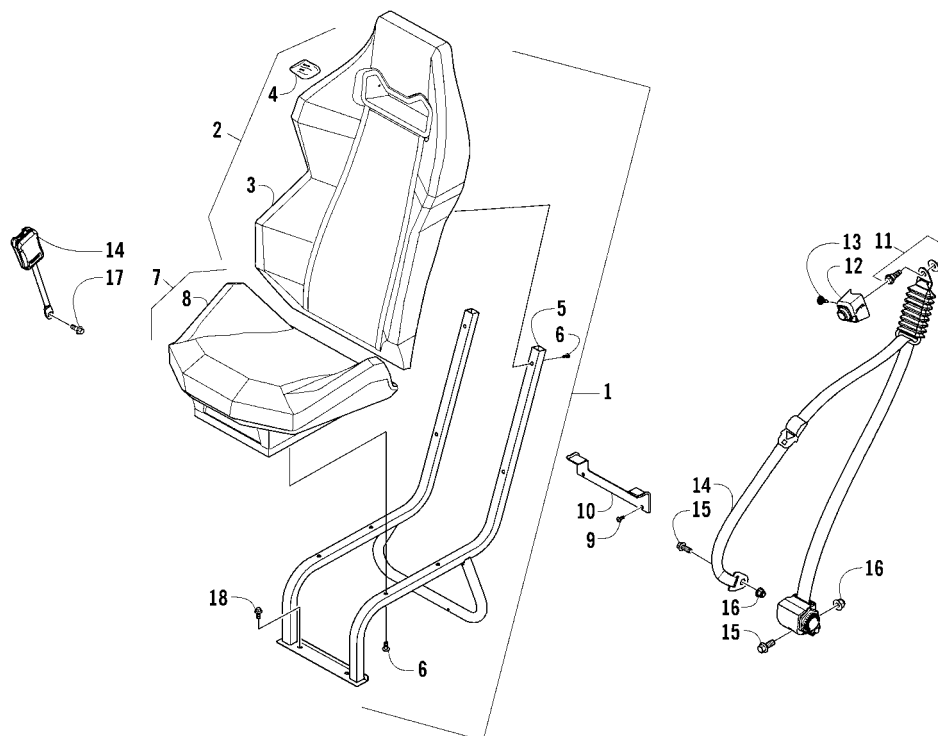

REAR SEAT ASSEMBLY

0748-165


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	5506-437	X	2	Seat - Assembly - Blk/Red (inc. 2-8) (1PUSE/1POSE)	8	5506-638	X	1	●● Cover, Seat Base - Blk/Red (1PUSE/1POSE)
	5506-436	X	2	Seat - Assembly - Blk/Grn (inc. 2-8) (1PUSX/1POSX)		5506-643	X	1	●● Cover, Seat Base - Blk/Grn (1PUSX/1POSX)
	5506-435	X	2	Seat - Assembly - Blk/Blue (inc. 2-8) (1PUSD/1POSD)		5506-644	X	1	●● Cover, Seat Base - Blk/Blue (1PUSD/1POSD)
2	5506-209	X	2	● Back, Seat - Blk/Red (inc. 3-4) (1PUSE/1POSE)	9	8468-616		4	Screw, Machine
	5506-262	X	2	● Back, Seat - Blk/Grn (inc. 3-4) (1PUSX/1POSX)	10	5506-226		2	Bracket, Hold-Down
	5506-431	X	2	● Back, Seat - Blk/Blue (inc. 3-4) (1PUSD/1POSD)	11	0423-915		2	Screw, Shoulder - Assembly
3	5506-639	X	1	●● Cover, Seat Back - Blk/Red (1PUSE/1POSE)	12	2416-936		1	Cover, Seat Belt - Right
	5506-642	X	1	●● Cover, Seat Back - Blk/Grn (1PUSX/1POSX)		2416-937		1	Cover, Seat Belt - Left
	5506-645	X	1	●● Cover, Seat Back - Blk/Blue (1PUSD/1POSD)	13	0623-784		4	Screw, Self-Tapping
4	1423-265	X	1	●● Kit, Seat Hardware	14	5506-161		2	Belt, Seat - Assembly
5	5506-072		2	● Frame, Seat - Black	15	1423-182		4	Screw, Cap
6	8468-617		16	● Screw, Machine	16	1423-184		4	Nut, Lock
7	5506-208	X	2	● Base, Seat - Blk/Red (inc. 8) (1PUSE/1POSE)	17	1423-183		2	Screw, Cap
	5506-263	X	2	● Base, Seat - Blk/Grn (inc. 8) (1PUSX/1POSX)	18	8408-821		4	Screw, Cap
	5506-430	X	2	● Base, Seat - Blk/Blue (inc. 8) (1PUSD/1POSD)					

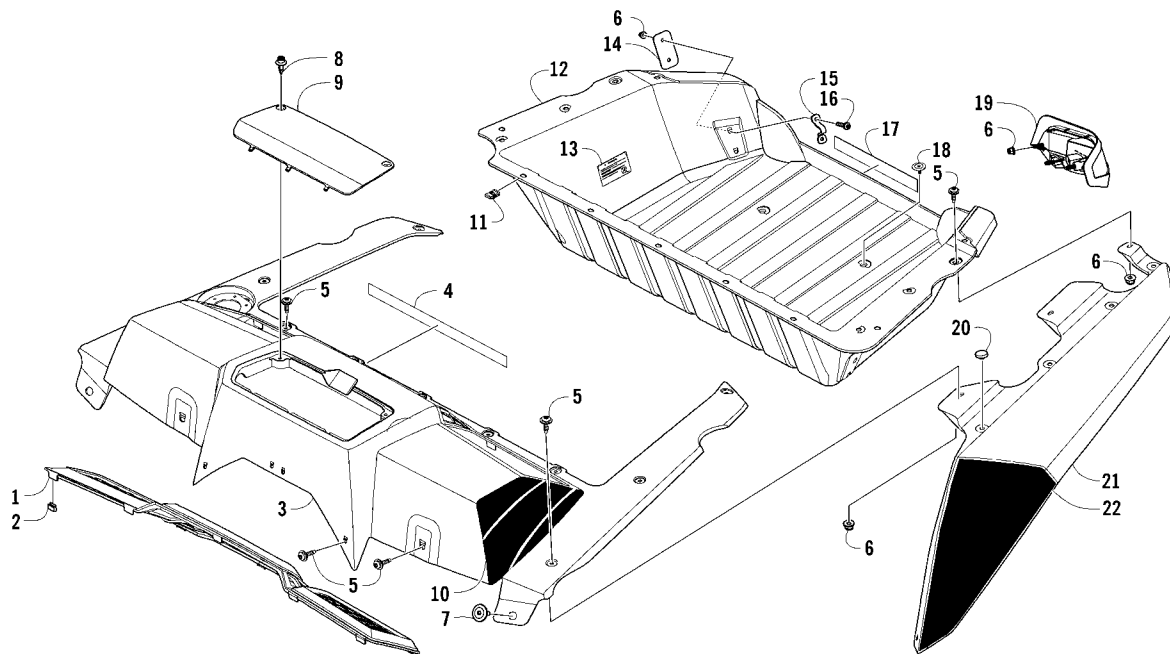

CARGO BOX AND TAILLIGHT ASSEMBLY

0747-997


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	2416-956		1	Screen, Vent	11	0423-577		5	Clip, U-Nut
2	0123-987		12	Clip, U	12	4406-167		1	Box, Cargo (inc. 13)
3	5506-154	X	1	Panel, Rear Body - Red (1PUSE/1POSE)	13	2411-890		1	● Decal, Warning - Cargo Box
	5506-283	X	1	Panel, Rear Body - Green (1PUSX/1POSX)	14	2416-573		4	Plate, Backing
	5506-426	X	1	Panel, Rear Body - Blue (1PUSD/1POSD)	15	4506-634		4	Bracket, Hold-Down
4	3411-872	X	1	Decal, Rear Panel (1PUSE/1POSE)	16	8468-625		8	Screw, Machine
	3411-873	X	1	Decal, Rear Panel (1PUSX/1POSX)	17	2411-944		1	Decal, "Arctic Cat"
	3411-922	X	1	Decal, Rear Panel (1PUSD/1POSD)	18	1423-109		4	Screw, Shoulder
5	0423-609		19	Screw, Machine	19	0509-056		1	Taillight - Right
6	8427-602		24	Nut, Lock		0509-057		1	Taillight - Left
7	1423-107		2	Screw, Shoulder	20	0406-877		4	Bumper
8	0423-535		2	Rivet, Reinstallable	21	5506-148		1	Fender, Rear - Right - White
9	2416-825		1	Cover, Access - Radiator		5506-149		1	Fender, Rear - Left - White
10	3411-870	X	1	Decal, Upper Rear Panel - Right (1PUSE/1POSE)	22	3411-866	X	1	Decal, Rear Fender - Right
	3411-871	X	1	Decal, Upper Rear Panel - Left (1PUSE/1POSE)		3411-867	X	1	Decal, Rear Fender - Left
	3411-896	X	1	Decal, Upper Rear Panel - Right (1PUSX/1POSX)					
	3411-897	X	1	Decal, Upper Rear Panel - Left (1PUSX/1POSX)					
	3411-920	X	1	Decal, Upper Rear Panel - Right (1PUSD/1POSD)					
	3411-921	X	1	Decal, Upper Rear Panel - Left (1PUSD/1POSD)					

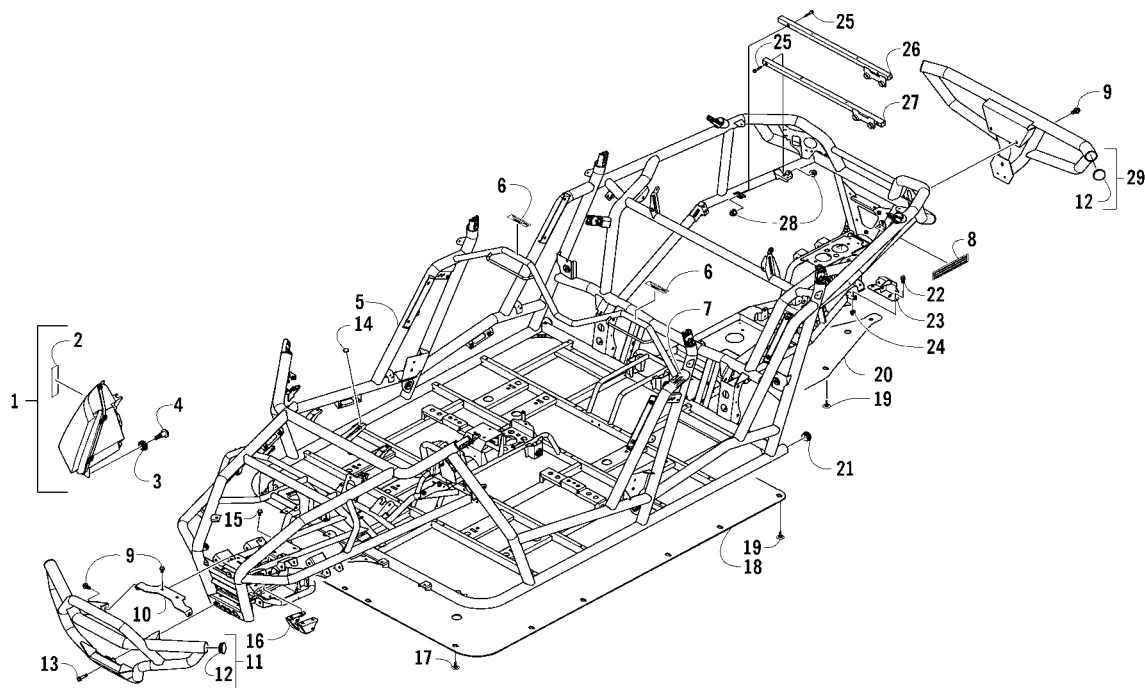

FRAME, HEADLIGHTS, AND RELATED PARTS

0747-998


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0509-064		1	Headlight Assembly - Right (inc. 2)	15	8409-018		4	Screw, Cap
	0509-065		1	Headlight Assembly - Left (inc. 2)	16	4506-703		1	Bracket, Support - Front Gearcase
2	2411-972		1	● Decal, Reflector - Right - Amber	17	0423-101		2	Screw, Shoulder
	2411-973		1	● Decal, Reflector - Left - Amber	18	4506-843		1	Plate, Skid - Front
3	1423-104		6	Grommet	19	1423-109		29	Screw, Self-Tapping
4	0423-356		6	Screw, Shoulder	20	4506-407		1	Plate, Skid - Rear
5	5506-453		1	Frame, Main (inc. 6-8)	21	2416-962		2	Plug, Hole
6	3411-253		2	● Decal, Warning - Seat Belt	22	8409-025		2	Screw, Cap
7	2411-941		1	● Decal, Warning - ROPS	23	4506-637		1	Bracket, Support - Rear Gearcase
8	2411-974		2	● Decal, Reflector - Red	24	8428-002		2	Nut, Lock
9	8410-816		5	Screw, Cap	25	8408-845		4	Screw, Cap
10	5506-176		1	Bracket, Mounting	26	4506-680		1	Tube, Support - Front
11	5506-330	X	1	Bumper, Front - Red (inc. two No. 12) (1PUSE/1POSE)	27	4506-682		1	Tube, Support - Rear
	5506-332	X	1	Bumper, Front - Green (inc. two No. 12) (1PUSX/1POSX)	28	8427-802		4	Nut, Lock
	5506-441	X	1	Bumper, Front - Blue (inc. two No. 12) (1PUSD/1POSD)	29	5506-331	X	1	Bumper, Rear - Red (inc. two No. 12) (1PUSE/1POSE)
12	1423-190		4	● Caps - Black		5506-333	X	1	Bumper, Rear - Green (inc. two No. 12) (1PUSX/1POSX)
13	8410-640		2	Screw, Cap		5506-442	X	1	Bumper, Rear - Blue (inc. two No. 12) (1PUSD/1POSD)
14	0406-877		1	Bumper					

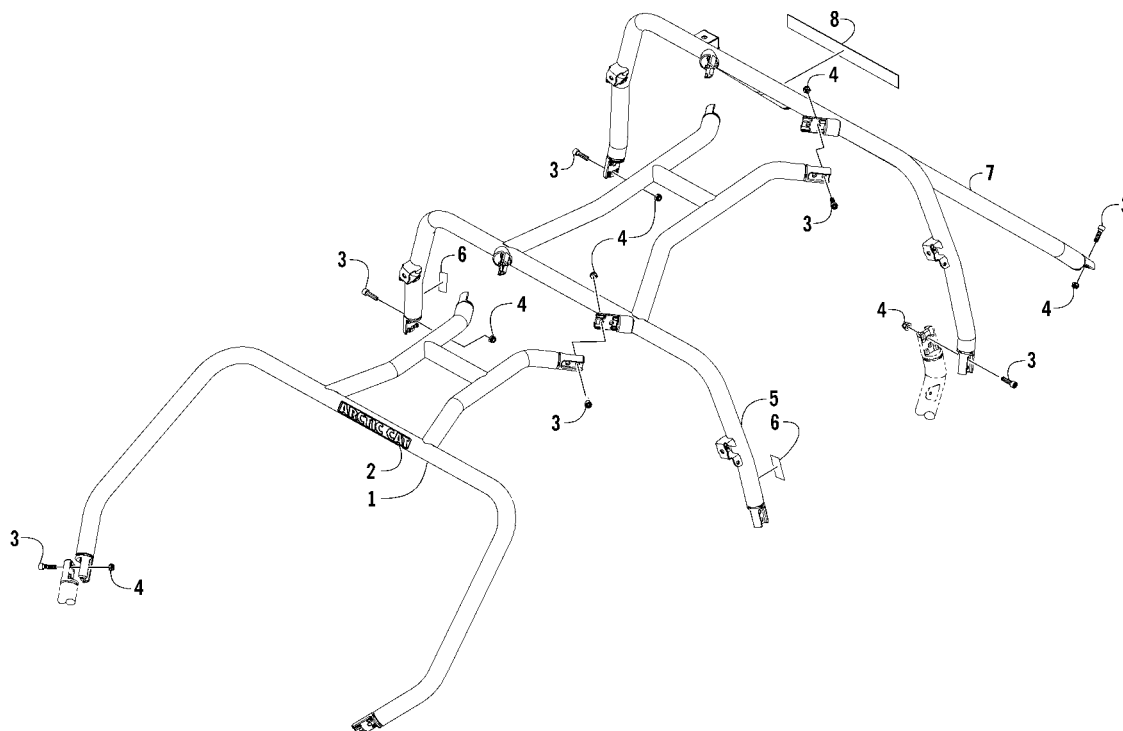

ROPS ASSEMBLY

0748-016


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	5506-113		1	ROPS - Front Assembly	6	3411-251		2	● Decal, Warning - Handhold
2	0411-501		1	Decal, "Arctic Cat"	7	4506-837		1	ROPS - Rear Assembly
3	1423-140		24	Screw, Cap	8	3411-368	X	1	Decal, "Wildcat X" (1PUSE/1POSE)
4	1423-161		24	Nut, Lock		3411-392	X	1	Decal, "Wildcat X" (1PUSX/1POSX)
5	5506-454		1	ROPS - Center Assembly (inc. 6)		3411-960	X	1	Decal, "Wildcat X" (1PUSD/1POSD)

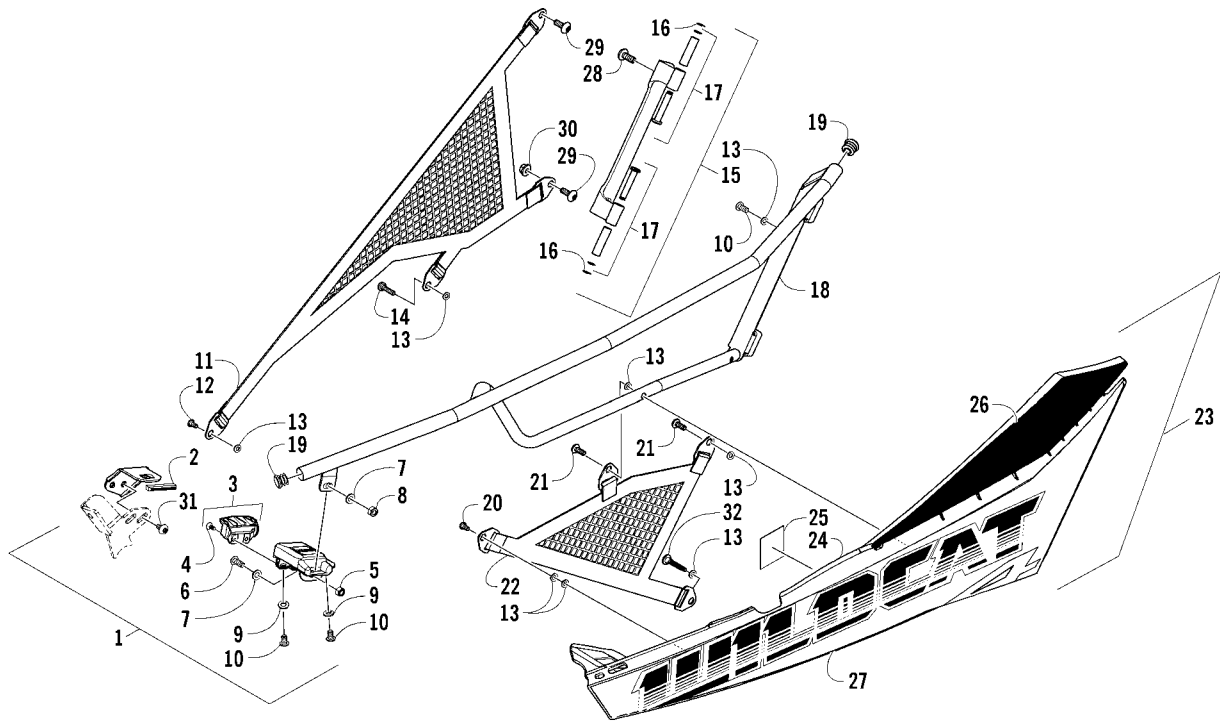

FRONT DOOR ASSEMBLY

0747-999


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	1436-800		1	Latch, Door - Right Assembly (inc. 2-10)	24	4406-246		1	● Door w/o Decals - Right - Black
	1436-801		1	Latch, Door - Left Assembly (inc. 2-10)		0518-061		1	● Door w/o Decals - Left - Black (inc. 25)
2	4406-262		2	● Grommet	25	4411-105	X	1	●● Decal, Warning - Tire Pressure
3	1436-475		2	● Guide, Door Latch - Assembly (inc. 4-5)	26	3411-848	X	1	● Decal, Door - Upper Right (1PUSE/1POSE)
4	1423-155		4	●● Screw, Machine		3411-849	X	1	● Decal, Door - Upper Left (1PUSE/1POSE)
5	1423-154		4	●● Nut, Lock		3411-874	X	1	● Decal, Door - Upper Right (1PUSX/1POSX)
6	8468-616		2	● Screw, Machine		3411-875	X	1	● Decal, Door - Upper Left (1PUSX/1POSX)
7	1423-119		4	● Washer		3411-898	X	1	● Decal, Door - Upper Right (1PUUSD/1POSD)
8	1423-153		2	● Nut, Lock		3411-899	X	1	● Decal, Door - Upper Left (1PUUSD/1POSD)
9	8051-213		4	● Washer, Lock	27	3411-850	X	1	● Decal, Door - Lower Right (1PUSE/1POSE)
10	1423-113		8	● Screw, Machine		3411-851	X	1	● Decal, Door - Lower Left (1PUSE/1POSE)
11	4406-304		2	Net, Restraint - Upper		3411-876	X	1	● Decal, Door - Lower Right (1PUSX/1POSX)
12	1423-206		2	Screw, Shoulder		3411-877	X	1	● Decal, Door - Lower Left (1PUSX/1POSX)
13	8050-223		18	Washer		3411-900	X	1	● Decal, Door - Lower Right (1PUUSD/1POSD)
14	1423-186		2	Screw, Shoulder		3411-901	X	1	● Decal, Door - Lower Left (1PUUSD/1POSD)
15	1436-476		1	Hinge, Door - Right Assembly (inc. 16-17)	28	0423-817		4	Screw, Machine
	1436-454		1	Hinge, Door - Left Assembly (inc. 16-17)	29	0423-355		4	Screw, Shoulder
16	1423-118		4	● Circlip	30	8427-602		2	Nut, Lock
17	0518-096		4	● Kit, Hinge Pin	31	0826-029		4	Screw, Machine
18	5506-174		1	Frame, Door - Right	32	1423-205		2	Screw, Shoulder
	5506-175		1	Frame, Door - Left					
19	4406-013		4	Plug, Hole					
20	1423-196		2	Screw, Shoulder					
21	1423-197		4	Screw, Shoulder					
22	4406-305		2	Net, Restraint - Lower					
23	0518-144	X	1	Door w/Decals - Right (inc. 24 and 26-27) (1PUSE/1POSE)					
	0518-145	X	1	Door w/Decals - Left (inc. 24-27) (1PUSE/1POSE)					
	0518-148	X	1	Door w/Decals - Right (inc. 24 and 26-27) (1PUSX/1POSX)					
	0518-149	X	1	Door w/Decals - Left (inc. 24-27) (1PUSX/1POSX)					
	0518-152	X	1	Door w/Decals - Right (inc. 24 and 26-27) (1PUUSD/1POSD)					
	0518-153	X	1	Door w/Decals - Left (inc. 24-27) (1PUUSD/1POSD)					

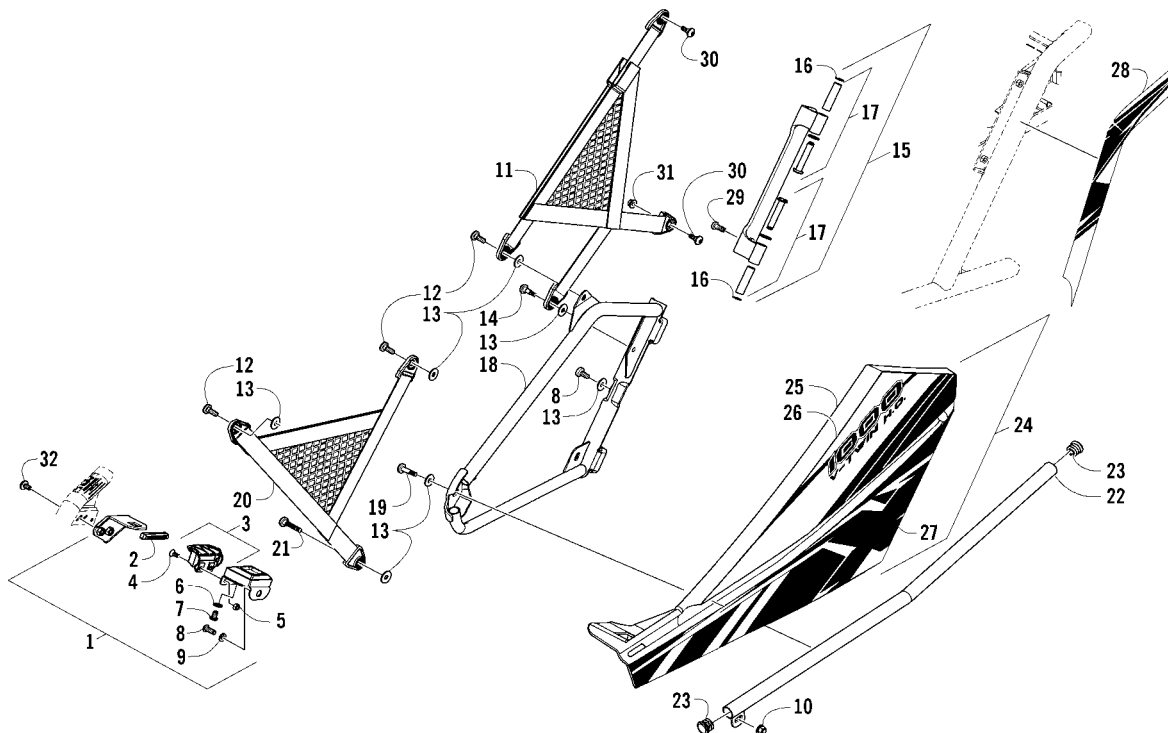

REAR DOOR ASSEMBLY

0748-018


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	1436-802		1	Latch, Door - Right Assembly (inc. 2-10)	26	3411-856	X	1	● Decal, Door - Upper Right (1PUSE/1POSE)
	1436-803		1	Latch, Door - Left Assembly (inc. 2-10)		3411-857	X	1	● Decal, Door - Upper Left (1PUSE/1POSE)
2	4406-262		2	● Grommet		3411-882	X	1	● Decal, Door - Upper Right (1PUSX/1POSX)
3	1436-475		2	● Guide, Door Latch - Assembly (inc. 4-5)		3411-883	X	1	● Decal, Door - Upper Left (1PUSX/1POSX)
4	1423-155		4	●● Screw, Machine		3411-906	X	1	● Decal, Door - Upper Right (1PUUSD/1POSD)
5	1423-154		4	●● Nut, Lock		3411-907	X	1	● Decal, Door - Upper Left (1PUUSD/1POSD)
6	8051-213		2	● Washer, Lock	27	3411-858	X	1	● Decal, Door - Lower Right (1PUSE/1POSE)
7	8468-616		2	● Screw, Machine		3411-859	X	1	● Decal, Door - Lower Left (1PUSE/1POSE)
8	1423-113		4	● Screw, Machine		3411-884	X	1	● Decal, Door - Lower Right (1PUSX/1POSX)
9	1423-119		2	● Washer		3411-885	X	1	● Decal, Door - Lower Left (1PUSX/1POSX)
10	1423-191		2	● Nut, Lock		3411-908	X	1	● Decal, Door - Lower Right (1PUUSD/1POSD)
11	4406-260		2	Net, Restraint - Upper		3411-909	X	1	● Decal, Door - Lower Left (1PUUSD/1POSD)
12	1423-196		6	Screw, Shoulder	28	3411-864	X	1	Decal, Door Frame - Right (1PUSE/1POSE)
13	8050-223		14	Washer		3411-865	X	1	Decal, Door Frame - Left (1PUSE/1POSE)
14	1423-187		2	Screw, Shoulder		3411-890	X	1	Decal, Door Frame - Right (1PUSX/1POSX)
15	1436-476		1	Hinge, Door - Right Assembly (inc. 16-17)		3411-891	X	1	Decal, Door Frame - Left (1PUSX/1POSX)
	1436-454		1	Hinge, Door - Left Assembly (inc. 16-17)		3411-914	X	1	Decal, Door Frame - Right (1PUUSD/1POSD)
16	1423-118		4	● Circlip		3411-915	X	1	Decal, Door Frame - Left (1PUUSD/1POSD)
17	0518-096		4	● Kit, Hinge Pin	29	0423-817		4	Screw, Machine
18	5506-200		1	Frame, Door - Right	30	0423-355		4	Screw, Shoulder
	5506-201		1	Frame, Door - Left	31	8427-602		2	Nut, Lock
19	1423-192		2	Screw, Shoulder	32	0826-029		4	Screw, Machine
20	4406-261		2	Net, Restraint - Lower					
21	1423-205		2	Screw, Shoulder					
22	5506-204		1	Tube, Support - Right					
	5506-205		1	Tube, Support - Left					
23	4406-013		4	Plug, Hole					
24	0518-146	X	1	Door w/Decals - Right (inc. 25-27) (1PUSE/1POSE)					
	0518-147	X	1	Door w/Decals - Left (inc. 25-27) (1PUSE/1POSE)					
	0518-150	X	1	Door w/Decals - Right (inc. 25-27) (1PUSX/1POSX)					
	0518-151	X	1	Door w/Decals - Left (inc. 25-27) (1PUSX/1POSX)					
	0518-154	X	1	Door w/Decals - Right (inc. 25-27) (1PUUSD/1POSD)					
	0518-155	X	1	Door w/Decals - Left (inc. 25-27) (1PUUSD/1POSD)					
25	4406-256		1	● Door w/o Decals - Right - Black					
	4406-257		1	● Door w/o Decals - Left - Black					

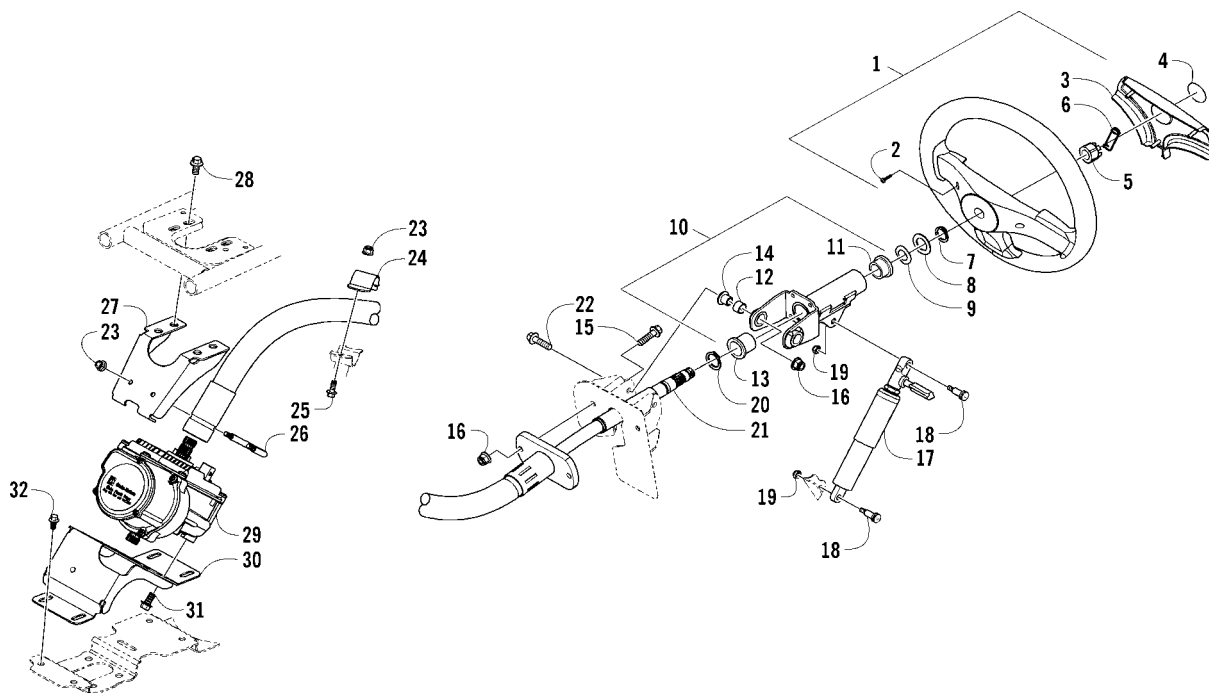

STEERING ASSEMBLY

0746-949


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0502-884		1	Wheel, Steering - Assembly (inc. 2-3)	17	0405-468		1	Lift, Support
2	0423-613		3	● Screw, Self-Tapping	18	1423-250	X	2	Screw, Shoulder
3	0405-239		1	● Cap, Steering Wheel	19	0623-056		2	Nut, Lock
4	1411-798		1	Decal, Aircat	20	1423-111		1	Ring, Retaining
5	0423-884		1	Nut	21	0405-403		1	Shaft, Steering
6	1423-045		1	Clip, Retaining	22	8408-830		2	Screw, Cap
7	1423-110		1	Ring, Retaining	23	8427-602		3	Nut, Lock
8	0828-071		1	Washer	24	0505-765		1	Bracket, Retaining
9	0423-558		1	Washer	25	8408-617		1	Screw, Cap
10	0505-721		1	Bracket, Mounting - Tilt Steering (inc. 11-13)	26	1423-203		1	U-Clamp
11	0405-472		1	● Bushing	27	0505-835		1	Bracket, Mounting
12	0405-405		2	● Bushing	28	8408-816		4	Screw, Cap
13	0405-473		1	● Bushing	29	0505-850	X	1	Assembly, Electronic Power Steering
14	0423-669		2	Spacer	30	4506-619		1	Bracket, Mounting
15	8408-831		2	Screw, Cap	31	8409-020		4	Screw, Cap
16	8427-802		4	Nut, Lock	32	8408-818		4	Screw, Cap

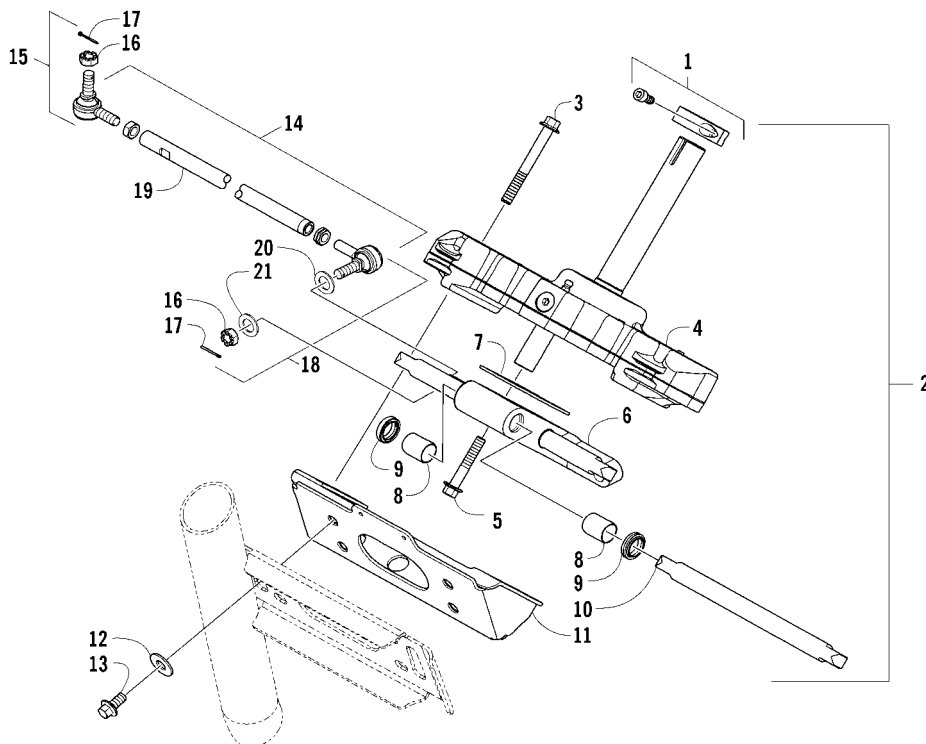

RACK AND PINION ASSEMBLY

0746-610


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0405-463		1	Collar, Locking	11	4506-688		1	● Bracket, Mounting
2	0505-814	X	1	Complete Rack and Pinion Assembly (inc. 3-11)	12	0623-044		4	Washer
3	8408-872		4	● Screw, Cap	13	8408-818		4	Screw, Cap
4	0505-826		1	● Rack and Pinion	14	0505-815		2	Tie Rod - Assembly (inc. 15-19)
5	8409-847		1	● Screw, Cap	15	0505-812		2	● Kit, Tie Rod End - Outer (inc. 16-17)
6	0505-888	X	1	● Rack, Steering - Assembly (inc. 7-9 and 20-21)	16	1423-072		4	● Nut, Castle
7	0405-414		1	● Pad, Felt	17	0623-175		4	● Pin, Cotter
8	0405-445		4	● Bushing	18	0505-811		2	● Kit, Tie Rod End - Inner (inc. 16-17)
9	0405-475		4	● Seal	19	0405-404		2	● Tie Rod
10	0405-457		2	● Rod, Support	20	1423-068		2	Washer
					21	1423-071		2	Washer

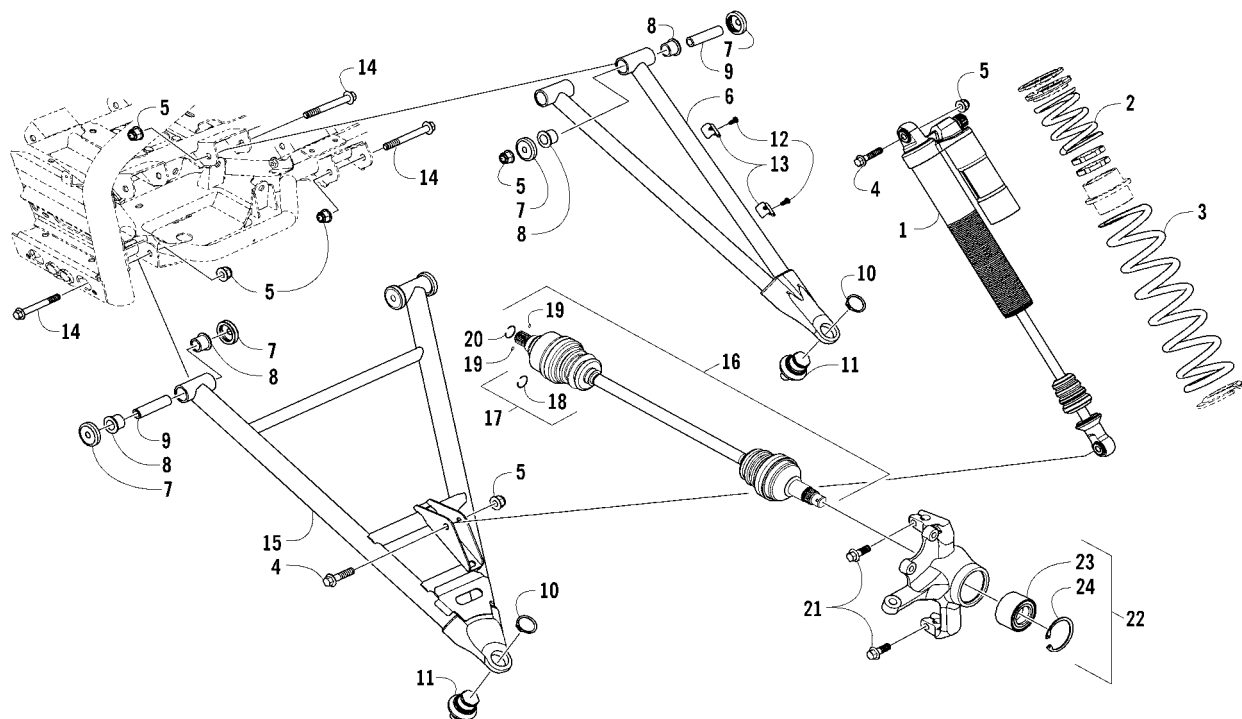

FRONT SUSPENSION ASSEMBLY

0747-224


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0403-344		2	Shock Absorber	14	8413-090		8	Screw, Cap
2	0503-554		2	Spring, Suspension - Upper - White	15	0503-694	X	1	A-Arm, Lower Right - Red (inc. 7-11) (1PUSE/1POSE)
3	0503-630		2	Spring, Suspension - Lower - White		0503-695	X	1	A-Arm, Lower Left - Red (inc. 7-11) (1PUSE/1POSE)
4	8409-050		4	Screw, Cap		0503-692	X	1	A-Arm, Lower Right - Green (inc. 7-11) (1PUSX/1POSD)
5	8428-002		12	Nut, Lock		0503-693	X	1	A-Arm, Lower Left - Green (inc. 7-11) (1PUSX/1POSD)
6	0503-724	X	1	A-Arm, Upper Right - Red (inc. 7-11) (1PUSE/1POSE)		0503-774	X	1	A-Arm, Lower Right - Blue (inc. 7-11) (1PUSD/1POSD)
	0503-725	X	1	A-Arm, Upper Left - Red (inc. 7-11) (1PUSE/1POSE)		0503-775	X	1	A-Arm, Lower Left - Blue (inc. 7-11) (1PUSD/1POSD)
	0503-722	X	1	A-Arm, Upper Right - Green (inc. 7-11) (1PUSX/1POSD)	16	1502-774		2	Axle - Front - Locking (inc. 17-20)
	0503-723	X	1	A-Arm, Upper Left - Green (inc. 7-11) (1PUSX/1POSD)	17	1436-410		2	● Repair Kit, Boot (inc. 18)
	0503-762	X	1	A-Arm, Upper Right - Blue (inc. 7-11) (1PUSD/1POSD)	18	1441-988		2	● Clip, Retaining
	0503-763	X	1	A-Arm, Upper Left - Blue (inc. 7-11) (1PUSD/1POSD)	19	1402-885		4	● Pin, Detent
7	1423-204		16	● Seal	20	1402-889		2	● Clip, Retaining
8	0403-264		16	● Bushing	21	0423-998		4	Screw, Shoulder
9	0403-250		8	● Axle	22	0503-548		1	Knuckle - Assembly - Right (inc. 23-24)
10	0423-009		4	● Ring, Retaining		0503-549		1	Knuckle - Assembly - Left (inc. 23-24)
11	0405-483		4	● Ball Joint	23	1402-809		2	● Bearing
12	0423-946		4	Screw, Self-Tapping	24	0423-423		2	● Ring, Retaining
13	0403-257		4	Clip, Routing					

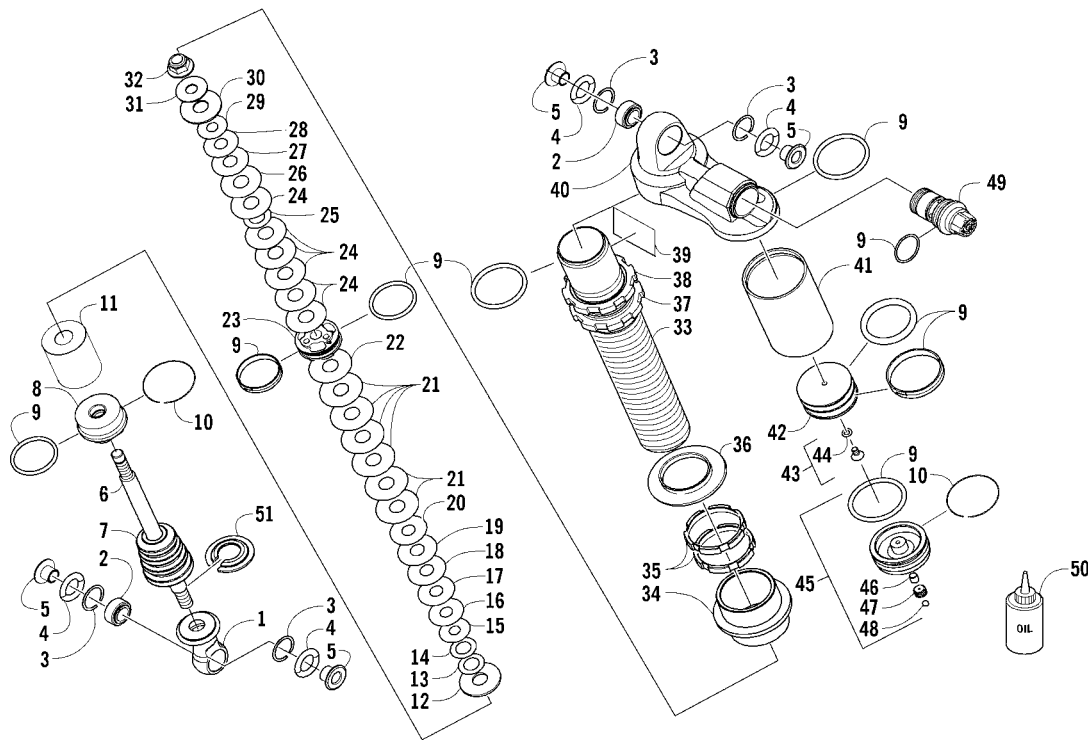

FRONT SUSPENSION SHOCK ABSORBER

0747-225

Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
-	0403-344		1	Complete Shock Absorber	26	2604-491		1	Valve, 1.350 x 0.008 in.
1	0403-367		1	Eyelet	27	2604-685		1	Valve, 1.250 x 0.008 in.
2	1604-664		2	Bearing	28	2604-485		1	Valve, 1.100 x 0.008 in.
3	3604-147		4	Ring, Retaining	29	2604-479		1	Valve, 0.950 x 0.008 in.
4	0603-680		4	O-Ring	30	0403-383		1	Washer, Top Out
5	0403-347		4	Spacer	31	3604-184		1	Washer, Backup
6	0403-370		1	Rod, Shock	32	0403-362		1	Nut
7	0403-361		1	Bumper, Shock	33	0403-366		1	Body, Shock
8	0403-379		1	End Cap, Shock	34	0403-346		1	Sleeve, Wear
9	0403-393		1	Kit, Seal/Cap Rebuild	35	0404-368		2	Nut, Adjuster
10	0604-992		2	Ring, Retaining	36	0403-352		1	Seat, Spring
11	0403-371		1	Spacer	37	0403-350		1	Nut, Adjuster
12	2604-449		1	Washer, Top Out	38	0403-348		1	Collar, Locking - Adjuster Nut
13	0403-382		1	Valve, 0.900 x 0.012 in.	39	0403-363		1	Decal, Shock
14	2604-481		1	Valve, 0.950 x 0.012 in.	40	0403-376		1	End Cap, Shock/Reservoir
15	2604-487		1	Valve, 1.100 x 0.012 in.	41	0403-369		1	Reservoir
16	2604-687		1	Valve, 1.250 x 0.012 in.	42	0403-377		1	Piston, Internal Floating (inc. 43-44)
17	2604-493		1	Valve, 1.350 x 0.012 in.	43	1604-316		1	● Screw, Machine w/O-Ring (inc. 44)
18	2604-498		1	Valve, 1.425 x 0.012 in.	44	1604-425		1	●● O-Ring
19	2604-503		1	Valve, 1.600 x 0.012 in.	45	3604-517		1	End Cap, Reservoir (inc. 46-48)
20	0403-381		1	Valve, 1.250 x 0.004 in.	46	1604-428		1	● Plug
21	2604-502		6	Valve, 1.600 x 0.010 in.	47	2603-338		1	● Screw, Set
22	0403-385		1	Valve, 1.600 x 0.006 in.	48	2603-337		1	● Ball
23	0403-394		1	Piston, High-Flow	49	0403-380		1	Piston, Concentric - Damping Adjuster
24	2604-496		6	Valve, 1.425 x 0.008 in.	50	5639-530		AR	Oil, Shock - 1 qt
25	0403-384		1	Valve, 0.750 x 0.008 in.	51	0403-345		1	Retainer, Spring

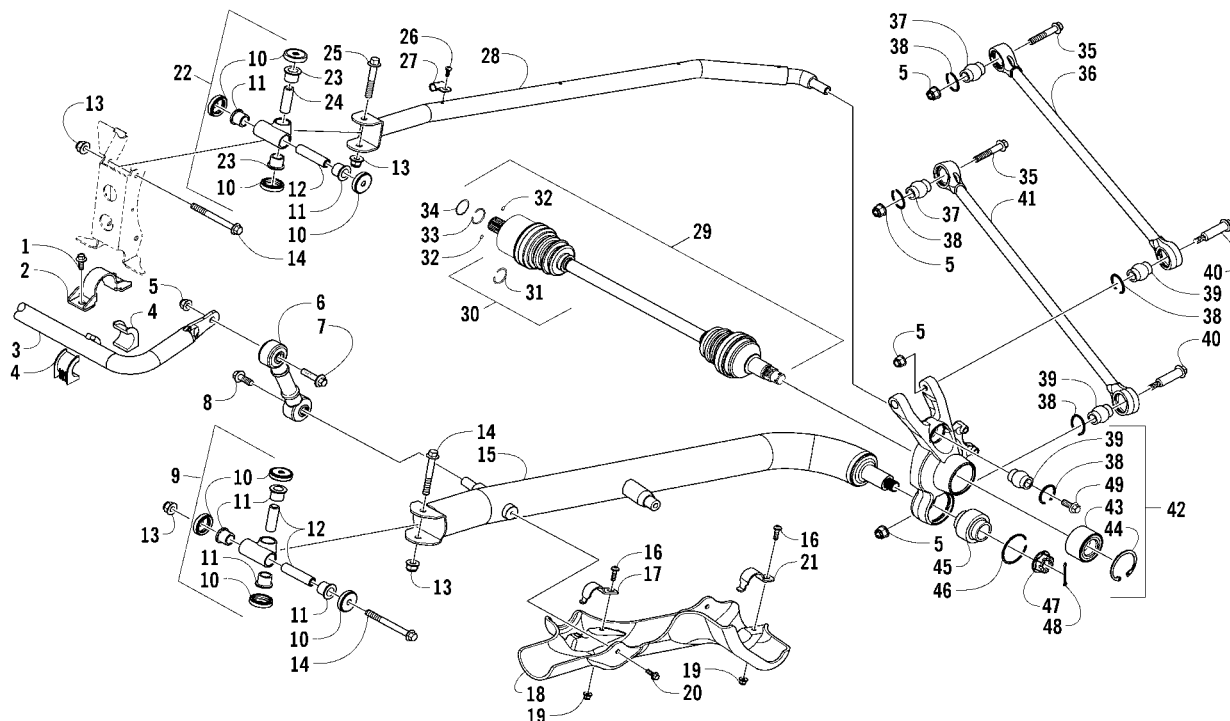


REAR SUSPENSION ASSEMBLY

0747-229

Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	1423-150		4	Screw, Cap	27	0403-271		8	Clip, Routing
2	0504-724		2	Clamp, Retaining	28	0504-789		2	Arm, Trailing - Upper - Red (1PUSE/1POSE)
3	0504-782		1	Bar, Sway		0504-842		2	Arm, Trailing - Upper - Green (1PUSX/1POSX)
4	0404-304		4	Bushing		0504-856		2	Arm, Trailing - Upper - Blue (1PUSE/1POSE)
5	8428-002		14	Nut, Lock	29	1502-914		2	Axle, Drive (inc. 30-34)
6	0404-302		2	Link, Sway Bar	30	1436-410		2	● Repair Kit, Boot (inc. 31)
7	8409-045		2	Screw, Cap	31	1441-988		2	●● Clip, Retaining
8	8409-041	X	2	Screw, Cap	32	1402-885		4	● Pin, Detent
9	0504-748		2	Mount, Lower Trailing Arm - Assembly (inc. 10-12)	33	1402-889		2	● Clip, Retaining
10	1423-159		16	● Seal	34	1402-963		2	● O-Ring
11	2402-077		12	● Bearing	35	8409-060		6	Screw, Cap
12	0404-285		6	● Axle	36	0504-738		4	Link, Suspension - Upper - Black (inc. 37-39)
13	8427-202		8	Nut, Lock	37	0404-249		6	● Bearing
14	8413-200		6	Screw, Cap	38	1423-085		14	● Ring, Retaining
15	0504-791	X	2	Arm, Trailing - Lower - Red (1PUSE/1POSE)	39	0404-248		8	● Bearing
	0504-843		2	Arm, Trailing - Lower - Green (1PUSX/1POSX)	40	1423-087		6	Screw, Shoulder
	0504-858	X	2	Arm, Trailing - Lower - Blue (1PUSE/1POSE)	41	0504-736		2	Link, Suspension - Lower - Black (inc. 37-39)
16	8468-620		4	Screw, Machine	42	0504-840		1	Knuckle - Assembly - Right (inc. 38-39 and 43-46)
17	0504-701		2	Bracket, Retaining - Front		0504-841		1	Knuckle - Assembly - Left (inc. 38-39 and 43-46)
18	2416-952		1	Guard, Trailing Arm - Right - Black	43	1402-027		2	● Bearing
19	2416-953		1	Guard, Trailing Arm - Left - Black	44	0423-423		2	● Ring, Retaining
20	8427-602		4	Nut, Lock	45	0404-243		2	● Bearing
21	0423-538		4	Screw, Self-Tapping	46	1423-086		2	● Ring, Retaining
22	0504-700		2	Bracket, Retaining - Rear	47	0423-394		2	Nut, Castle
23	0504-756		2	Mount, Upper Trailing Arm - Assembly (inc. 10-12 and 23-24)	48	1423-147		2	Pin, Spring
24	2402-076		4	● Bearing	49	8409-025		2	Screw, Cap
25	0404-289		2	● Axle					
26	8413-275		2	Screw, Cap					
	0423-946		8	Screw, Self-Tapping					


18

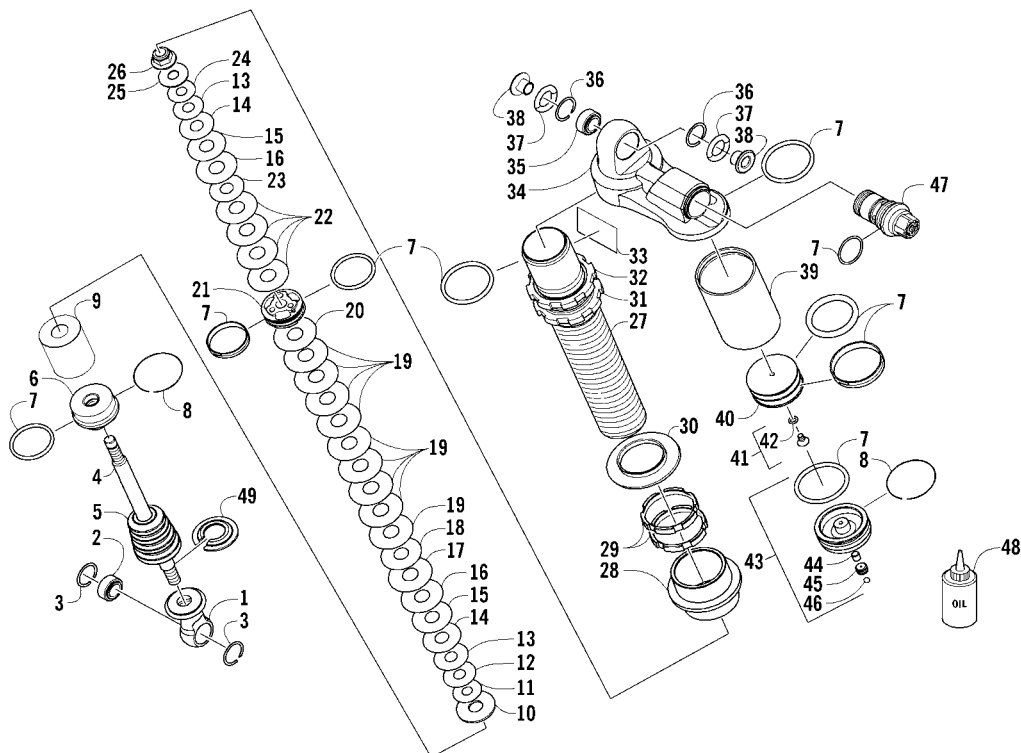

REAR SUSPENSION SHOCK ABSORBER

0747-231


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
-	0404-364		1	Complete Shock Absorber	25	0403-383		1	Washer, Top Out
1	0404-380		1	Eyelet	26	0403-362		1	Nut
2	0404-375		1	Bearing	27	0404-378		1	Body, Shock
3	0404-376		2	Ring, Retaining	28	0403-346		1	Sleeve, Wear
4	0404-381		1	Rod, Shock	29	0404-368		2	Nut, Adjuster
5	0403-361		1	Bumper, Shock	30	0403-352		1	Seat, Spring
6	0403-379		1	End Cap, Shock	31	0403-350		1	Nut, Adjuster
7	0403-393		1	Kit, Seal/Cap Rebuild	32	0403-348		1	Collar, Locking - Adjuster Nut
8	0604-992		2	Ring, Retaining	33	0403-363		1	Decal, Shock
9	0404-382		1	Spacer	34	3604-726		1	End Cap, Shock/Reservoir
10	2604-449		1	Washer, Top Out	35	1604-664		1	Bearing
11	0404-386		1	Valve, 0.900 x 0.015 in.	36	3604-147		2	Ring, Retaining
12	2604-482		1	Valve, 0.950 x 0.015 in.	37	0603-680		2	O-Ring
13	2604-488		2	Valve, 1.100 x 0.015 in.	38	0404-367		2	Spacer
14	2604-688		2	Valve, 1.250 x 0.015 in.	39	0403-369		1	Reservoir
15	2604-494		2	Valve, 1.350 x 0.015 in.	40	0403-377		1	Piston, Internal Floating (inc. 41-42)
16	2604-499		2	Valve, 1.425 x 0.015 in.	41	1604-316		1	● Screw, Machine w/O-Ring (inc. 42)
17	2604-504		1	Valve, 1.600 x 0.015 in.	42	1604-425		1	●● O-Ring
18	0404-383		1	Valve, 1.300 x 0.004 in.	43	3604-517		1	End Cap, Reservoir (inc. 44-46)
19	2604-502		9	Valve, 1.600 x 0.010 in.	44	1604-428		1	● Plug
20	0403-385		1	Valve, 1.600 x 0.006 in.	45	2603-338		1	● Screw, Set
21	0403-394		1	Piston, High-Flow	46	2603-337		1	● Ball
22	2604-496		4	Valve, 1.425 x 0.008 in.	47	0403-380		1	Piston, Concentric - Damping Adjuster
23	2604-684		1	Valve, 1.250 x 0.006 in.	48	5639-530	AR		Oil, Shock - 1 qt
24	0404-385		1	Valve, 1.050 x 0.015 in.	49	0403-345		1	Retainer, Spring

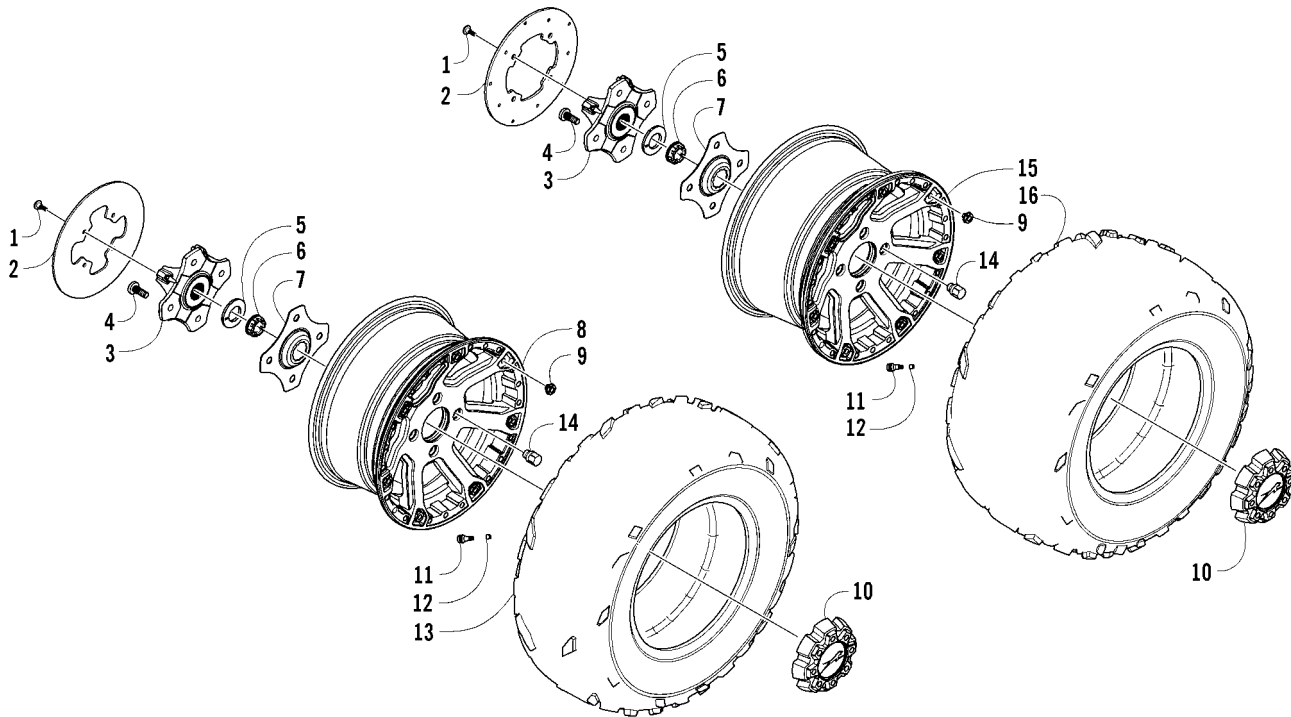

WHEEL AND TIRE ASSEMBLY

0747-153

Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0423-557		16	Screw, Shoulder	9	1423-079		28	● Insert, Cap Screw
2	1436-807		4	Disc, Brake	10	2402-003		4	● Cap, Wheel
3	1502-971		4	Hub, Wheel (inc. 4)	11	0402-064		4	Stem, Valve (inc. 12)
4	0402-974		16	● Stud	12	0402-140		4	● Cap, Valve Stem
5	2402-088		4	Washer	13	1402-937		2	Tire - Front
6	1423-164		4	Nut, Castle	14	0423-618		16	Nut, Lug - Chrome
7	2402-087		4	Plate, Retaining	15	2402-018		2	Wheel - Rear (inc. 9-10)
8	2402-017		2	Wheel - Front (inc. 9-10)	16	1402-938		2	Tire - Rear

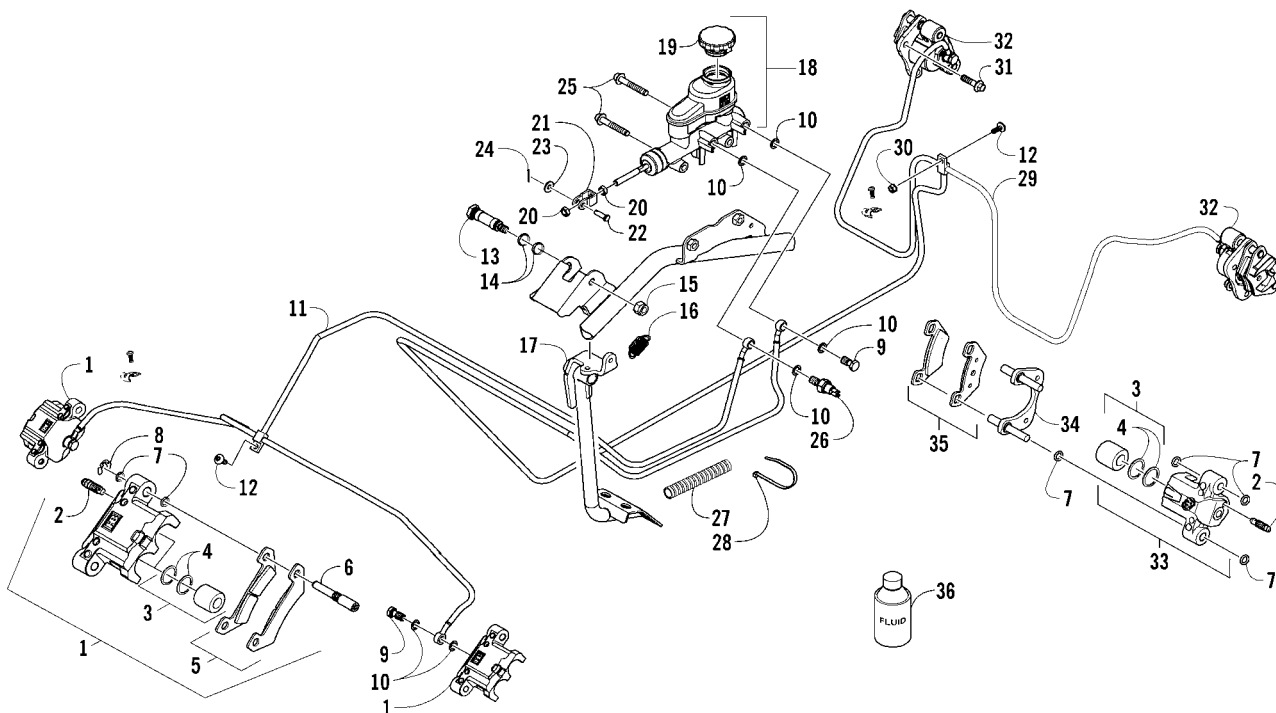


HYDRAULIC BRAKE ASSEMBLY

0747-249

Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	2502-030		1	Caliper, Brake - Front Right (inc. 2-4)	21	1402-520		1	● Clevis
	2502-031		1	Caliper, Brake - Front Left (inc. 2-4)	22	1402-377		1	Pin, Clevis
2	0502-609		4	● Valve, Bleed	23	8050-217		1	Washer
3	0502-606		4	● Piston/Seal Set (inc. 4)	24	0117-868		1	Pin, Cotter
4	0502-607		4	● Seal Set	25	8408-850		2	Screw, Cap
5	2502-034		2	Pad, Brake - Set - Front	26	3313-239		1	Switch, Brake Pressure
6	2402-106		4	Pin, Retaining	27	0619-776	AR		Conduit, Flexible - 5 ft
7	0502-608		4	O-Ring, Guide - Set	28	0123-903	AR		Tie, Cable - 11.5 in.
8	2402-107		4	Ring, Retaining	29	2402-065		1	Hose, Brake - Rear
9	0423-413		5	Bolt, Banjo-Fitting	30	0623-038		1	Nut w/Washer
10	0423-178		12	Washer, Crush	31	8408-831		4	Screw, Cap
11	2402-118		1	Hose, Brake - Front	32	1502-729		1	Caliper, Brake - Rear Right (inc. 2-4, 7, and 33-35)
12	8476-616		2	Screw, Machine		1502-728		1	Caliper, Brake - Rear Left (inc. 2-4, 7, and 33-35)
13	0402-872		1	Axle	33	1436-161		1	● Housing, Caliper - Assembly - Rear Right (inc. 2-4)
14	1602-213		2	O-Ring		1436-160		1	● Housing, Caliper - Assembly - Rear Left (inc. 2-4)
15	8422-002		1	Nut, Lock	34	0502-960		2	● Bracket Assembly
16	1612-178		1	Spring	35	1436-420		2	● Pad, Brake - Set - Rear
17	2502-075	X	1	Lever, Brake	36	5639-848	AR		Fluid, Brake - 12 oz
18	2502-043	X	1	Cylinder, Master Brake - Assembly (inc. 19-21)					
19	2502-044	X	1	● Cap, Reservoir					
20	0402-592		2	● Nut					


22

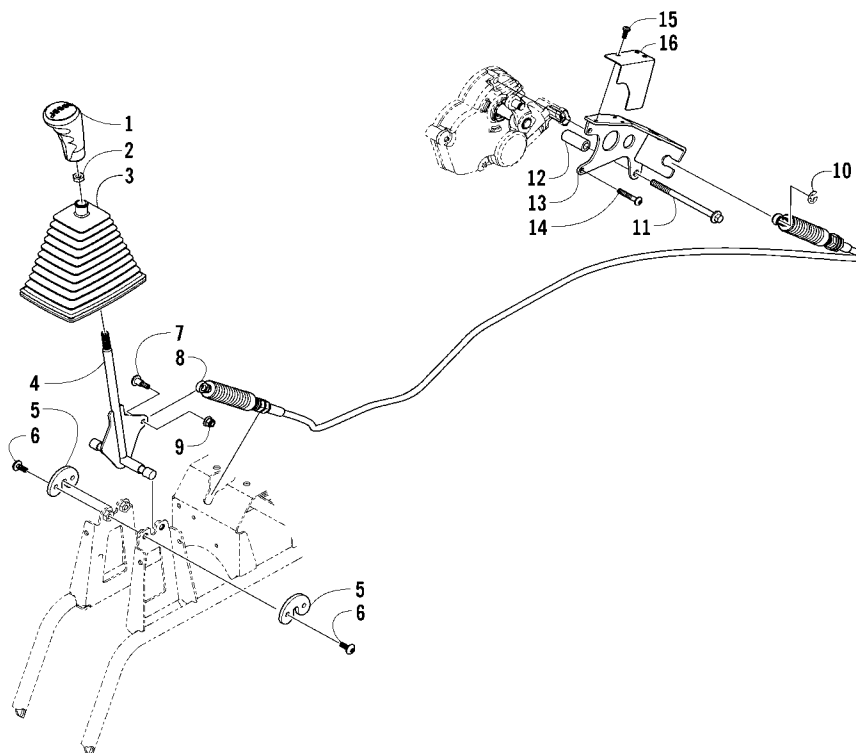

SHIFTER ASSEMBLY

0746-589


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	2402-004		1	Knob, Shift	9	8427-602		1	Nut, Lock
2	0423-885		1	Nut	10	0124-057		1	E-Ring
3	2416-765		1	Boot, Shift Lever	11	1423-135		1	Screw, Cap
4	1502-841		1	Lever, Shift	12	1423-134		1	Spacer
5	1402-275		2	Retainer, Shift Linkage	13	1502-843		1	Bracket, Shift Cable
6	0423-910		4	Screw, Machine	14	8468-635		2	Screw, Machine
7	0423-356		1	Screw, Shoulder	15	0423-946		3	Screw, Self-Tapping
8	0487-091	X	1	Cable, Shift	16	2402-064		1	Shield, Heat

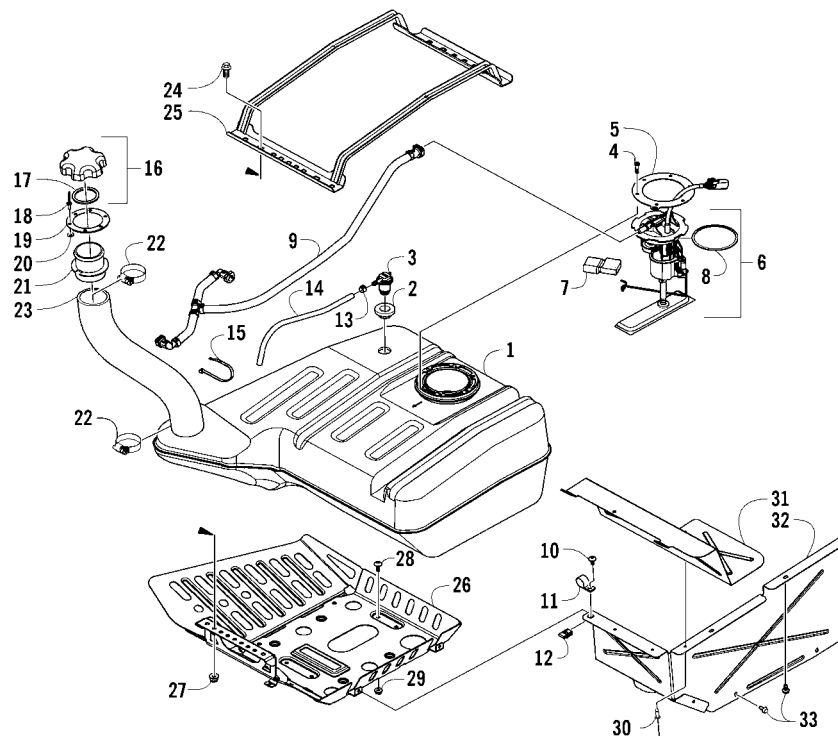

GAS TANK ASSEMBLY

0746-591

Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0570-359		1	Tank, Gas - Assembly (inc. 2-5)	17	0109-733		1	● Gasket, Gas Tank Cap
2	1670-822		1	● Grommet	18	8060-628		6	Rivet
3	1670-787		1	● Valve, Check	19	0670-304		1	Plate, Retaining
4	0423-898		6	● Screw, Self-Tapping	20	0123-802		6	Washer
5	2670-042		1	● Plate, Retaining	21	0470-970		1	Neck, Fill
6	0570-358		1	Pump, Fuel - Assembly (inc. 7)	22	0624-390		2	Clamp, Hose
7	2670-235		1	● Float	23	0410-231		1	Hose, Gasline
8	0470-838		1	Seal	24	8408-825		4	Screw, Cap
9	0570-343		1	Hose, Gasline	25	0570-352		1	Bracket, Hold-Down
10	8476-616		1	Screw, Machine	26	0570-371		1	Bracket, Gas Tank
11	1623-675		2	Clamp, Routing	27	8427-805		4	Nut, Lock
12	0423-577		1	Clip, U-Nut	28	8477-616		4	Screw, Machine
13	0423-688		1	Clamp, Hose	29	8427-602		4	Nut, Lock
14	0410-070	AR		Hose, Gasline - 25 ft	30	8060-602		4	Rivet
15	0123-788	AR		Tie, Cable - 8 in.	31	0412-632		1	Shield, Heat - Upper
	0123-903	AR		Tie, Cable - 11.5 in.	32	0412-633		1	Shield, Heat - Lower
16	2670-048		1	Cap, Gas Tank (inc. 17)	33	0623-966		5	Screw, Self-Tapping

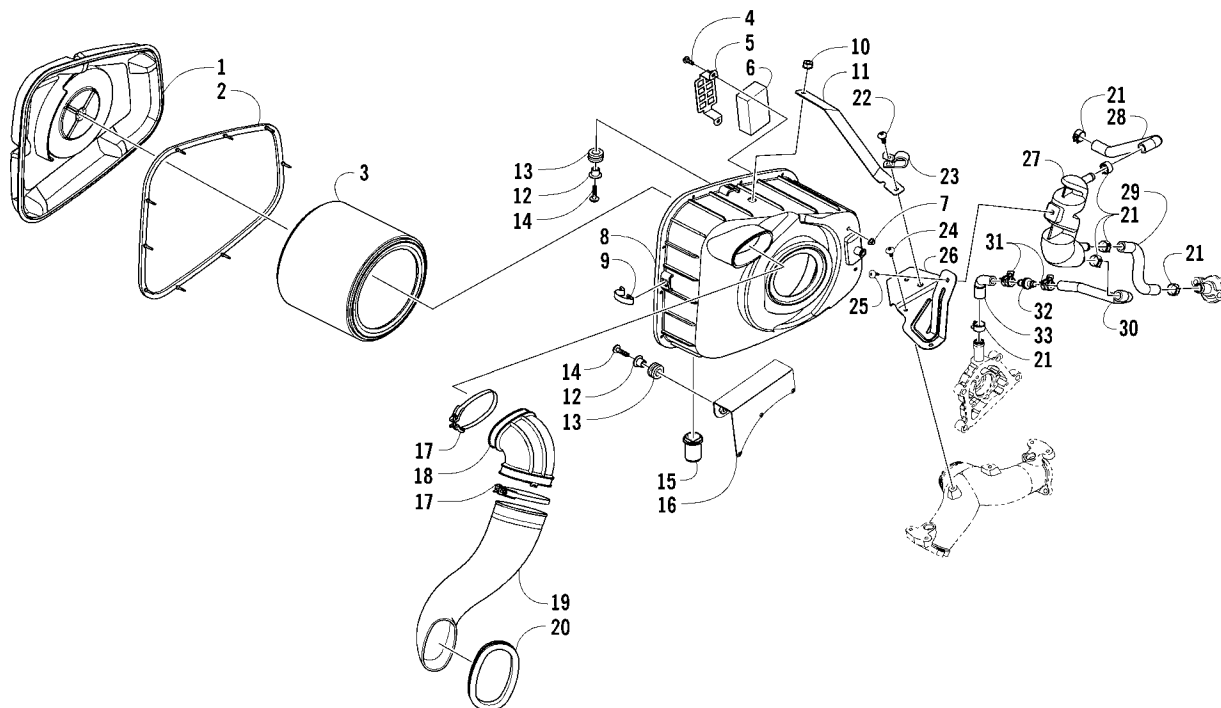


AIR INTAKE ASSEMBLY

0746-593

Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0470-936		1	Cover, Air Intake	18	0470-940		1	Boot, Air-In
2	0470-937		1	Gasket	19	0470-938		1	Duct, Intake
3	0470-942		1	Filter, Air	20	0470-945		1	Grommet
4	8477-516		2	Screw, Machine	21	0423-045		6	Clamp, Hose
5	0470-946		1	Bracket, Retaining - Filter	22	8476-616		1	Screw, Machine
6	0470-891		1	Filter	23	1623-675		1	Clamp, Routing
7	8427-502		2	Nut, Lock	24	8476-612		2	Screw, Machine
8	0570-347		1	Housing, Air Intake	25	0623-784		1	Screw, Self-Tapping
9	0423-455		5	Clip, Spring	26	0470-967		1	Bracket, Mounting - Oil Separator
10	0623-038		1	Nut w/Washer	27	0470-857		1	Separator, Oil
11	0470-977		1	Bracket, Support	28	0410-243		1	Hose, Vent
12	0423-669		3	Spacer	29	0410-258		1	Hose, Vent
13	0423-465		3	Grommet	30	0410-245		1	Hose, Vent
14	8476-625		3	Screw, Machine	31	1623-281		2	Clamp, Hose
15	0470-947		1	Valve, Drain	32	0470-943		1	Valve, Check
16	0470-939		1	Bracket, Mounting - Air Intake	33	0410-244		1	Hose, Vent
17	0423-730		2	Clamp					


26

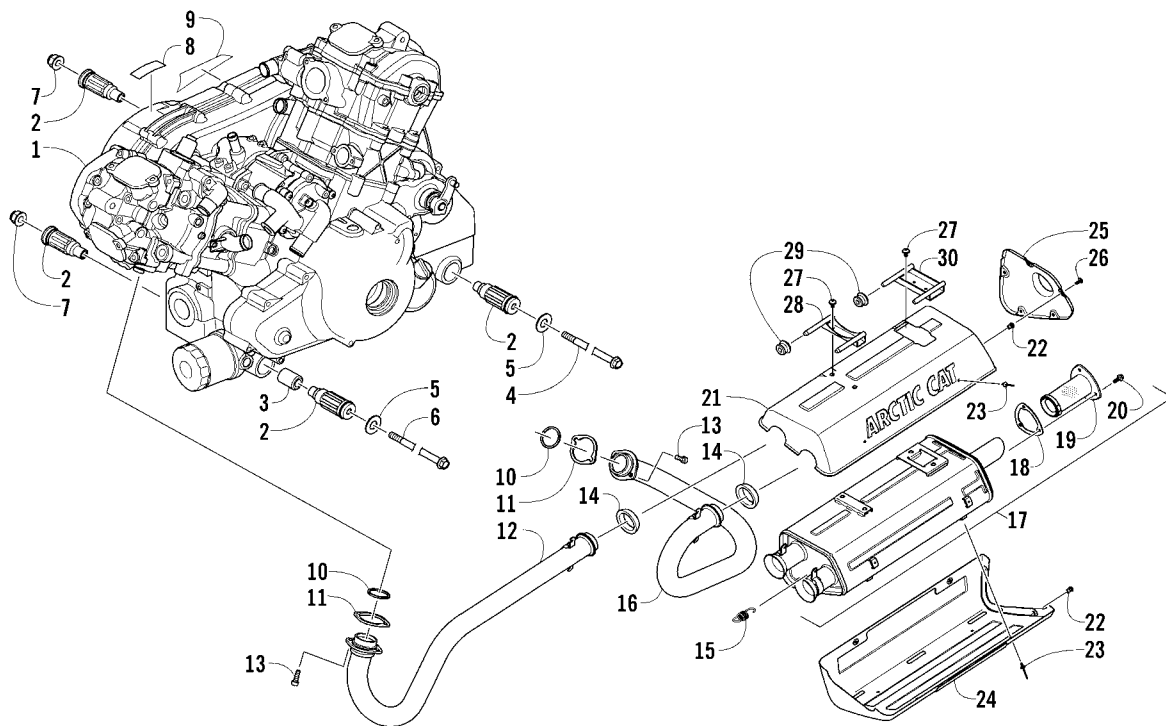

ENGINE AND EXHAUST

0747-300


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0800-155	X	1	Engine, A950O (inc. 2-3)	16	0512-611		1	Pipe, Exhaust - Rear
2	0801-091		4	● Mount, Engine	17	0512-663	X	1	Muffler - Assembly (inc. 18-20)
3	0801-128		1	● Spacer, Engine Mount	18	0412-681		1	● Gasket, Spark Arrester
4	0423-451		1	Screw, Cap	19	0512-585		1	● Arrester, Spark - Assembly
5	0423-426		2	Washer	20	8408-616		3	● Screw, Cap
6	0423-734		1	Screw, Cap	21	0512-590		1	Shield, Heat - Upper (inc. 22)
7	8428-002		2	Nut, Lock	22	1623-797		5	● Insert
8	0411-426		1	Decal, Warning - Clutch Cover	23	8061-283		8	Rivet
9	3411-555		1	Decal, "Rapid Response"	24	0512-591		1	Shield, Heat - Lower (inc. 22)
10	0412-338		2	Gasket, Exhaust Pipe	25	0412-591		1	Shield, Heat - Rear
11	0412-636		2	Spacer, Exhaust Pipe	26	1423-176		5	Screw, Machine
12	0512-610		1	Pipe, Exhaust - Front	27	8476-612		4	Screw, Machine
13	1423-084		4	Screw, Cap	28	0412-553		1	Bracket, Muffler Support
14	0412-375		2	Seal, Exhaust Pipe	29	0412-544		4	Grommet
15	0612-668		4	Spring, Extension	30	0412-641		1	Bracket, Muffler Support

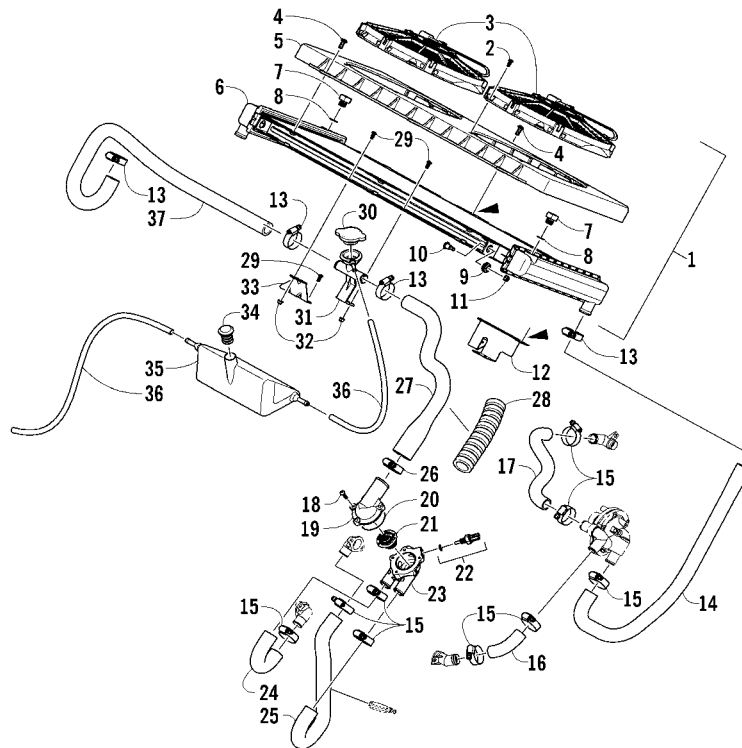

COOLING ASSEMBLY

0747-154


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0413-278		1	Radiator Assembly (inc. 2-9)	20	0830-173		1	O-Ring
2	8470-510		8	● Screw, Machine	21	0808-093		1	Thermostat
3	0413-123		2	● Fan, Cooling	22	0808-124		1	Sensor, Engine Coolant Temperature
4	8017-579		6	● Screw, Machine	23	0808-189		1	Housing, Thermostat
5	0413-292		1	● Shroud, Fan	24	0410-191		1	Hose, Coolant - Front Cylinder Head/Thermostat
6	0413-293		1	● Radiator	25	0410-253		1	Hose, Coolant - Rear Cylinder Head/Thermostat
7	0413-195		2	● Plug, Drain	26	1623-093		1	Clamp, Hose
8	1602-213		2	● O-Ring	27	0410-239		1	Hose, Coolant - Thermostat/Filler Neck
9	0423-030		4	● Grommet	28	1619-038		1	Conduit, Flexible
10	0423-484		4	Screw, Shoulder	29	8475-512		6	Screw, Machine
11	0623-038		4	Nut w/Washer	30	0413-255		1	Cap, Radiator
12	2416-966		1	Bracket, Mounting - Coil	31	0413-280		1	Neck, Filler
13	0423-490		4	Clamp, Hose	32	8427-502		6	Nut, Lock
14	0410-238		1	Hose, Coolant - Radiator/Water Pump	33	2416-976		1	Bracket, Mounting - Overflow Bottle
15	0423-496		9	Clamp, Hose	34	0413-087		1	Plug
16	0410-115		1	Hose, Coolant - Water Pump/Front Cylinder	35	0413-300		1	Bottle, Overflow
17	0410-116		1	Hose, Coolant - Water Pump/Rear Cylinder	36	0610-011		AR	Hose - 25 ft
18	8470-520		4	Screw, Machine	37	0410-237		1	Hose, Coolant - Filler Neck/Radiator
19	0808-092		1	Cover, Thermostat					

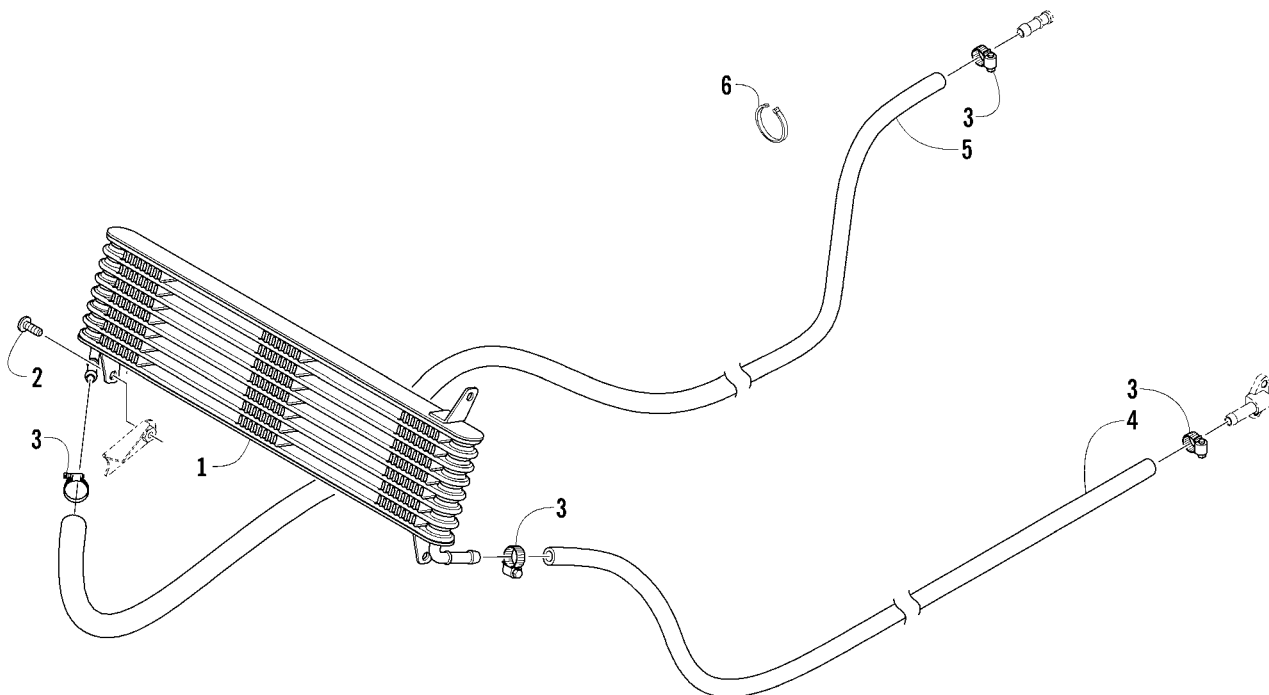

OIL COOLER ASSEMBLY

0746-950


Ref	Part No.	New Qty	Description	Ref	Part No.	New Qty	Description
1	0413-308	1	Cooler, Oil	4	0410-269	1	Hose, Oil Cooler - In
2	8476-616	3	Screw, Machine	5	0410-270	1	Hose, Oil Cooler - Out
3	0423-632	4	Clamp, Hose	6	0123-903	AR	Tie, Cable - 11.5 in.

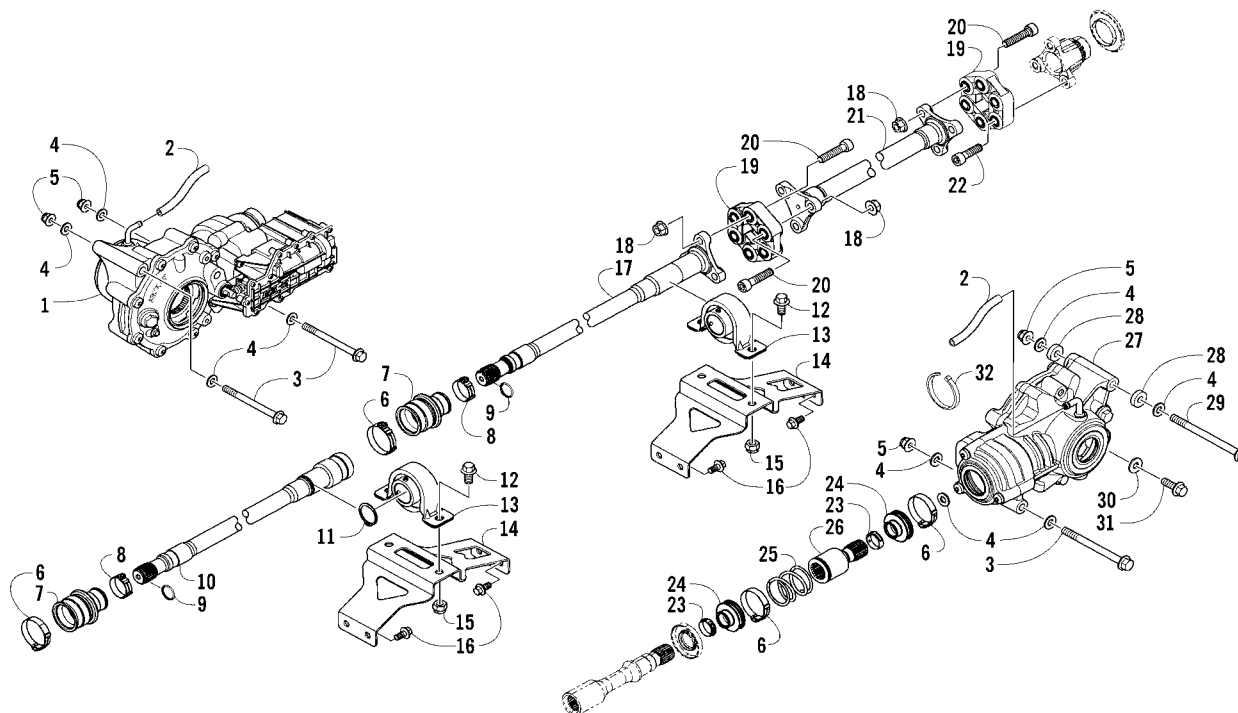

DRIVE TRAIN ASSEMBLY

0747-787


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	2502-082	X	1	Gearcase, Front	18	8424-002		9	Nut
2	0410-070		AR	Hose, Gasline - 25 ft	19	2402-014		2	Isolator, Driveshaft
3	0423-404		3	Screw, Cap	20	1423-094		9	Screw, Cap
4	0423-426		9	Washer	21	2402-056		1	Driveshaft, Center Rear
5	8428-002		4	Nut, Lock	22	1423-093		3	Screw, Cap
6	0423-393		4	Clamp	23	1423-061		2	Clamp
7	0402-985		2	Boot, Shaft	24	1402-951		2	Boot
8	0423-411		2	Clamp	25	1402-026		1	Spring
9	1423-090		2	O-Ring	26	2402-134		1	Driveshaft, Rear
10	2402-090		1	Driveshaft, Front	27	2502-083	X	1	Gearcase, Rear
11	1423-175		1	Ring, Retaining	28	1423-062		2	Spacer
12	8408-020		4	Screw, Cap	29	0423-576		1	Screw, Cap
13	1402-968		2	Bearing Assembly	30	8050-252		1	Washer
14	2502-019		2	Bracket, Mounting - Bearing Assembly	31	8408-826		1	Screw, Cap
15	8422-002		4	Nut, Lock	32	0123-788		AR	Tie, Cable - 8 in.
16	8408-816		8	Screw, Cap		0123-903		AR	Tie, Cable - 11.5 in.
17	2402-091		1	Driveshaft, Center Front					

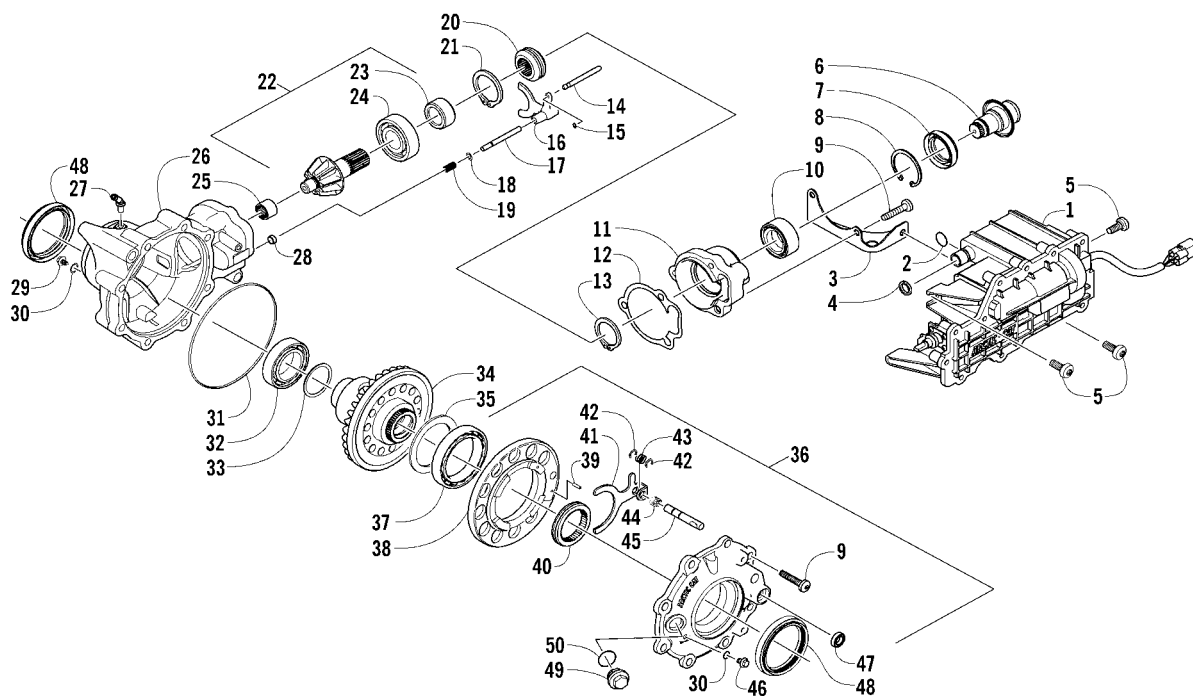

FRONT DRIVE GEARCASE ASSEMBLY

0746-055


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
-	2502-082	X	1	Complete Front Drive Gearcase Assembly	29	1402-210		1	Plug, Magnetic (inc. one No. 30)
1	1502-909		1	Actuator (inc. 2)	30	0423-153		2	● O-Ring
2	1402-981		1	● O-Ring	31	0423-149		1	O-Ring
3	1502-237		1	Bracket, Actuator	32	0402-393		1	Bearing
4	0423-892		1	O-Ring	33	0402-405		AR	Shim, 41 x 49 x 1.3 mm
5	0423-396		3	Screw, Self-Tapping		0402-406		AR	Shim, 41 x 49 x 1.4 mm
6	1502-085		1	Shaft, Input		0402-407		AR	Shim, 41 x 49 x 1.5 mm
7	1402-011		1	Seal		0402-408		AR	Shim, 41 x 49 x 1.6 mm
8	0423-423		1	Ring, Retaining		0402-409		AR	Shim, 41 x 49 x 1.7 mm
9	0423-118		11	Screw, Self-Tapping	34	1502-919		1	Gear, Ring - 34T
10	1402-043		1	Bearing	35	1402-074		AR	Shim, 61 x 69 x 1.3 mm
11	0502-528		1	Housing, Pinion		1402-075		AR	Shim, 61 x 69 x 1.4 mm
12	0402-947		1	Gasket, Flange		1402-076		AR	Shim, 61 x 69 x 1.5 mm
13	0423-417		1	Ring, Retaining		1402-077		AR	Shim, 61 x 69 x 1.6 mm
14	0402-997		1	Shaft, Selector		1402-078		AR	Shim, 61 x 69 x 1.7 mm
15	0423-402		1	Ring, Retaining	36	1502-858		1	Cover, Gearcase (inc. one No. 30, 37-47, and one No. 48)
16	0402-998		1	Fork, Selector	37	1402-053		1	● Bearing
17	0402-417		1	Shaft, Shuttle	38	0502-413		1	● Flange, Bearing
18	0423-147		1	O-Ring	39	1402-079		1	● Pin, Parallel
19	0402-999		1	Spring, Return	40	1402-042		1	● Collar, Sliding
20	0402-413		1	Coupler, Drive	41	1402-054		1	● Fork
21	1423-067		1	Ring, Retaining	42	1402-058		2	● Ring, Retaining
22	1502-851		1	Gear, Pinion - Assembly - 11T (inc. 23-24)	43	1402-057		1	● Spring
23	1402-977		1	● Collar, Retaining	44	1402-063		1	● Spring
24	0402-327		1	● Bearing	45	1402-656		1	● Shaft, Lock
25	0402-328		1	Bearing	46	1402-211		1	● Plug, Oil Level (inc. one No. 30)
26	1502-856		1	Housing, Gearcase	47	1402-056		1	● Seal
27	2402-162	X	1	Fitting, Elbow	48	3306-025		2	● Seal
28	0402-411		1	Pin, Dowel	49	0402-333		1	Plug, Fill (inc. 50)
					50	0423-154		1	● O-Ring

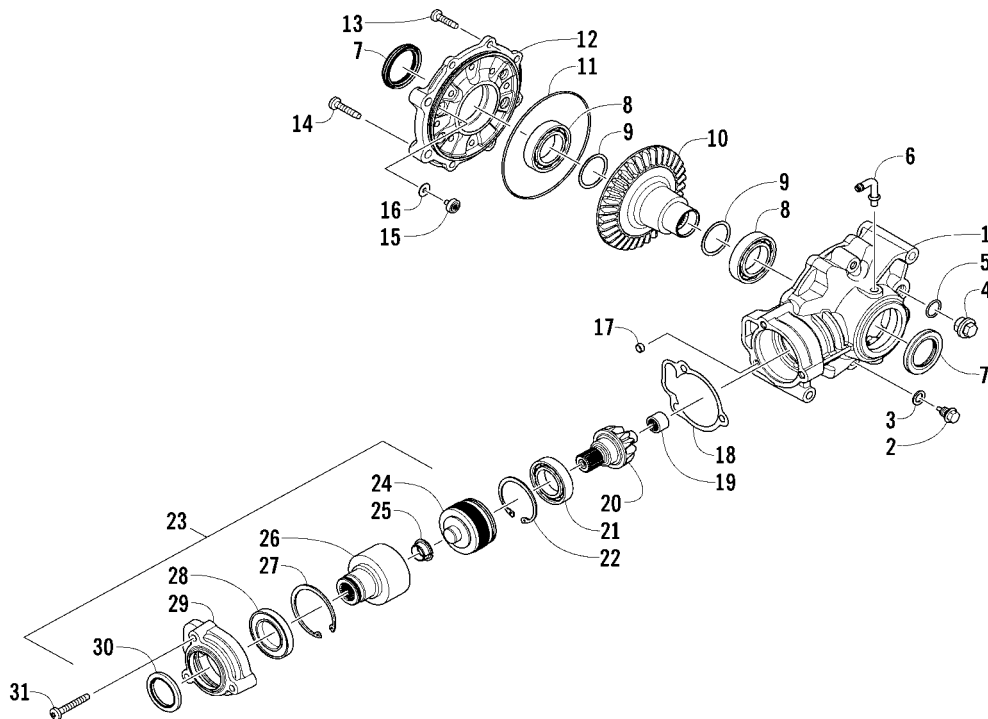

REAR DRIVE GEARCASE ASSEMBLY

0746-576


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
-	2502-083	X	1	Complete Rear Drive Gearcase Assembly	16	0402-429	AR		Shim, 6.3 x 18 x 1.3 mm
1	1502-921		1	Housing, Gearcase		0402-430	AR		Shim, 6.3 x 18 x 1.4 mm
2	2402-043		1	Plug, Drain - Magnetic		0402-431	AR		Shim, 6.3 x 18 x 1.5 mm
3	2402-044		1	Washer		0402-432	AR		Shim, 6.3 x 18 x 1.6 mm
4	0402-333		1	Plug, Fill (inc. 5)		0402-433	AR		Shim, 6.3 x 18 x 1.7 mm
5	0423-154		1	● O-Ring	17	0402-411	1		Pin, Dowel
6	2402-162	X	1	Fitting, Elbow	18	0402-947	1		Gasket
7	2402-140	X	2	Seal	19	0402-328	1		Bearing
8	2402-042		2	Bearing	20	2402-037	1		Gear, Pinion - Assembly - 11T
9	0402-405	AR		Shim, 41 x 49 x 1.3 mm	21	0402-324	1		Bearing
	0402-406	AR		Shim, 41 x 49 x 1.4 mm	22	1423-067	1		Ring, Retaining
	0402-407	AR		Shim, 41 x 49 x 1.5 mm	23	1502-998	1		Shaft, Input (inc. 24-30)
	0402-408	AR		Shim, 41 x 49 x 1.6 mm	24	1502-997	1		● Cartridge, Clutch - Assembly
	0402-409	AR		Shim, 41 x 49 x 1.7 mm	25	1402-966	1		● Bearing, Flange
10	2402-035		1	Gear, Ring - 34T	26	1402-965	1		● Basket, Clutch
11	0423-149		1	O-Ring	27	0423-798	1		● Ring, Retaining
12	1502-922		1	Cover, Gearcase	28	1402-677	1		● Bearing
13	0423-118		6	Screw, Self-Tapping	29	1502-838	1		● Housing, Input
14	0423-115		2	Screw, Self-Tapping	30	0402-089	1		● Seal
15	0402-326		1	Button, Thrust	31	1423-065	3		Screw, Self-Tapping

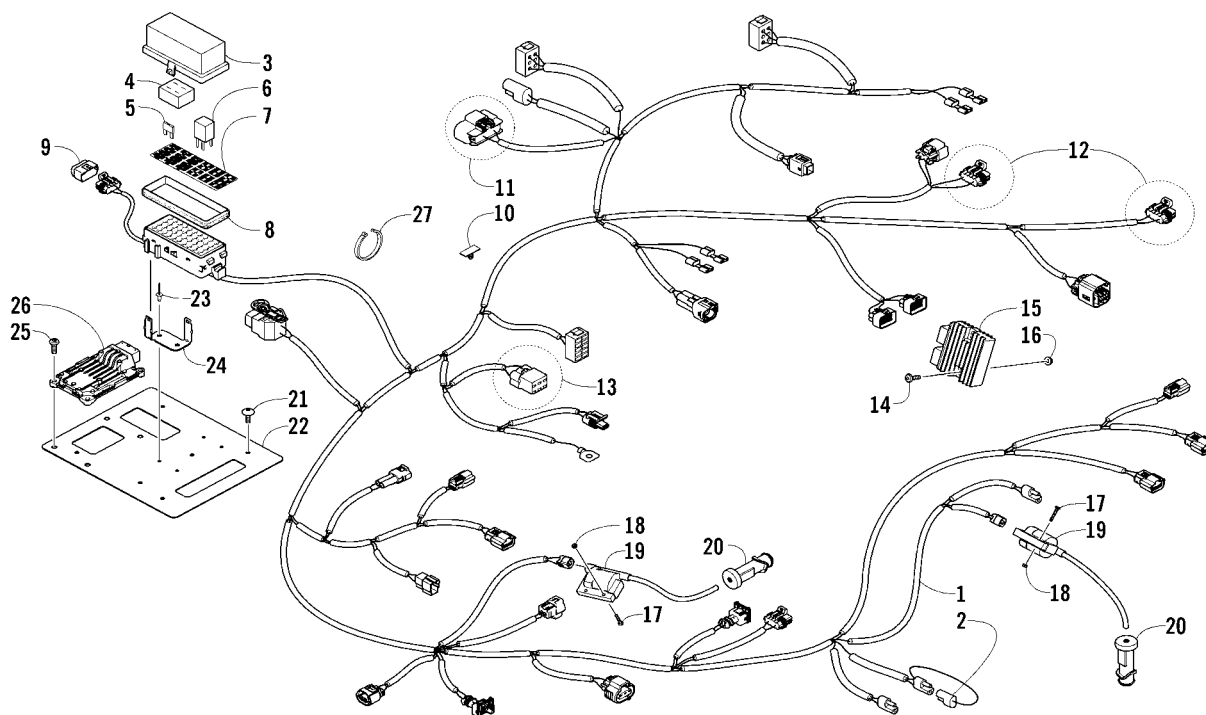

WIRING HARNESS ASSEMBLY

0746-951


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0486-458		1	Harness, Main (inc. 2-10)	14	8476-625		2	Screw, Machine
2	0486-164		1	● Tether, Accessory Connector	15	0824-072		1	Regulator, Voltage
3	0430-085		1	● Cover, Fuse Block	16	0623-038		2	Nut w/Washer
4	0430-037		1	● Holder, Fuse	17	8468-425		4	Screw, Machine
5	0430-032		7	● Fuse - 10 Amp	18	0423-493		4	Nut w/Washer
	0430-031		4	● Fuse - 15 Amp	19	0824-071		2	Coil, Ignition - Assembly (inc. 20)
	0430-030		4	● Fuse - 30 Amp	20	0824-049		2	● Cap, Spark Plug
6	0430-045		6	● Relay (4-Pin) - 20 Amp	21	0623-784		4	Screw, Self-Tapping
7	2411-883		1	● Decal, Fuse Block	22	4506-731		1	Tray, Electrical
8	0430-086		1	● Seal	23	8060-686		2	Rivet
9	0430-103		1	● Cover, Diagnostics Connector	24	0745-388		1	Bracket, Mounting - PDM
10	0430-102	AR		● Clip, Routing	25	8476-620		4	Screw, Machine
11	1436-415		1	Repair Kit, Connector - LCD Gauge	26	0530-099	X	1	ECM
12	1436-487	AR		Repair Kit, Connector - Headlight	27	0123-788		AR	Tie, Cable - 8 in.
13	1436-416		1	Repair Kit, Connector - Tilt Sensor		0123-903		AR	Tie, Cable - 11.5 in.

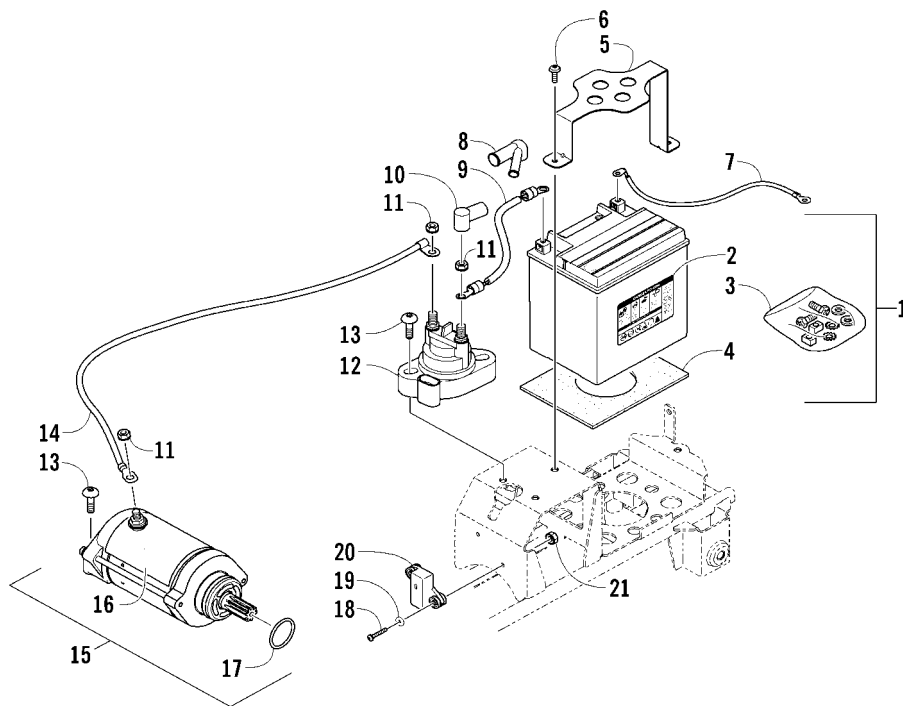

BATTERY AND STARTER MOTOR ASSEMBLY

0748-049


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0645-398		1	Battery (inc. 2-3)	12	0445-058		1	Solenoid
2	0645-430		1	● Decal, Warning	13	8476-625		4	Screw, Machine
3	0445-082		1	● Kit, Hardware	14	0445-101		1	Cable, Solenoid/Starter
4	0417-022		1	Pad, Battery	15	0825-027		1	Motor, Starter - Assembly (inc. 16-17)
5	4506-730		1	Hold-Down, Battery	16	0412-677		1	● Foil, Protective
6	8476-616		2	Screw, Machine	17	0830-228	X	1	● O-Ring
7	0445-106		1	Cable, Battery/Ground	18	8468-425		2	Screw, Machine
8	0445-067		1	Boot, Terminal - Dual	19	0123-802		2	Washer
9	0445-102		1	Cable, Battery/Solenoid	20	0409-064		1	Sensor, Tilt
10	0645-019		1	Boot, Terminal	21	0423-493		2	Nut w/Washer
11	0623-038		3	Nut w/Washer					

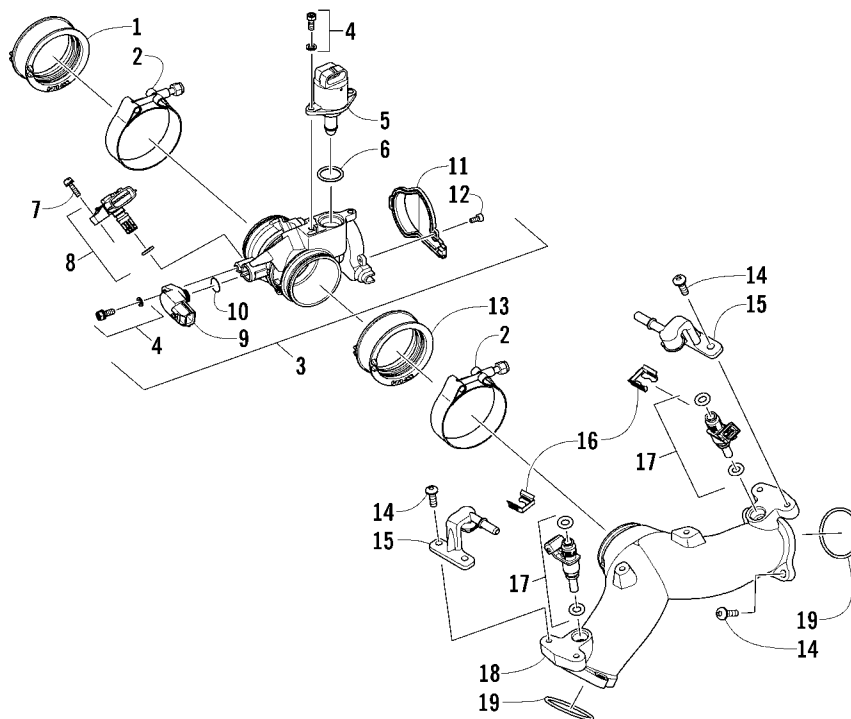

THROTTLE BODY ASSEMBLY

0746-580


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0470-932	1	1	Boot, Intake	11	0470-961	1	1	Cover
2	1423-041	2	2	Clamp	12	1423-095	1	1	Screw, Cap
3	0570-390	1	1	Throttle Body - Assembly (inc. 4-10)	13	0470-933	1	1	Boot, Intake
4	1423-081	3	3	● Screw, Cap	14	8468-620	8	8	Screw, Machine
5	0824-054	1	1	● Valve, Bypass - Idle Air	15	0470-885	2	2	Rail, Fuel
6	0832-088	1	1	● Seal	16	0470-889	2	2	Clip, Retaining
7	1423-080	1	1	● Screw, Machine	17	0470-910	2	2	Injector, Fuel
8	0824-052	1	1	● Sensor, MAP	18	0570-380	1	1	Manifold, Intake
9	0824-067	1	1	● Sensor, Throttle Position	19	0830-090	2	2	O-Ring
10	3306-150	1	1	● O-Ring					

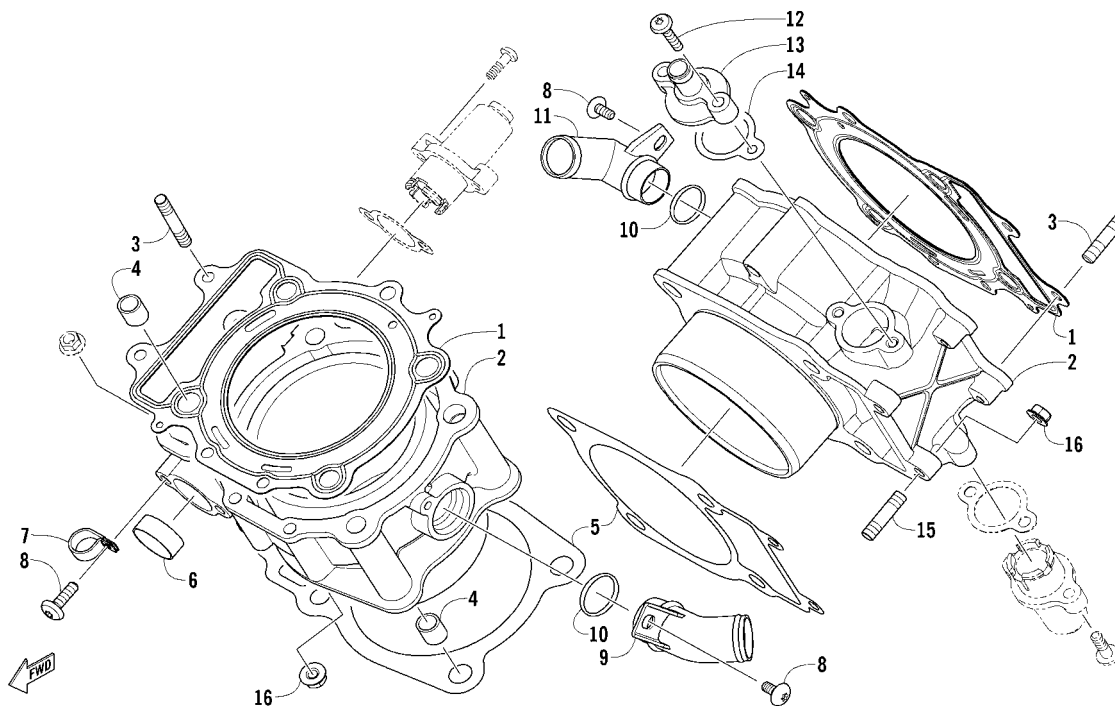

CYLINDER ASSEMBLY

0746-581

Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0830-209		2	Gasket, Head	9	0804-046		1	Union, Coolant Hose
2	0804-061		2	Cylinder	10	0830-007		2	O-Ring
3	0827-002		4	Bolt, Stud	11	0804-030		1	Union, Coolant Hose
4	0829-002		8	Pin, Dowel	12	8468-620		2	Screw, Machine
5	0830-193		2	Gasket, Base	13	0801-174		1	Cover, Breather
6	0804-037		1	Plug, Cylinder	14	0830-134		1	Gasket
7	1623-675		1	Clamp, Routing	15	0827-018		4	Bolt, Stud
8	8468-612		3	Screw, Machine	16	8424-604		8	Nut

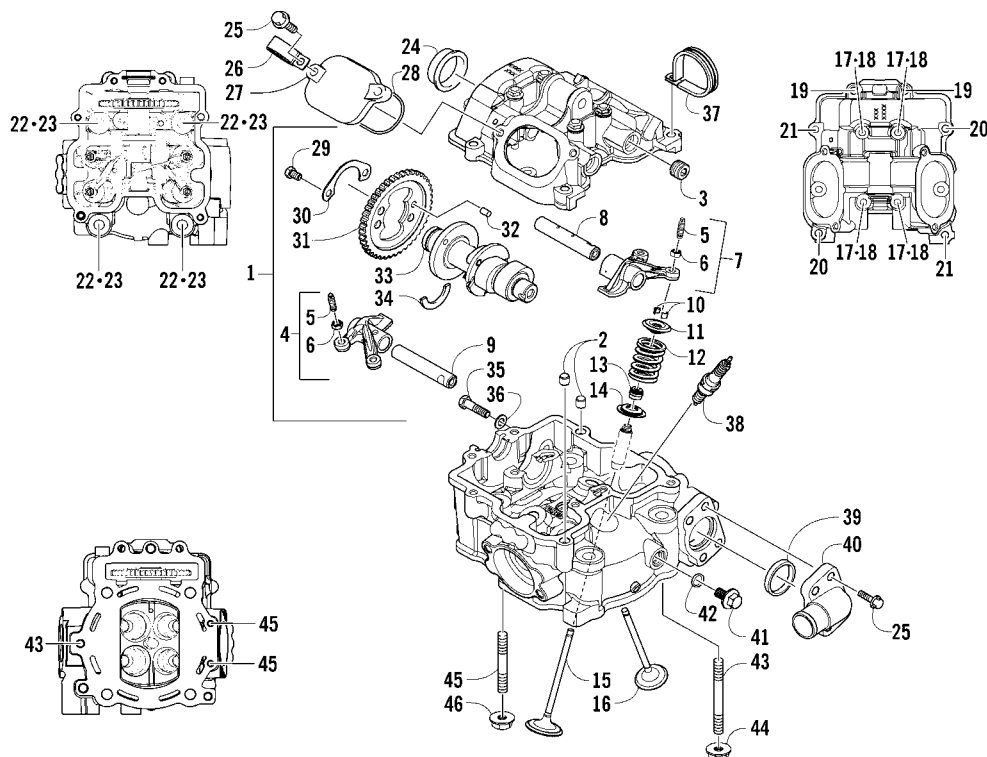


CYLINDER HEAD AND CAMSHAFT/VALVE ASSEMBLY

0746-954

Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0808-227	X	2	Head, Cylinder - Assembly (inc. 2-17)	24	0808-077		2	Plug, Cylinder Head
2	0829-062		4	● Pin, Dowel	25	0826-007		12	Screw, Cap
3	0831-092		4	● Plug, Shaft	26	1623-675		1	Clamp, Routing
4	0809-319	X	2	● Arm, Valve Rocker - Exhaust (inc. two No. 5-6)	27	0808-003		4	Cap, Inspection
5	0809-240		8	●● Screw, Adjuster	28	0830-004		4	O-Ring
6	0827-059		8	●● Nut	29	0826-034		4	Screw, Cap
7	0809-318	X	2	● Arm, Valve Rocker - Intake (inc. two No. 5-6)	30	0828-004		2	Plate, Retainer
8	0809-241		2	● Shaft, Rocker Arm - Intake	31	0809-212		2	Sprocket
9	0809-242		2	● Shaft, Rocker Arm - Exhaust	32	0829-049		2	Pin, Dowel
10	0809-233		16	● Cotter, Valve	33	0809-313		1	Camshaft, Front Cylinder
11	0809-232		8	● Retainer, Spring		0809-314		1	Camshaft, Rear Cylinder
12	0809-231		8	● Spring, Valve	34	0809-003		2	C-Ring
13	0830-186		8	● Seal, Oil	35	8400-812		2	Screw, Cap
14	0809-230		8	● Seat, Spring - Valve	36	0830-025		2	Washer, Crush
15	0809-228		4	● Valve, Intake	37	0623-761		1	Clamp, Routing
16	0809-229		4	● Valve, Exhaust	38	0217-799		2	Spark Plug - CPR8E
17	0826-149		8	● Screw, Cap	39	0830-120		2	Seal
18	0830-155		8	Gasket	40	0808-210		2	Cover, Thermostat
19	0826-002		5	Screw, Cap	41	0826-157		2	Screw, Cap
20	0826-005		4	Screw, Cap	42	0830-213		2	O-Ring
21	0826-006		3	Screw, Cap	43	0827-069		2	Bolt, Stud
22	0808-090		8	Screw, Cap	44	8424-804		2	Nut
23	0830-147		8	Washer	45	0827-068		4	Bolt, Stud
					46	8424-604		4	Nut



Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0810-001		2	Chain, Cam	6	0830-134		2	Gasket
2	0810-069		2	Guide, Chain	7	8468-625		4	Screw, Machine
3	0810-070		2	Tensioner, Chain	8	8400-610		2	Screw, Cap
4	0826-106		2	Pivot, Tensioner	9	0828-129		2	Washer
5	0810-004		2	Adjuster, Tensioner - Assembly					

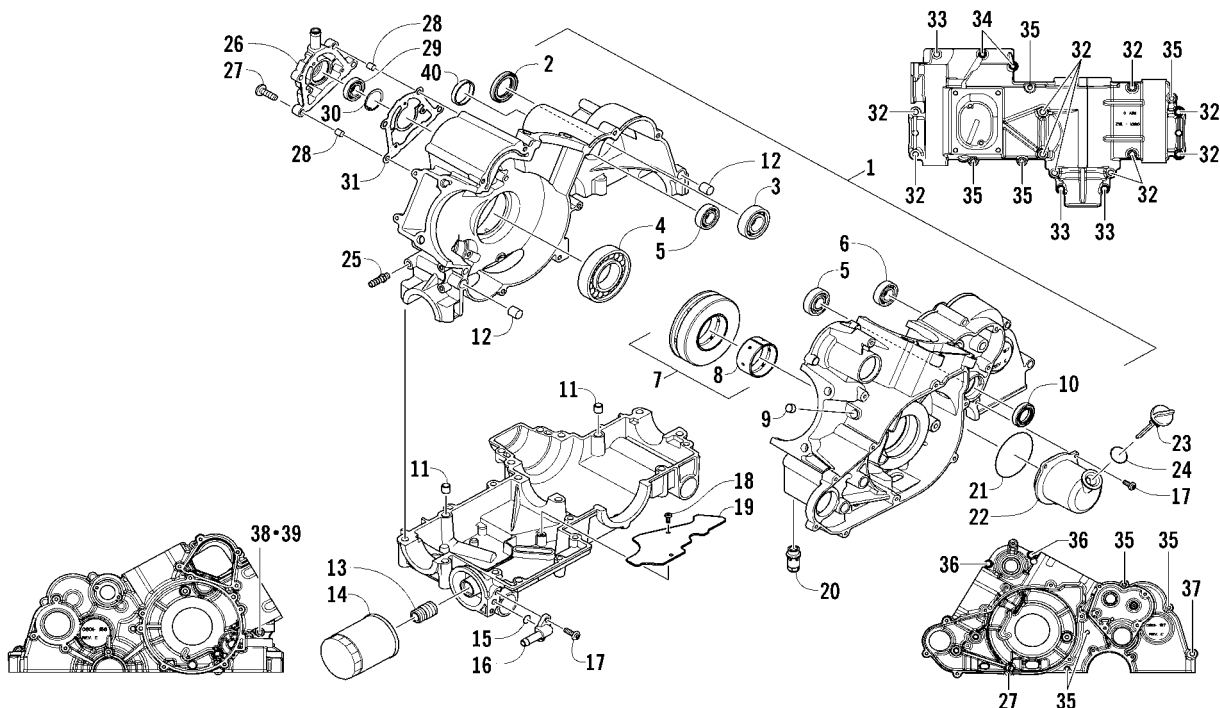


CRANKCASE ASSEMBLY

0747-558

Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0801-211		1	Crankcase - Assembly (inc. 2-13)	21	0830-162		1	O-Ring, Oil Filler Cover
2	0830-035		1	● Seal, Driveshaft	22	0812-081		1	Cover, Oil Filler
3	0832-048		1	● Bearing	23	0801-073		1	Stick, Oil Level
4	0832-042		1	● Bearing	24	0830-010		1	O-Ring
5	0832-050		2	● Bearing	25	0812-078		1	Fitting, Oil - Threaded
6	0832-049		1	● Bearing	26	0801-193		1	Cover, Breather
7	0832-055		1	● Bearing - Assembly (inc. 8)	27	8468-625		5	Screw, Machine
8	0832-057		1	● Bearing	28	0829-062		2	Pin, Dowel
9	0801-002		1	● Plug, Engine Case	29	0832-084		1	Bearing
10	0822-052		1	● Seal, Countershaft - Right	30	0831-086		1	Circlip
11	0829-003		2	● Pin, Dowel	31	0830-191		1	Gasket, Breather
12	0829-002		2	● Pin, Dowel	32	8412-860		10	Screw, Cap
13	0812-066		1	● Union, Oil Filter	33	8412-830		3	Screw, Cap
14	0812-034		1	Filter, Oil	34	8468-640		2	Screw, Machine
15	0830-172		1	O-Ring	35	8468-660		8	Screw, Machine
16	0812-060		1	Fitting, Oil	36	8468-630		2	Screw, Machine
17	8468-616		5	Screw, Machine	37	8412-875		1	Screw, Cap
18	0623-914		2	Screw, Self-Tapping	38	8412-850		1	Screw, Cap
19	0801-218	X	1	Plate, Oil Sump	39	0830-008		1	Gasket
20	0812-052		1	Valve, Oil-Relief - Assembly	40	0818-103		1	Plug




Ref	Part No.	New Qty	Description	Ref	Part No.	New Qty	Description
1	0805-362	2	Piston Set - Assembly (inc. 2-4)	4	0805-198	2	● Pin, Piston
2	0805-164	2	● Ring, Piston - Set	5	0805-339	1	Crankshaft - Assembly
3	0805-199	4	● Circlip, Piston Pin	6	0805-273	1	Washer, Thrust

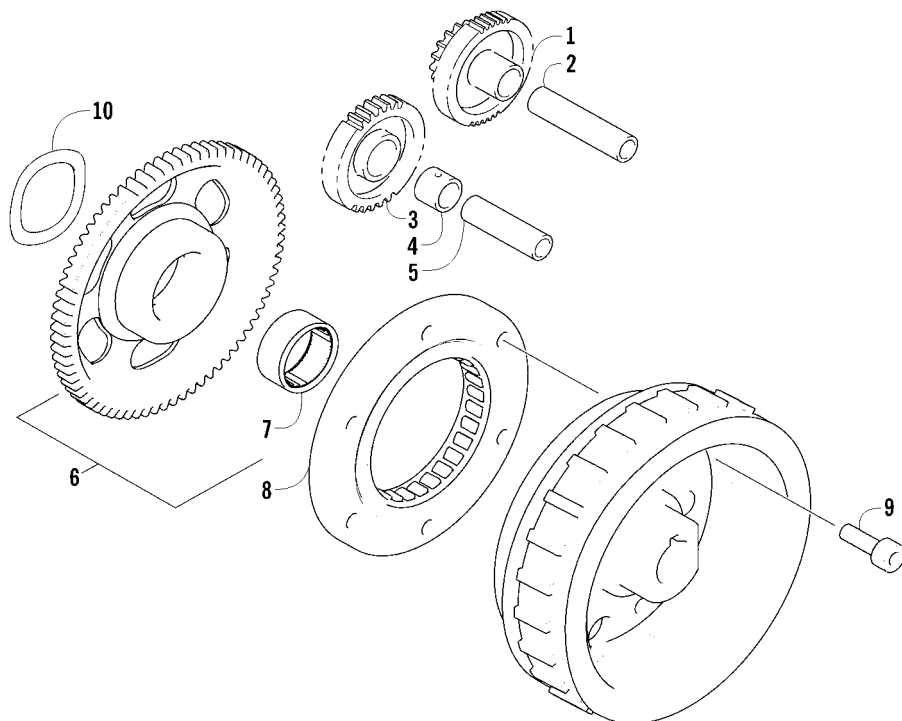

STARTER CLUTCH ASSEMBLY

0745-071


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0815-032	X	1	Gear, Starter Idler - No. 1	6	0815-004		1	Gear, Starter Clutch (inc. 7)
2	0829-031		1	Shaft, Starter Gear	7	0832-079		1	● Bearing
3	0815-002		1	Gear, Starter Idler - No. 2	8	0802-035		1	Clutch, Starter
4	0815-003		1	Spacer, Starter Idler Gear No. 2	9	0826-069		6	Screw, Cap
5	0829-032		1	Shaft, Starter Gear	10	0828-113		1	Washer, Wave

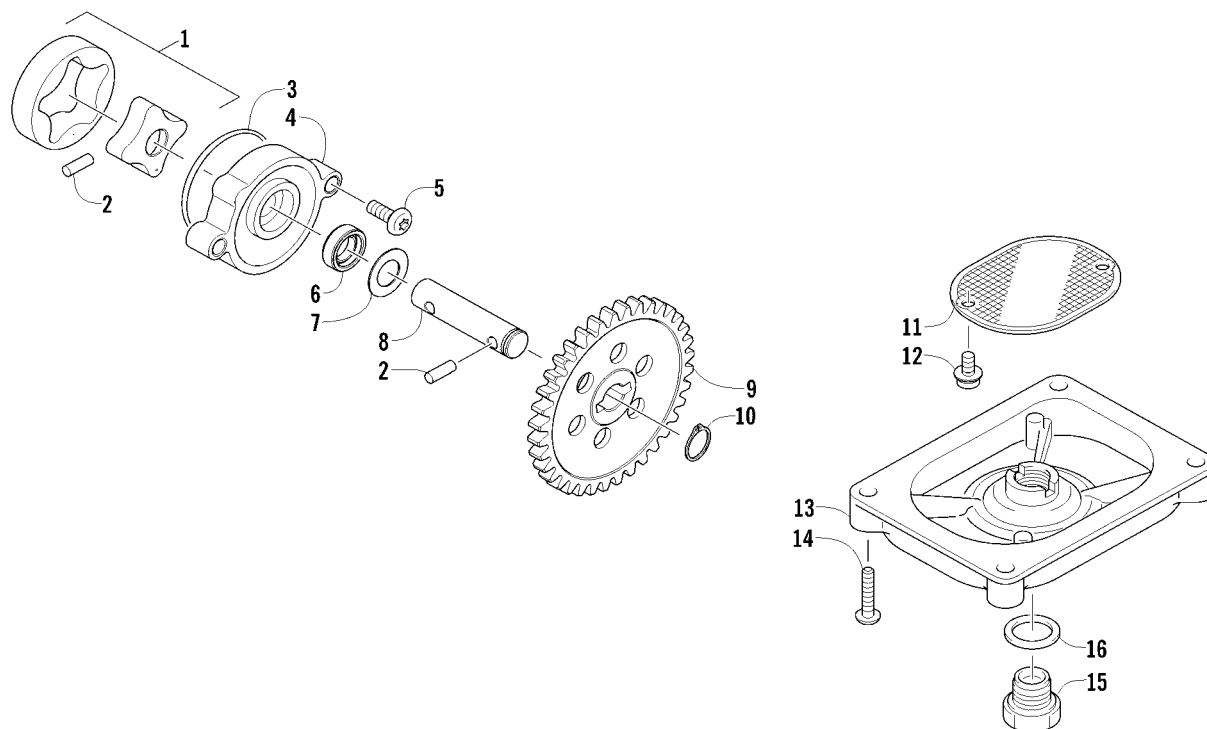

OIL PUMP ASSEMBLY

0745-052


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0812-041		1	Gerotor - Set	9	0812-045		1	Gear, Driven
2	0829-009		2	Pin, Dowel	10	0831-002		1	Ring, Retaining
3	0812-048		1	O-Ring	11	0812-057		1	Strainer, Oil
4	0812-040		1	Housing, Oil Pump	12	0826-040		2	Screw, Machine
5	8468-625		2	Screw, Machine	13	0812-053		1	Cap, Oil Strainer
6	0812-047		1	Seal, Oil Pump	14	8468-625		4	Screw, Machine
7	0828-007		1	Shim	15	0812-006		1	Plug, Drain
8	0812-046		1	Shaft, Oil Pump	16	0830-017		1	Gasket, Drain Plug

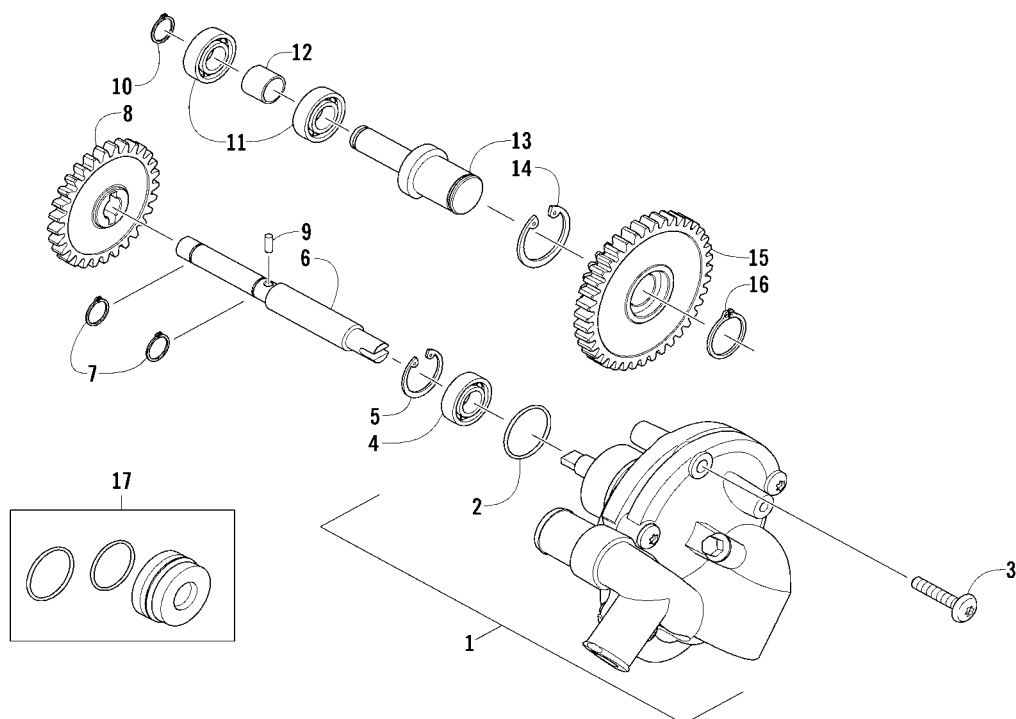

WATER PUMP ASSEMBLY

0746-957


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0813-059		1	Pump, Water - Assembly (inc. 2)	10	0831-002		1	Ring, Retaining
2	0830-029		1	● O-Ring	11	0832-046		2	Bearing
3	8468-650		2	Screw, Machine	12	0813-028		1	Spacer, Idler - Water Pump
4	0832-084		1	Bearing	13	0813-060		1	Shaft, Idler Gear
5	0831-086		1	Circlip	14	0831-004		1	Ring, Retaining
6	0813-041		1	Shaft, Driven Gear	15	0813-061		1	Gear, Idler
7	0831-010		2	Ring, Retaining	16	0831-040		1	Ring, Retaining
8	0813-043		1	Gear, Driven	17	0837-010		1	Kit, Seal - Water Pump
9	0829-009		1	Pin, Dowel					

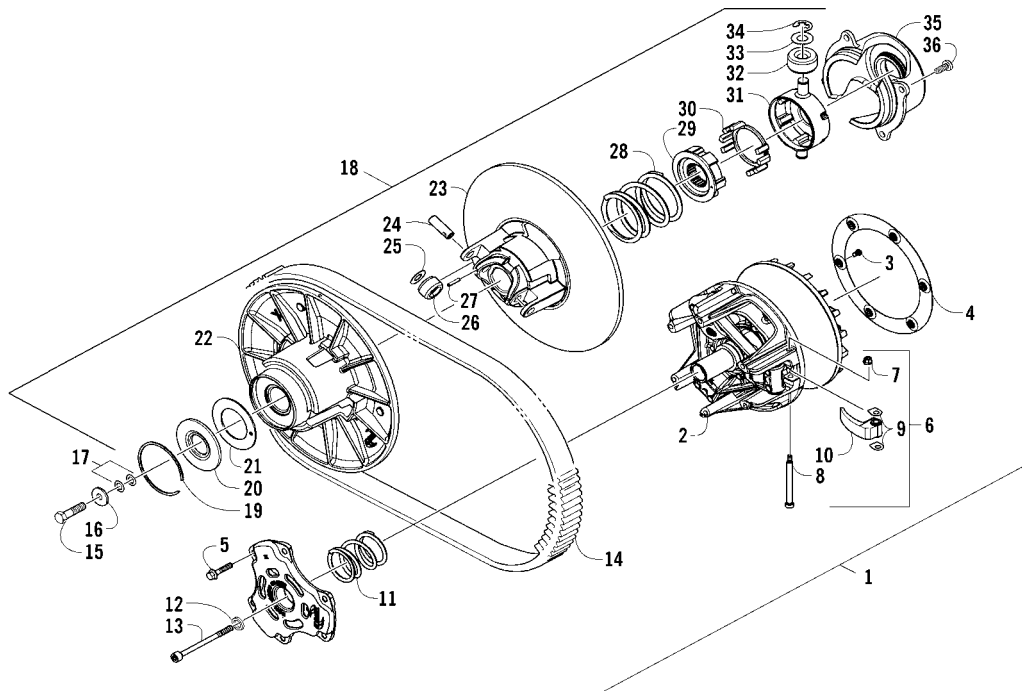

CLUTCH ASSEMBLY

0748-021


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0823-498	X	1	Clutch, Drive - Calibrated (inc. 2-11)	19	0823-404		1	● Ring, Retaining
2	0823-499	X	1	● Clutch, Drive - Uncalibrated (inc. 3-5)	20	0823-405		1	● Shim, 38 x 62 x 1.50 mm
3	0623-914		6	●● Screw, Self-Tapping	21	0823-406		1	● Washer, Thrust
4	0823-424		1	●● Cover, Sheave	22	0823-459	X	1	● Sheave, Stationary
5	0823-402		6	●● Screw, Cap	23	0823-460	X	1	● Sheave, Movable
6	0823-426		1	● Kit, Cam Arm (inc. 7-9)	24	0823-410		2	● Pin, Roller
7	0823-399		3	●● Nut, Lock	25	0823-409		2	● Washer, Thrust
8	0823-396		3	●● Screw, Shoulder	26	0823-462	X	2	● Roller
9	0823-397		6	●● Washer, Thrust	27	0823-407		2	● Pin, Spring
10	0823-429		3	● Arm, Cam	28	0823-411		1	● Spring
11	0823-500		1	● Spring, Drive Clutch - Black/Silver	29	0823-412		1	● Bearing Assembly
12	1623-649		1	Washer, High Collar	30	0823-413		1	● Insert, Spider
13	0826-159		1	Bolt, Clutch	31	0823-414		1	● Spider
14	0823-391		1	Belt, Drive	32	0823-417		2	● Roller
15	0826-158		1	Screw, Cap	33	0823-416		2	● Washer, Thrust
16	0828-133		1	Washer	34	0823-415		2	● E-Ring
17	0828-137	AR		Shim, 12 x 24 x 0.25 mm	35	0823-418		1	● Cam, Driven
	0828-134	AR		Shim, 12 x 24 x 0.50 mm	36	0823-419		4	● Screw, Machine
18	0823-461	X	1	Clutch, Driven - Assembly (inc. 19-36)					

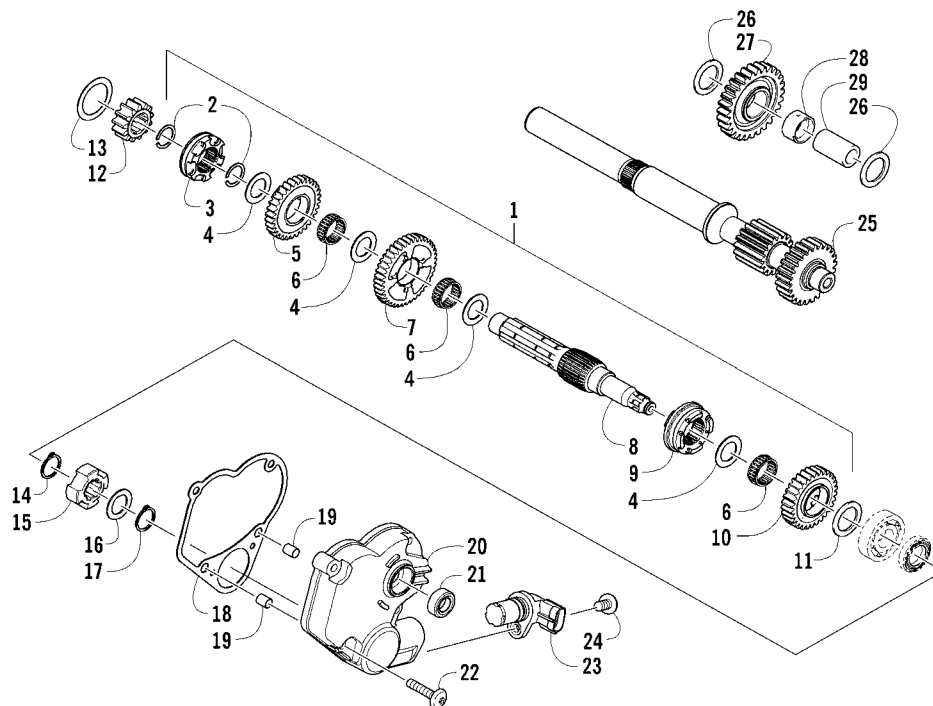

SECONDARY TRANSMISSION ASSEMBLY

0748-050


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0822-144	1	1	Countershaft Assembly (inc. 2-10)	16	0828-069	1	1	Washer, Thrust
2	0831-085	2	2	● Ring, Retaining	17	0831-039	1	1	Ring, Retaining
3	0822-120	1	1	● Gear Select, Reverse	18	0830-194	1	1	Gasket
4	0822-121	4	4	● Shim	19	0829-062	2	2	Pin, Dowel
5	0822-119	1	1	● Gear, Reverse Driven	20	0806-105	1	1	Housing, Speedometer Sensor
6	0832-082	3	3	● Bearing	21	0830-044	1	1	Seal
7	0822-114	1	1	● Gear, Driven - Low	22	8468-630	4	4	Screw, Machine
8	0822-113	1	1	● Countershaft	23	0430-091	1	1	Sensor, Speedometer
9	0822-145	1	1	● Gear Select, Sliding	24	8468-620	1	1	Screw, Machine
10	0822-148	1	1	● Gear, Driven - High	25	0822-151	1	1	Shaft, Input
11	0828-011	1	1	Washer	26	0828-016	2	2	Washer, Thrust
12	0822-149	1	1	Gear, Drive	27	0822-011	1	1	Gear, Reverse Idle
13	0828-019	1	1	Washer, Thrust	28	0822-012	1	1	Bushing
14	0831-040	1	1	Ring, Retaining	29	0822-015	1	1	Shaft, Reverse Idle
15	0822-050	1	1	Trigger, Speedometer Sensor					

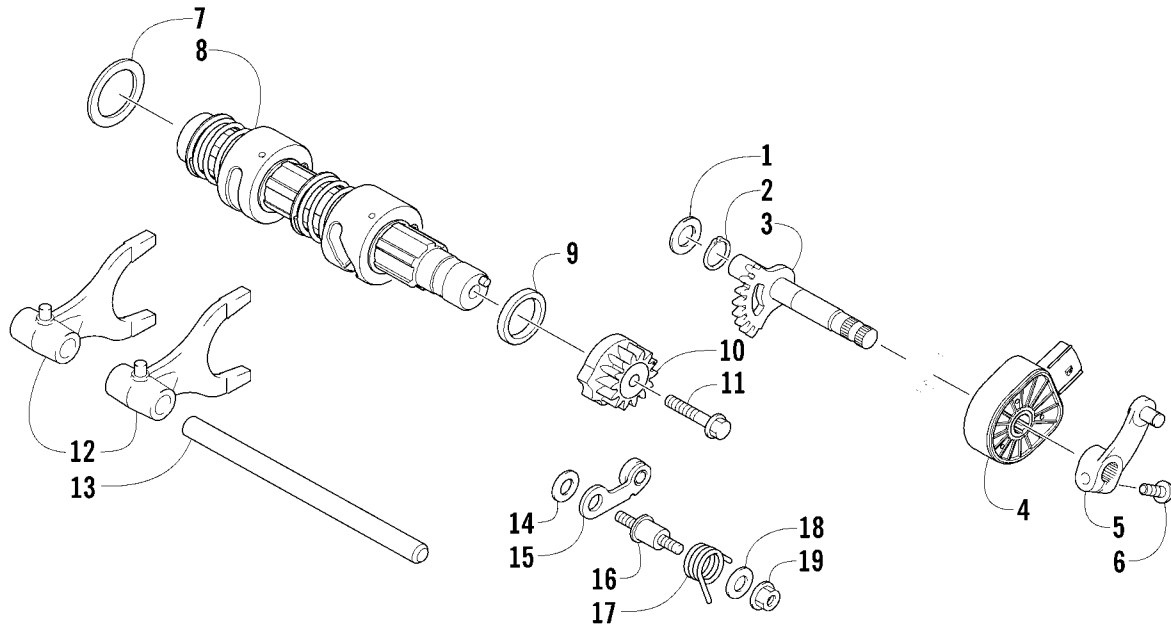

GEAR SHIFTING ASSEMBLY

0746-409

Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0828-036		1	Washer	11	0826-006		1	Screw, Cap
2	0831-010		1	Ring, Retaining	12	0818-072		2	Fork, Shift
3	0818-095		1	Shaft, Sub-Gear Shift	13	0818-006		1	Shaft, Shift Fork
4	0409-125		1	Switch, Gear Position	14	0828-038		1	Washer
5	0818-014		1	Arm, Shift	15	0818-002		1	Stopper, Cam
6	8468-620		1	Screw, Machine	16	0818-004		1	Support, Cam Stopper
7	0828-040		1	Washer	17	0818-144		1	Spring
8	0818-149		1	Shaft, Gear Shift - Assembly	18	0828-035		1	Washer
9	0828-131		1	Spacer	19	8424-602		1	Nut
10	0818-145		1	Cam, Gear Shift					

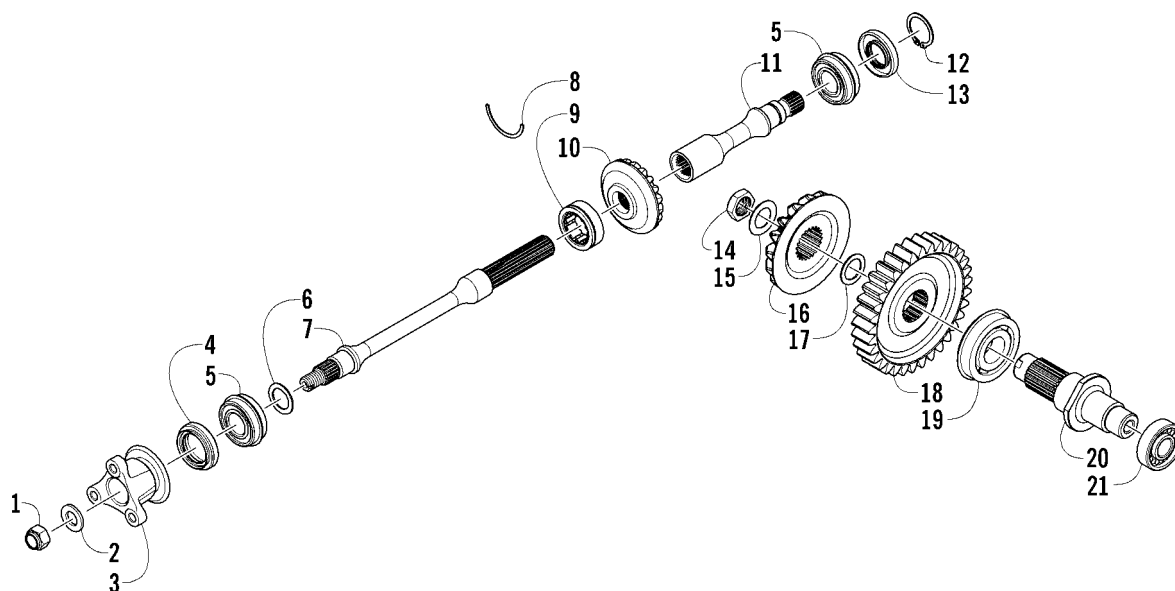


SECONDARY DRIVE ASSEMBLY

0747-235

Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	0827-013		1	Nut	12	0831-011		1	Ring, Retaining
2	0828-020		1	Washer	13	0830-214		1	Seal, Oil
3	0819-126		1	Flange, Output Joint	14	0827-012		1	Nut
4	0830-043		1	Seal, Oil	15	0828-019		1	Washer, Thrust
5	0832-017		2	Bearing	16	0822-153		1	Gear, Secondary Drive
6	0828-021	AR		Shim, 25 x 34 x 0.25 mm	17	0828-143		AR	Shim, 25.4 x 40 x 0.25 mm
	0828-022	AR		Shim, 25 x 34 x 0.30 mm		0828-144		AR	Shim, 25.4 x 40 x 0.30 mm
	0828-023	AR		Shim, 25 x 34 x 0.70 mm		0828-145		AR	Shim, 25.4 x 40 x 0.35 mm
	0828-024	AR		Shim, 25 x 34 x 0.90 mm		0828-146		AR	Shim, 25.4 x 40 x 0.90 mm
	0828-025	AR		Shim, 25 x 34 x 0.95 mm		0828-138		AR	Shim, 25.4 x 40 x 0.95 mm
	0828-026	AR		Shim, 25 x 34 x 1.00 mm		0828-139		AR	Shim, 25.4 x 40 x 1.00 mm
	0828-027	AR		Shim, 25 x 34 x 1.05 mm		0828-140		AR	Shim, 25.4 x 40 x 1.05 mm
	0828-028	AR		Shim, 25 x 34 x 1.10 mm		0828-141		AR	Shim, 25.4 x 40 x 1.10 mm
	0828-029	AR		Shim, 25 x 34 x 1.15 mm		0828-142		AR	Shim, 25.4 x 40 x 1.15 mm
7	0819-115		1	Shaft, Secondary Driven - Front	18	0822-150		1	Gear - 33T
8	0819-011		1	Ring, Driven Bearing	19	0832-083		1	Bearing
9	0832-016		1	Bearing, Driven Gear	20	0822-152		1	Shaft, Output
10	0822-106		1	Gear, Secondary Driven	21	0832-050		1	Bearing
11	0819-122		1	Shaft, Secondary Driven - Rear					



Ref	Part No.	New Qty	Description	Ref	Part No.	New Qty	Description
1	0802-059	1	Rotor/Flywheel	5	0802-064	1	Stator - Assembly
2	0829-012	1	Key	6	0831-064	1	Clamp
3	0827-010	1	Nut	7	8470-510	4	Screw, Machine
4	8409-632	3	Screw, Cap				

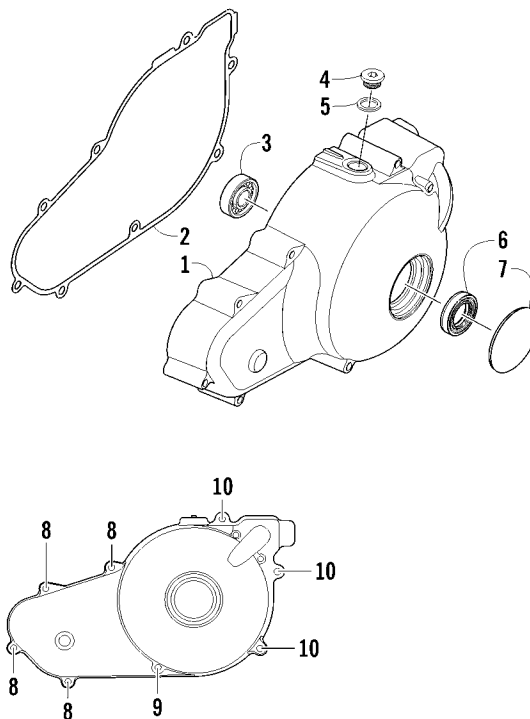

MAGNETO SIDE ENGINE COVERS

0745-061

Ref	Part No.	New Qty	Description	Ref	Part No.	New Qty	Description
1	0806-107	1	Cover, Magneto	6	0830-176	1	Seal, Cap
2	0830-132	1	Gasket, Magneto Cover	7	0806-066	1	Cap, Magneto Cover
3	0832-010	1	Bearing	8	8468-650	4	Screw, Machine
4	0826-155	1	Plug, Check	9	8468-695	1	Screw, Machine
5	0830-015	1	Washer, Crush	10	8468-665	3	Screw, Machine

50

Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description

