 


2015 ATV 700 DIESEL EFT GREEN

Contents

AIR INTAKE ASSEMBLY [92833]	1
BATTERY ASSEMBLY [96913]	3
BOTTOM END GASKET SET ASSEMBLY [94184]	4
CASE/BELT COOLING ASSEMBLY [100307]	5
CLUTCH ASSEMBLIES [300534]	7
COOLING ASSEMBLY [94175]	9
CRANKCASE, CRANKSHAFT SUPPORT, AND OIL FILTER ASSEMBLIES [96004]	11
CRANKSHAFT AND CAMSHAFT ASSEMBLIES [96005]	13
CYLINDER HEAD, VALVE TRAIN, AND RELATED ASSEMBLY [96003]	14
DRIVE TRAIN ASSEMBLY [300531]	16
ENGINE AND EXHAUST [96000]	17
EXHAUST MANIFOLD ASSEMBLY [96013]	19
EXTERNAL ALTERNATOR AND DRIVE PULLEY ASSEMBLIES [96015]	20
FLYWHEEL AND CROWN GEAR ASSEMBLY [92856]	21
FRAME AND RELATED PARTS [300936]	22
FRONT DRIVE GEARCASE ASSEMBLY [300532]	24
FRONT RACK, BODY PANEL, AND HEADLIGHT ASSEMBLIES [300934]	27
FRONT SUSPENSION ASSEMBLY [300528]	29
FUEL SYSTEM INJECTION PUMP ASSEMBLY [96006]	31
FUEL TANK AND FUEL FILTER ASSEMBLIES [96909]	33
HANDLEBAR ASSEMBLY [95996]	35
HYDRAULIC BRAKE ASSEMBLY [300105]	37
INSTRUMENT POD ASSEMBLY [300938]	39
INTAKE MANIFOLD AND EGR SYSTEM [96007]	41
LICENSE PLATE HOLDER ASSEMBLY [95896]	43
OIL PUMP AND PAN ASSEMBLY [96011]	44
PARKING BRAKE ASSEMBLY [95941]	46
PISTON SET AND CONNECTING ROD ASSEMBLY [92848]	47
PTO VACUUM PUMP ASSEMBLY [96008]	48
REAR BODY PANEL AND FOOTWELL ASSEMBLIES [300935]	49
REAR DRIVE GEARCASE ASSEMBLY [300533]	51
REAR RACK ASSEMBLY [100303]	53
REAR SUSPENSION ASSEMBLY [95998]	55
ROCKER ARM COVER AND BREATHER SYSTEM ASSEMBLIES [96002]	57
SEAT ASSEMBLY [100274]	58
SHIFT LEVER ASSEMBLY [100306]	59
STARTER MOTOR ASSEMBLY [100333]	61
STEERING ASSEMBLY [99816]	62
THROTTLE CONTROL AND LOCKED TORQUE DEVICE ASSEMBLIES [96009]	64
TIMING BELT AND SPEED GOVERNOR ASSEMBLIES [100332]	66
TOP END GASKET SET ASSEMBLY [92859]	68
TRANSMISSION LEFT-SIDE ASSEMBLY [95043]	70
TRANSMISSION RIGHT-SIDE ASSEMBLY [95042]	73
WATER PUMP AND THERMOSTAT HOUSING ASSEMBLY [96012]	75
WHEEL AND TIRE ASSEMBLY [300603]	77
WINCH ASSEMBLY [300937]	78
WIRING HARNESS ASSEMBLY [96912]	80


AIR INTAKE ASSEMBLY [92833]

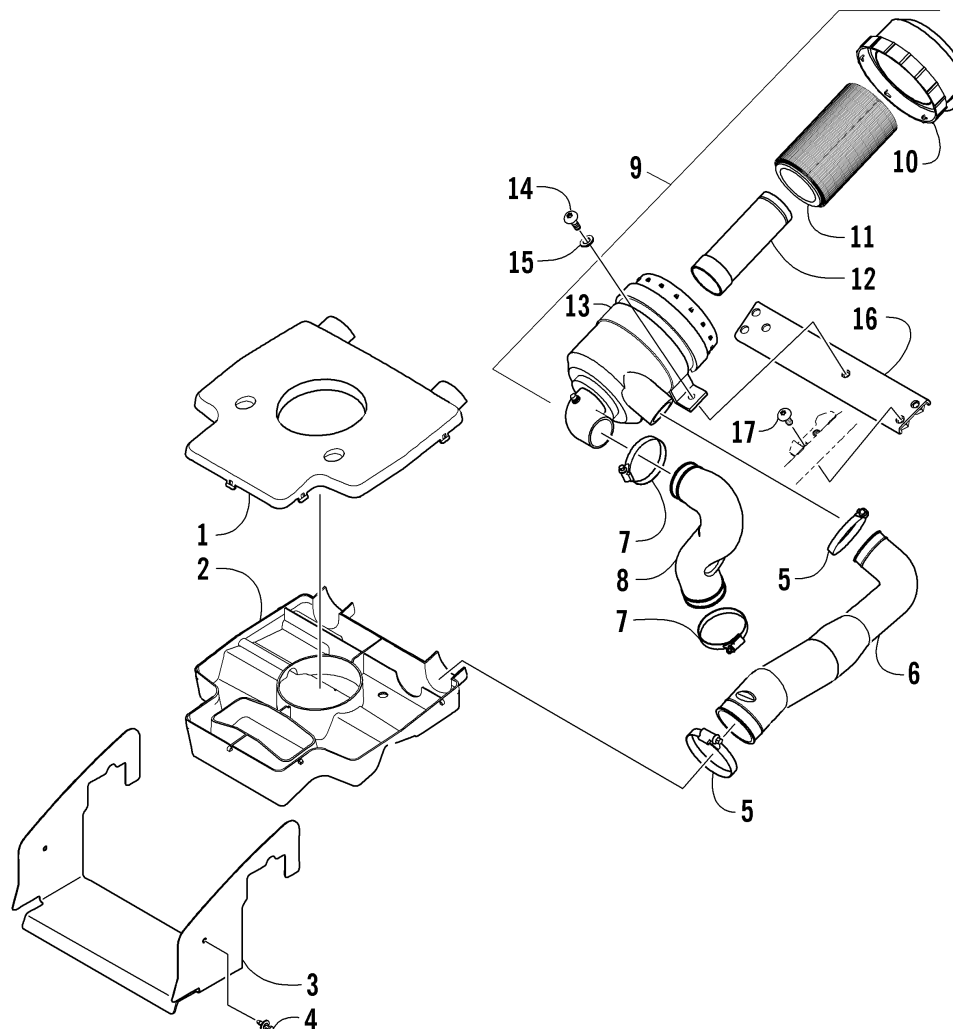

Item	Part No.	Qty	Name	Context	Footnote
1	0413-091	1	Diverter, Air - Top		
2	0413-093	1	Diverter, Air - Bottom		
3	2406-509	1	Shroud, Splash		
4	0623-362	2	Clip, Retaining		
5	0423-832	2	Clamp		
6	0470-618	1	Duct, Air Intake		
7	0423-066	2	Clamp		
8	0470-621	1	Duct, Engine Intake		
9	0470-991	1	FILTER,AIR-EUROPICLON-ASSY	(inc. 10-13)	
10	0470-627	1	Cap, Air Filter		
11	0470-619	1	Filter, Air		
12	0470-620	1	Element, Air Filter		
13	0470-628	1	Bracket, Mounting - Air Filter		
14	8476-620	2	Screw, Machine		
15	8050-222	2	Washer		


Item	Part No.	Qty	Name	Context	Footnote
16	2506-082	1	Bracket, Mounting - Air Filter		
17	8476-616	4	Screw, Machine		

 BATTERY ASSEMBLY [96913]

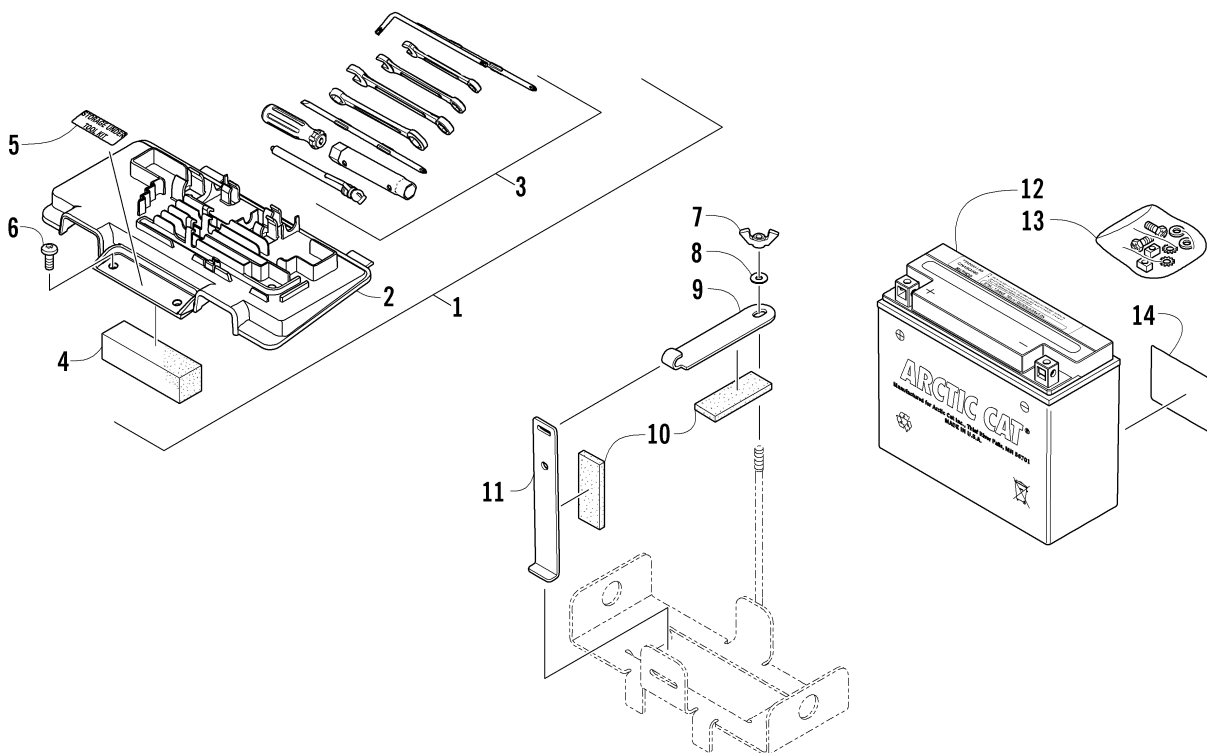


Item	Part No.	Qty	Name	Context	Footnote
1	5993-040	1	TRAY, TOOL-ASSY	(inc. 2-4)	
2	4406-136	1	COVER, BATTERY/TOOL TRAY		
3	0444-122	1	KIT, TOOL		
4	0417-016	1	Pad, Battery		
5	1411-508	1	Decal, Storage		
6	8476-620	2	Screw, Machine		
7	0623-325	1	Nut, Wing		
8	8050-217	1	Washer		
9	0645-243	1	Hold-Down, Battery - Top		
10	0406-288	2	Pad, Foam		
11	0645-311	1	Hold-Down, Battery - Side		
12	0745-230	1	Battery, Electric Start - Turbo w/Foil (0645-432)	(inc. 13-14)	
13	0445-082	1	Kit, Hardware		
14	0645-430	1	Decal, Warning		

 BOTTOM END GASKET SET ASSEMBLY [94184]

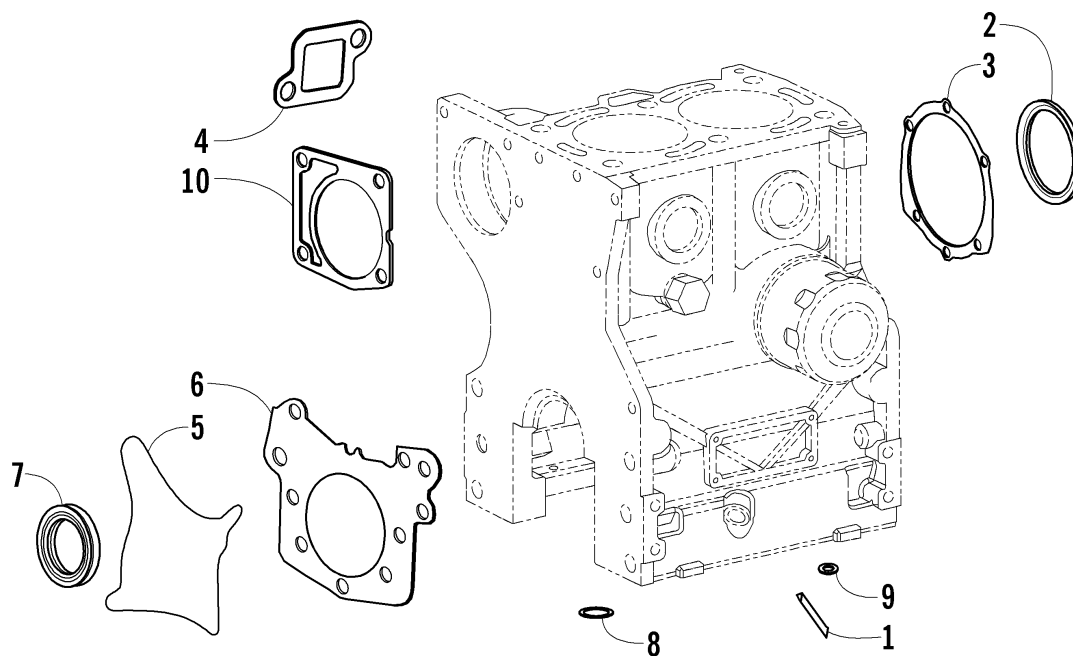

Item	Part No.	Qty	Name	Context	Footnote
Not Shown	3206-329	1	BOTTOM END GASKET SET		
1	3206-054	4	Gasket		
2	3206-091	1	Ring		
3	3206-358	1	GASKET,ENGINE FLANGE		
4	3206-264	1	Gasket		
5	3206-172	1	O-Ring		
6	3206-173	1	GASKET		
7	3206-161	1	Seal		
8	3206-176	1	Seal, Oil		
9	3206-177	1	Seal, Oil		
10	3206-272	1	PUMP BODY GASKET		

 
CASE/BELT COOLING ASSEMBLY [100307]

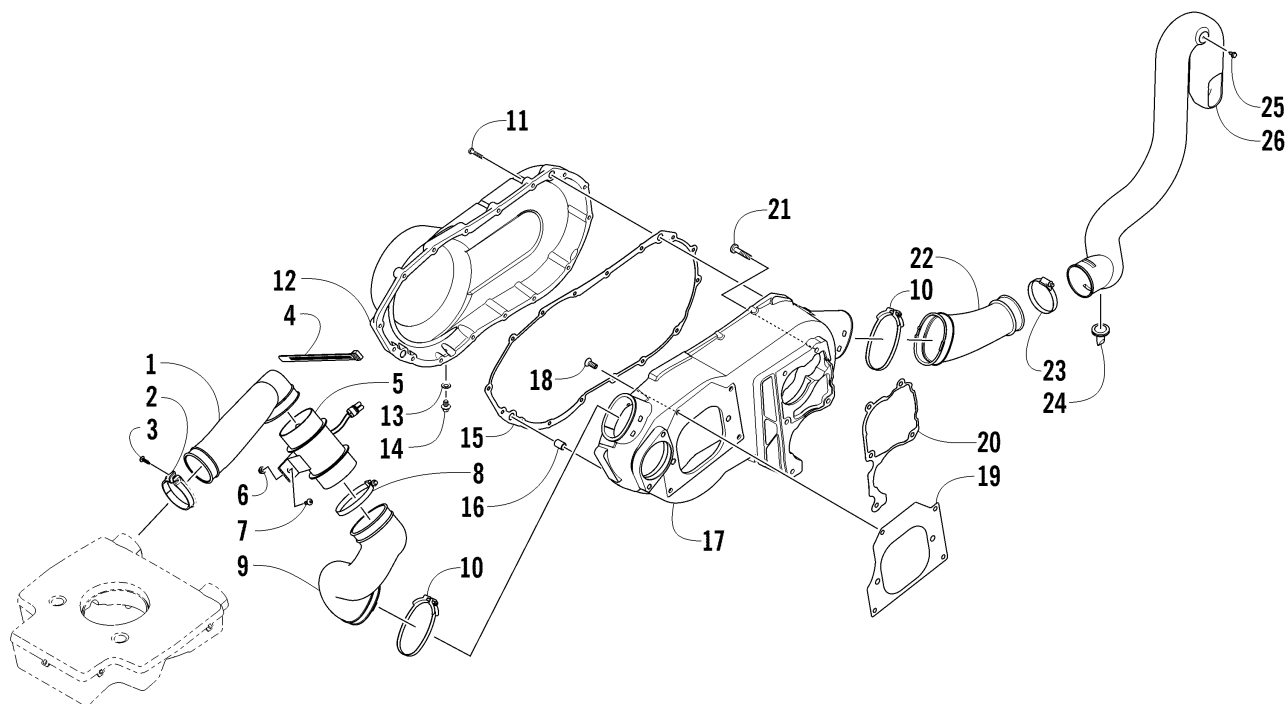

Item	Part No.	Qty	Name	Context	Footnote
1	0413-132	1	Duct, Belt Cooling - Front		
2	0423-551	1	Clamp		
3	0423-342	1	Screw, Self-Tapping - .1875 x .75		
4	0623-316	AR	Tie, Cable - 14 in.		
5	0413-141	1	Fan, Belt Cooling		
6	8424-502	2	Nut		
7	8475-512	2	Screw, Machine		
8	0423-057	1	Clamp		
9	0413-133	1	Boot, Belt Cooling - Inlet		
10	0423-730	2	Clamp		
11	8468-630	16	Screw, Machine		
12	1502-157	1	Cover, Clutch		
13	0830-013	1	Washer, Crush		
14	8408-812	1	Screw, Cap		
15	1402-528	1	Gasket, V-Belt Cover		
16	0829-002	2	Pin, Dowel		
17	1402-527	1	Cover, Clutch		

Item	Part No.	Qty	Name	Context	Footnote
18	8472-820	4	Screw, Machine		
19	1402-524	1	Gasket, Clutch Cover		
20	1402-526	1	Gasket, Gearcase		
21	0423-118	5	Screw, Self-Tapping		
22	0413-134	1	Boot, Belt Cooling - Outlet		
23	0423-019	1	Clamp		
24	0470-442	1	Valve, Air Cleaner		
25	0623-301	1	Screw, Self-Tapping		
26	0413-106	1	Duct, Belt Cooling - Rear		

 
CLUTCH ASSEMBLIES [300534]

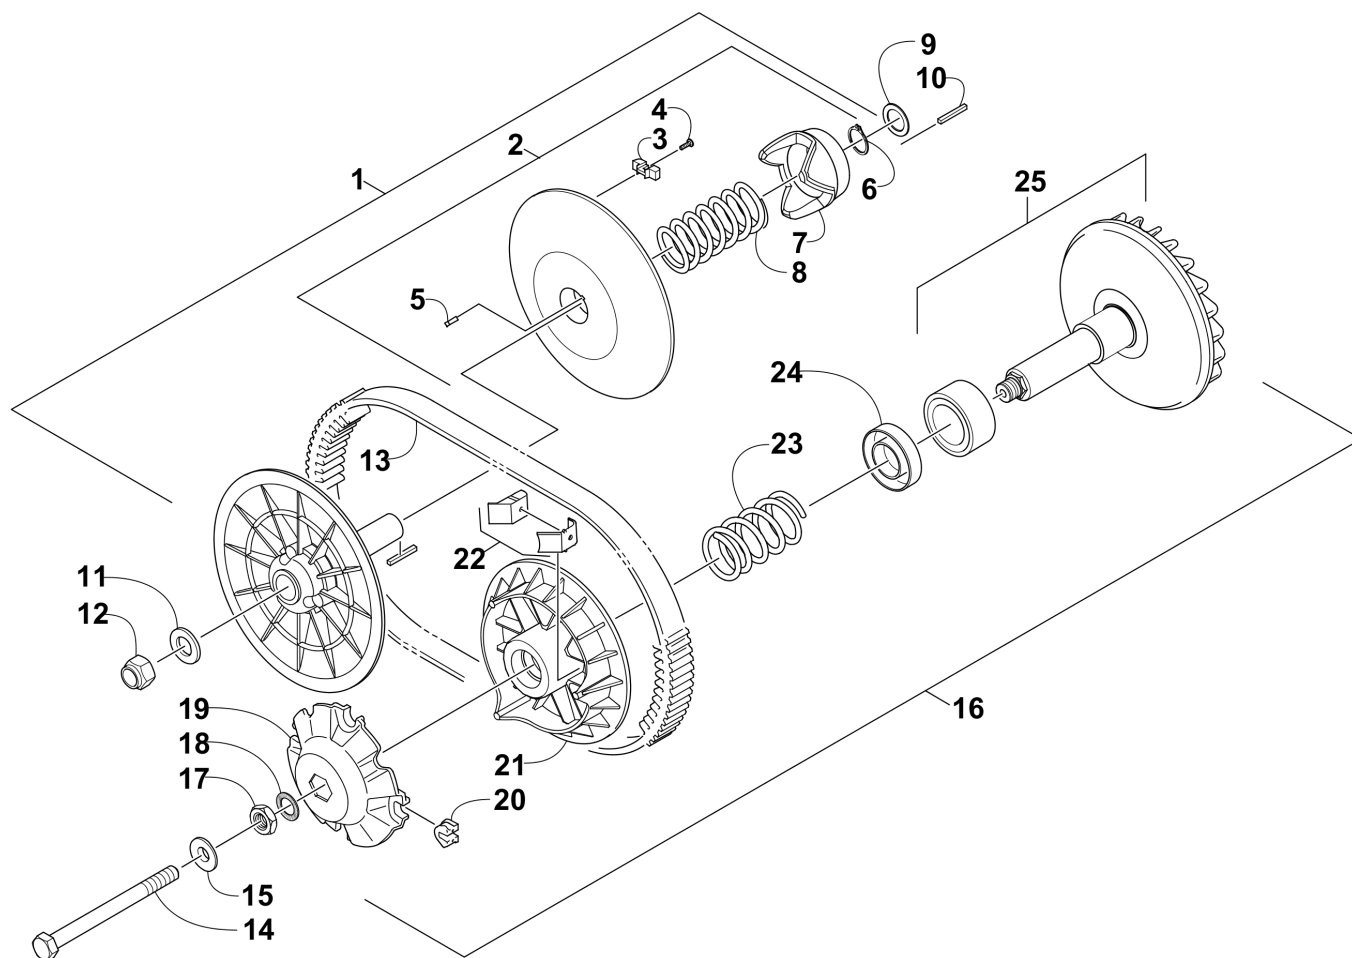

Item	Part No.	Qty	Name	Context	Footnote
1	0823-539	1	Pulley, Driven - Assembly	(inc. 2-8)	
2	0823-554	1	Pulley, Driven - Uncalibrated	(inc. 3-6)	
3	0823-454	3	Shoe, Cam		
4	0823-177	3	Screw, Machine		
5	0823-383	1	Key		
6	0823-455	1	Ring, Snap - External		
7	0823-453	1	Cam		
8	0823-378	1	Spring - Black		
9	0623-954	4	Washer, Thrust		
10	0423-718	1	Key		
11	0828-020	1	Washer		
12	0827-013	1	Nut		
13	1402-564	1	Belt, Drive		
14	0423-673	1	Screw, Cap		
15	0423-733	1	Washer		
16	0823-540	1	Pulley, Drive - Assembly	(inc. 17-25)	

Item	Part No.	Qty	Name	Context	Footnote
.17	2402-275	1	Nut		
.18	2402-274	1	Washer, Lock		
.19	1502-207	1	Plate, Movable Drive Face	(inc. 20)	
.20	1402-628	3	Damper, Movable Drive Face		
.21	2402-273	1	Face, Drive - Movable		
.22	2402-276	6	Block, Weight - Assembly		
.23	0423-745	1	Spring		
.24	2402-270	1	Seat, Spring		
.25	2402-269	1	Face, Drive - Fixed		

 
COOLING ASSEMBLY [94175]

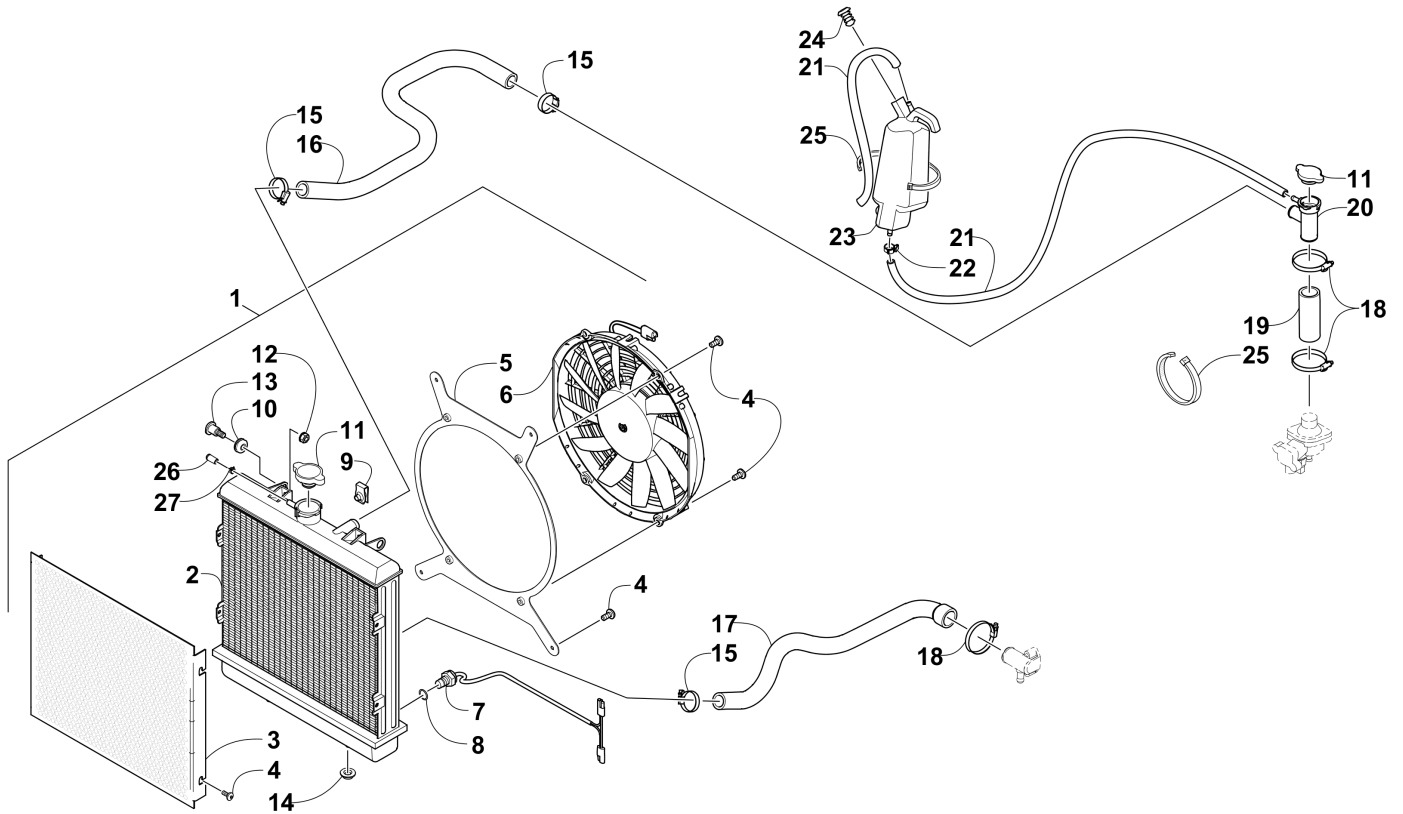

Item	Part No.	Qty	Name	Context	Footnote
1	0413-276	1	Radiator Assembly	(inc. 2-10 and one No. 11)	
.2	0413-216	1	Radiator		
.3	0413-214	1	Screen, Radiator		
.4	8470-510	12	Screw, Machine		
.5	0413-217	1	Bracket, Mounting - Fan		
.6	0413-123	1	Fan, Radiator		
.7	0413-045	1	Switch, Sensor		
.8	1602-213	1	O-Ring		
.9	1623-637	4	Clip, U-Nut		
.10	0423-030	2	Grommet		
.11	0413-255	2	Cap, Radiator		
12	0623-038	2	Nut w/Washer		
13	0423-484	2	Screw, Shoulder		
14	0423-028	2	Bushing		
15	0423-496	3	Clamp, Hose		
16	0410-106	1	Hose, Coolant		
17	0410-107	1	Hose, Coolant		
18	1623-093	3	Clamp, Hose		
19	0410-121	1	Hose, Coolant		
20	0413-193	1	Tank, Coolant Fill		

Item	Part No.	Qty	Name	Context	Footnote
21	0610-011	AR	Hose - 25 ft		
22	0124-045	1	Clamp, Hose		
23	0413-086	1	Bottle, Overflow		
24	0413-087	1	Plug		
25	0123-788	AR	Tie, Cable - 8 in.		
25	0623-316	AR	Tie, Cable - 14 in.		
26	0670-323	1	Plug		
27	1623-234	1	Clamp		

 
CRANKCASE, CRANKSHAFT SUPPORT, AND OIL FILTER ASSEMBLIES [96004]

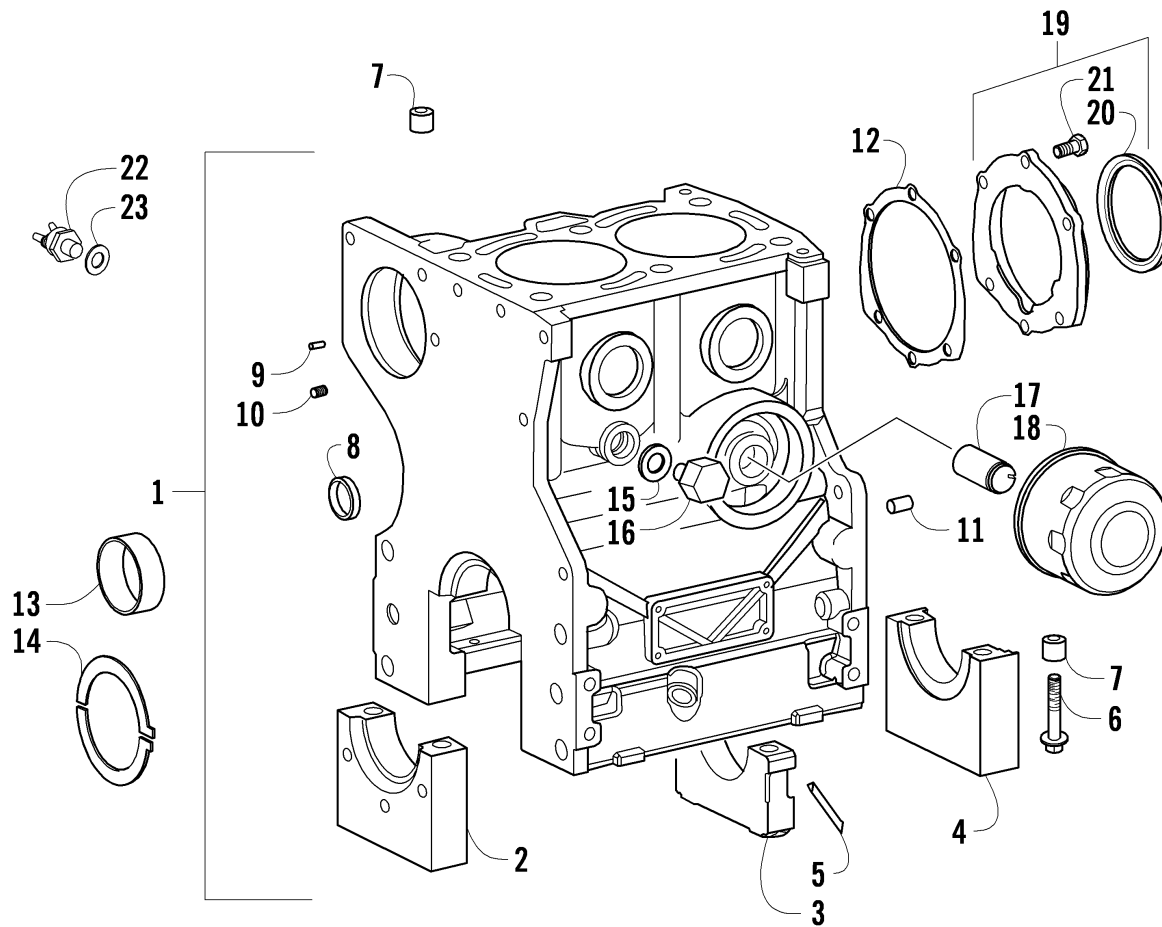

Item	Part No.	Qty	Name	Context	Footnote
1	3206-046	1	Crankcase	(inc. 2-6, two No. 7, and 8-10)	
.2		1	Housing - Front		Not a Service Part
.3		1	Housing - Center		Not a Service Part
.4		1	Housing - Rear		Not a Service Part
.5	3206-054	4	Gasket		
.6	3206-049	6	Screw, Cap		
.7	3206-045	4	Sleeve		
.8	3206-058	1	Pin, Tapered		
.9	3206-047	1	Plug		
.10	3206-048	2	Plug		
11	3206-053	2	Pin, Lock		
12	3206-358	1	GASKET,ENGINE FLANGE		
13	3206-055	3	Bearing		
13	3206-056	3	Bearing (-0.25 mm)		
13	3206-057	3	Bearing (-0.50 mm)		


Item	Part No.	Qty	Name	Context	Footnote
14	3206-050	2	Washer		
14	3206-051	2	Washer (+0.10 mm)		
14	3206-052	2	Washer (+0.20 mm)		
15	3206-206	1	Gasket		
16	3206-207	1	Plug		
17	3206-193	1	Connector, Oil Filter		
18	3206-194	1	Cartridge, Oil Filter		
19	3206-090	1	Flange, Engine	(inc. 20-21)	
20	3206-091	1	Ring		
21	3206-088	6	Screw, Cap		
22	3206-377	1	Sensor, Engine Coolant Temperature		
23	3206-359	1	Gasket		

 CRANKSHAFT AND CAMSHAFT ASSEMBLIES [96005]

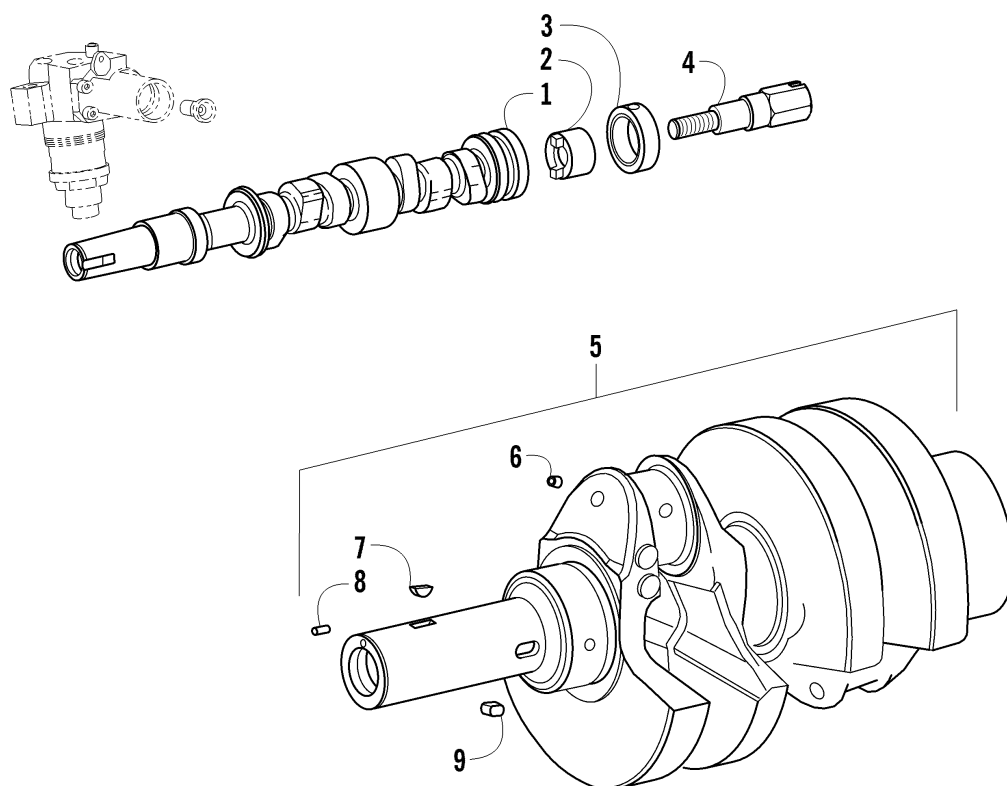

Item	Part No.	Qty	Name	Context	Footnote
1	3206-129	1	Camshaft		
2	3206-131	1	Cam		
3	3206-128	1	Sleeve		
4	3206-374	1	Screw		
5	3206-019	1	Crankshaft Assembly	(inc. 6-9)	
6	3206-020	2	Plug		
7	3206-018	1	Key		
8	3206-022	1	Pin		
9	3206-021	1	Key		

 
CYLINDER HEAD, VALVE TRAIN, AND RELATED ASSEMBLY [96003]

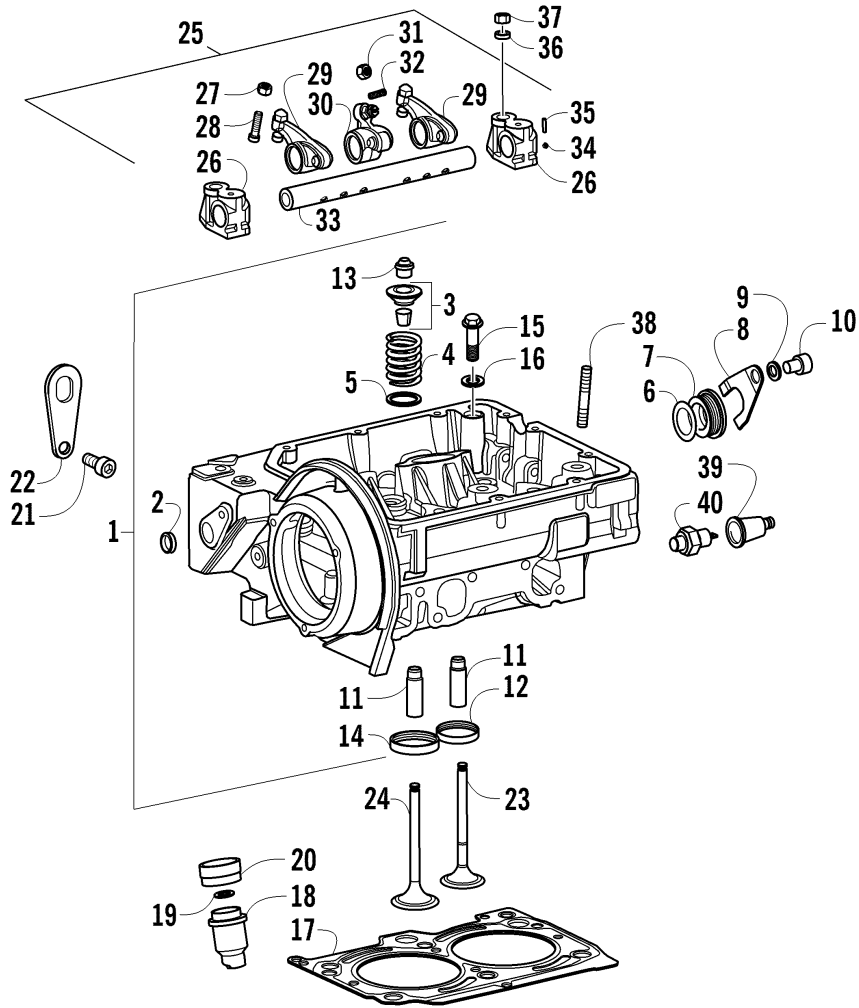

Item	Part No.	Qty	Name	Context	Footnote
1	3206-063	1	Cylinder Head	(inc. 2-15)	
.2	3206-065	1	Plug		
.3	3206-148	4	Retainer		
.4	3206-147	4	Spring, Valve		
.5	3206-149	4	Washer		
.6	3206-076	1	O-Ring		
.7	3206-275	1	Plug		
.8	3206-074	1	Retainer		
.9	3206-075	1	Washer		
.10	3206-077	1	Screw, Cap		
.11	3206-061	4	Guide, Valve		
.12	3206-062	4	Guide, Valve (+0.50 mm)		
.13	3206-073	2	Seat, Exhaust Valve		
.14	3206-152	4	Retainer, Valve		
.15	3206-072	2	Seat, Intake Valve		


Item	Part No.	Qty	Name	Context	Footnote
16	3206-066	6	SPECIAL SCREW MM 90+10		
17	3206-064	6	Washer		
18	3206-069	1	Gasket, Head - 1.56-1.64 (1 small hole)		
19	3206-070	1	Gasket, Head - 1.66-1.74 (2 small holes)		
20	3206-071	1	Gasket, Head - 1.76-1.84 (3 small holes)		
21	3206-068	2	Chamber, Precombustion		
22	3206-079	2	Spacer		
23	3206-067	2	Nut, Locking		
24	3206-078	2	Screw, Cap		
25	3206-376	2	Brace, Lifting		
26	3206-150	2	Valve, Exhaust		
27	3206-151	2	Valve, Intake		
28	3206-135	1	Arm, Rocker - Assembly	(inc. 29-35)	
.29	3206-141	2	Support		
.30	3206-137	4	Nut		
.31	3206-136	4	Screw, Adjuster		
.32	3206-134	4	Arm, Rocker - Intake/Exhaust		
.33	3206-140	2	Arm, Rocker - Injection Pump		
.34	3206-139	2	Nut		
.35	3206-138	2	Screw, Adjuster		
.36	3206-144	1	Shaft, Rocker Arm		
.34	3206-146	2	Plug		
.35	3206-145	1	Pin, Lock		
36	3206-064	3	Washer		
37	3206-142	3	Nut		
38	3206-143	3	Bolt, Stud		
39	3206-305	1	PIPE ELBOW		
40	3206-304	1	Switch, Oil		
41	3206-314	1	Cover		
42	3206-313	1	O-Ring		
43	3206-082	2	Screw, Cap		

 DRIVE TRAIN ASSEMBLY [300531]

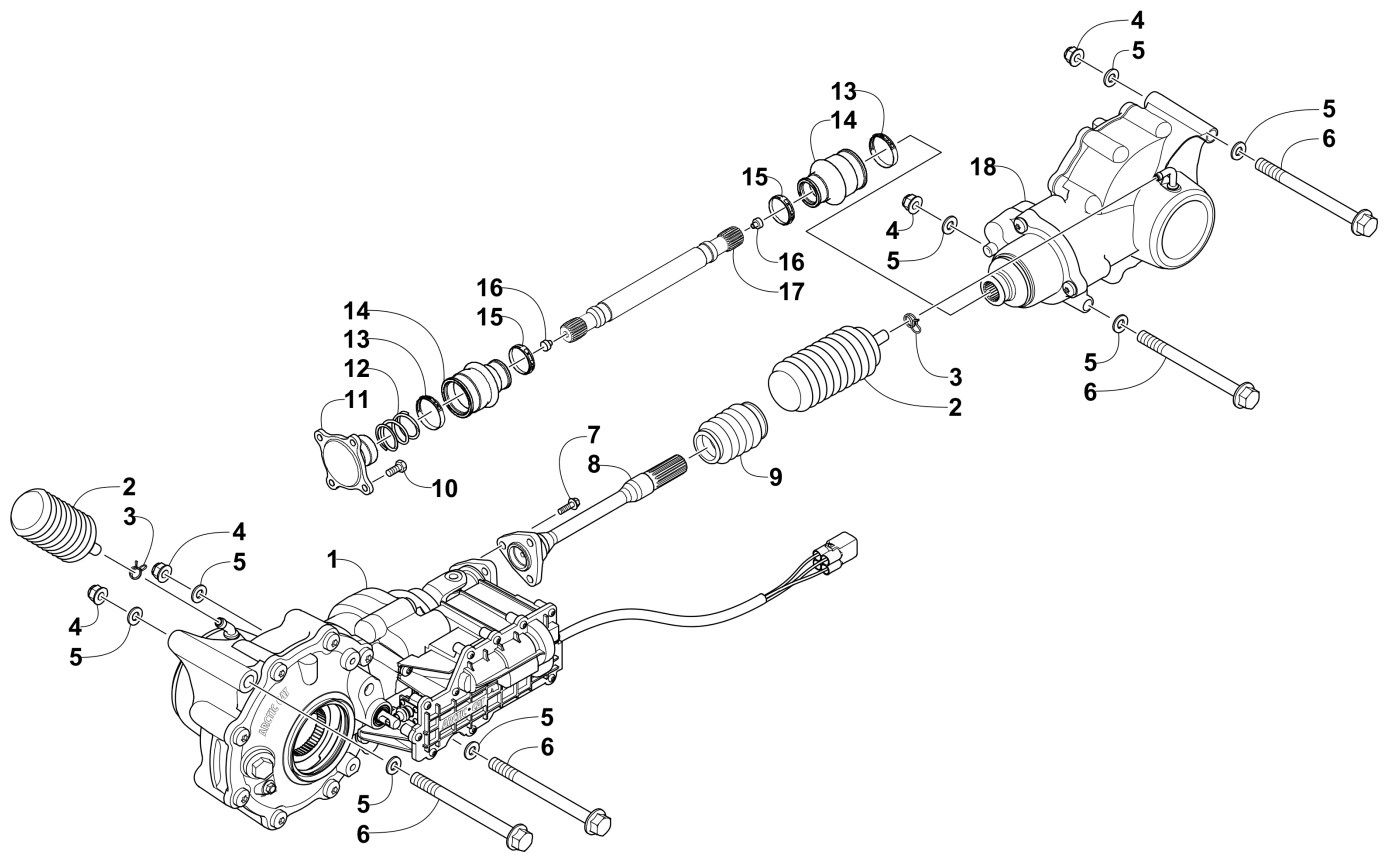

Item	Part No.	Qty	Name	Context	Footnote
1	2502-133	1	Gearcase, Front - Assembly		
2	1402-620	2	BLADDER,CASE		
3	0423-315	2	Clamp, Hose		
4	8428-002	4	Nut, Lock		
5	0423-426	8	Washer		
6	0423-404	4	Screw, Cap		
7	8409-025	3	Screw, Cap		
8	0502-976	1	Shaft, Propeller		
9	0402-966	1	BOOT,PROP SHAFT (LONG)		
10	8408-820	4	Screw, Cap		
11	2402-193	1	Flange,Output		
12	1402-026	1	Spring		
13	0423-393	2	Clamp		
14	0402-985	2	Boot, Shaft		
15	0423-411	2	Clamp		
16	0673-618	2	Bumper, Driveshaft		
17	1402-507	1	Shaft, Propeller		
18	2502-154	1	Gearcase, Rear		

 
ENGINE AND EXHAUST [96000]

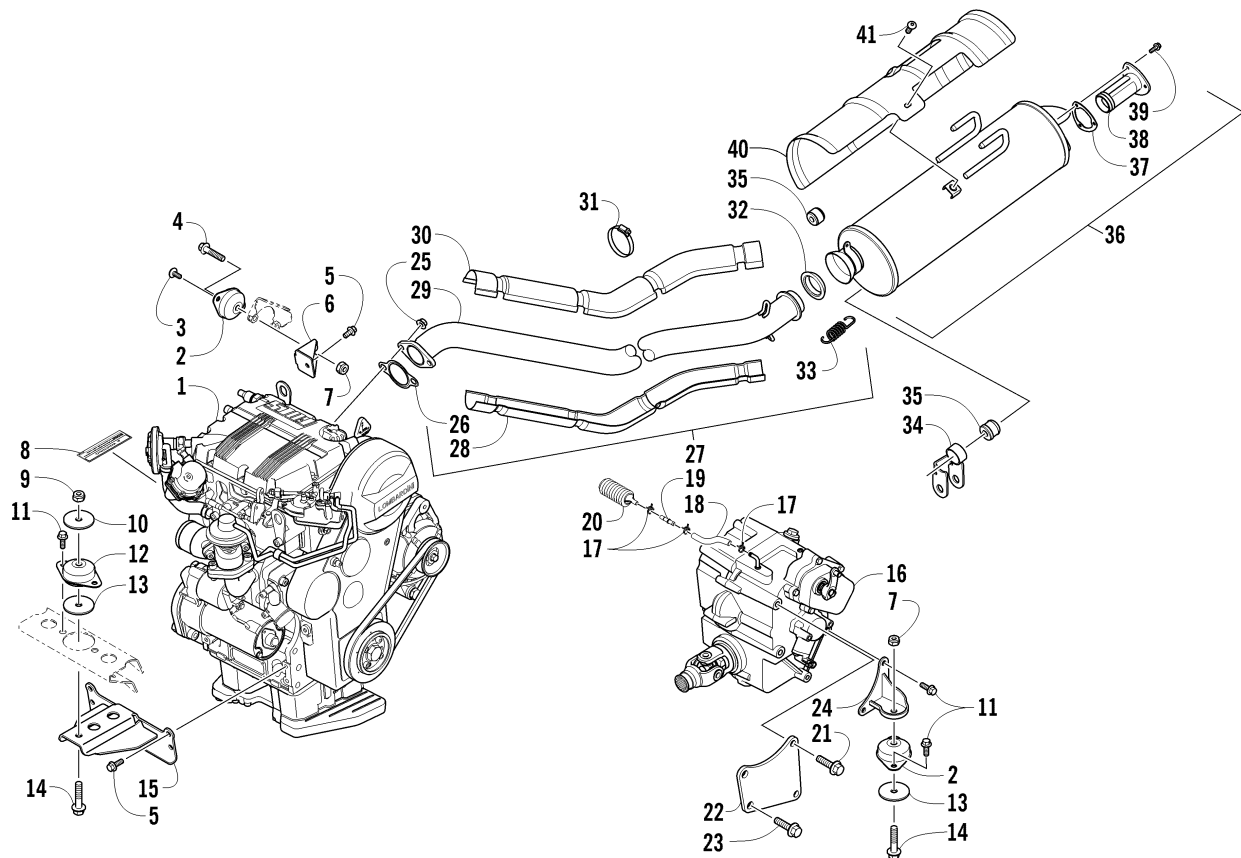

Item	Part No.	Qty	Name	Context	Footnote
1	0463-047	1	ENGINE,PACKAGE-DIESEL EGR-KD		
2	2406-323	3	Mount, Engine		
3	8468-820	2	Screw, Machine		
4	0423-736	1	Screw, Cap		
5	8408-816	5	Screw, Cap		
6	2506-186	1	Mounting, Bracket - Engine		
7	8422-002	3	Nut, Lock		
8	0411-426	1	Decal, Warning - Clutch		
9	0423-737	1	Nut, Lock		
10	0423-073	1	Washer		
11	8408-820	10	Screw, Cap		
12	2406-322	1	Mount, Engine		
13	2506-061	3	Washer		
14	8408-055	3	Screw, Cap		
15	2506-189	1	Bracket, Mounting - Engine - Front		
16	1502-853	1	TRANSMISSION ASSEMBLY (DIESEL)		
17	0423-315	3	Clamp, Hose		
18	0410-070	AR	Hose, Gasline - 25 ft		
19	0470-702	1	HOSE BARB,INTAKE MANIFOLD		
20	1402-620	1	BLADDER,CASE		


Item	Part No.	Qty	Name	Context	Footnote
21	8409-030	2	Screw, Cap		
22	0408-015	1	Plate, Mounting - Engine/Transmission		
23	0423-685	2	Screw, Cap		
24	2506-190	1	Bracket, Mounting - Engine - Right		
24	2506-191	1	Bracket, Mounting - Engine - Left		
25	3206-293	2	Nut M 8		
26	3206-296	1	EXHAUST PIPE GASKET		
27	0512-322	1	Pipe, Exhaust - Assembly	(inc. 28-31)	
28	0412-386	1	Shield, Exhaust Pipe - Lower		
29	0512-321	1	Pipe, Exhaust		
30	0412-385	1	Shield, Exhaust Pipe - Upper		
31	0423-317	4	Clamp, Hose - 32/50 (Norma 962)		
32	0412-375	1	Seal, Exhaust		
33	0612-668	2	Spring		
34	1506-732	1	Channel, Muffler Support		
35	0412-577	3	BUSHING,MUFFLER		
36	0512-595	1	Muffler - Assembly	(inc. 37-39)	
37	0412-313	1	Gasket, Spark Arrester		
38	0512-219	1	SPARK ARRESTER-ASSEMBLY		
39	8408-616	3	Screw, Cap		
40	0412-373	1	COVER,MUFFLER		
41	8477-610	3	Screw, Machine		

 EXHAUST MANIFOLD ASSEMBLY [96013]

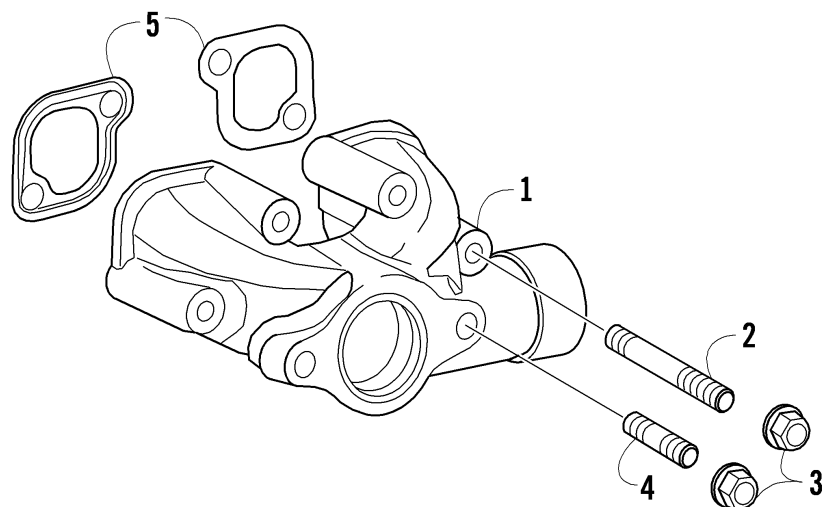


Item	Part No.	Qty	Name	Context	Footnote
1	3206-373	1	Manifold, Exhaust		
2	3206-292	4	Bolt, Stud		
3	3206-293	6	Nut M 8		
4	3206-297	2	Bolt, Stud		
5	3206-291	2	Gasket, Exhaust Manifold		

 EXTERNAL ALTERNATOR AND DRIVE PULLEY ASSEMBLIES [96015]

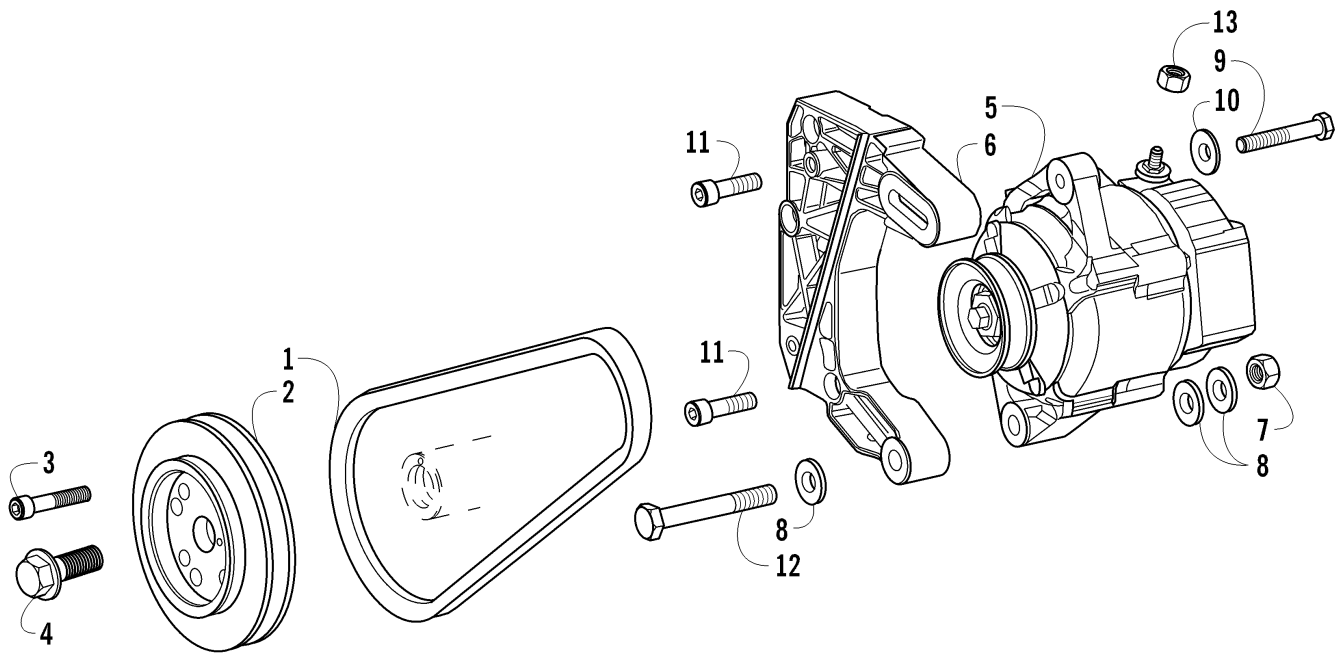


Item	Part No.	Qty	Name	Context	Footnote
1	3206-042	1	Belt		
2	3206-044	1	Pulley		
3	3206-043	4	Screw, Cap		
4	3206-041	1	Screw, Cap		
5	3206-303	1	Alternator		
6	3206-300	1	Support, Alternator		
7	3206-142	1	Nut		
8	3206-298	3	Washer		
9	3206-301	1	Screw, Cap		
10	3206-302	1	Washer		
11	3206-266	3	Screw, Cap		
12	3206-299	1	Screw, Cap		
13	3206-137	1	Nut		

 FLYWHEEL AND CROWN GEAR ASSEMBLY [92856]

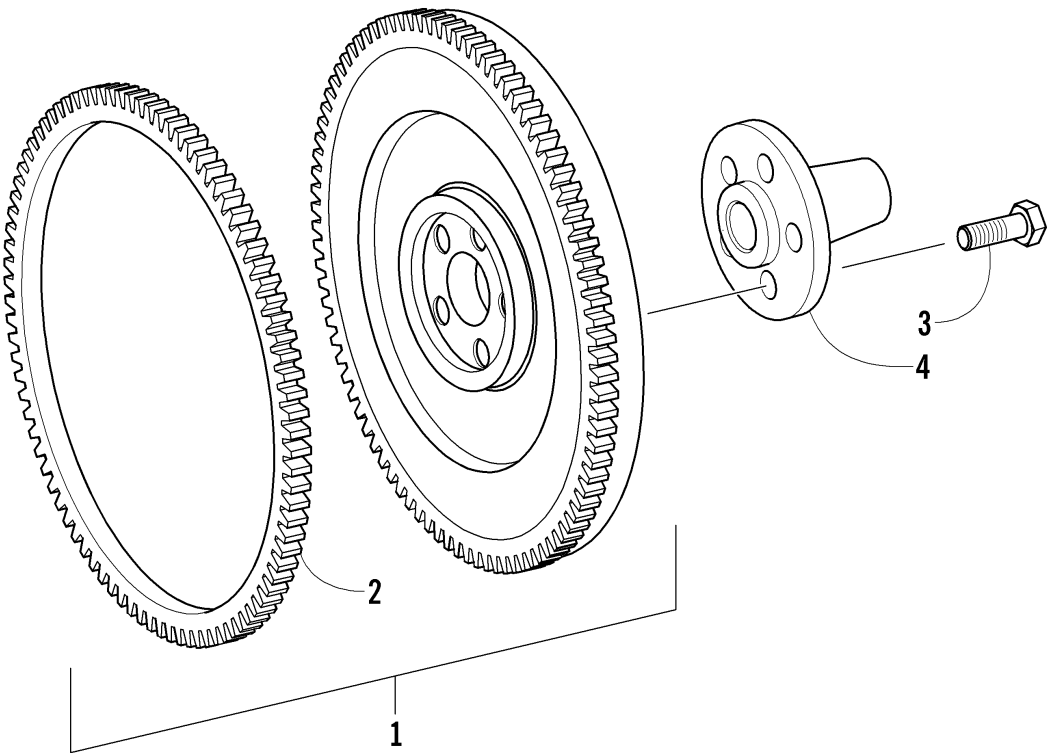

Item	Part No.	Qty	Name	Context	Footnote
1	3206-040	1	Flywheel	(inc. 2)	
.2	3206-037	1	Gear, Crown		
3	8409-040	5	Screw, Cap		
4	1402-560	1	Axle, Stub		

 
FRAME AND RELATED PARTS [300936]

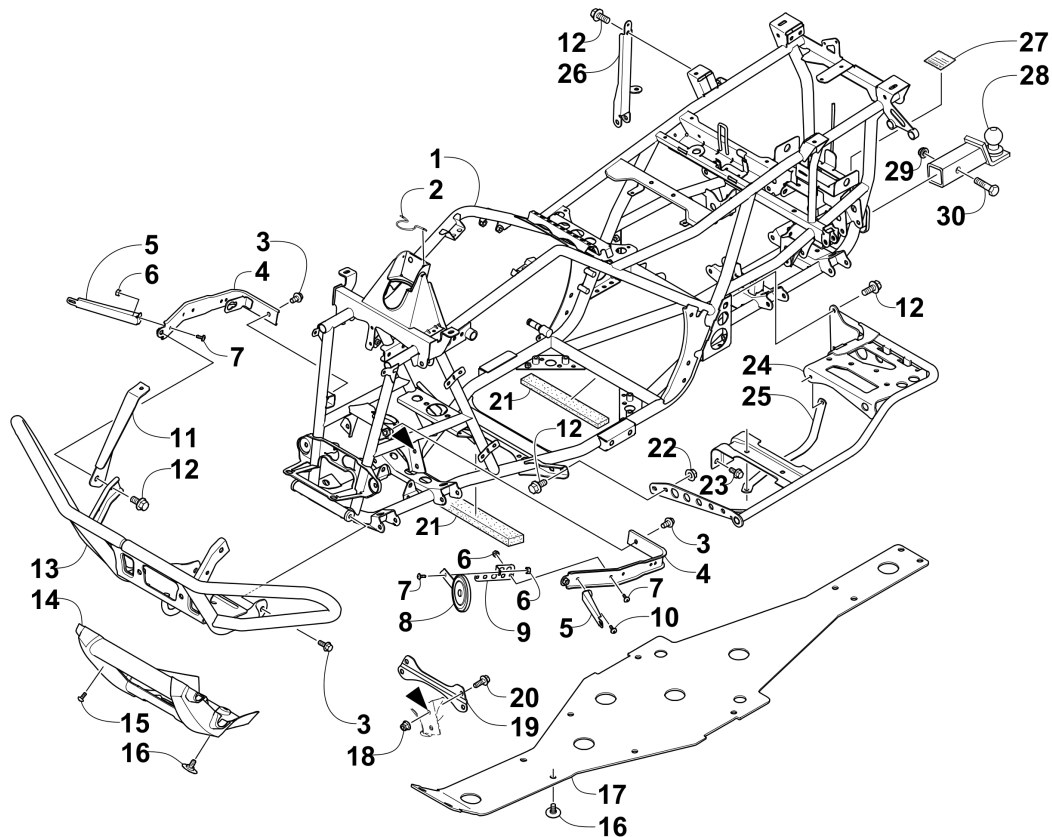

Item	Part No.	Qty	Name	Context	Footnote
1	4506-677	1	Frame, Main		
2	2416-401	1	Clip, Routing		
3	8409-020	4	Screw, Cap		
4	2506-813	1	Channel, Bumper Mounting - Right		
4	2506-285	1	Channel, Bumper Mounting - Left		
5	2416-162	1	Bracket, Support - Right		
5	2416-163	1	Bracket, Support - Left		
6	0623-038	3	Nut w/Washer		
7	8477-616	3	Screw, Machine		
8	0430-053	1	Horn, Electric - 12V		
9	2406-321	1	Bracket, Mounting - Horn		
10	8477-620	1	Screw, Machine		
11	1506-562	1	Bracket, Mounting - Bumper - Right		
11	1506-563	1	Bracket, Mounting - Bumper - Left		
12	8408-816	11	Screw, Cap		
13	1506-855	1	Bumper		
14	1406-360	1	Fascia, Bumper - Front		
15	0423-419	2	Screw, Machine		
16	0423-101	12	Screw, Shoulder		
17	2406-253	1	Panel, Belly		

Item	Part No.	Qty	Name	Context	Footnote
18	0423-744	2	Nut, Lock		
19	2516-852	1	Brace, A-Arm		
20	8409-025	2	Screw, Cap		
21	0406-289	2	Pad, Frame		
22	8424-802	4	Nut		
23	8409-016	3	Screw, Cap		
24	1506-848	1	Footrest - Right		
24	1506-849	1	Footrest - Left		
25	2406-216	1	Strap, Footrest - Right		
25	2406-217	1	Strap, Footrest - Left		
26	2506-447	1	Bracket, Support		
27	4411-550	1	Decal, Warning - Towing		
28	0541-857	1	Mount, Ball Hitch	(inc. 29-30)	
.29	0423-690	1	Nut, Lock		
.30	0423-693	1	Screw, Cap		

 FRONT DRIVE GEARCASE ASSEMBLY [300532]

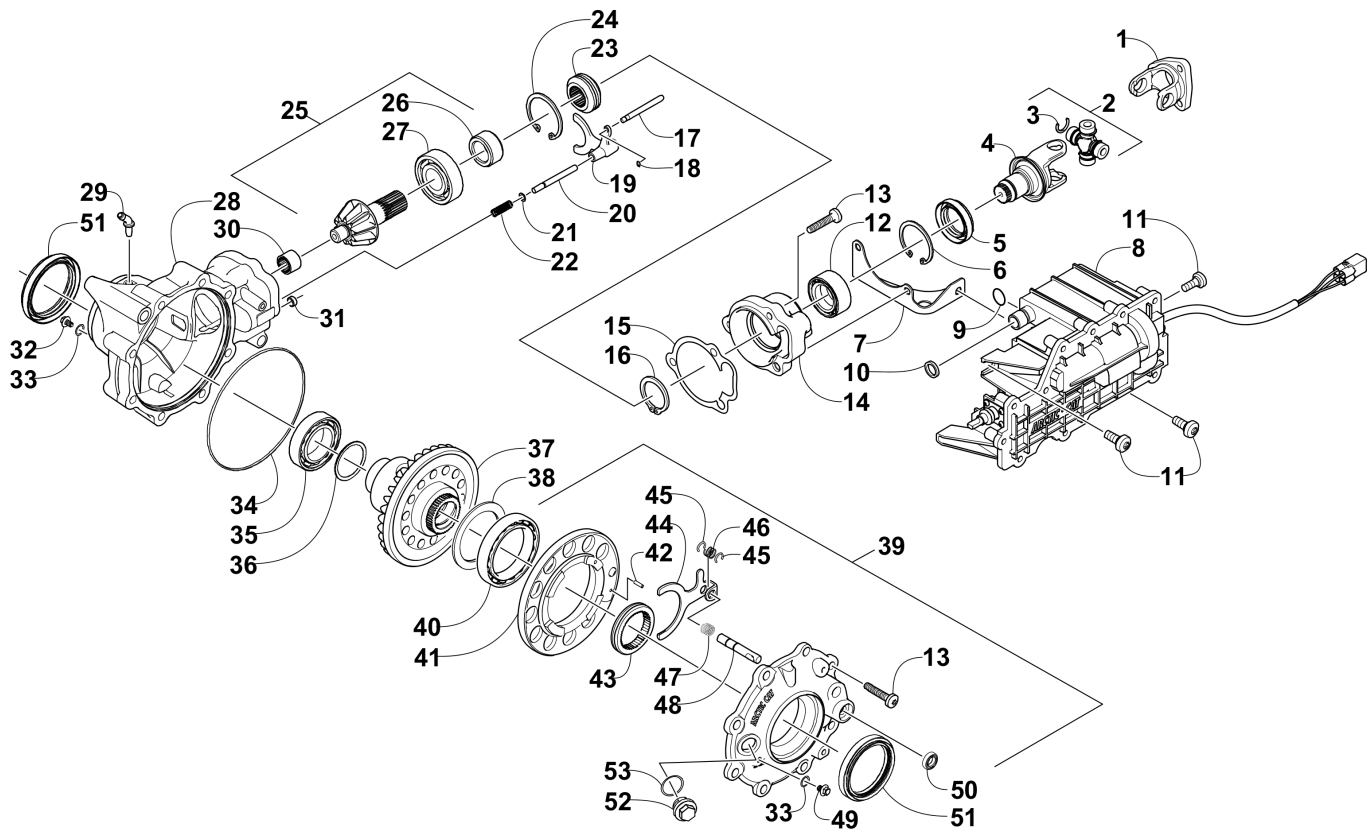


Item	Part No.	Qty	Name	Context	Footnote
Not Shown	2502-133	1	Gearcase, Front - Assembly		
1	1402-369	1	Yoke, Flange		
2	1402-164	1	Joint, Universal - Set	(inc. 3)	
.3	0423-450	4	Ring, Retaining		
4	0502-517	1	Yoke, Front End - Assembly		
5	1402-011	1	Seal		
6	0423-423	1	Ring, Retaining		
7	1502-237	1	Bracket, Actuator		
8	1502-909	1	Actuator, Electric - 2X 4X	(inc. 9)	
.9	1402-981	1	O-Ring		
10	0423-892	1	O-Ring		
11	0423-396	3	Screw, Self-Tapping		
12	1402-043	1	Bearing		
13	0423-118	11	Screw, Self-Tapping		
14	0502-528	1	Housing, Pinion		
15	0402-947	1	Gasket, Flange		
16	0423-417	1	Ring, Retaining		
17	0402-997	1	Shaft, Selector		
18	0423-402	1	Ring, Retaining		

Item	Part No.	Qty	Name	Context	Footnote
19	0402-998	1	Fork, Selector		
20	0402-417	1	Shaft, Shuttle		
21	0423-147	1	O-Ring		
22	0402-999	1	Spring, Return		
23	0402-413	1	Coupler, Drive		
24	1423-067	1	Ring, Retaining		
25	1502-863	1	Gear, Pinion - Assembly - 10T	(inc. 26-27)	
26	1402-977	1	Collar, Retaining		
27	0402-327	1	Bearing		
28	1502-856	1	Housing, Gearcase		
29	2402-160	1	Fitting, Elbow		
30	0402-328	1	Bearing		
31	0402-411	1	Pin, Dowel		
32	1402-210	1	Plug, Magnetic	(inc. one No. 33)	
33	0423-153	2	O-Ring		
34	0423-149	1	O-Ring		
35	0402-393	1	Bearing		
36	0402-405	AR	Shim, 41 x 49 x 1.3 mm		
36	0402-406	AR	Shim, 41 x 49 x 1.4 mm		
36	0402-407	AR	Shim, 41 x 49 x 1.5 mm		
36	0402-408	AR	Shim, 41 x 49 x 1.6 mm		
36	0402-409	AR	Shim, 41 x 49 x 1.7 mm		
37	1502-860	1	Gear, Ring - 36T		
38	1402-074	AR	Shim, 61 x 69 x 1.3 mm		
38	1402-075	AR	Shim, 61 x 69 x 1.4 mm		
38	1402-076	AR	Shim, 61 x 69 x 1.5 mm		
38	1402-077	AR	Shim, 61 x 69 x 1.6 mm		
38	1402-078	AR	Shim, 61 x 69 x 1.7 mm		
39	2502-205	1	Cover, Gearcase	(inc. one No. 33, 40-50, and one No. 51)	
40	1402-053	1	Bearing		
41	0502-413	1	Flange, Bearing		
42	1402-079	1	Pin, Parallel		
43	1402-042	1	Collar, Sliding		
44	1402-054	1	Fork		
45	1402-058	2	Ring, Retaining		
46	1402-057	1	Spring		
47	1402-063	1	Spring		
48	1402-656	1	Shaft, Lock		
49	1402-211	1	Plug, Oil Level	(inc. one No. 33)	

Item	Part No.	Qty	Name	Context	Footnote
.50	1402-056	1	Seal		
.51	2402-240	2	Seal		
.52	0402-333	1	Plug, Fill	(inc. 53)	
.53	0423-154	1	O-Ring		

 
FRONT RACK, BODY PANEL, AND HEADLIGHT ASSEMBLIES [300934]

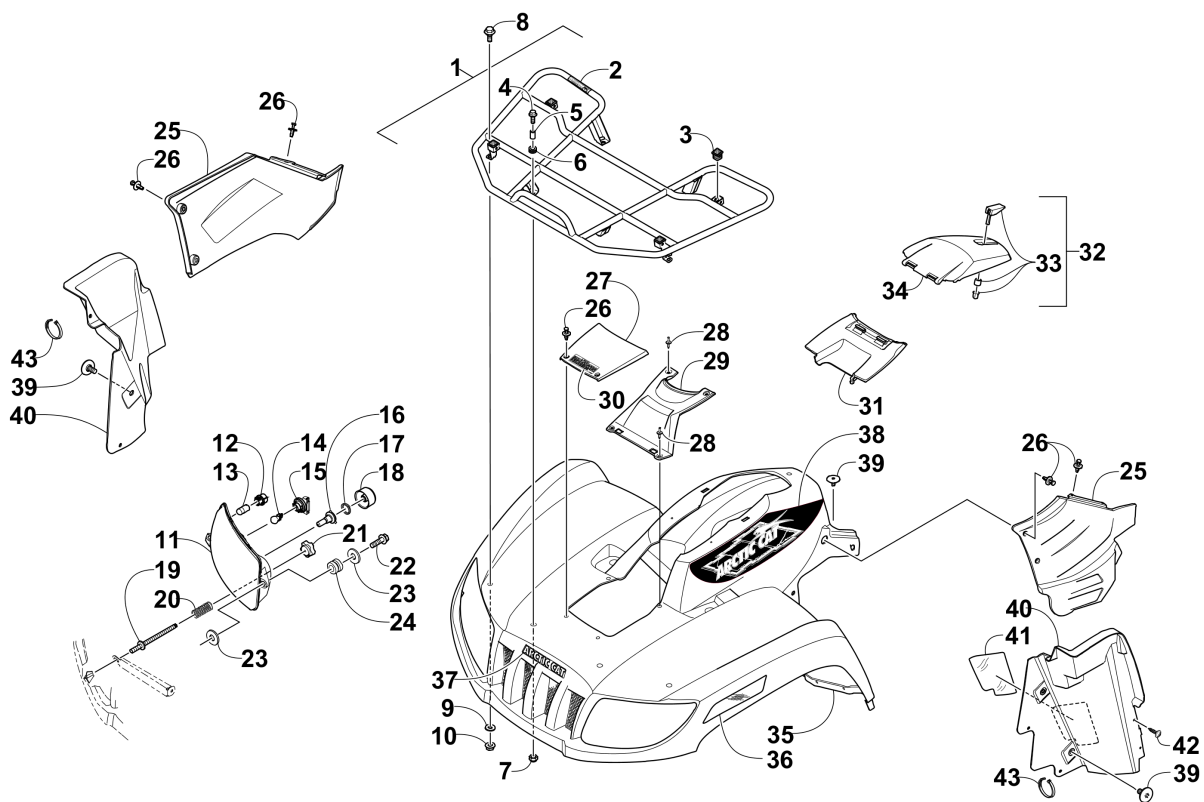

Item	Part No.	Qty	Name	Context	Footnote
1	2506-106	1	Rack, Front - Assembly	(inc. 2-3)	
.2	0411-576	1	Decal, Warning - Load		
.3	0441-592	4	Bushing		
4	8410-835	4	Screw, Cap		
5	0423-669	4	Spacer		
6	0423-465	4	Grommet		
7	8432-802	4	Nut, Lock		
8	0423-654	2	Screw, Shoulder		
9	8050-222	2	Washer		
10	8427-602	2	Nut, Lock		
11	0509-036	1	Headlight Assembly - Right	(inc. 12-18)	
11	0509-037	1	Headlight Assembly - Left	(inc. 12-18)	
.12	0409-102	2	Socket, Position Bulb		
.13	0409-101	2	Bulb, Position		
.14	0409-099	2	Bulb, Turn Signal		
.15	0409-100	2	Socket, Turn Signal Bulb		
.16	0409-096	2	Bulb, Headlight		
.17	0409-097	2	Retainer, Spring		
.18	0409-098	2	Boot, Rubber		
19	0423-514	2	Stud, Adjuster - Headlight		

Item	Part No.	Qty	Name	Context	Footnote
20	0423-522	2	Spring, Adjuster		
21	0423-513	2	Knob, Adjuster		
22	0623-785	4	Screw, Self-Tapping		
23	8050-217	8	Washer		
24	0423-447	4	Grommet		
25	2406-404	1	Panel, Side - Lower - Right		
25	2406-405	1	Panel, Side - Lower - Left		
26	0423-535	10	Rivet, Reinstallable		
27	1406-358	1	Cover, Access		
28	0623-362	4	Clip, Retaining		
29	1406-484	1	Cover, Steering Post		
30	2411-520	1	Decal, Caution - Coolant		
31	0470-513	1	Cover, Storage Box		
32	2506-234	1	Lid, Storage Box w/Latch	(inc. 33-34)	
.33	1406-599	1	Latch, Storage Box		
.34	0470-514	1	Lid, Storage Box		
35	2506-936	1	Panel, Fender Green		
36	0411-818	1	Decal, Reflector - Right - Amber		
36	0411-819	1	Decal, Reflector - Left - Amber		
37	1411-725	1	Decal - "Arctic Cat"		
38	4411-360	1	Decal, Side - Upper Right - Green		
38	4411-361	1	Decal, Side - Upper Left - Green		
39	0423-101	5	Screw, Shoulder		
40	2506-434	1	Panel, Splash - Right		
40	2506-383	1	Panel, Splash - Left	(inc. 41)	
.41	0412-404	1	Foil, Protective		
42	0423-719	2	Screw, Self-Tapping		
43	0123-788	AR	Tie, Cable - 8 in.		

 
FRONT SUSPENSION ASSEMBLY [300528]

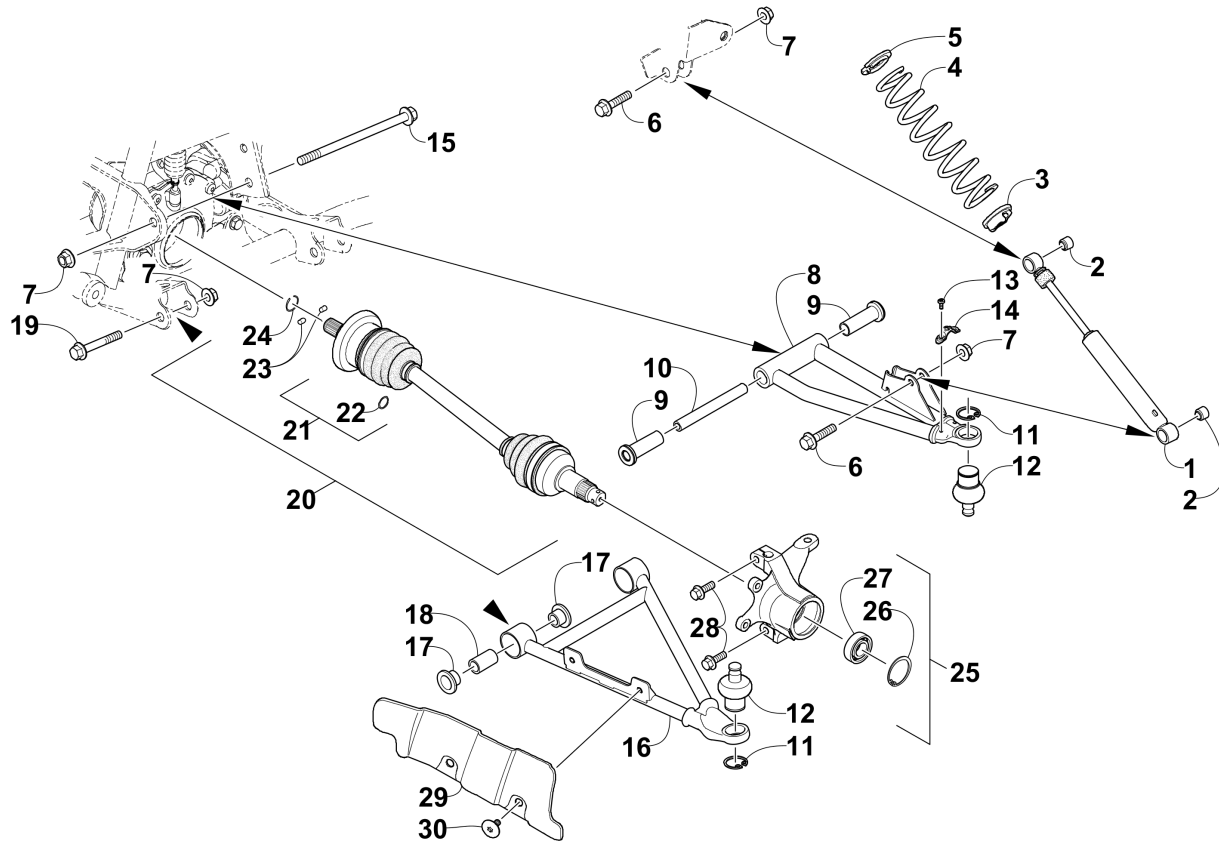

Item	Part No.	Qty	Name	Context	Footnote
1	0403-176	2	Shock Absorber	(inc. 2)	
.2	0403-182	4	Bushing		
3	0403-395	2	Cam, Adjuster - Spring		
4	0403-173	2	Spring, Suspension Black		
5	1603-889	2	Retainer, Spring		
6	8409-040	4	Screw, Cap		
7	0423-744	10	Nut, Lock		
8	0503-416	1	A-Arm, Front Upper Right - Black - Assembly	(inc. 9-12)	
8	0503-417	1	A-Arm, Front Upper Left - Black - Assembly	(inc. 9-12)	
.9	0403-289	4	Bushing, Upper A-Arm Suspension		
.10	0403-439	2	Axle		
.11	0423-009	4	Clip, Ball Joint		
.12	0405-483	4	Joint, Ball - Assembly (Double Stake)		
13	0423-946	4	Screw, Self-Tapping		
14	1502-594	2	Clamp, Routing		
15	0423-334	2	Screw, Cap		
16	0503-376	1	A-Arm, Front Lower - Right - Assembly (Black)	(inc. 17-18 and two No. 11-12)	
16	0503-377	1	A-Arm, Front Lower - Left - Assembly (Black)	(inc. 17-18 and two No. 11-12)	
.17	0403-409	8	Bushing		

Item	Part No.	Qty	Name	Context	Footnote
.18	0403-438	4	Collar		
19	8409-075	4	Screw, Cap		
20	2502-188	2	Axle, Drive - Right	(inc. 21-24)	
.21	2436-111	2	Repair Kit, Boot	(inc. 22)	
.22	1441-988	2	Clip, Retaining		
.23	1402-885	4	Pin, Detent		
.24	1402-889	2	Clip, Retaining		
25	0505-576	1	Knuckle, Steering - Right - Assembly	(inc. 26-27)	
25	0505-577	1	Knuckle, Steering - Left - Assembly	(inc. 26-27)	
.26	0423-423	2	Ring, Retaining		
.27	1402-809	2	Bearing		
28	0423-998	4	Screw, Shoulder		
29	1406-034	1	Guard, Boot - Axle - Right		
29	1406-035	1	Guard, Boot - Axle - Left		
30	0423-545	4	Screw, Shoulder		

 
FUEL SYSTEM INJECTION PUMP ASSEMBLY [96006]

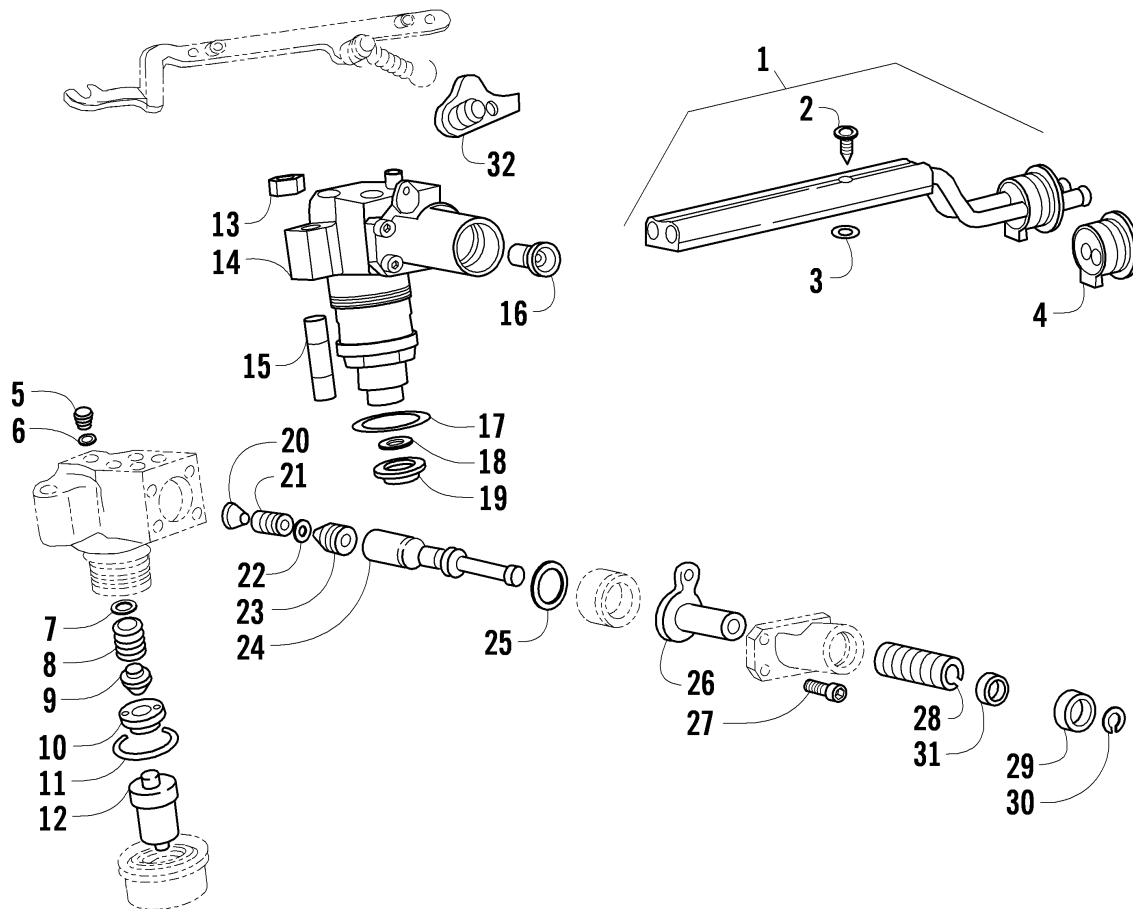

Item	Part No.	Qty	Name	Context	Footnote
1	3206-092	1	Pipe, Delivery	(inc. 2-4)	
.2	3206-093	4	Screw, Cap		
.3	3206-095	4	Seal, Ring		
.4	3206-094	1	Seal, Delivery Pipe		
5	3206-098	2	Valve, Bleed		
6	3206-126	2	Gasket		
7	3206-103	2	Spacer - 2.00		
7	3206-104	2	Spacer - 1.90		
7	3206-105	2	Spacer - 1.80		
7	3206-106	2	Spacer - 1.70		
7	3206-107	2	Spacer - 1.60		
7	3206-108	2	Spacer - 1.50		
7	3206-109	2	Spacer - 1.40		
7	3206-110	2	Spacer - 1.30		
7	3206-111	2	Spacer - 1.20		

Item	Part No.	Qty	Name	Context	Footnote
7	3206-112	2	Spacer - 1.10		
7	3206-113	2	Spacer - 1.00		
8		1	Spring, Pressure		Not a Service Part
9	3206-114	2	Drive Rod		
10	3206-115	2	Spacer		
11	3206-125	2	O-Ring		
12	3206-123	2	Nozzle		
13	3206-245	4	Nut		
14	3206-102	2	Pump, Injection - Nozzle		
15	3206-097	4	Bolt, Stud		
16	3206-133	2	Tappet		
17	3206-122	2	O-Ring		
18	3206-124	2	Gasket, Copper		
19	3206-059	2	Arrester, Spark		
20	3206-116	2	Filler		
21	3206-099	2	Spring, Delivery Valve		
22	3206-117	2	Gasket, Valve		
23	3206-100	2	Valve, Delivery		
24		2	Plunger, Injection		Not a Service Part
25	3206-118	2	O-Ring		
26	3206-119	2	Sleeve		
27	3206-120	8	Screw, Cap		
28	3206-101	2	Spring, Tappet		
29		1	Push Rod		Not a Service Part
30	3206-121	2	Circlip		
31	3206-375	2	Retainer, Lower		
32	3206-127	1	Plate, Locking		

 
FUEL TANK AND FUEL FILTER ASSEMBLIES [96909]

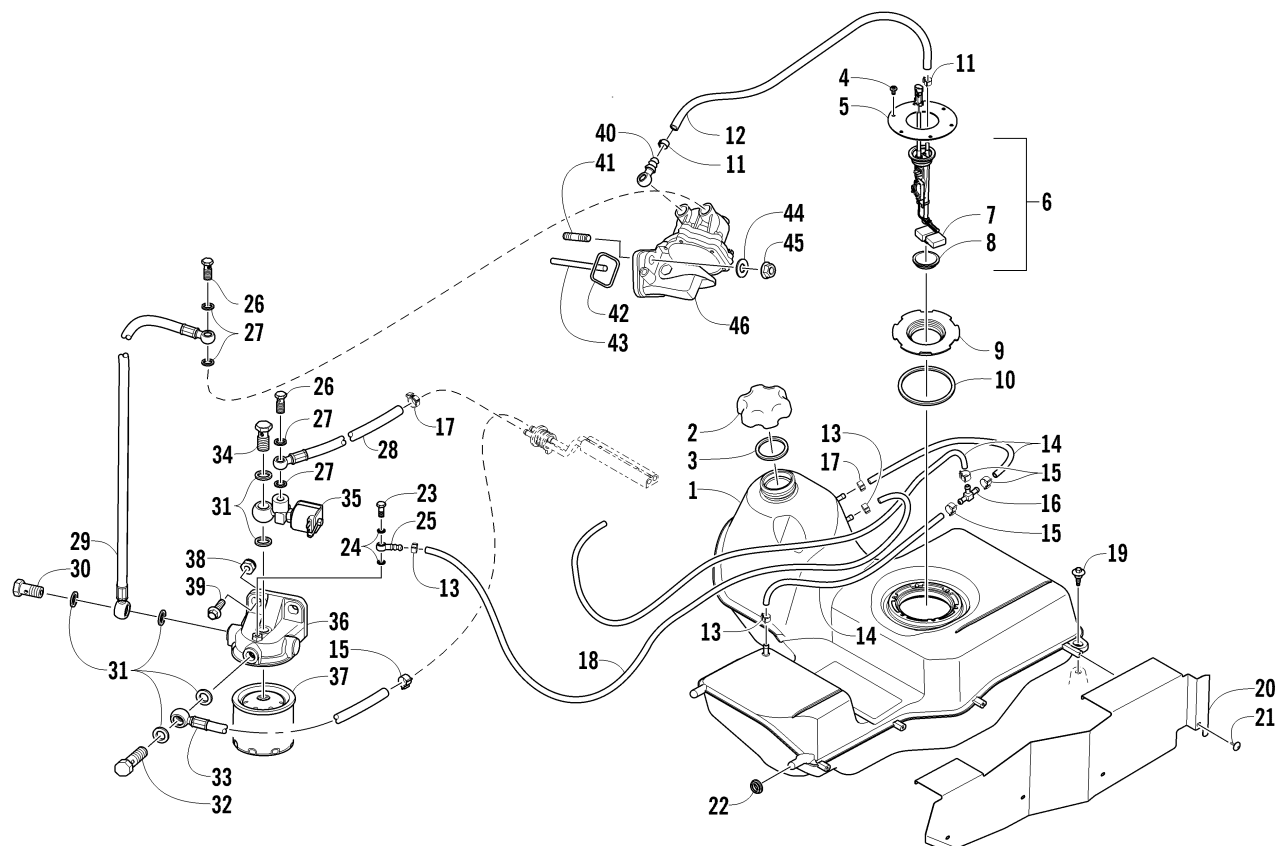

Item	Part No.	Qty	Name	Context	Footnote
1	0570-292	1	Tank, Fuel - Assembly	(inc. 2-10)	
2	0470-653	1	Cap, Fuel Tank	(inc. 3)	
3	0109-733	1	Gasket, Gas Tank Cap		
4	0423-898	6	Screw, Self-Tapping		
5	0470-848	1	Plate, Retaining		
6	0570-228	1	SENDER,FUEL LEVEL-ASSEMBLY	(inc. 7-8)	
7	2670-235	1	Float		
8	0470-521	1	Seal, Fuel Level Sensor		
9	0470-847	1	Adapter, Fuel Sensor		
10	0470-838	1	Seal		
11	0423-689	2	Clamp, Hose		
12	0410-143	AR	Hose, Gasline - 25 ft		
13	0423-688	3	Clamp, Hose		
14	0410-070	AR	Hose, Gasline - 25 ft		
15	0423-670	4	Clamp, Hose		
16	0109-332	1	T-Fitting		
17	0423-835	2	Clamp, Hose		
18	0410-142	AR	Hose - 25 ft		
19	0423-732	2	Screw, Shoulder		
20	0470-715	1	Shield, Heat		

Item	Part No.	Qty	Name	Context	Footnote
21	0623-797	4	Screw, Self-Tapping		
22	0423-460	2	Grommet		
23	3206-006	1	Bolt, Banjo-Fitting		
24	3206-007	2	Gasket		
25	3206-008	1	Fitting		
26	3206-009	2	Bolt, Banjo-Fitting		
27	3206-010	4	Washer, Crush		
28	3206-335	1	Hose, Fuel		
29	3206-015	1	Hose, Fuel		
30	3206-011	1	Bolt, Banjo-Fitting		
31	3206-004	6	Washer, Crush		
32	3206-005	1	Bolt, Banjo-Fitting w/Valve		
33	3206-013	1	Hose, Fuel		
34	3206-003	1	Bolt, Banjo-Fitting		
35	3206-002	1	Electro-Valve		
36	3206-001	1	Fuel Filter - Assembly		
37	3206-012	1	FILTER, FUEL		
38	8432-802	2	Nut, Lock		
39	8408-825	2	Screw, Cap		
40	3206-258	1	Fitting		
41	3206-254	2	Bolt, Stud		
42	3206-256	1	O-Ring		
43	3206-257	1	Rod, Push		
44	3206-234	2	Washer		
45	3206-245	2	Nut		
46	3206-255	1	FEED PUMP		

 
HANDLEBAR ASSEMBLY [95996]

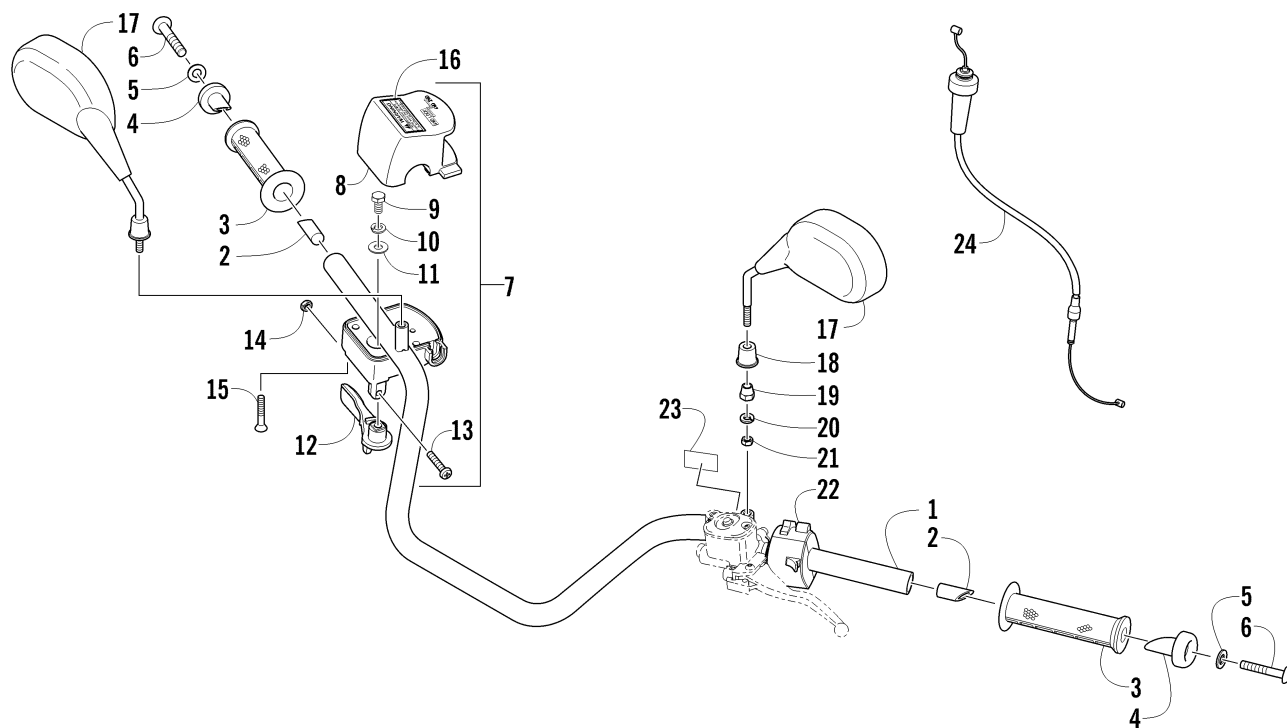

Item	Part No.	Qty	Name	Context	Footnote
1	0505-522	1	Handlebar		
2	0405-218	2	Plug, Handlebar		
3	0405-147	2	Grip, Handlebar		
4	0405-149	2	End Cap, Handlebar		
5	8050-247	2	Washer		
6	8477-845	2	Screw, Machine		
7	0509-054	1	Case, Throttle - Assembly	(inc. 8-15)	
8	0409-141	1	Cover, Throttle Case w/Switch		
9	3007-392	1	Bolt		
10	3004-447	1	Washer, Lock		
11	3003-030	1	Washer		
12	0409-133	1	Lever, Throttle		
13	3423-014	1	Screw, Machine		
14	3423-327	1	Nut		
15	3423-199	2	Screw, Machine		
16	0411-966	1	Decal, Warning - Differential Lock		
17	2406-630	1	Mirror - Right	(inc. 18-21)	
17	2406-631	1	Mirror - Left	(inc. 18-21)	
18	0423-985	2	Cover		
19	0423-986	2	Nut, Adjuster		

Item	Part No.	Qty	Name	Context	Footnote
.20	0423-987	2	Washer, Lock		
.21	0423-988	2	Nut		
22	0409-081	1	Switch, Control - Assembly		
23	1411-865	1	Decal, Brake Lever Lock		
24	0487-044	1	Cable, Throttle		

 
HYDRAULIC BRAKE ASSEMBLY [300105]

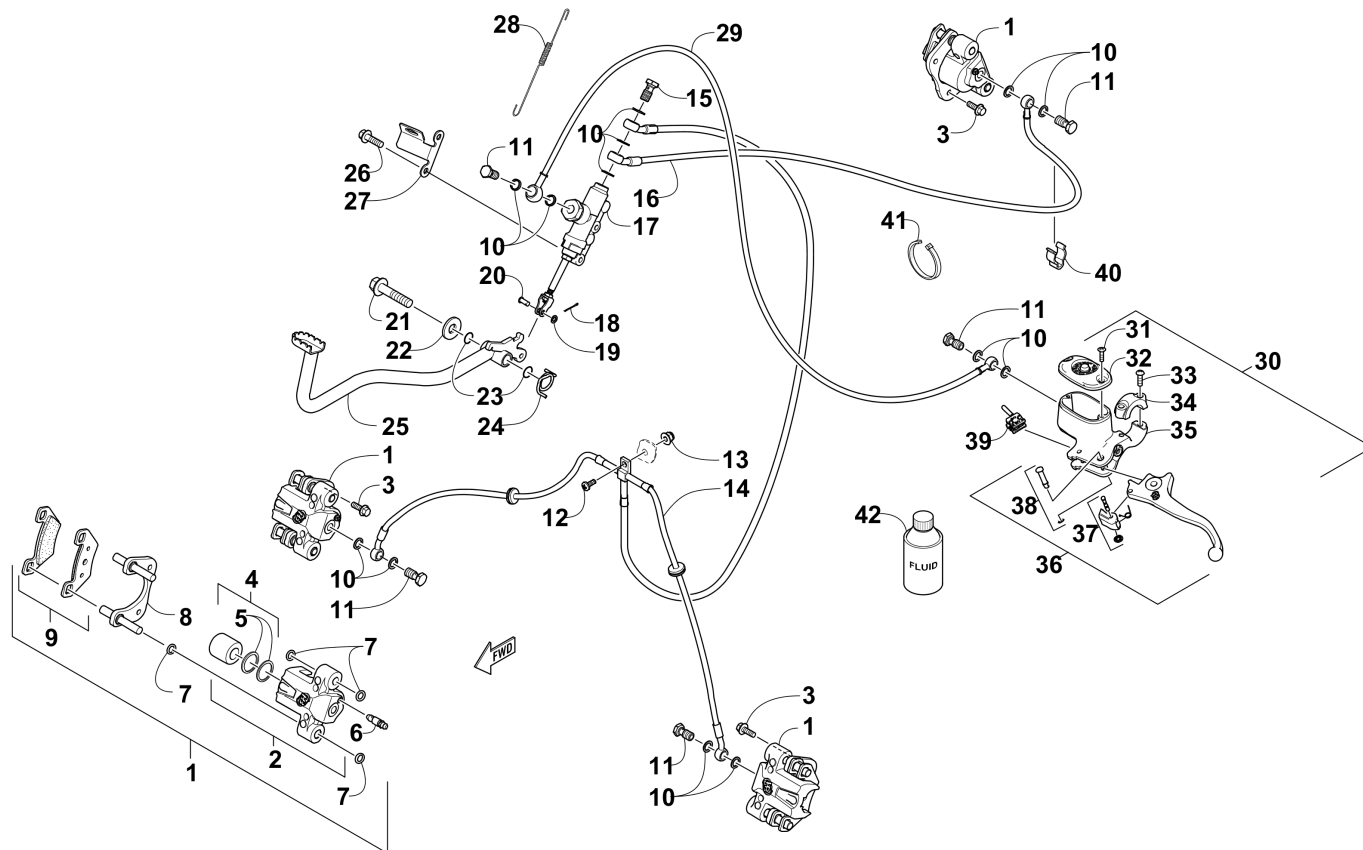

Item	Part No.	Qty	Name	Context	Footnote
1	1436-422	1	Caliper, Brake	(inc. 2-9)	Front Right
1	1436-423	2	Caliper, Brake	(inc. 2-9)	Front Left & Rear Right
2	1436-160	1	Housing, Caliper - Assembly	(inc. 3-6)	Front Right
2	1436-161	2	Housing, Caliper - Assembly	(inc. 3-6)	Front Left & Rear Right
3	8408-821	6	Screw, Cap		
4	0502-606	3	Piston/Seal Set	(inc. 5)	
5	0502-607	3	Seal Set		
6	0502-609	3	Valve, Bleed		
7	0502-608	3	O-Ring, Guide - Set		
8	0502-605	3	Bracket Assembly		
9	1436-420	3	Pad, Brake - Set		
10	0423-178	13	Washer, Crush		
11	0423-413	5	Bolt, Banjo-Fitting		
12	8476-625	1	Screw, Machine		
13	8427-602	1	Nut, Lock		
14	1502-148	1	Hose, Brakeline - Assembly		
15	0423-610	1	Bolt, Double Banjo-Fitting		
16	1402-594	1	Hose, Brakeline		
17	1502-147	1	Brake Assembly		

Item	Part No.	Qty	Name	Context	Footnote
18	0117-868	1	Pin, Cotter		
19	8050-217	1	Washer		
20	1402-377	1	Pin, Clevis		
21	8408-816	1	Screw, Cap		
22	8050-252	1	Washer		
23	1602-213	2	O-Ring		
24	0502-807	1	Spring, Brake Lever		
25	1502-063	1	Lever, Brake		
26	8408-625	2	Screw, Cap		
27	0502-840	1	Bracket, Switch		
28	0502-785	1	Spring, Brake Switch		
29	1402-592	1	Hose, Brakeline		
30	1502-902	1	Cylinder, Master Brake - Black - Assembly	(inc. 31-39)	
31	0502-566	1	Screw, Machine		
32	0502-868	1	Cover, Reservoir		
33	0502-568	1	Screw, Machine		
34	0502-869	1	Clamp, Handlebar		
35	0502-704	1	Master Cylinder Assembly		
36	1502-904	1	Lever Assembly - Kit	(inc. 37-38)	
37	1502-905	1	Lock, Brake Lever - Kit		
38	0502-580	1	Lever Pin - Kit		
39	0502-564	1	Kit, Brake Light Switch		
40	1502-115	2	Clip, Brakeline Hose		
41	0123-788	AR	Tie, Cable - 8 in.		
42	5639-848	AR	Fluid, Brake - 12 oz		

 
INSTRUMENT POD ASSEMBLY [300938]

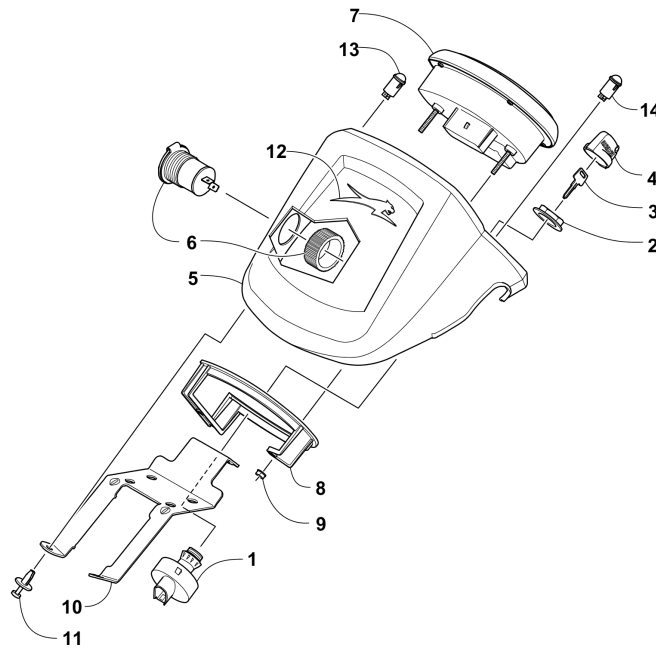

Item	Part No.	Qty	Name	Context	Footnote
1	0430-105	1	Switch, Ignition - Assembly	(inc. 2-4)	
.2	0430-112	1	Nut, Retaining		
.3	0430-109	1	Key, Ignition - A		
Comments for Part Num. 0430-109 When ordering a cut key, p/n 0409-003 the dealer must indicate the key code, year and model (ex: C220 2014 WC Trail) in the “Dealer Comment” section on Cat Tracker. This is required due to some duplication of previous model key codes and will ensure customers receive the correct cut key. Below are the dirt product key codes: Previous key code range: A000 – A249, B000 – B249, C000– C249 or D000 – D249 (Dirt product up to 2014 excluding the 2014 WC Trail) New key code range: C201 – C350 or D201-350 (2014 WC trail, All 2015 Wildcats, Wildcat Trails, Wildcat Sports, Prowlers, HDX’s; and ATV’s 500 and up)					
.3	0430-110	1	Key, Ignition - B		
Comments for Part Num. 0430-110 When ordering a cut key, p/n 0409-003 the dealer must indicate the key code, year and model (ex: C220 2014 WC Trail) in the “Dealer Comment” section on Cat Tracker. This is required due to some duplication of previous model key codes and will ensure customers receive the correct cut key. Below are the dirt product key codes: Previous key code range: A000 – A249, B000 – B249, C000– C249 or D000 – D249 (Dirt product up to 2014 excluding the 2014 WC Trail) New key code range: C201 – C350 or D201-350 (2014 WC trail, All 2015 Wildcats, Wildcat Trails, Wildcat Sports, Prowlers, HDX’s; and ATV’s 500 and up)					
.4	0430-111	1	Cover, Key		

Item	Part No.	Qty	Name	Context	Footnote
5	0505-616	1	Instrument Pod Black		
6	0641-897	1	Outlet, Accessory - 12V		
7	0520-168	1	Gauge, LCD		
8	0420-065	1	Bracket, Retaining		
9	0423-493	2	Nut w/Washer		
10	2506-470	1	Bracket, Mounting - Instrument Pod		
11	0423-535	2	Rivet, Reinstallable		
12	4411-479	1	Decal - "AirCat"		
13	0420-075	1	Light, Indicator - Battery		
14	0420-074	1	Light, Indicator - Glow Plug		

 
INTAKE MANIFOLD AND EGR SYSTEM [96007]

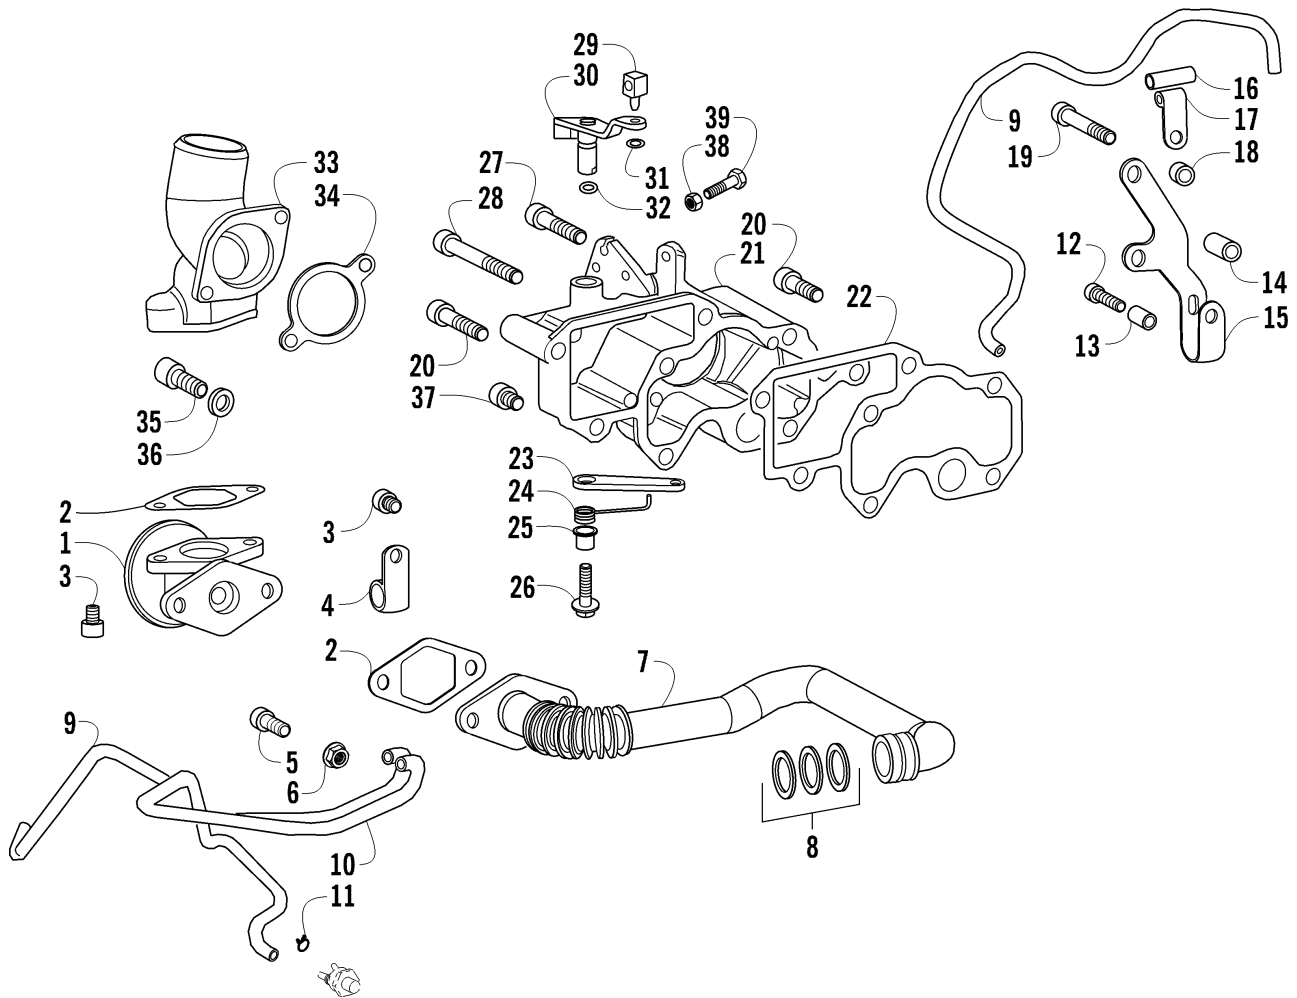

Item	Part No.	Qty	Name	Context	Footnote
1	3206-343	1	Valve, EGR		
2	3206-348	2	Gasket		
3	3206-339	2	Screw, Cap		
4	3206-352	1	Clamp		
5	3206-346	2	Screw, Cap		
6	3206-293	2	Nut M 8		
7	3206-345	1	Pipe, Union		
8	3206-344	1	Ring, Seal		
9	3206-351	2	Hose		
10	3206-349	1	Hose		
11	3206-350	3	Clamp		
12	3206-267	1	Screw		
13	3206-353	1	Spacer		
14	3206-356	1	Spacer		
15	3206-347	1	Bracket		


Item	Part No.	Qty	Name	Context	Footnote
16	3206-354	1	Sheathing		
17	3206-325	1	Clamp		
18	3206-355	1	Spacer		
19	0	1	Screw, Cap		Not a Service Part
20	3206-276	3	Screw, Cap		
21	3206-278	1	Inlet Manifold		
22	3206-277	1	Gasket, Intake Manifold		
23	3206-286	1	Lever, Internal		
24	3206-283	1	Spring, Recovery		
25	3206-284	1	Sleeve		
26	3206-285	1	Screw, Cap		
27	3206-280	1	Screw, Cap		
28	3206-279	1	Screw, Cap		
29	3206-288	1	Pin		
30	3206-287	1	Lever, External		
31	3206-242	1	Circlip		
32	3206-281	1	O-Ring		
33	3206-357	1	Flange, Intake		
34	3206-289	1	Gasket		
35	3206-169	2	Screw, Cap		
36	3206-234	2	Washer		
37	3206-266	4	Screw, Cap		
38	3206-137	1	Nut		
39	3206-282	1	Screw, Cap		

 LICENSE PLATE HOLDER ASSEMBLY [95896]

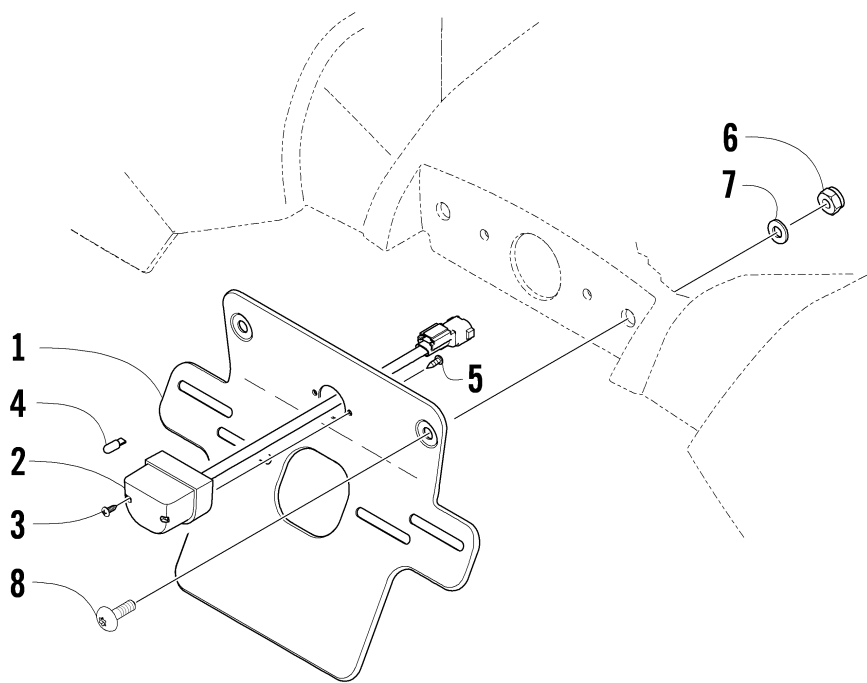

Item	Part No.	Qty	Name	Context	Footnote
1	2506-914	1	Mount, License Plate		
2	3304-772	1	Light, License Plate Assembly	(inc. 3-4)	
3	3305-399	2	Screw, Self-Tapping		
4	3303-847	1	Bulb		
5	0123-950	2	Screw, Self-Tapping		
6	8432-802	2	Nut, Lock		
7	8050-247	2	Washer		
8	8468-820	2	Screw, Machine		

 
OIL PUMP AND PAN ASSEMBLY [96011]

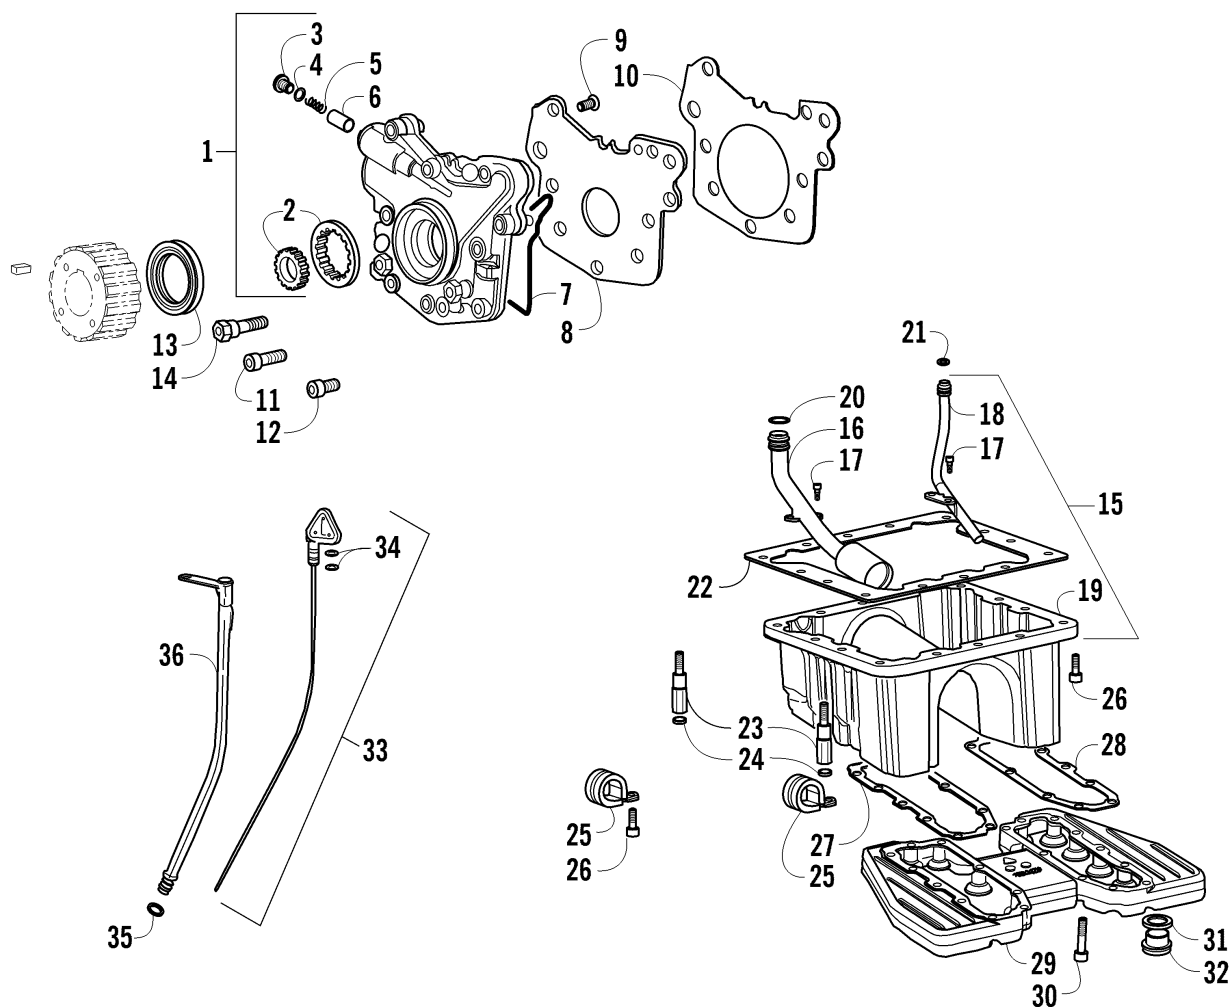

Item	Part No.	Qty	Name	Context	Footnote
1	3206-171	1	Pump, Oil	(inc. 2-10)	
2	3206-167	1	Rotors, Oil Pump		
3	3206-163	1	Plug		
4	3206-162	1	Gasket		
5	3206-164	1	Spring, Pressure Valve		
6	3206-165	1	Rod, Drive		
7	3206-172	1	O-Ring		
8		1	Plate		Not a Service Part
9	3206-166	3	Screw, Cap		
10	3206-173	1	GASKET		
11	3206-168	1	Screw, Cap		
12	3206-169	6	Screw, Cap		
13	3206-161	1	Seal		
14	3206-174	2	Screw, Shoulder		
15	3206-179	1	OIL PAN ASSY.	(inc. 16-19)	


Item	Part No.	Qty	Name	Context	Footnote
.16		1	Pipe, Oil - Intake		Not a Service Part
.17	3206-183	4	Screw, Cap		
.18		1	Pipe, Oil - Return		Not a Service Part
.19		1	Pan, Oil		Not a Service Part
20	3206-176	1	Seal, Oil		
21	3206-177	1	Seal, Oil		
22	3206-175	1	Gasket		
23	3206-178	2	Stud, Hollow		
24	3206-191	2	WASHER DIAM. 6,5 X 12 X 4		
25	3206-190	2	Clamp, Routing		
26	3206-088	20	Screw, Cap		
27	3206-186	1	Gasket		
28	3206-187	1	Gasket		
29	3206-188	1	Cover, Oil Pan		
30	3206-189	20	Screw, Cap		
31	3206-181	1	Gasket		
32	3206-182	1	Plug		
33	3206-197	1	Stick, Oil Level	(inc. 34)	
.34	3206-198	2	Seal		
35	3206-195	1	O-Ring		
36	3206-196	1	Guard, Oil Level Stick		

 PARKING BRAKE ASSEMBLY [95941]

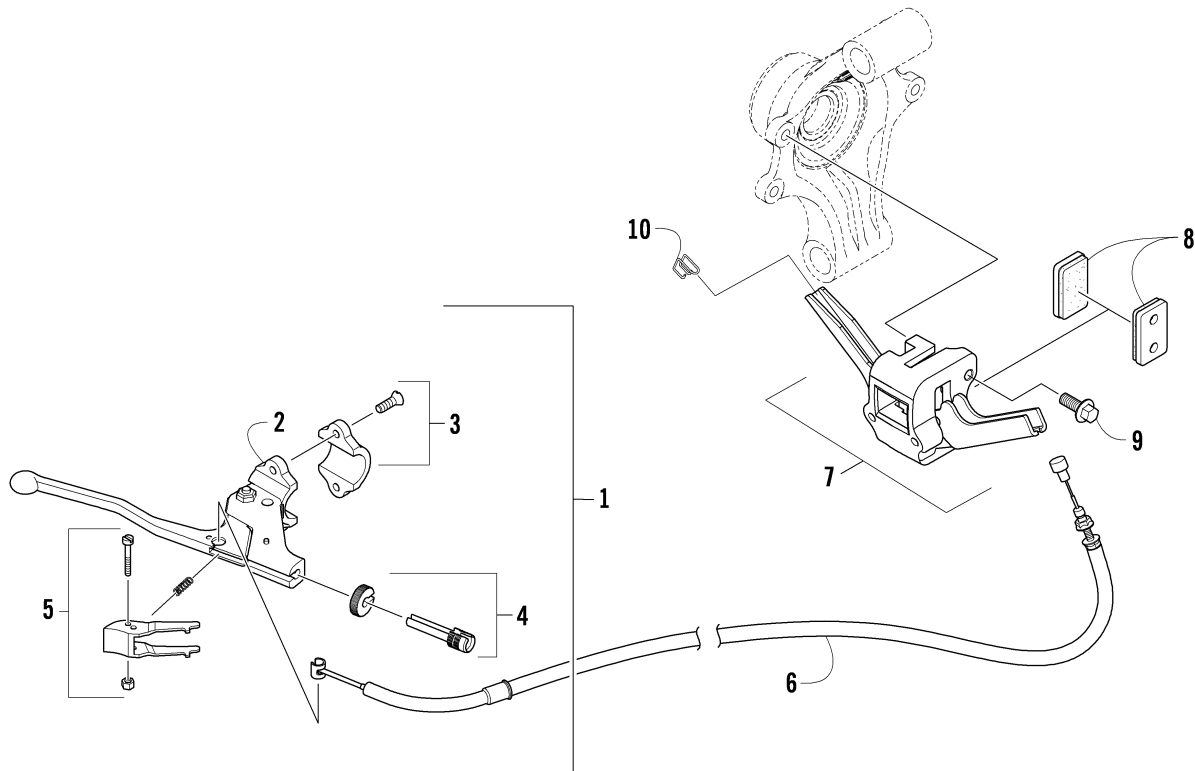


Item	Part No.	Qty	Name	Context	Footnote
1	1502-278	1	Lever, Parking Brake - Assembly	(inc. 2-6)	
2	1502-429	1	Lever, Parking Brake - Kit		
3	1502-432	1	Clamp, Handlebar - Kit		
4	1502-430	1	Adjuster, Thumb Nut - Kit		
5	1502-431	1	Lock, Parking Brake Lever - Kit		
6	0487-055	1	Cable, Brake - Rear		
7	1502-865	1	CALIPER,BRAKE-MECHANICAL	(inc. 8)	
8	1402-602	2	PAD,BRAKE-MECH PARK		
9	8408-826	2	Screw, Cap		
10	0402-379	1	Wire Form, Cable		

 PISTON SET AND CONNECTING ROD ASSEMBLY [92848]

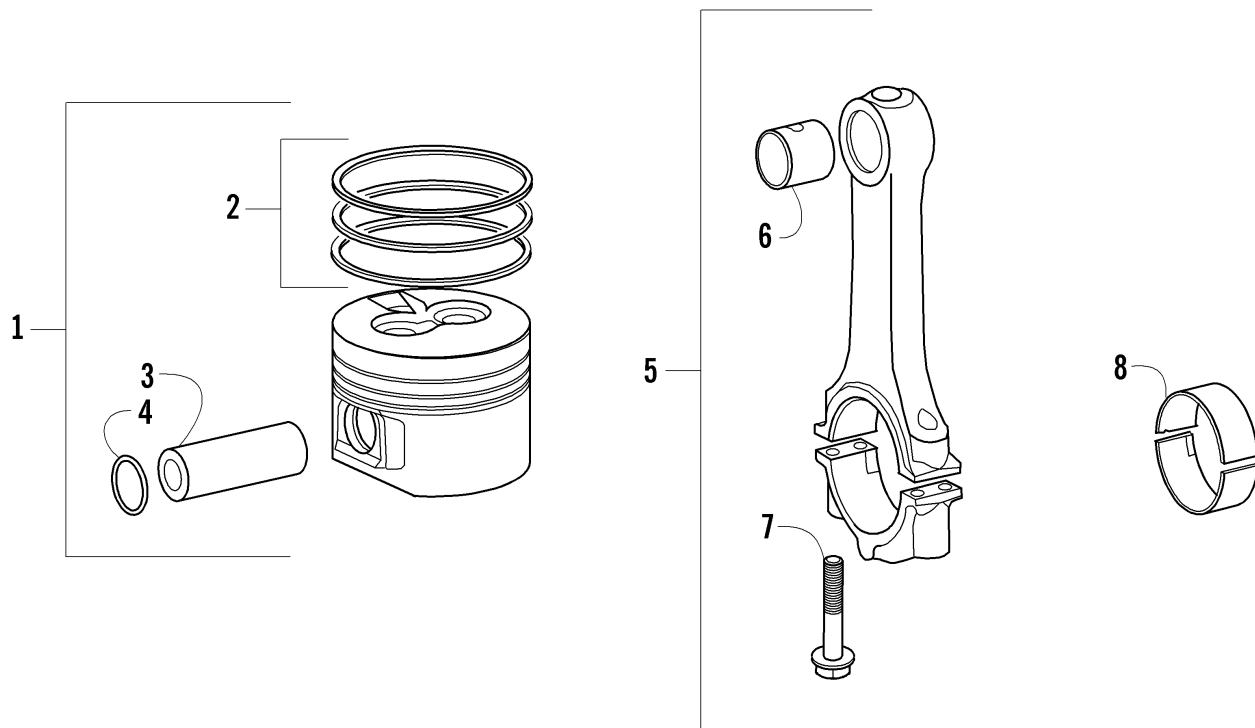


Item	Part No.	Qty	Name	Context	Footnote
1	3206-026	2	Piston - Set	(inc. 2-4)	
1	3206-027	2	Piston - Set (+0.50 mm)		
1	3206-028	2	Piston - Set (+1.00 mm)		
.2	3206-023	2	Ring - Set		
.2	3206-024	2	Ring - Set (+0.50 mm)		
.2	3206-025	2	Ring - Set (+1.00 mm)		
.3	3206-030	2	Piston Pin		
.4	3206-031	4	Circlip		
5	3206-035	2	Connecting Rod	(inc. 6-7)	
.6	3206-029	2	Bushing		
.7	3206-036	8	Screw, Cap		
8	3206-032	2	Bushing		
8	3206-033	2	Bushing (-0.25 mm)		
8	3206-034	2	Bushing (-0.50 mm)		

 PTO VACUUM PUMP ASSEMBLY [96008]

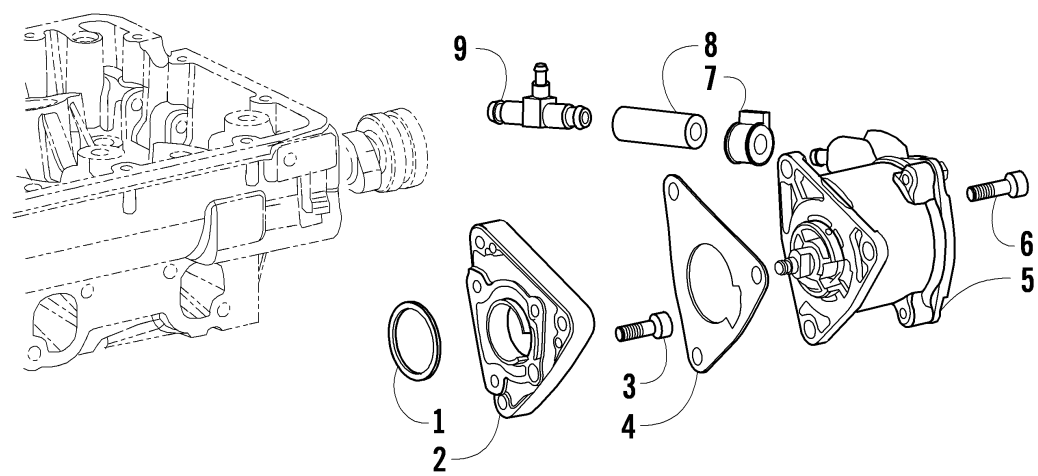

Item	Part No.	Qty	Name	Context	Footnote
1	3206-313	1	O-Ring		
2	3206-336	1	Plate, Adapter		
3	3206-088	3	Screw, Cap		
4	3206-337	1	Gasket		
5	3206-338	1	Pump, Vacuum		
6	3206-339	3	Screw, Cap		
7	3206-342	2	Clamp		
8	3206-340	1	Hose		
9	3206-341	1	Union		

 
REAR BODY PANEL AND FOOTWELL ASSEMBLIES [300935]

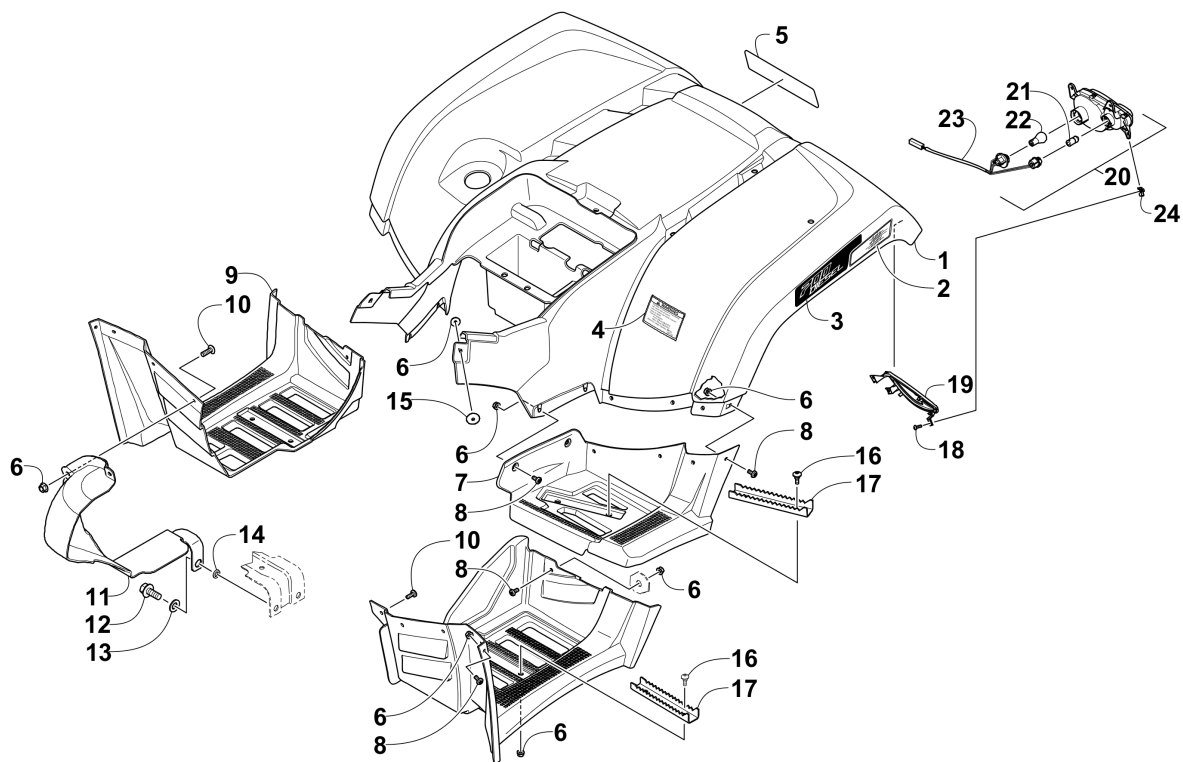

Item	Part No.	Qty	Name	Context	Footnote
1	2506-954	1	Fender, Rear - Assembly - Green		
2	1411-592	1	Decal, Reflector - Right		
2	1411-593	1	Decal, Reflector - Left		
3	4411-362	1	Decal - "700 DIESEL" - Right		
3	4411-363	1	Decal - "700 DIESEL" - Left		
4	2411-830	1	Decal, Warning - Tire Pressure		
5	1411-725	1	Decal - "Arctic Cat"		
6	8427-602	32	Nut, Lock		
7	2406-042	1	Footwell, Rear - Right		
7	2406-043	1	Footwell, Rear - Left		
8	0423-419	19	Screw, Machine		
9	2506-193	1	Footwell - Right		
9	2406-471	1	Footwell - Left		
10	8477-620	3	Screw, Machine		
11	2406-531	1	Panel, Splash		
12	8409-020	1	Screw, Cap		
13	8050-282	1	Washer		
14	0405-261	1	Spacer		
15	0423-101	2	Screw, Shoulder		
16	0423-355	8	Screw, Shoulder		

Item	Part No.	Qty	Name	Context	Footnote
17	5506-497	4	Footpeg - Black		
18	8476-516	6	Screw, Machine		
19	0409-112	1	Bezel, Taillight - Right		
19	0409-113	1	Bezel, Taillight - Left		
20	3313-392	1	Taillight Assembly - Right	(inc. one No. 21-22 and 23)	
20	3313-393	1	Taillight Assembly - Left	(inc. one No. 21-22 and 23)	
.21	3313-506	2	Bulb, Turn Signal		
.22	3303-849	2	Bulb, Taillight		
.23	3313-509	1	Harness, Taillight - Right		
.23	3313-507	1	Harness, Taillight - Left		
24	3304-061	6	Nut Clip 5 mm		

 
REAR DRIVE GEARCASE ASSEMBLY [300533]

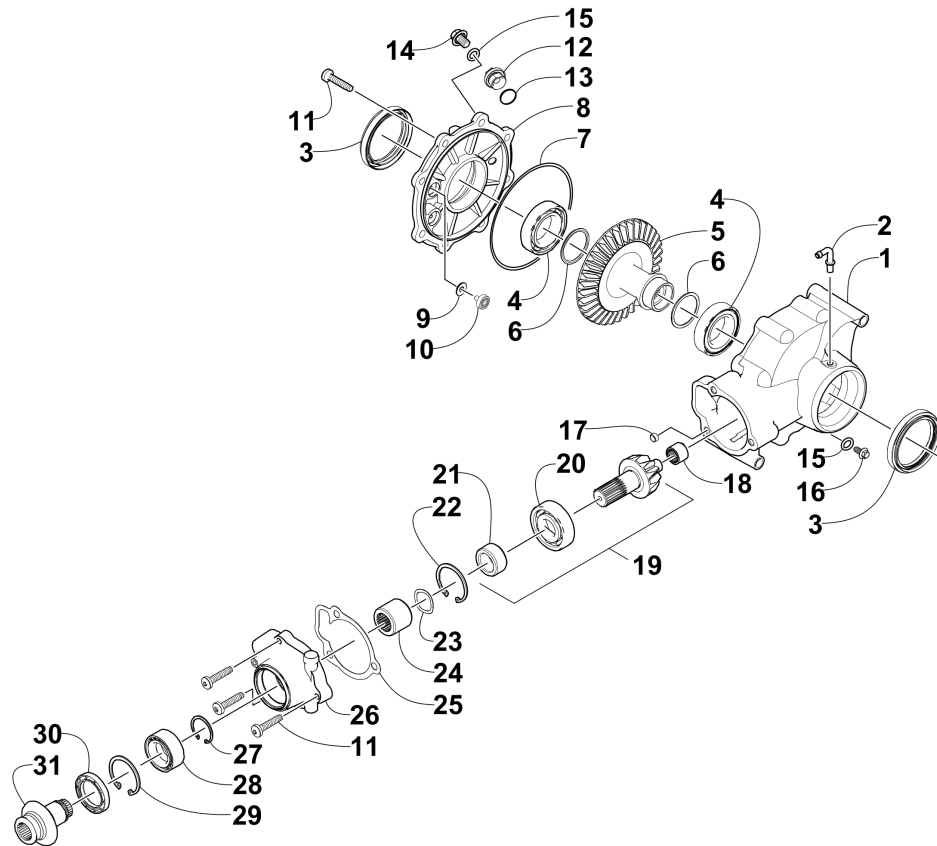

Item	Part No.	Qty	Name	Context	Footnote
Not Shown	2502-154	1	Gearcase, Rear		
1	1502-896	1	Housing, Gearcase		
2	2402-162	1	Fitting, Elbow		
3	2402-240	2	Seal		
4	0402-393	2	Bearing		
5	1402-032	1	Gear, Ring - 36T		
6	0402-405	AR	Shim, 41 x 49 x 1.3 mm		
6	0402-406	AR	Shim, 41 x 49 x 1.4 mm		
6	0402-407	AR	Shim, 41 x 49 x 1.5 mm		
6	0402-408	AR	Shim, 41 x 49 x 1.6 mm		
6	0402-409	AR	Shim, 41 x 49 x 1.7 mm		
7	0423-149	1	O-Ring		
8	1502-897	1	Cover, Gearcase		
9	0402-429	AR	Shim, 6.3 x 18 x 1.3 mm		
9	0402-430	AR	Shim, 6.3 x 18 x 1.4 mm		
9	0402-431	AR	Shim, 6.3 x 18 x 1.5 mm		
9	0402-432	AR	Shim, 6.3 x 18 x 1.6 mm		
9	0402-433	AR	Shim, 6.3 x 18 x 1.7 mm		
10	0402-326	1	Button, Thrust		
11	0423-118	11	Screw, Self-Tapping		

Item	Part No.	Qty	Name	Context	Footnote
12	0402-333	1	Plug, Fill	(inc. 13)	
.13	0423-154	1	O-Ring		
14	1402-211	1	Plug, Oil Level	(inc. one No. 15)	
.15	0423-153	2	O-Ring		
16	1402-210	1	Plug, Magnetic	(inc. one No. 15)	
17	0402-411	1	Pin, Dowel		
18	0402-328	1	Bearing		
19	1502-863	1	Gear, Pinion - Assembly - 10T	(inc. 20-21)	
.20	0402-327	1	Bearing		
.21	1402-977	1	Collar, Retaining		
22	1423-067	1	Ring, Retaining		
23	0402-982	1	Washer, Wave		
24	0402-981	1	Collar, Shaft		
25	0402-947	1	Gasket, Flange		
26	0502-529	1	Housing, Pinion		
27	0423-417	1	Ring, Retaining		
28	1402-043	1	Bearing		
29	0423-423	1	Ring, Retaining		
30	1402-011	1	Seal		
31	1502-085	1	Shaft, Input		

 
REAR RACK ASSEMBLY [100303]

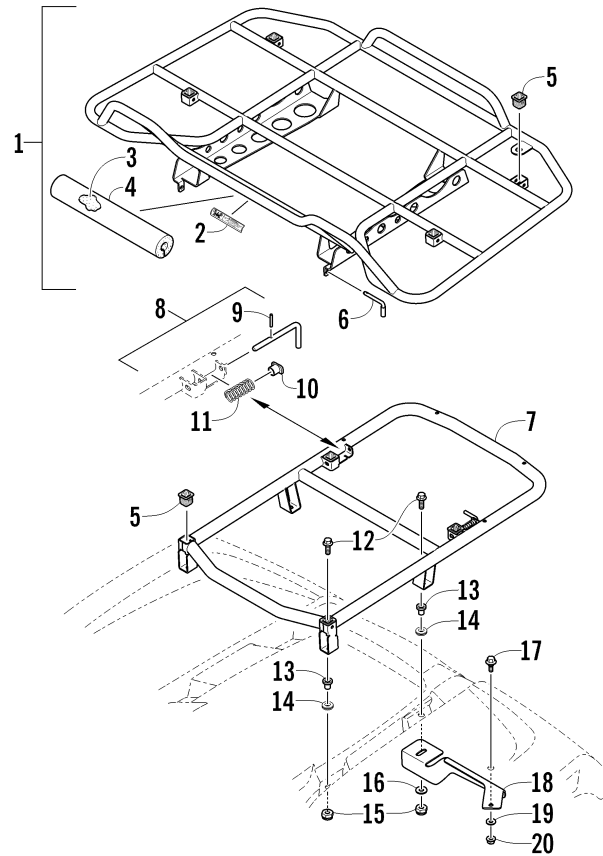

Item	Part No.	Qty	Name	Context	Footnote
1	2516-483	1	Rack, Rear - Assembly	(inc. 2-4 and four No. 5)	
.2	0411-648	1	Decal, Warning - Load		
.3	2416-244	1	Pad, Foam		
.4	2416-245	1	Cover		
.5	0441-592	8	Bushing		
6	0541-447	2	PINS,SPEEDRACK-SS-ASSY		
7	2506-221	1	RACK,REAR FRAME-ASSY (SHORT)	(inc. 8-11 and four No. 5)	
.8	0541-504	2	Pin - Assembly	(inc. 9-11)	
..9	0423-635	2	Pin, Roll		
..10	0423-677	2	Bushing, Flanged		
..11	0423-636	2	Spring		
.12	8410-835	4	Screw, Cap		
.13	0423-669	4	Spacer		
.14	0423-465	4	Grommet		
.15	8432-802	4	Nut, Lock		
.16	0423-087	2	Washer		
.17	0423-654	2	Screw, Shoulder		
.18	2506-092	1	Bracket, Rear Fender - Right		
.18	2506-093	1	Bracket, Rear Fender - Left		
.19	8050-222	2	Washer		

Item	Part No.	Qty	Name	Context	Footnote
.20	8427-602	2	Nut, Lock		

 
REAR SUSPENSION ASSEMBLY [95998]

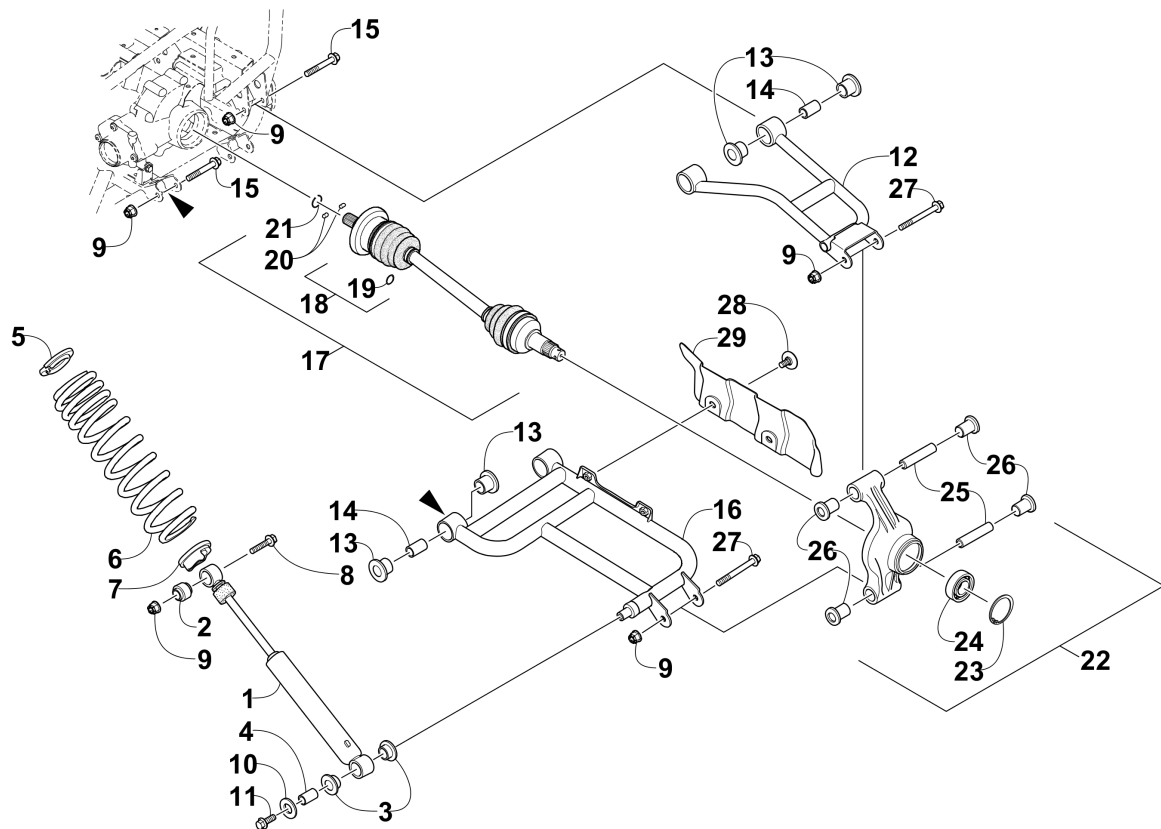

Item	Part No.	Qty	Name	Context	Footnote
1	0404-147	2	Shock Absorber	(inc. 2-4)	
.2	0403-182	2	Bushing		
.3	0603-955	4	BUSHING, SKI SHOCK-.045" LIP		
.4	1603-575	2	SLEEVE,EYELET.790X.812X.635" POWDER MET		
5	1603-889	2	Retainer, Spring		
6	0403-173	2	Spring, Suspension Black		
7	0404-496	2	Cam, Spring Adjuster		
8	8409-050	2	Screw, Cap		
9	0423-744	14	Nut, Lock		
10	0423-087	2	Washer		
11	8408-820	2	Screw, Cap		
12	0504-582	1	A-Arm, Rear - Upper Right - Black	(inc. 13-14)	
12	0504-583	1	A-Arm, Rear - Upper Left	(inc. 13-14)	
.13	0403-409	16	Bushing		
.14	0403-438	8	Collar		
15	8409-075	8	Screw, Cap		
16	0504-572	1	A-Arm, Rear - Lower Right - Black	(inc. 13-14)	
16	0504-573	1	A-Arm, Rear - Lower Left	(inc. 13-14)	
17	1502-938	2	KIT,HALF SHAFT (1502-798)	(inc. 18-21)	
18	2436-111	2	Repair Kit, Boot	(inc. 19)	


Item	Part No.	Qty	Name	Context	Footnote
.19	1441-988	2	Clip, Retaining		
20	1402-884	4	Pin, Detent		
21	1402-890	2	Clip, Retaining		
22	0504-616	1	KNUCKLE,REAR-ASSY	(inc. 23-26)	
22	0504-549	1	Knuckle, Rear - Assy	(inc. 23-26)	
.23	0423-423	2	Ring, Retaining		
.24	1402-809	2	Bearing		
.25	0403-437	4	Collar, Suspension Bushing		
.26	0403-283	8	Bushing, Suspension		
27	8409-000	4	Screw, Cap		
28	0423-545	4	Screw, Shoulder		
29	1406-068	1	Guard, Boot - Right		
29	1406-069	1	Guard, Boot - Left		

 ROCKER ARM COVER AND BREATHER SYSTEM ASSEMBLIES [96002]

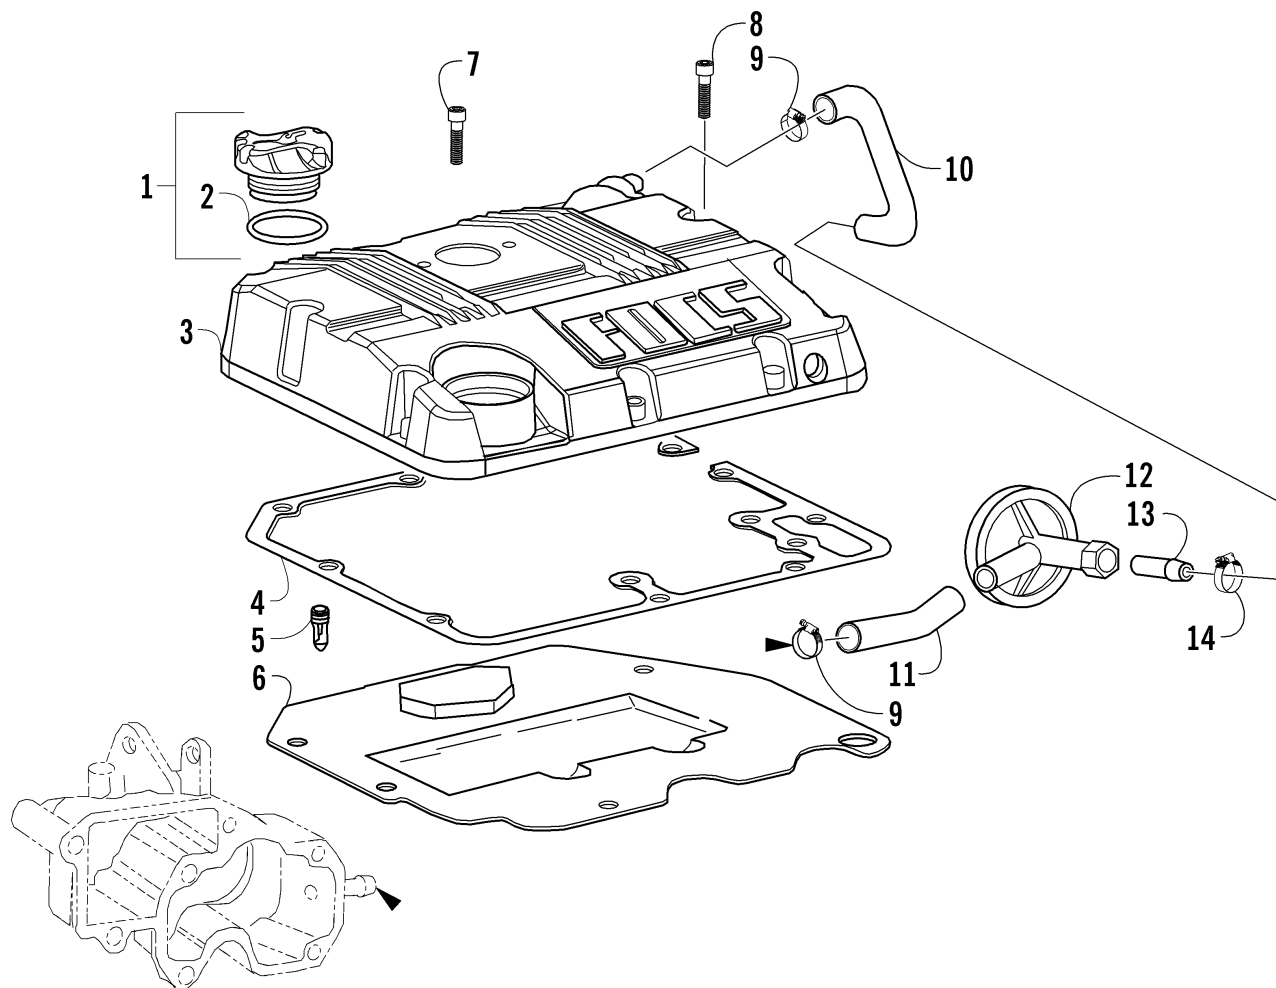


Item	Part No.	Qty	Name	Context	Footnote
1	3206-081	1	Cap, Oil Filler	(inc. 2)	
2	3206-087	1	O-Ring		
3	3206-080	1	Cover, Rocker Arm		
4	3206-086	1	Gasket		
5	3206-084	1	Connection		
6	3206-085	1	Separator		
7	3206-083	2	Screw, Cap		
8	3206-370	8	Screw, Cap		
9	3206-200	3	Clamp, Hose		
10	3206-205	1	Hose, Connection		
11	3206-202	1	Hose, Drain		
12	3206-201	1	Valve, Suction		
13	3206-203	1	Tube, Valve		
14	3206-204	1	Clamp		

 SEAT ASSEMBLY [100274]

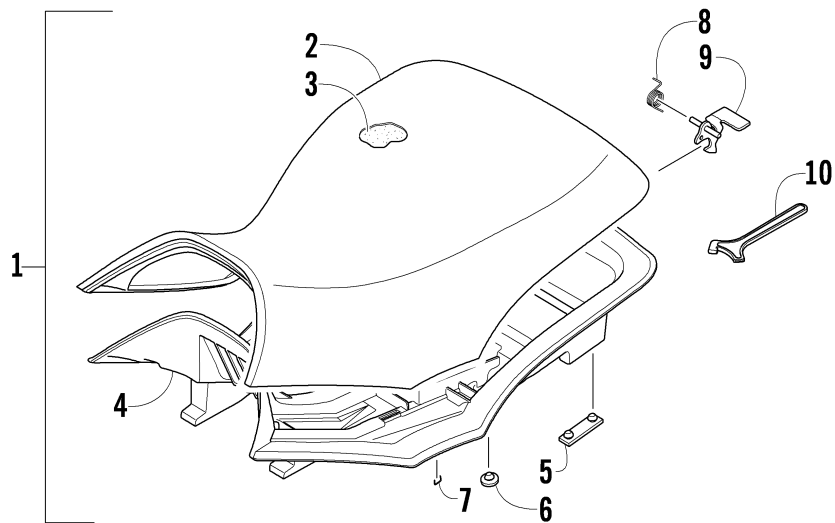

Item	Part No.	Qty	Name	Context	Footnote
1	4506-557	1	SEAT,ASSEMBLY (H1)	(inc. 2-9)	
2	1506-209	1	COVER, SEAT		
3	0517-119	1	Foam, Seat		
4	2416-826	1	BASE,SEAT (H1)	(inc. 5-6)	
5	0406-879	2	Bumper, Seat		
6	0406-877	4	Bumper		
7	0624-263	AR	Staple, SS - 3/8"		
8	1406-592	1	SPRING,LATCH		
9	1506-156	1	Latch, Seat		
10	0441-587	1	Wrench, Spanner		

 
SHIFT LEVER ASSEMBLY [100306]

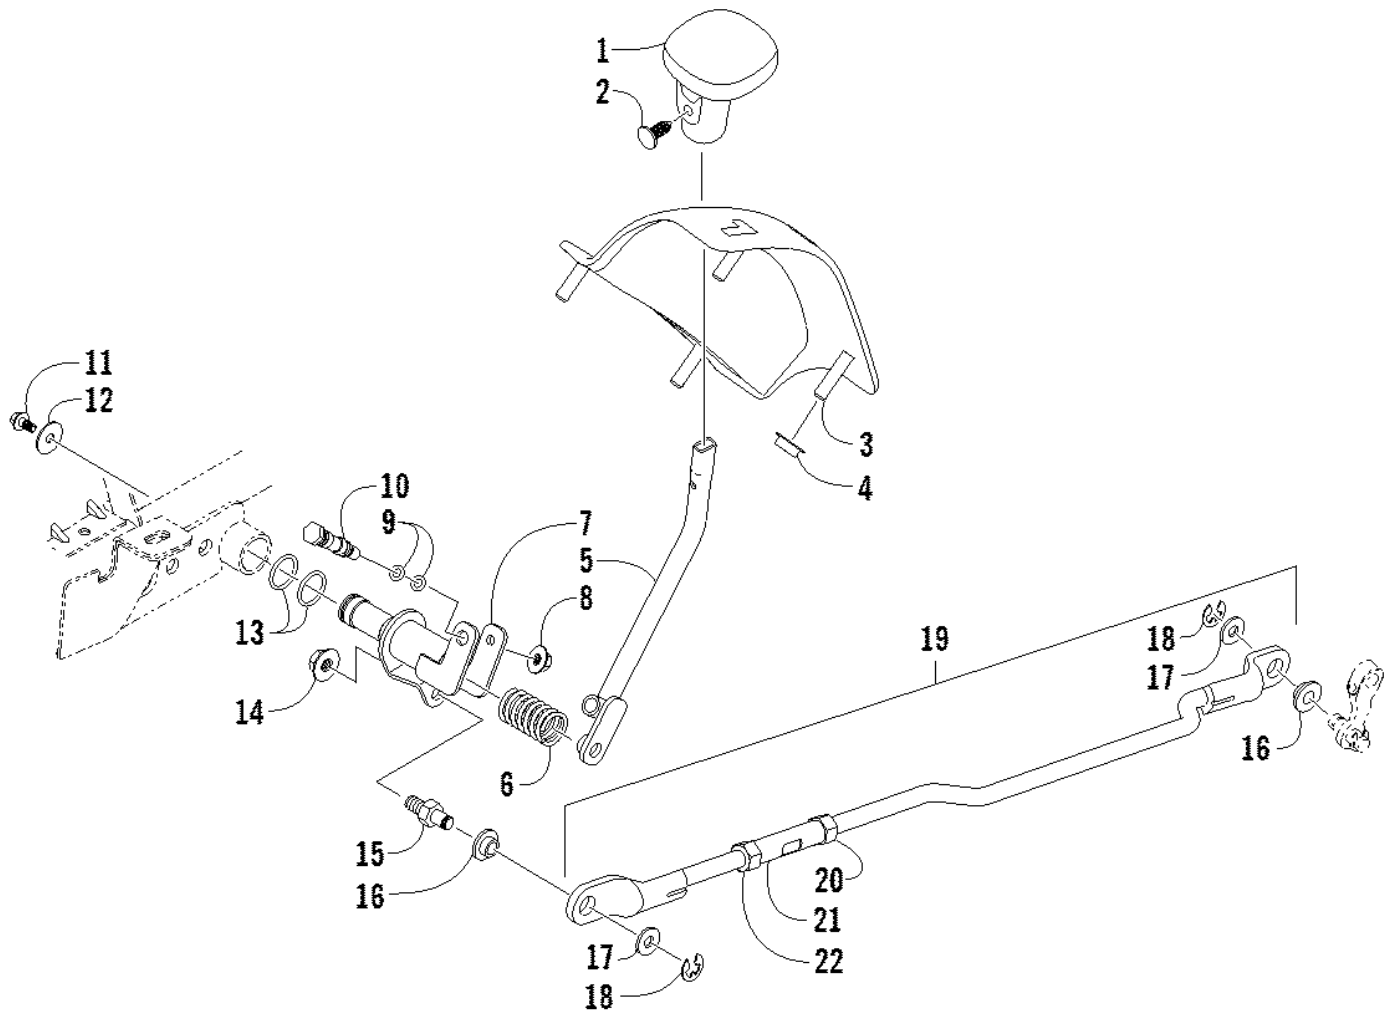

Item	Part No.	Qty	Name	Context	Footnote
1	0402-843	1	Knob, Shift		
2	0423-345	1	Clip, Retaining		
3	1402-576	1	Plate, Shift		
4	0423-357	4	Nut, Stamped		
5	1502-977	1	LEVER,SHIFT-PTD		
6	2402-117	1	Spring, Shift Lever		
7	1502-012	1	Actuator, Shift		
8	8424-602	1	Nut		
9	0423-182	2	O-Ring - 008 (3/16 x 5/16 x 1/16)		
10	0402-675	1	Axle, Pivot		
11	8408-812	1	Screw, Cap		
12	0423-087	1	Washer		
13	0423-299	2	O-Ring - 016 (5/8 x 3/4 x 1/16)		
14	8424-802	1	Nut		
15	1402-621	1	Pin, Mounting		
16	0423-091	2	Bushing		


Item	Part No.	Qty	Name	Context	Footnote
17	0623-094	2	Washer		
18	0423-169	2	E-Ring, 5/16 - .242 x .588 x .035		
19	1502-226	1	Linkage, Shift - Assembly	(inc. 20-22)	
20	0123-917	1	Nut, Hex - Left		
21	1402-619	1	Coupler		
22	0623-294	1	Nut, Hex - Right		

 STARTER MOTOR ASSEMBLY [100333]

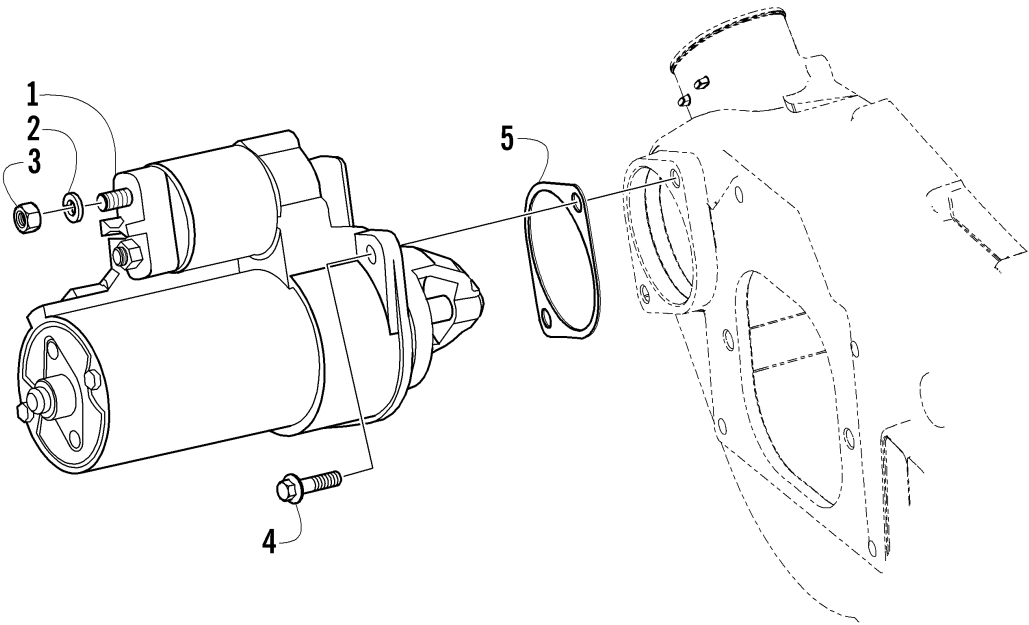

Item	Part No.	Qty	Name	Context	Footnote
1	3206-319	1	Motor, Starter		
2	3206-322	1	Washer, Lock		
3	3206-321	1	Nut		
4	8409-025	2	Screw, Cap		
5	1402-525	1	Gasket, Starter		

 
STEERING ASSEMBLY [99816]

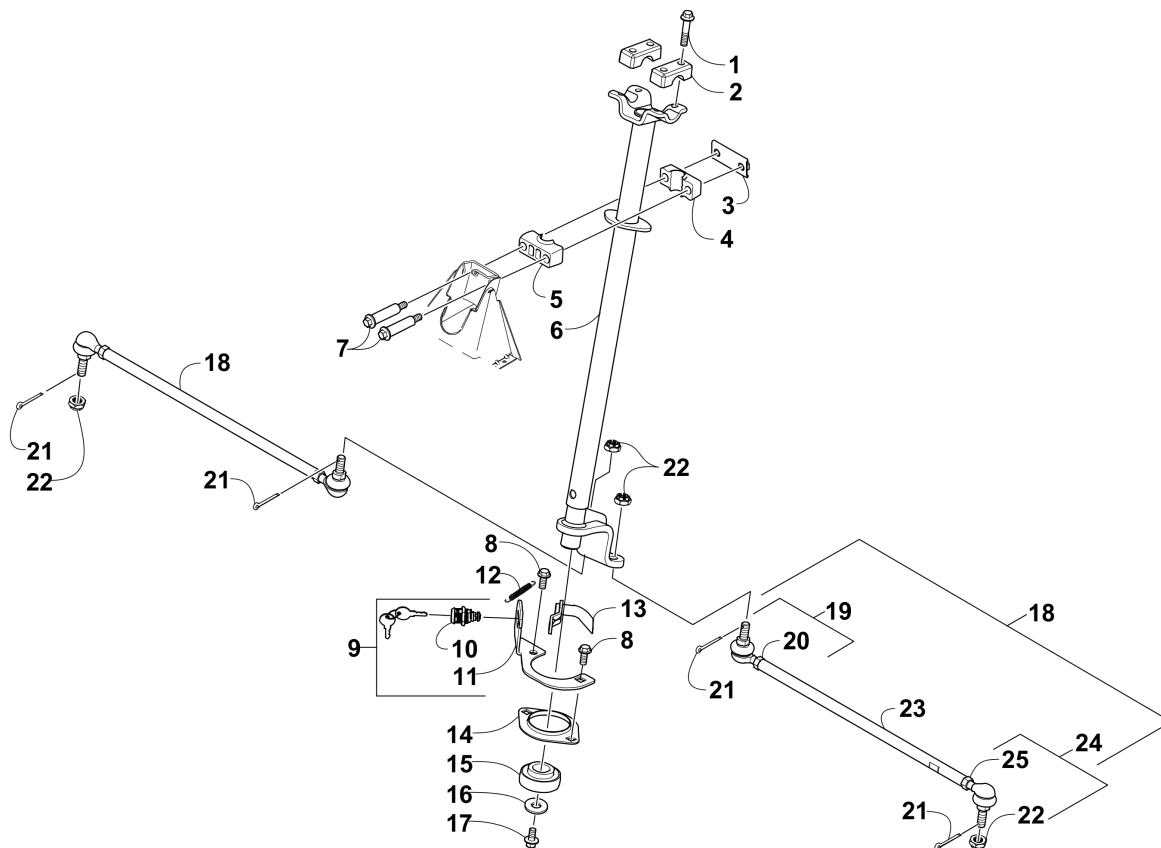

Item	Part No.	Qty	Name	Context	Footnote
1	8408-835	4	Screw, Cap		
2	0405-035	2	Cap, Steering Adjuster		
3	0505-484	1	Cap, Housing		
4	0405-260	1	Bushing		
5	0405-259	1	Bushing		
6	0505-493	1	Post, Steering		
7	0423-505	2	Screw, Shoulder		
8	8408-820	2	Screw, Cap		
9	0505-713	1	Steering Lock Assembly	(inc. 10-13)	
.10	2406-354	1	Lock		
.11	2406-349	1	Bracket, Mounting - Lock		
.12	1423-058	1	Spring		
.13	2506-173	1	Latch		
14	0602-233	1	Flange, Bearing		
15	0405-052	1	Bearing w/Inverted Oil Seal		
16	0423-073	1	Washer		
17	8409-020	1	Screw, Cap		
18	0505-872	2	Tie Rod - Assembly	(inc. 19-25)	
.19	0505-875	2	End, Tie Rod - Left-Hand Thread - Kit	(inc. one No. 20-22)	
..20	0423-013	2	Nut - Left		

Item	Part No.	Qty	Name	Context	Footnote
..21	0623-175	4	Pin, Cotter		
..22	0423-157	4	Nut		
..23	0405-281	2	Tie Rod		
..24	0505-874	2	End, Tie Rod - Right-Hand Thread - Kit	(inc. one No. 20-22 and 25)	
..25	8420-002	2	Nut - Right-Hand Thread		

 
THROTTLE CONTROL AND LOCKED TORQUE DEVICE ASSEMBLIES [96009]

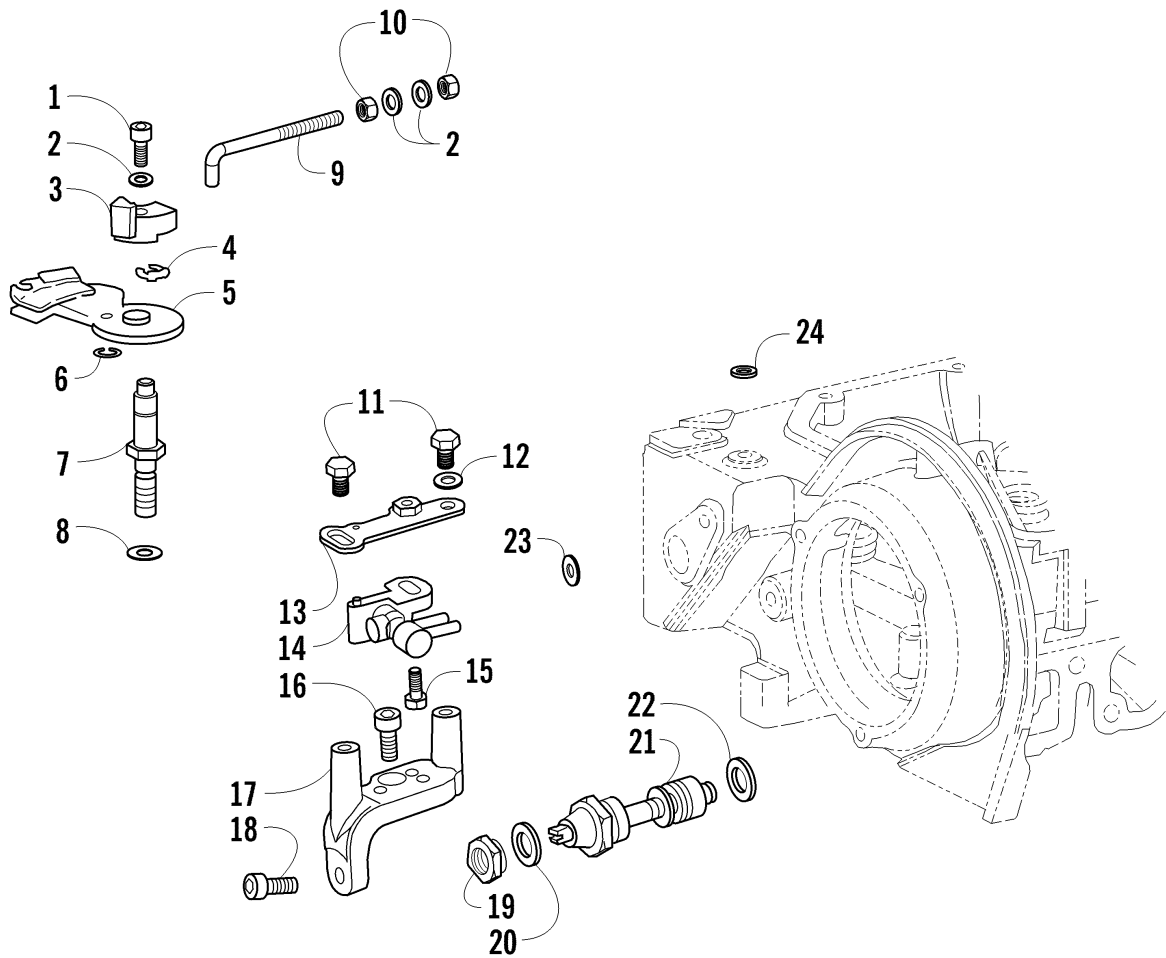

Item	Part No.	Qty	Name	Context	Footnote
1	3206-362	1	Screw, Cap		
2	3206-238	3	Washer		
3	3206-363	1	Sensor, Cam		
4	3206-243	1	Circlip		
5	3206-241	1	Lever, Throttle Control		
6	3206-242	1	Circlip		
7	3206-360	1	Pin		
8	3206-246	1	Seal, Oil		
9	3206-239	1	Tie Rod		
10	3206-237	2	Nut		
11	3206-240	2	Screw, Cap		
12	3206-365	2	Washer		
13	3206-366	1	Plate, Safety		
14	3206-367	1	Valve, Vacuum		
15	3206-378	1	Screw, Cap		

Item	Part No.	Qty	Name	Context	Footnote
16	3206-368	1	Screw, Cap		
17	3206-369	1	Support		
18	3206-370	1	Screw, Cap		
19	3206-248	1	Nut		
20	3206-361	1	Washer		
21	3206-236	1	Device, Locked Torque		
22	3206-235	1	Gasket		
23	3206-364	1	Gasket, Copper		
24	3206-007	1	Gasket		

 
TIMING BELT AND SPEED GOVERNOR ASSEMBLIES [100332]

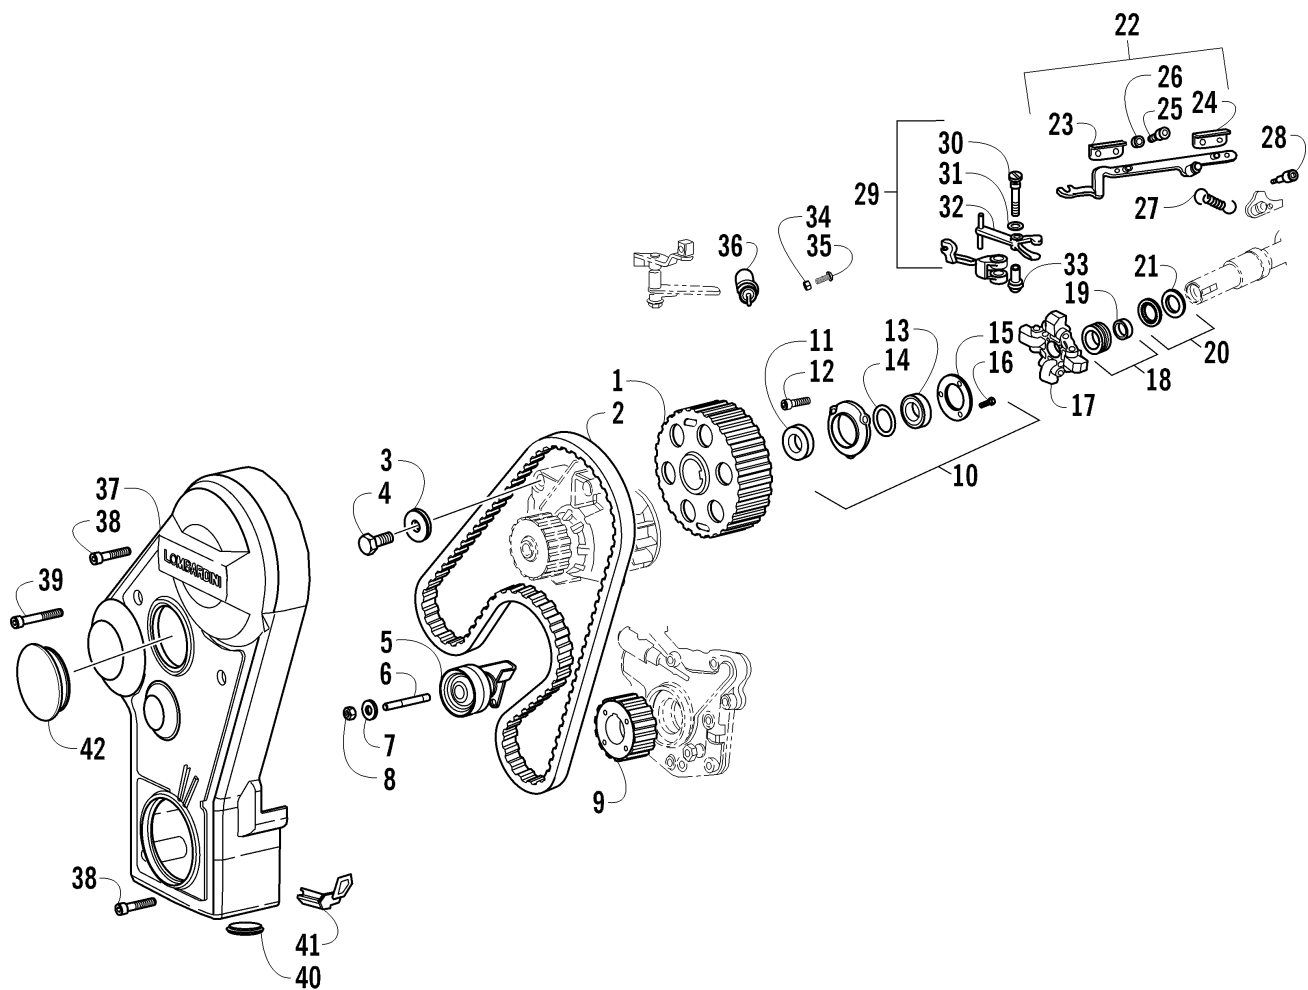

Item	Part No.	Qty	Name	Context	Footnote
1	3206-153	1	Pulley, Cam Driven		
2	3206-154	1	Belt, Timing		
3	3206-156	1	Washer		
4	3206-155	1	Screw, Cap		
5	3206-159	1	Pulley		
6	3206-158	1	Bolt, Stud		
7	3206-157	1	Washer		
8	3206-142	1	Nut		
9	3206-160	1	Pulley, Cam Drive		
10	3206-209	1	Camshaft Support	(inc. 11-16)	
.11	3206-208	1	Ring, Seal		
.12	3206-088	3	Screw, Cap		
.13	3206-211	1	Bearing		
.14	3206-210	1	Seal, Oil		
.15	3206-212	1	Plate		

Item	Part No.	Qty	Name	Context	Footnote
.16	3206-166	3	Screw, Cap		
17	3206-213	1	Flyweight - Assembly		
18	3206-214	1	Sleeve, Control	(inc. 19)	
.19	3206-216	1	Sleeve		
20	3206-217	1	Roller, Thrust	(inc. 21)	
.21	3206-215	1	Washer, Thrust		
22	3206-381	1	INJECTION PUMP RACK	(inc. 23-26)	
.23	3206-220	1	Plate		
.24	3206-219	1	Plate		
.25	3206-221	2	Screw, Cap		
.26	3206-223	2	Washer		
27	3206-222	1	Spring, Fuel		
28	3206-225	2	Screw, Cap		
29	3206-228	1	Lever, Governor - Assembly	(inc. 30-33)	
.30	3206-224	1	Pin, Lever		
.31	3206-226	1	Seal		
.32	3206-229	1	Sleeve		
.33	3206-227	1	Journal		
34	3206-232	1	Nut		
35	3206-231	1	Screw, Machine		
36	3206-230	1	Device, Min-Max		
37	3206-380	1	BELT GUARD (1 ANTIDUSTY RING)		
38	3206-043	3	Screw, Cap		
39	3206-189	1	Screw, Cap		
40	3206-316	1	Plug		
41	3206-317	1	Gasket		
42	3206-318	1	Cap		

 
TOP END GASKET SET ASSEMBLY [92859]

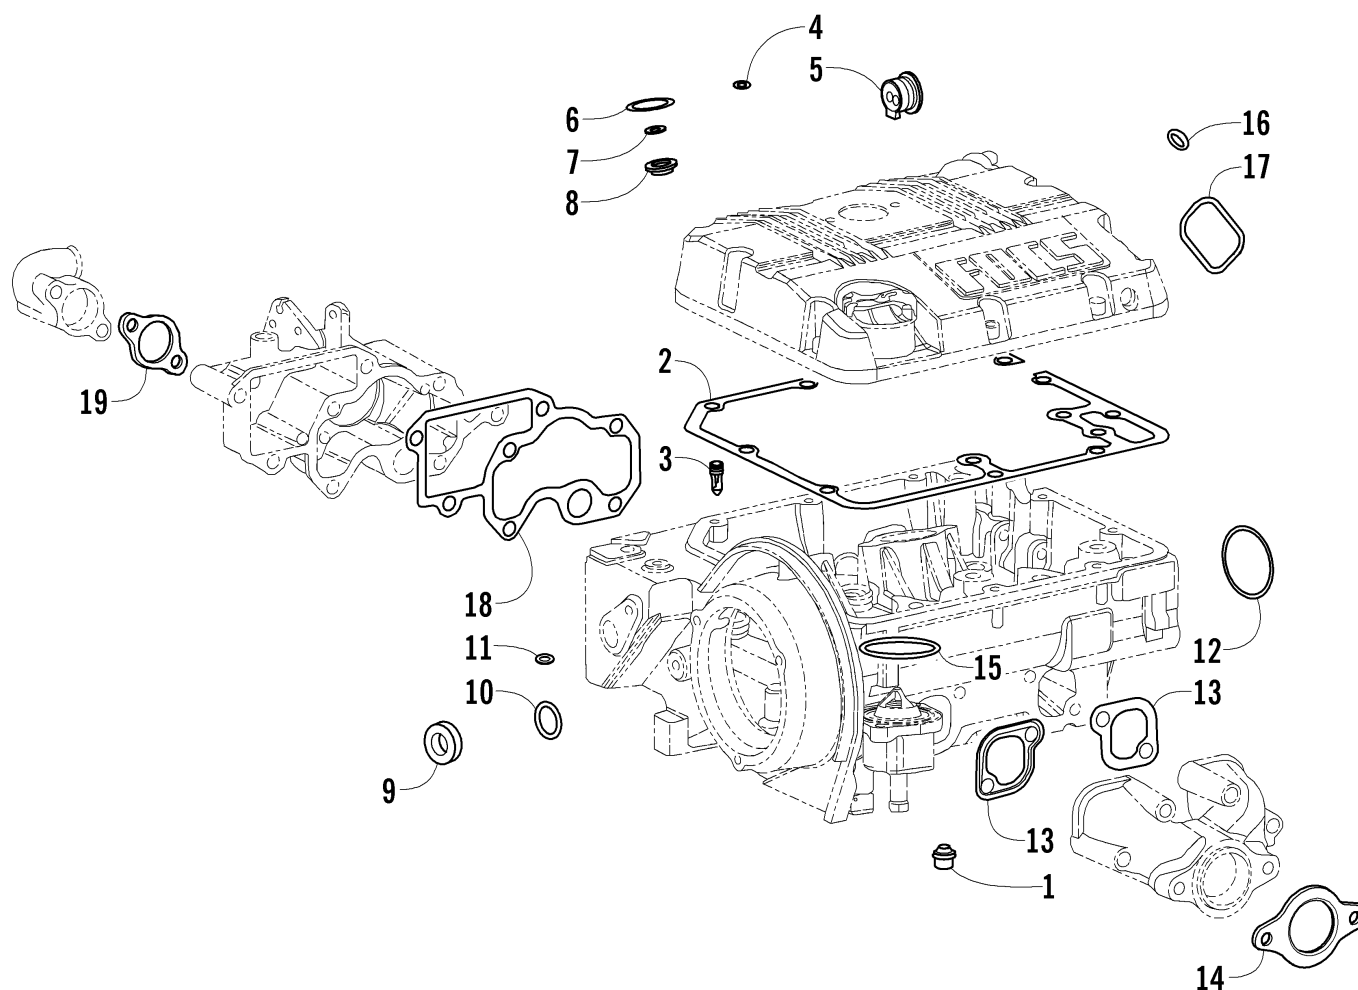

Item	Part No.	Qty	Name	Context	Footnote
Not Shown	3206-328	1	Top End Gasket Set		
1	3206-152	4	Retainer, Valve		
2	3206-086	1	Gasket		
3	3206-084	1	Connection		
4	3206-095	4	Seal, Ring		
5	3206-094	1	Seal, Delivery Pipe		
6	3206-122	2	O-Ring		
7	3206-124	2	Gasket, Copper		
8	3206-059	2	Arrestor, Spark		
9	3206-208	1	Ring, Seal		
10	3206-210	1	Seal, Oil		
11	3206-226	1	Seal		
12	3206-313	1	O-Ring		
13	3206-291	2	Gasket, Exhaust Manifold		
14	3206-296	1	EXHAUST PIPE GASKET		

Item	Part No.	Qty	Name	Context	Footnote
15	3206-260	1	O-Ring		
16	3206-010	4	Washer, Crush		
17	3206-256	1	O-Ring		
18	3206-277	1	Gasket, Intake Manifold		
19	3206-289	1	Gasket		

 TRANSMISSION LEFT-SIDE ASSEMBLY [95043]

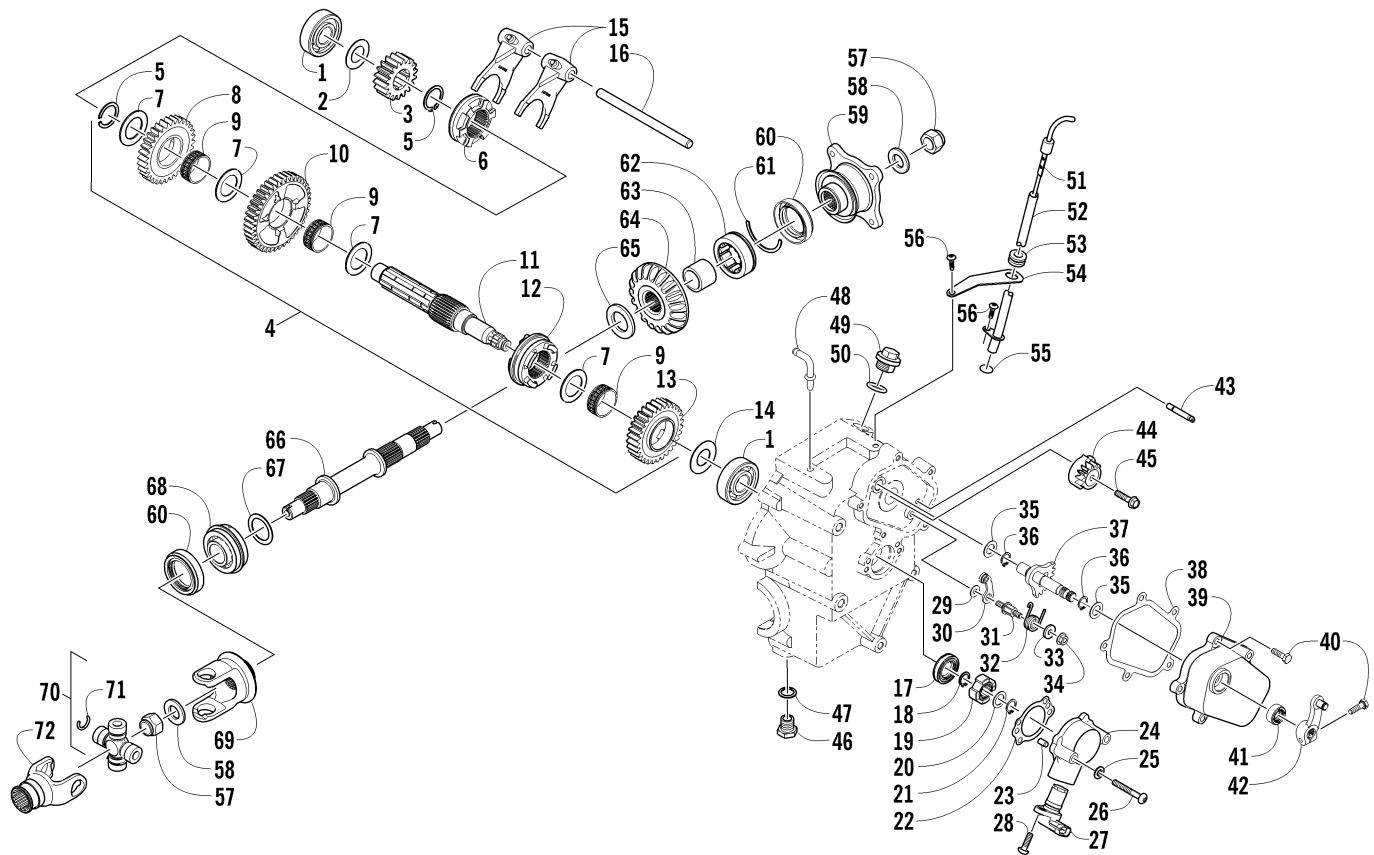


Item	Part No.	Qty	Name	Context	Footnote
1	0832-050	2	Bearing		
2	0828-010	1	Washer, Thrust		
3	0822-140	1	Gear, Drive (18T)		
4	0822-124	1	Countershaft Assembly	(inc. 5-13)	
5	0831-085	2	Ring, Retaining		
6	0822-120	1	Gear Select, Reverse		
7	0822-121	4	Shim		
8	0822-119	1	Gear, Reverse Driven		
9	0832-082	3	Bearing		
10	0822-114	1	Gear, Driven - Low		
11	0822-113	1	Countershaft		
12	0822-116	1	Gear Select, Sliding		
13	0822-115	1	Gear, Driven - High		
14	0828-011	1	Washer		
15	0818-072	2	Fork, Shift		
16	0818-006	1	Shaft, Shift Fork		
17	0822-052	1	Seal, Countershaft		
18	0831-040	1	Ring, Retaining		
19	0822-050	1	Trigger, Speedometer Sensor		
20	0828-069	1	Washer, Thrust		

Item	Part No.	Qty	Name	Context	Footnote
21	0831-039	1	Ring, Retaining		
22	0830-129	1	Gasket		
23	0829-023	2	Pin, Dowel		
24	0822-049	1	Housing, Speedometer Sensor		
25	0830-107	2	Gasket		
26	8468-645	2	Screw, Machine		
27	0824-042	1	Sensor, Speedometer		
28	8468-620	1	Screw, Machine		
29	0828-038	1	Washer		
30	0818-002	1	Stopper, Cam		
31	0818-004	1	Support, Cam Stopper		
32	0818-090	1	Spring		
33	0828-035	1	Washer		
34	8424-602	1	Nut		
35	0828-036	2	Washer		
36	0831-010	2	Ring, Retaining		
37	0818-007	1	Shaft, Sub-Gear Shift		
38	1402-557	1	Gasket, Cover - Selector		
39	1502-009	1	Cover, Selector		
40	8405-620	6	Screw, Cap		
41	0830-044	1	Seal, Sub-Gear Shift Shaft		
42	0818-164	1	Arm, Select		
43	1402-556	1	Stop, Spring - Selector		
44	0818-089	1	Plate, Gear Shift Cam		
45	0826-006	1	Screw, Cap		
46	0812-006	1	Plug, Drain		
47	0830-017	1	Gasket, Drain Plug		
48	1402-102	1	Fitting, Elbow		
49	0402-333	1	Plug, Fill	(inc. 50)	
.50	0423-154	1	O-Ring		
51	0470-689	1	Level Stick, Lubricant		
52	2506-388	1	Tube, Level Stick		
53	0423-465	1	Grommet		
54	2506-445	1	Bracket, Level Stick Tube		
55	0423-715	1	O-Ring		
56	0423-396	2	Screw, Self-Tapping		
57	0827-013	2	Nut		
58	0828-020	2	Washer		
59	0819-005	1	Flange, Output Joint - Rear		

Item	Part No.	Qty	Name	Context	Footnote
60	0830-043	2	Seal, Oil		
61	0819-011	1	Ring, Driven Bearing		
62	0832-016	1	Bearing, Driven Gear		
63	1402-555	1	Sleeve		
64	1402-867	1	Gear, Secondary Driven		
65	1402-864	1	Spacer		
66	1402-554	1	Shaft, Output - Secondary		
67	0828-021	AR	Shim, 25 x 34 x 0.25 mm		
67	0828-022	AR	Shim, 25 x 34 x 0.30 mm		
67	0828-023	AR	Shim, 25 x 34 x 0.70 mm		
67	0828-024	AR	Shim, 25 x 34 x 0.90 mm		
67	0828-025	AR	Shim, 25 x 34 x 0.95 mm		
67	0828-026	AR	Shim, 25 x 34 x 1.00 mm		
67	0828-027	AR	Shim, 25 x 34 x 1.05 mm		
67	0828-028	AR	Shim, 25 x 34 x 1.10 mm		
67	0828-029	AR	Shim, 25 x 34 x 1.15 mm		
68	0832-017	1	Bearing		
69	0819-061	1	Yoke, Drive Output		
70	1402-164	1	Joint, Universal - Set	(inc. 71)	
71	0423-450	4	Ring, Retaining		
72	0819-063	1	Yoke, Propeller Shaft Joint		

 
TRANSMISSION RIGHT-SIDE ASSEMBLY [95042]

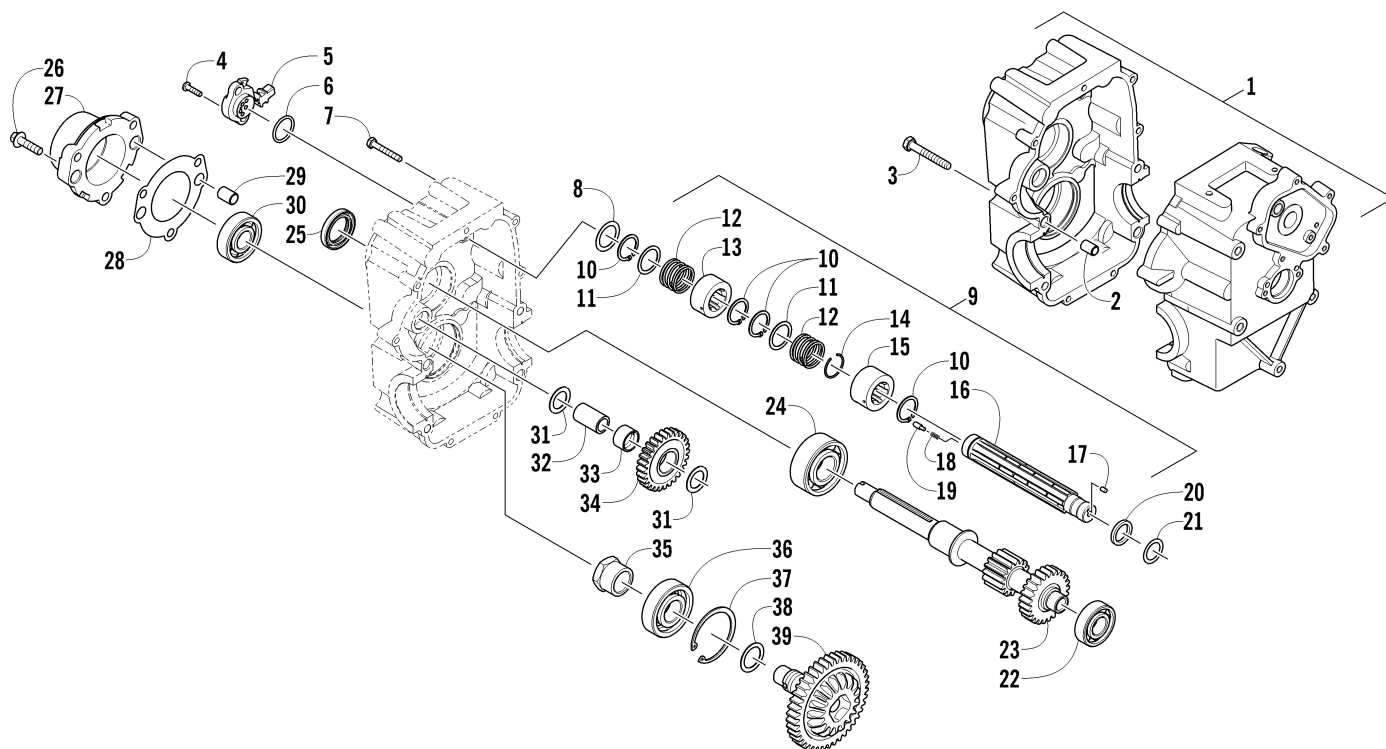

Item	Part No.	Qty	Name	Context	Footnote
1	1502-364	1	HOUSING,GEARBOX-SET	(inc. 2-3)	
.2	0829-003	2	Pin, Dowel		
.3	8405-855	4	Screw, Cap		
4	8470-520	2	Screw, Machine		
5	0409-090	1	Switch, Gear Position		
6	0423-714	1	O-Ring		
7	8405-640	7	Screw, Cap		
8	0828-040	1	Washer		
9	0818-127	1	Shaft, Gear Shift - Assembly	(inc. 10-17)	
.10	0831-093	4	Ring, Retaining		
.11	0828-132	2	Washer		
.12	0818-132	2	Spring, Cam - Gear Shift		
.13	0818-130	1	Cam, Reverse - Gear Shift		
.14	0818-128	1	C-Ring		
.15	0818-129	1	Cam, Forward - Gear Shift		
.16	0818-131	1	Shaft, Gear Shift		
.17	0829-060	1	Pin, Dowel		
18	0818-017	2	Spring		
19	0818-013	2	Contact		
20	0828-131	1	Spacer		

Item	Part No.	Qty	Name	Context	Footnote
21	0828-037	1	Washer		
22	0832-049	1	Bearing		
23	1402-553	1	Shaft, Input		
24	0832-048	1	Bearing		
25	0830-035	1	Seal, Driveshaft		
26	8408-830	3	Screw, Cap		
27	0801-190	1	Housing, Secondary Output Shaft Bearing		
28	1402-605	1	Gasket		
29	0829-002	2	Pin, Dowel		
30	0832-050	1	Bearing		
31	0828-016	2	Washer, Thrust		
32	1402-737	1	Shaft, Reverse Idle		
33	0822-012	1	Bushing		
34	0822-011	1	Gear, Reverse Idle		
35	0827-052	1	Nut		
36	0832-077	1	Bearing		
37	0402-347	1	Ring, Retaining		
38	0828-021	AR	Shim, 25 x 34 x 0.25 mm		
38	0828-022	AR	Shim, 25 x 34 x 0.30 mm		
38	0828-023	AR	Shim, 25 x 34 x 0.70 mm		
38	0828-024	AR	Shim, 25 x 34 x 0.90 mm		
38	0828-025	AR	Shim, 25 x 34 x 0.95 mm		
38	0828-026	AR	Shim, 25 x 34 x 1.00 mm		
38	0828-027	AR	Shim, 25 x 34 x 1.05 mm		
38	0828-028	AR	Shim, 25 x 34 x 1.10 mm		
38	0828-029	AR	Shim, 25 x 34 x 1.15 mm		
39	1402-857	1	Gear, Secondary Drive		

 
WATER PUMP AND THERMOSTAT HOUSING ASSEMBLY [96012]

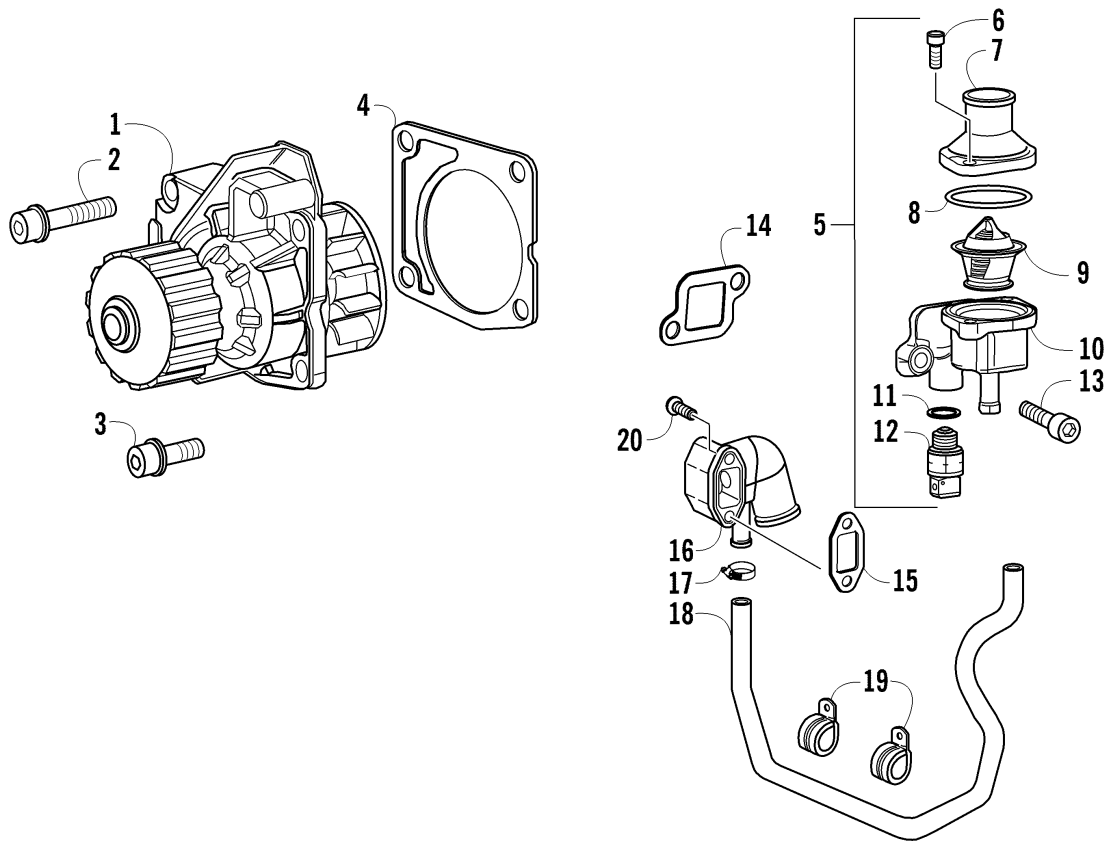

Item	Part No.	Qty	Name	Context	Footnote
1	3206-271	1	Pump, Water - Assembly		
2	3206-273	2	Screw, Cap		
3	3206-274	2	Screw, Cap		
4	3206-272	1	PUMP BODY GASKET		
5	3206-262	1	Thermostat - Assembly	(inc. 6-12)	
6	3206-169	2	Screw, Cap		
7	3206-259	1	Cover, Thermostat		
8	3206-260	1	O-Ring		
9	3206-261	1	Thermostat		
10	3206-263	1	Body, Thermostat - Assembly		
11	3206-206	1	Gasket		
12	3206-265	1	Sensor, Engine Coolant Temperature		
13	3206-266	2	Screw, Cap		
14	3206-264	1	Gasket		
15	3206-268	1	GASKET		


Item	Part No.	Qty	Name	Context	Footnote
16	3206-372	1	Flange		
17	3206-200	2	Clamp, Hose		
18	0410-111	1	Hose		
19	3206-190	2	Clamp, Routing		
20	3206-267	2	Screw		

 WHEEL AND TIRE ASSEMBLY [300603]

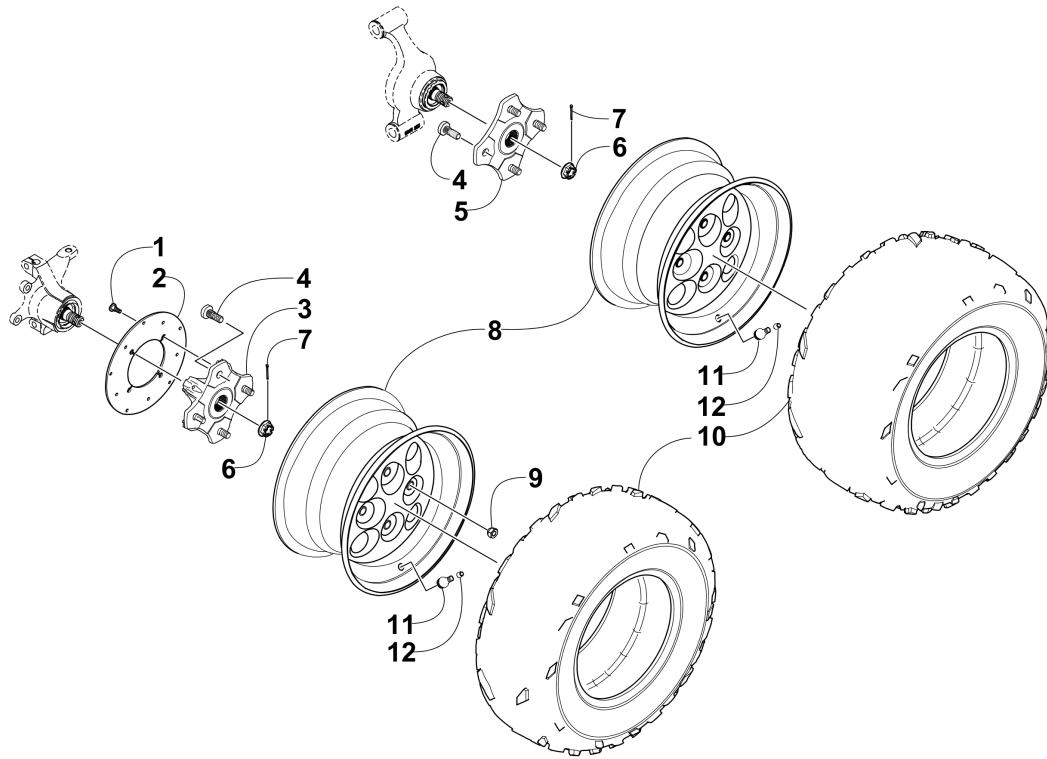

Item	Part No.	Qty	Name	Context	Footnote
1	0423-557	12	Screw, Shoulder w/Loctite		
2	1436-164	3	Kit, Disc Brake	8 inch	
3	1502-462	3	Hub, Wheel	(inc. four No. 4)	
4	0402-974	16	Stud, Wheel		
5	1502-464	1	Hub, Assembly (w/o Disc Perch)	(inc. four No. 4)	
6	0423-607	4	Nut, Castle		
7	0423-407	4	Pin, Cotter		
8	1402-780	2	Wheel - Front - Black		
8	1402-781	2	Wheel - Rear - Black		
9	0423-408	16	Nut, Lug - M10		
10	2402-250	2	Tire - Front		
10	2402-251	2	Tire - Rear		
11	0402-064	4	Stem, Valve	(inc. 12)	
12		4	Cap, Valve Stem		

 
WINCH ASSEMBLY [300937]

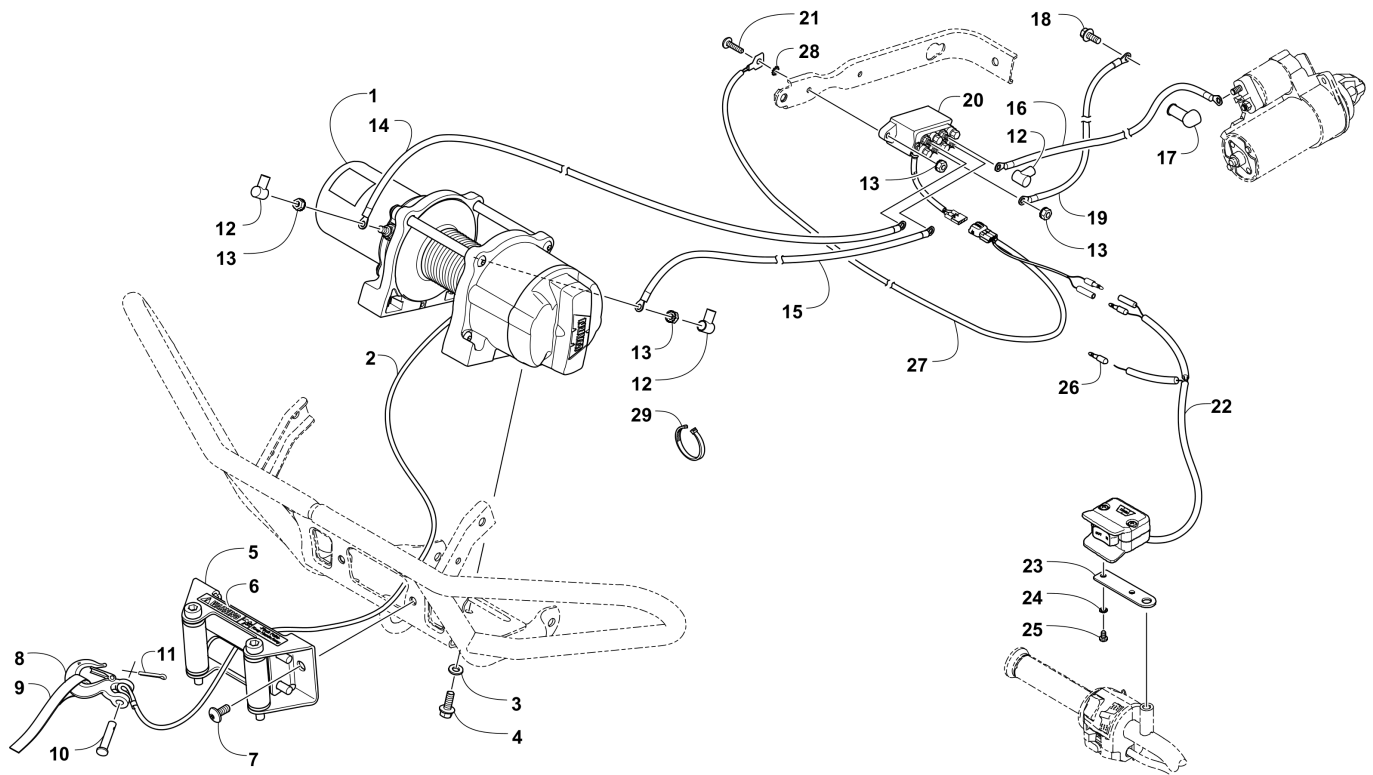

Item	Part No.	Qty	Name	Context	Footnote
1	0409-166	1	Winch	(inc. 2)	
.2	0441-061	1	Cable, Winch		
3	8051-246	4	Washer, Lock		
4	8408-820	4	Screw, Cap		
5	0441-403	1	Roller, Winch	(inc. 6)	
.6	0411-474	1	Decal, Warning - Pinch Point		
7	8468-820	2	Screw, Machine		
8	1441-833	1	Hook, Winch		
9	1441-781	1	Strap		
10	1441-834	1	Pin		
11	0623-175	1	Pin, Cotter		
12	0645-019	3	Boot, Terminal		
13	0623-038	8	Nut w/Washer		
14	0445-068	1	Cable, Winch/Solenoid - Yellow		
15	0445-069	1	Cable, Winch/Solenoid - Blue		
16	0445-077	1	Cable, Solenoid/Battery - Red		
17	0645-327	1	Boot, Terminal - Solenoid		
18	8408-812	1	Screw, Cap		
19	0445-076	1	Cable, Ground - Black		
20	0409-066	1	Solenoid		

Item	Part No.	Qty	Name	Context	Footnote
21	8476-625	2	Screw, Machine		
22	0505-552	1	Switch, Winch - Assembly	(inc. 23-28)	
.23	0505-551	1	Bracket, Winch Switch		
.24	8052-093	2	Washer, Internal Tooth Lock		
.25	8009-243	2	Screw, Machine		
.26	1441-428	1	Connector, Harness		
.27	0486-276	1	Harness, Adapter - Solenoid		
.28	8053-212	1	Washer, Lock		
29	0123-788	AR	Tie, Cable - 8 in.		
29	0123-903	AR	Tie, Cable - 11.5 in.		

 WIRING HARNESS ASSEMBLY [96912]

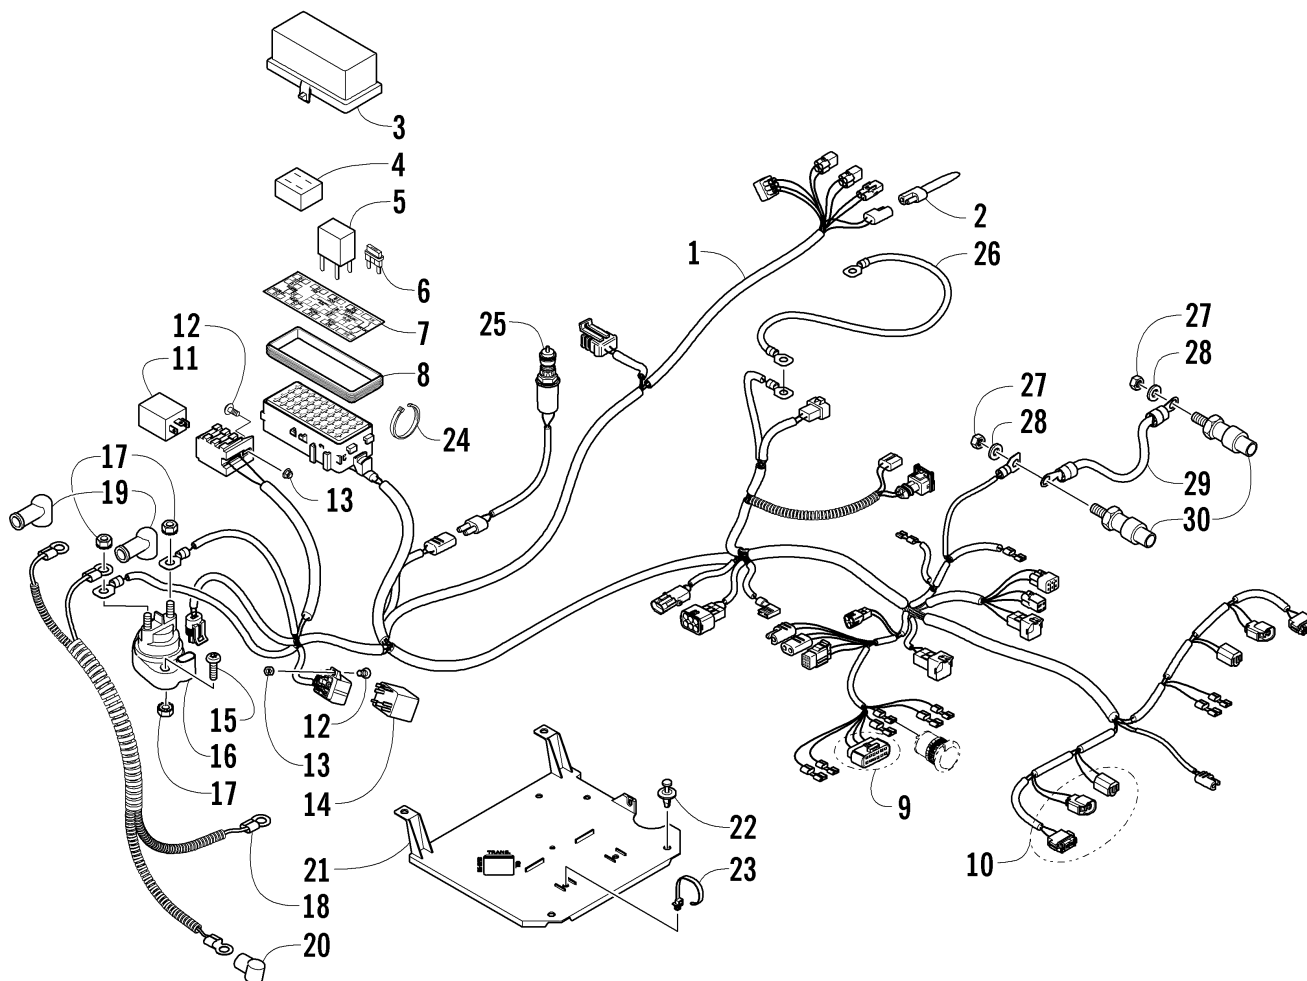

Item	Part No.	Qty	Name	Context	Footnote
1	0486-353	1	Harness, Main	(inc. 2-8)	
2	0486-164	1	Tether, Accessory Connector		
3	0430-085	1	Cover, Fuse Block		
4	0430-037	1	Holder, Fuse		
5	0430-045	3	Relay (4-Pin) - 20 Amp	(4-Pin) - 20 Amp	
6	0430-032	4	Fuse - 10 Amp		
6	0430-031	4	Fuse - 15 Amp		
6	0430-030	2	Fuse - 30 Amp		
7	2411-096	1	Decal, Fuse Block		
8	0430-086	1	Seal		
9	1436-415	1	Repair Kit, Connector - LCD Gauge		
10	1436-424	AR	Repair Kit, Connector - Headlight/Turn Signal/Position		
11	0430-049	1	Flasher	(3-Pin)	
12	8476-516	2	Screw, Machine		
13	8427-502	2	Nut, Lock		
14	3206-311	1	Relay, Glow Plug		

Item	Part No.	Qty	Name	Context	Footnote
15	8476-625	2	Screw, Machine		
16	0445-058	1	Solenoid, Starter Relay		
17	0623-038	5	Nut w/Washer		
18	0445-059	1	Cable, Battery - Assembly		
19	0645-327	2	Boot, Terminal - Solenoid		
20	0645-019	1	Boot, Terminal		
21	2406-388	1	Tray, Electrical		
22	0623-362	4	Clip, Retaining		
23	0423-075	AR	Tie, Cable - Push-Mount		
24	0123-788	AR	Tie, Cable - 8 in.		
24	0123-903	AR	Tie, Cable - 11.5 in.		
25	0409-089	1	Switch, Brake - Assembly		
26	0445-060	1	Cable, Battery/Ground		
27	3206-308	2	Nut		
28	3206-309	2	Washer		
29	3206-307	1	Cable, Glow Plug		
30	3206-306	2	Preheating Glow Plug - 12 V		



The illustrations used in this Parts Manual are for reference to replacement part numbers only and are not to be used for assembly. For assembly procedures, use an Arctic Cat Service Manual. For a complete list of related items, refer to the current accessory catalog. Once printed, Arctic Cat does not guarantee the accuracy of the information contained in this manual. Our parts lists and illustrations are constantly revised to reflect part number changes, discrepancies, and enhancements.

®™ Trademarks of Arctic Cat Inc., Thief River Falls, MN 56701