

PARTS MANUAL



WILDCAT[®] X
U2015WSW1PUSD

 


www.arcticcat.com

Contents


ACCELERATOR ASSEMBLY [100541]	3
AIR INTAKE ASSEMBLY [96523]	4
BATTERY AND STARTER MOTOR ASSEMBLY [100636]	6
CAM CHAIN ASSEMBLY [300149]	8
CARGO BOX AND TAILLIGHT ASSEMBLY [300173]	9
CASE/BELT COOLING ASSEMBLY [97746]	11
CLUTCH ASSEMBLY [100671]	12
CLUTCH SIDE ENGINE COVERS [300156]	14
CONSOLE AND FLOOR PANEL ASSEMBLY [300132]	16
COOLING ASSEMBLY [300144]	18
CRANKCASE ASSEMBLY [300150]	20
CRANKSHAFT AND PISTON ASSEMBLY [100670]	22
CYLINDER ASSEMBLY [300147]	23
CYLINDER HEAD AND CAMSHAFT/VALVE ASSEMBLY [100543]	24
DASH ASSEMBLY [300158]	26
DOOR ASSEMBLY [300175]	28
DRIVE TRAIN ASSEMBLY [100542]	30
ENGINE AND EXHAUST [300165]	32
FRAME, HEADLIGHTS, AND RELATED PARTS [300174]	34
FRONT AND SIDE PANEL ASSEMBLIES [300172]	36
FRONT DRIVE GEARCASE ASSEMBLY [100521]	38
FRONT SUSPENSION ASSEMBLY [300176]	41
GAS TANK ASSEMBLY [300164]	43
GEAR SHIFTING ASSEMBLY [100525]	45
HYDRAULIC BRAKE ASSEMBLY [100540]	46
MAGNETO ASSEMBLY [300154]	48
MAGNETO SIDE ENGINE COVERS [300155]	49
OIL COOLER ASSEMBLY [98544]	50
OIL PUMP ASSEMBLY [92690]	51
RACK AND PINION ASSEMBLY [100514]	52
REAR DRIVE GEARCASE ASSEMBLY [100040]	54
REAR SUSPENSION ASSEMBLY [300177]	56
REAR SUSPENSION SHOCK ASSEMBLY [300140]	58
ROPS ASSEMBLY [300136]	59
SEAT ASSEMBLY [300133]	60
SECONDARY DRIVE ASSEMBLY [300153]	62
SECONDARY TRANSMISSION ASSEMBLY [300152]	64
SHIFTER ASSEMBLY [300201]	66
STARTER CLUTCH ASSEMBLY [92689]	67
STEERING ASSEMBLY [300138]	68
THROTTLE BODY ASSEMBLY [98636]	70
WATER PUMP ASSEMBLY [300202]	71
WHEEL AND TIRE ASSEMBLY [98630]	72
WIRING HARNESS ASSEMBLY [300146]	73

ACCELERATOR ASSEMBLY [100541]

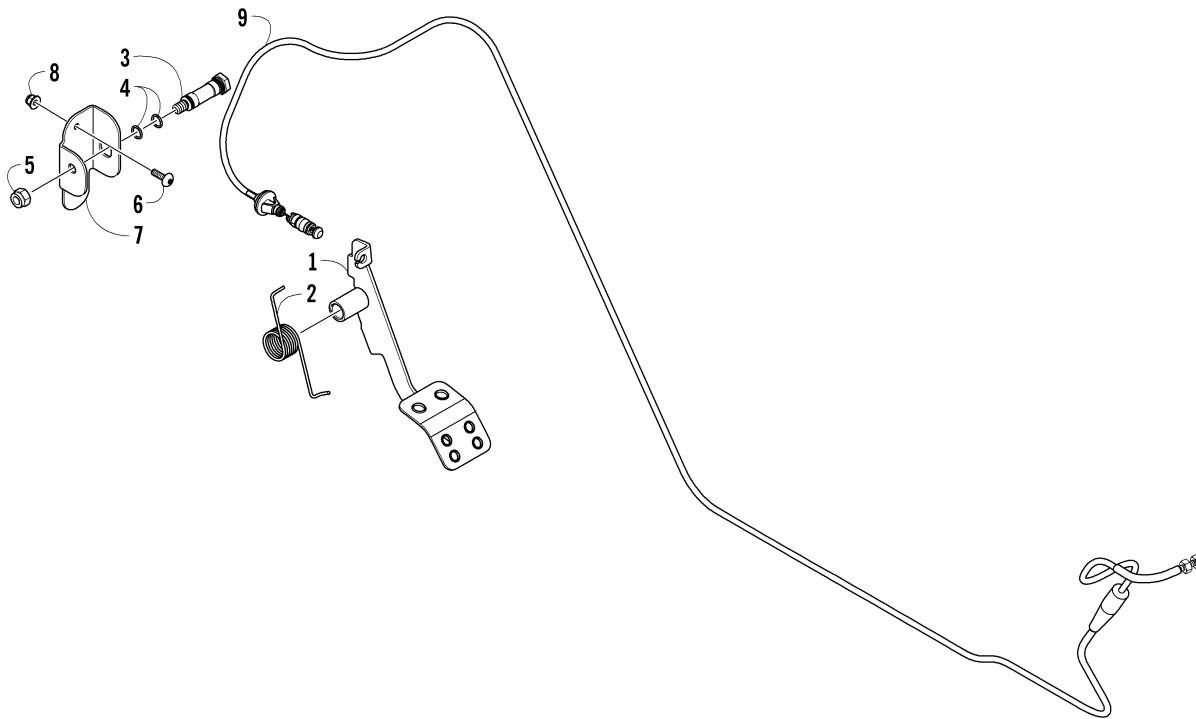

Item	Part No.	Qty	Name	Context	Footnote
1	2502-049	1	Pedal, Accelerator		
2	0405-233	1	Spring		
3	0402-872	1	Axle		
4	1602-213	2	O-Ring		
5	8422-002	1	Nut, Lock		
6	8477-616	2	Screw, Machine		
7	0502-991	1	Bracket, Accelerator Pedal		
8	8427-602	2	Nut, Lock		
9	0487-095	1	Cable, Accelerator		

 
AIR INTAKE ASSEMBLY [96523]

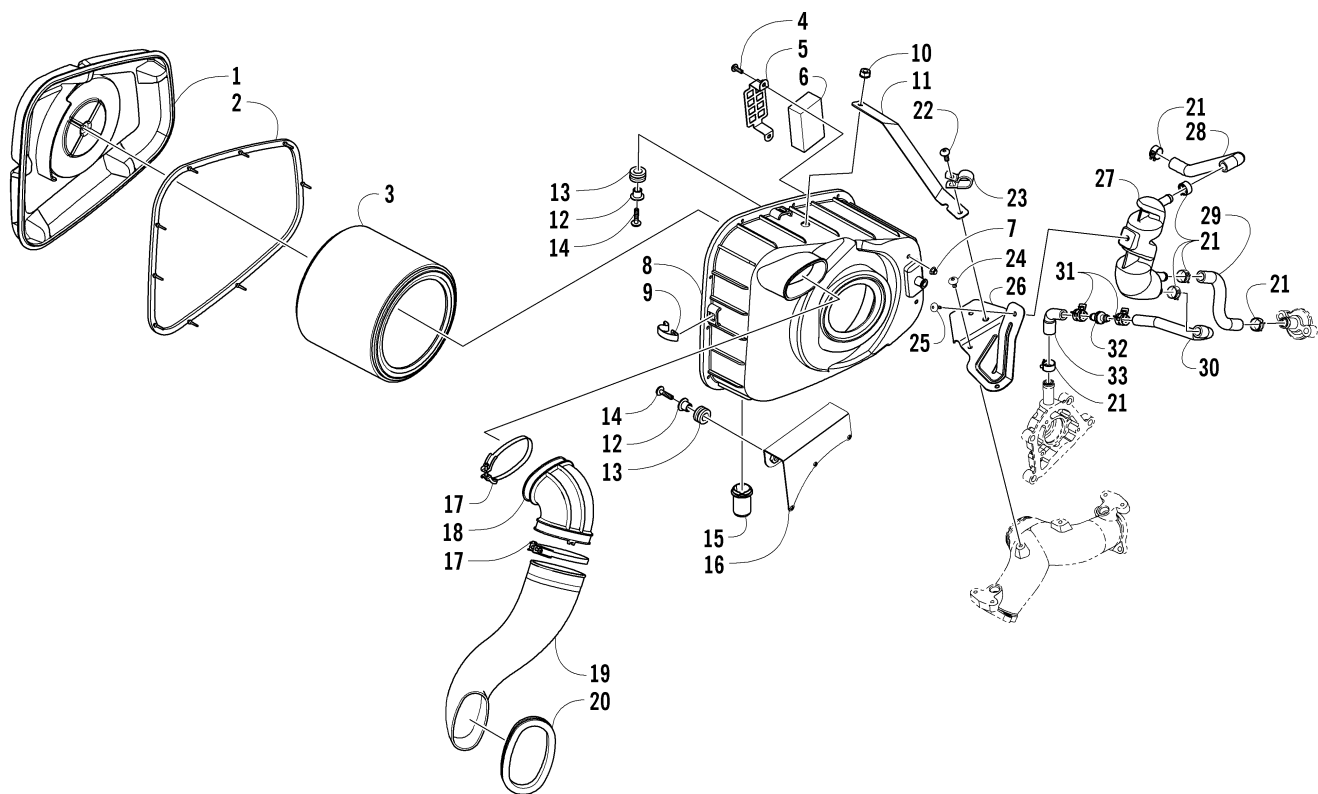

Item	Part No.	Qty	Name	Context	Footnote
1	0470-936	1	Cover, Air Intake		
2	0470-937	1	Gasket		
3	0470-942	1	Filter, Air		
4	8477-516	2	Screw, Machine		
5	0470-946	1	Bracket, Retaining - Filter		
6	0470-891	1	Filter, Vent		
7	8427-502	2	Nut, Lock		
8	0570-347	1	Housing, Air Intake		
9	0423-455	5	Clip, Spring		
10	0623-038	1	Nut w/Washer		
11	0470-977	1	Bracket, Support		
12	0423-669	3	Spacer		
13	0423-465	3	Grommet		
14	8476-625	3	Screw, Machine		
15	0470-947	1	Valve, Drain		
16	0470-939	1	Bracket, Mounting - Air Intake		
17	0423-730	2	Clamp		
18	0470-940	1	Boot, Air-In		
19	0470-938	1	Duct, Intake		
20	0470-945	1	Grommet		

Item	Part No.	Qty	Name	Context	Footnote
21	0423-045	6	Clamp, Hose		
22	8476-616	1	Screw, Machine		
23	1623-675	1	Clamp, Routing		
24	8476-612	2	Screw, Machine		
25	0623-784	1	Screw, Self-Tapping		
26	0470-967	1	Bracket, Mounting - Oil Separator		
27	0470-857	1	Separator, Oil		
28	0410-243	1	Hose, Vent		
29	0410-258	1	Hose, Vent		
30	0410-245	1	Hose, Vent		
31	1623-281	2	Clamp, Hose		
32	0470-943	1	Valve, Check		
33	0410-244	1	Hose, Vent		

 
BATTERY AND STARTER MOTOR ASSEMBLY [100636]

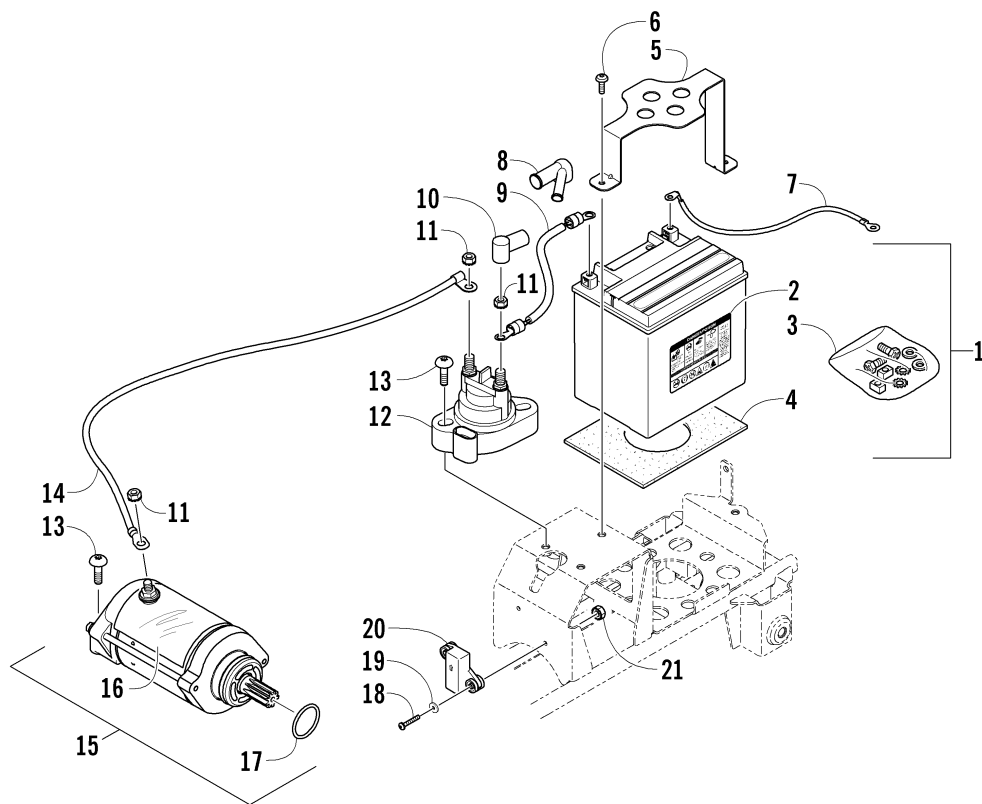

Item	Part No.	Qty	Name	Context	Footnote
1	0645-398	1	Battery	(inc. 2-3)	
2	0645-430	1	Decal, Warning		
3	0445-082	1	Kit, Hardware		
4	0417-022	1	Pad, Battery		
5	4506-730	1	Hold-Down, Battery		
6	8476-616	2	Screw, Machine		
7	0445-090	1	Cable, Battery/Ground		
8	0445-067	1	Boot, Dual Terminal		
9	0445-062	1	Cable, Battery/Solenoid		
10	0645-019	1	Boot, Terminal		
11	0623-038	3	Nut w/Washer		
12	0445-058	1	Solenoid		
13	8476-625	4	Screw, Machine		
14	0445-093	1	Cable, Solenoid/Starter		
15	0825-027	1	Motor, Starter - Assembly	(inc. 16-17)	
16	0412-677	1	Shield, Heat - Starter		
17	0830-228	1	O-Ring		
18	8468-425	2	Screw, Machine		
19	0123-802	2	Washer		
20	0409-064	1	Sensor, Tilt		


Item	Part No.	Qty	Name	Context	Footnote
21	0423-493	2	Nut w/Washer		

 CAM CHAIN ASSEMBLY [300149]

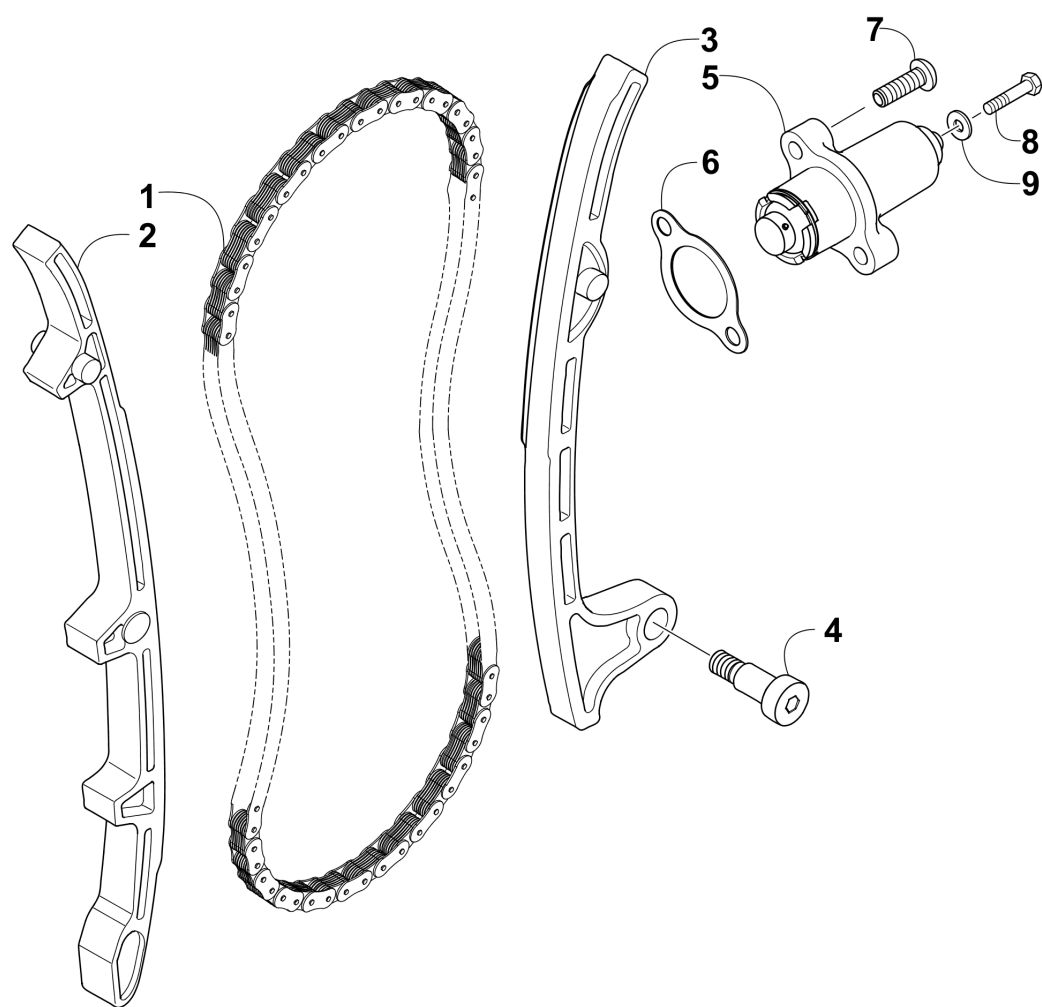

Item	Part No.	Qty	Name	Context	Footnote
1	0810-001	2	Chain, Cam		
2	0810-069	2	Guide, Chain		
3	0810-070	2	Tensioner, Chain		
4	0826-106	2	Pivot, Tensioner		
5	0810-004	2	Adjuster, Tensioner - Assembly		
6	0830-018	2	Gasket		
7	8468-625	4	Screw, Machine		
8	8400-610	2	Screw, Cap		
9	0828-129	2	Washer		

 
CARGO BOX AND TAILLIGHT ASSEMBLY [300173]

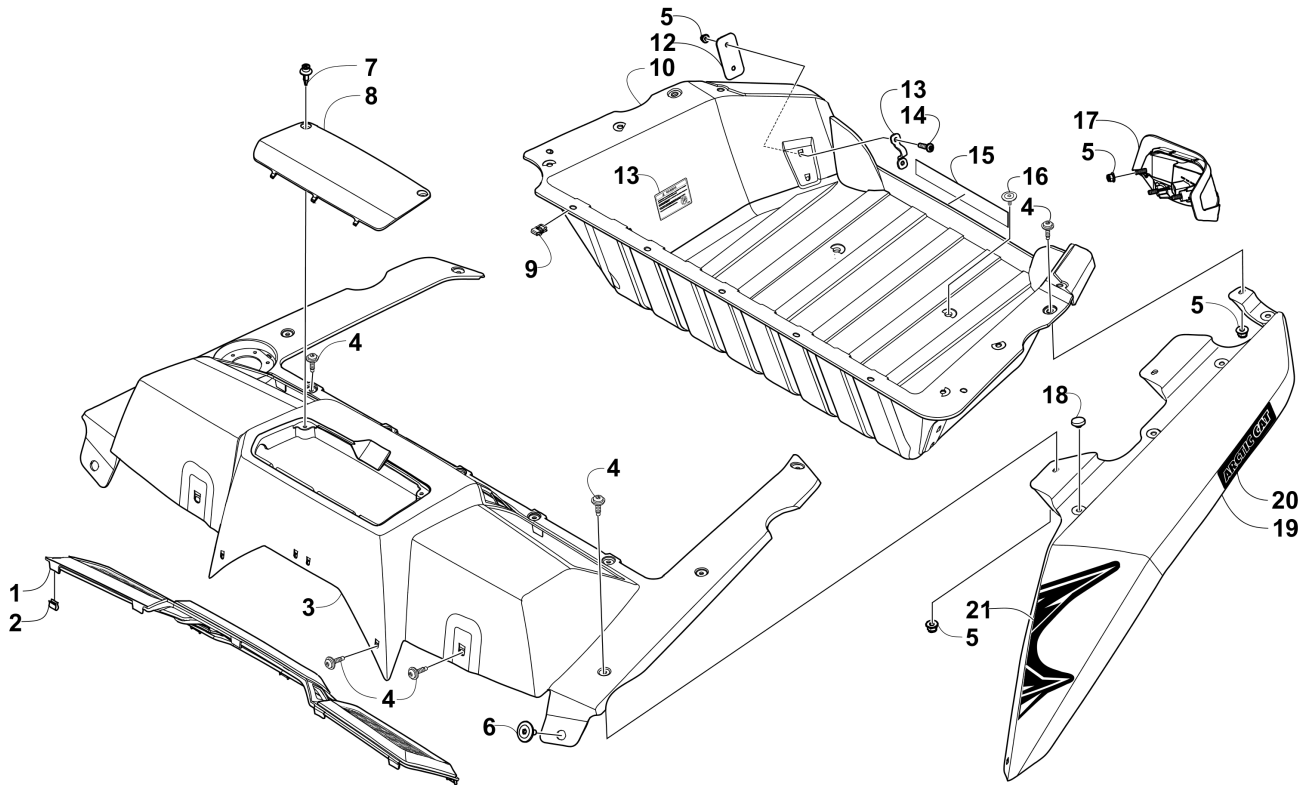

Item	Part No.	Qty	Name	Context	Footnote
1	2416-956	1	Screen, Vent		
2	0123-987	12	Clip, U		
3	5506-426	1	Panel, Rear Body - Blue		
4	0423-609	19	Screw, Machine		
5	8427-602	24	Nut, Lock		
6	1423-107	2	Screw, Shoulder		
7	0423-535	2	Rivet, Reinstallable		
8	2416-825	1	Cover, Access		
9	0423-577	5	Clip, U-Nut		
10	4406-167	1	Box, Cargo	(inc. 11)	
11	4411-791	1	Decal, Warning - Cargo Box		
12	2416-573	4	Plate, Backing		
13	4506-634	4	Bracket, Hold-Down		
14	8468-625	8	Screw, Machine		
15	2411-944	1	Decal, "Arctic Cat"		
16	1423-109	4	Screw, Shoulder		
17	0509-056	1	Taillight - Right		
17	0509-057	1	Taillight - Left		
18	0406-877	AR	Bumper		
19	5506-148	1	Fender, Rear - Right - White		


Item	Part No.	Qty	Name	Context	Footnote
19	5506-149	1	Fender, Rear - Left - White		
20	4411-254	2	Decal, "Arctic Cat"		

 CASE/BELT COOLING ASSEMBLY [97746]

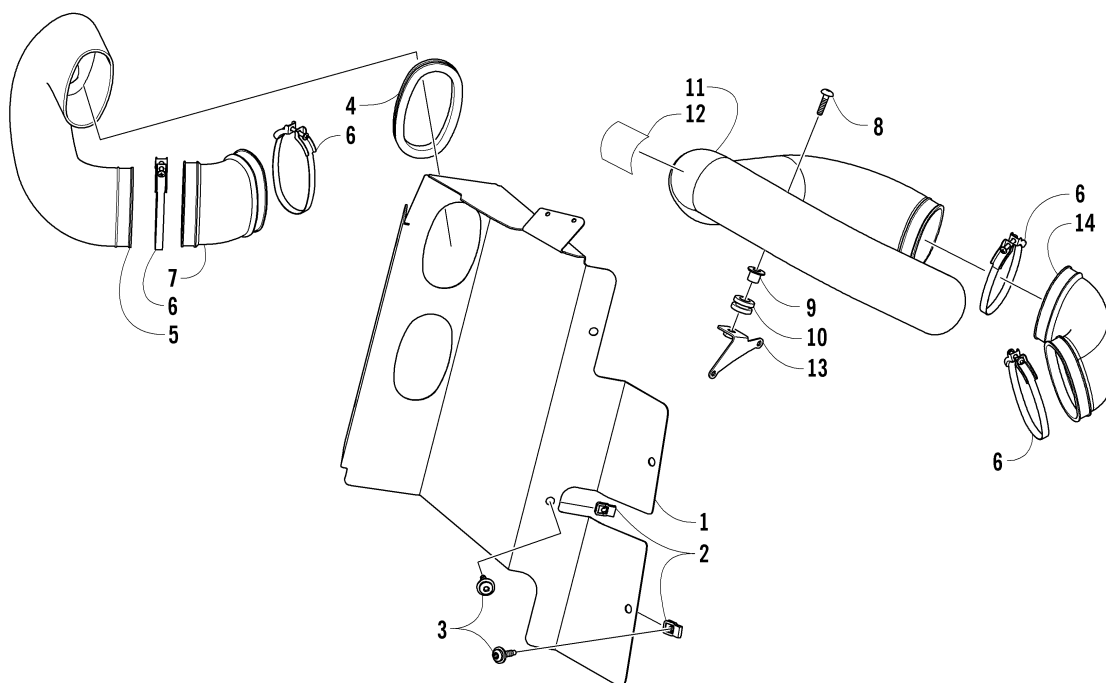

Item	Part No.	Qty	Name	Context	Footnote
1	2416-974	1	Shield, Heat		
2	0423-577	6	Clip, U-Nut		
3	0423-609	6	Screw, Machine		
4	0470-945	1	Grommet		
5	0413-295	1	Duct, Air-In		
6	0423-057	4	Clamp		
7	0413-294	1	Boot, Air-In		
8	8476-625	1	Screw, Machine		
9	0423-669	1	Spacer		
10	0423-465	1	Grommet		
11	0513-047	1	Duct, Air-Out	(inc. 12)	
12	0413-307	1	Foil, Protective		
13	2416-818	1	Bracket, Support		
14	0413-296	1	Boot, Air-Out		

 CLUTCH ASSEMBLY [100671]

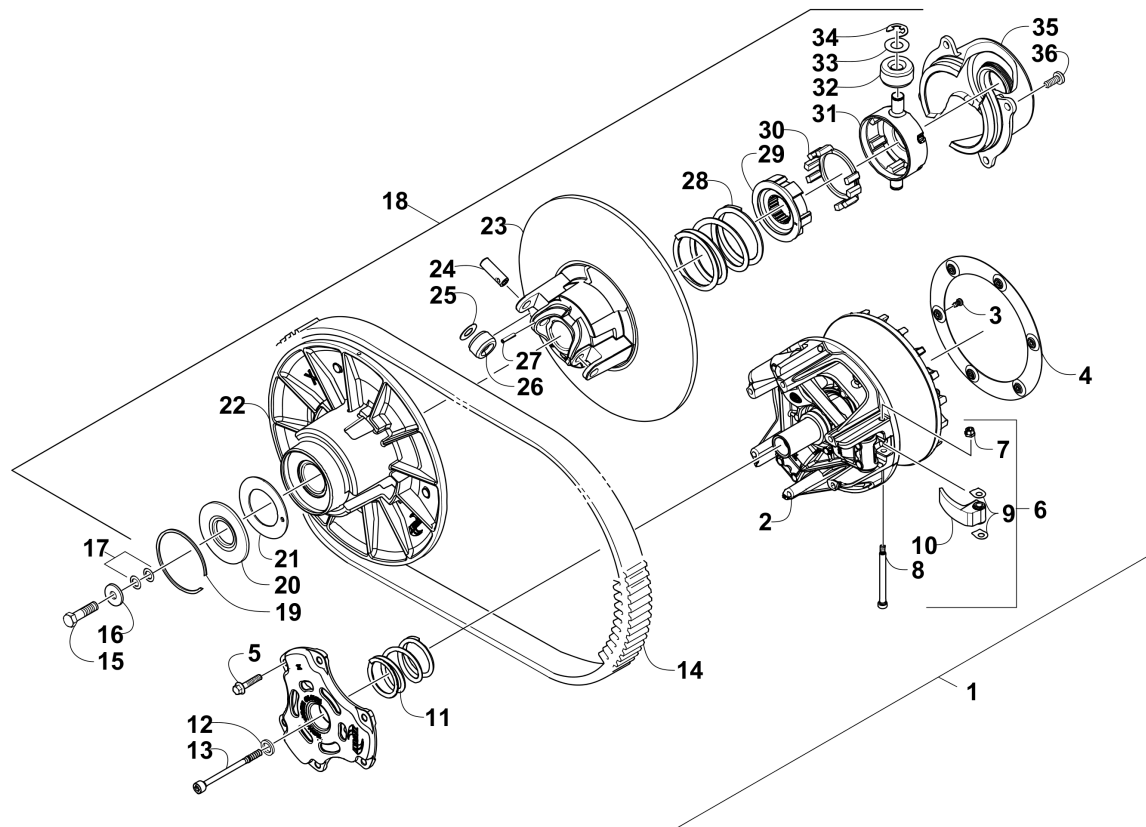

Item	Part No.	Qty	Name	Context	Footnote
1	0823-498	1	Clutch, Drive - Calibrated	(inc. 2-11)	
2	0823-499	1	Clutch, Drive - Uncalibrated	(inc. 3-5)	
3	0623-914	6	Screw, Self-Tapping		
4	0823-424	1	Cover, Sheave		
5	0823-402	6	Screw, Cap		
6	0823-426	1	Kit, Cam Arm	(inc. 7-9)	
7	0823-399	3	Nut, Lock		
8	0823-396	3	Screw, Shoulder		
9	0823-397	6	Washer, Thrust		
10	0823-429	3	Arm, Cam		
11	0823-500	1	Spring, Drive Clutch Blk/Silver		


Comments for Part Num. 0823-500

Drive clutch springs for 0823-498 calibrated and 0823-499 uncalibrated drive clutches are .300" shorter than springs for 0823-386 drive clutch. These springs are not interchangeable.

12	1623-649	1	Washer, High Collar		
13	0826-159	1	Bolt, Clutch		
14	0823-496	1	Belt, Drive		
15	0826-158	1	Screw, Cap		
16	0828-133	1	Washer		

Item	Part No.	Qty	Name	Context	Footnote
17	0828-137	AR	Shim, 12 x 24 x 0.25 mm		
17	0828-134	AR	Shim, 12 x 24 x 0.50 mm		
18	0823-461	1	Clutch, Driven - Assembly	(inc. 19-36)	
.19	0823-404	1	Ring, Retaining		
.20	0823-405	1	Washer, Thrust		
.21	0823-406	1	Shim, 38 x 62 x 1.50 mm		
.22	0823-459	1	Sheave, Stationary		
.23	0823-460	1	Sheave, Movable		
.24	0823-410	2	Pin, Roller		
.25	0823-409	2	Washer, Thrust		
.26	0823-462	2	Roller		
.27	0823-407	2	Pin, Spring		
.28	0823-411	1	Spring		
.29	0823-412	1	Bearing Assembly		
.30	0823-413	1	Insert, Spider		
.31	0823-414	1	Spider		
.32	0823-417	2	Roller		
.33	0823-416	2	Washer, Thrust		
.34	0823-415	2	E-Ring		
.35	0823-418	1	Cam, Driven		
.36	0823-419	4	Screw, Machine		

 
CLUTCH SIDE ENGINE COVERS [300156]

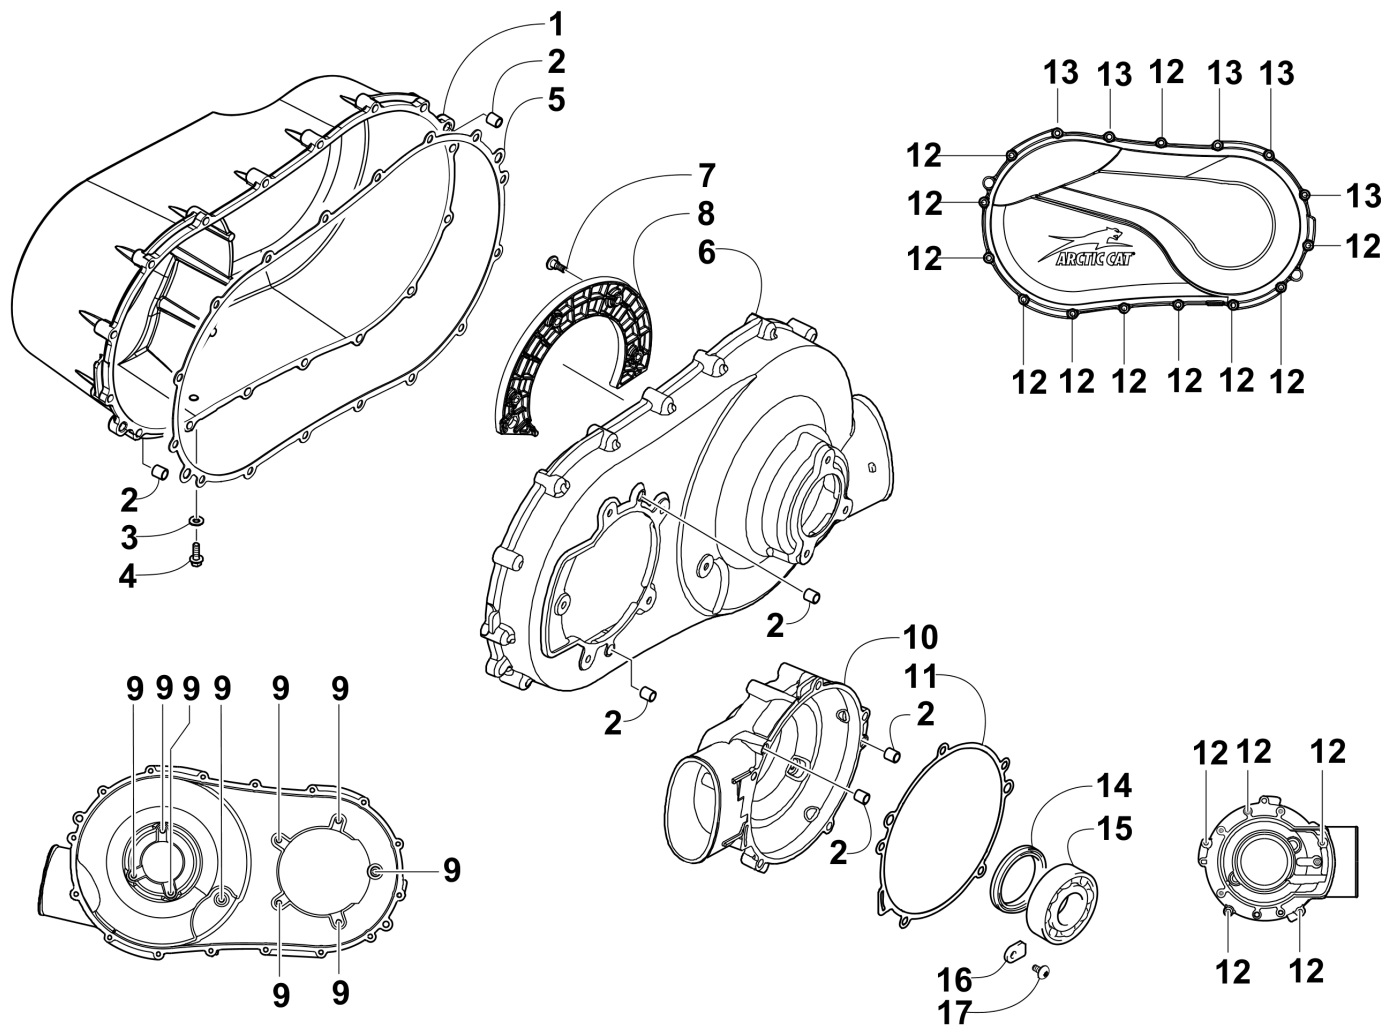

Item	Part No.	Qty	Name	Context	Footnote
1	0806-129	1	Cover, Outside		
2	0829-062	6	Pin, Dowel		
3	0830-013	1	Washer, Crush		
4	8408-812	1	Screw, Cap		
5	0830-137	1	Gasket, Cover		
6	0806-168	1	Cover, Inside		
7	0423-355	4	Screw, Shoulder		
8	0823-422	1	Plate, Windage		
9	8468-617	9	Screw, Machine		
10	0806-164	1	Cover, Clutch		
11	0830-218	1	Gasket, Clutch Cover		
12	8468-630	16	Screw, Machine		
13	8468-640	5	Screw, Machine		
14	0832-096	1	Seal		
15	0832-043	1	Bearing		

Item	Part No.	Qty	Name	Context	Footnote
16	0822-010	2	Retainer, Bearing		
17	0826-029	2	Screw, Machine		

 CONSOLE AND FLOOR PANEL ASSEMBLY [300132]

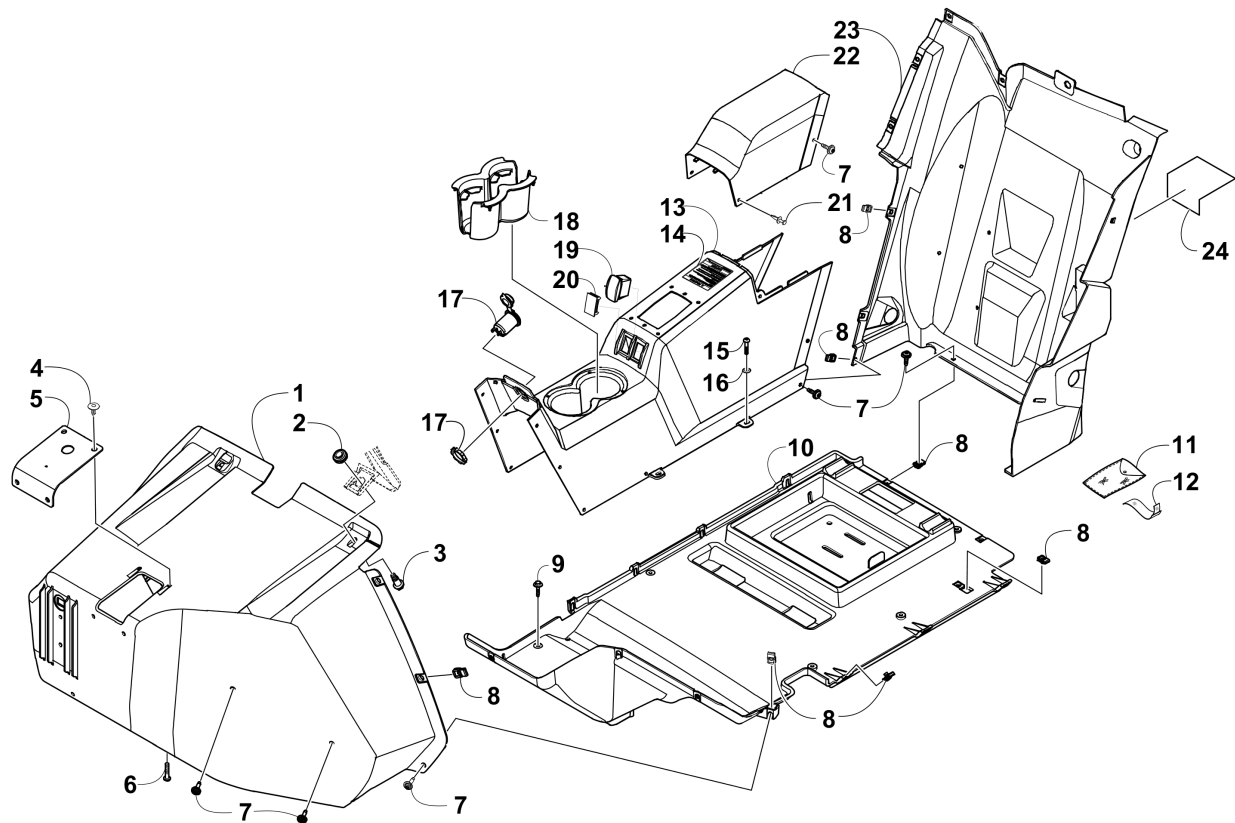

Item	Part No.	Qty	Name	Context	Footnote
1	2416-592	1	Panel, Fender - Inner Right		
1	2416-593	1	Panel, Fender - Inner Left		
2	1423-104	4	Grommet		
3	1423-125	4	Screw, Shoulder		
4	0623-544	4	Clip, Retaining		
5	2416-983	1	Panel, Filler - Brake Pedal		
6	1423-083	4	Screw, Self-Tapping		
7	0423-609	34	Screw, Machine		
8	0423-577	48	Clip, U-Nut		
9	1423-142	12	Screw, Cap w/Washer		
10	2416-516	1	Panel, Floor - Right		
10	2416-517	1	Panel, Floor - Left		
11	2516-863	1	Kit, Tool		
12	0707-582	1	Retainer, Toolkit		
13	7506-083	1	Console - Front	(inc. 14)	


Comments for Part Num. 7506-083

The 6 holes in the top of the console, under the shifter boot are NOT used, the console was originally made to use fasteners but they were not needed.

14	3411-262	1	Decal, Warning - Reverse		
15	8468-635	4	Screw, Machine		

Item	Part No.	Qty	Name	Context	Footnote
16	8050-223	4	Washer		
17	0641-897	1	Outlet, Accessory - 12V		
18	2416-109	1	Insert, Cupholder		
19	0409-071	1	Switch, Reverse Override		
20	0409-070	1	Plug, Switch Hole		
21	0623-362	2	Clip, Retaining		
22	2416-841	1	Cover, Access - Battery		
23	4406-228	1	Panel, Splash - Right		
23	5506-986	1	Panel, Splash - Left	(inc. 24)	
24	0412-806	1	Foil, Protective		

 
COOLING ASSEMBLY [300144]

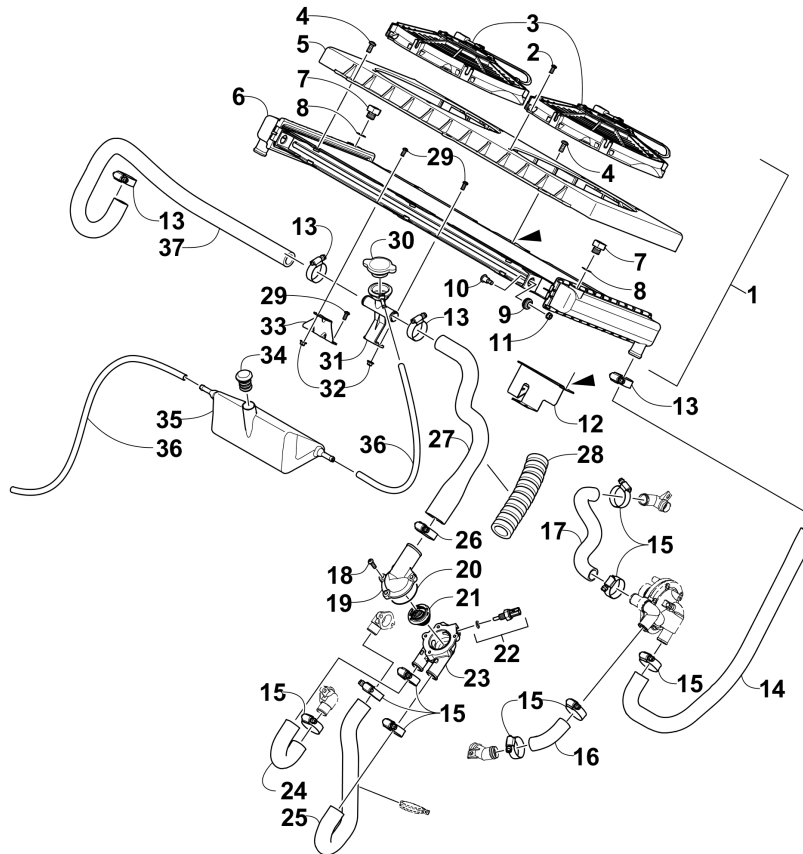

Item	Part No.	Qty	Name	Context	Footnote
1	0413-278	1	Radiator Assembly	(inc. 2-9)	
.2	8470-510	8	Screw, Machine		
.3	0413-123	2	Fan, Cooling		
.4	8017-579	6	Screw, Machine		
.5	0413-292	1	Shroud, Fan		
.6	0413-293	1	Radiator		
.7	0413-195	2	Plug, Drain		
.8	1602-213	2	O-Ring		
.9	0423-030	4	Grommet		
10	0423-484	4	Screw, Shoulder		
11	0623-038	4	Nut w/Washer		
12	2416-966	1	Bracket, Mounting - Coil		
13	0423-490	4	Clamp, Hose		
14	0410-300	1	Hose, Coolant - Radiator/Water Pump		
15	0423-496	9	Clamp, Hose		
16	0410-115	1	Hose, Coolant - Water Pump/Front Cylinder		
17	0410-116	1	Hose, Coolant - Water Pump/Rear Cylinder		
18	8470-520	4	Screw, Machine		
19	0808-092	1	Cover, Thermostat		
20	0830-173	1	O-Ring		

Item	Part No.	Qty	Name	Context	Footnote
21	0808-093	1	Thermostat		
22	0808-124	1	Sensor, Engine Coolant Temperature		
23	0808-189	1	Housing, Thermostat		
24	0410-191	1	Hose, Coolant - Front Cylinder Head/Thermostat		
25	0410-253	1	Hose, Coolant - Rear Cylinder Head/Thermostat		
26	1623-093	1	Clamp, Hose		
27	0410-239	1	Hose, Coolant - Thermostat/Filler Neck		
28	1619-038	1	Conduit, Flexible		
29	8475-512	6	Screw, Machine		
30	0413-255	1	Cap, Radiator		
31	0413-280	1	Neck, Filler		
32	8427-502	4	Nut, Lock		
33	2416-976	1	Bracket, Mounting - Overflow Bottle		
34	0413-087	1	Plug		
35	0413-300	1	Bottle, Overflow		
36	0610-011	AR	Hose - 25 ft		
37	0410-237	1	Hose, Coolant - Filler Neck/Radiator		

 
CRANKCASE ASSEMBLY [300150]

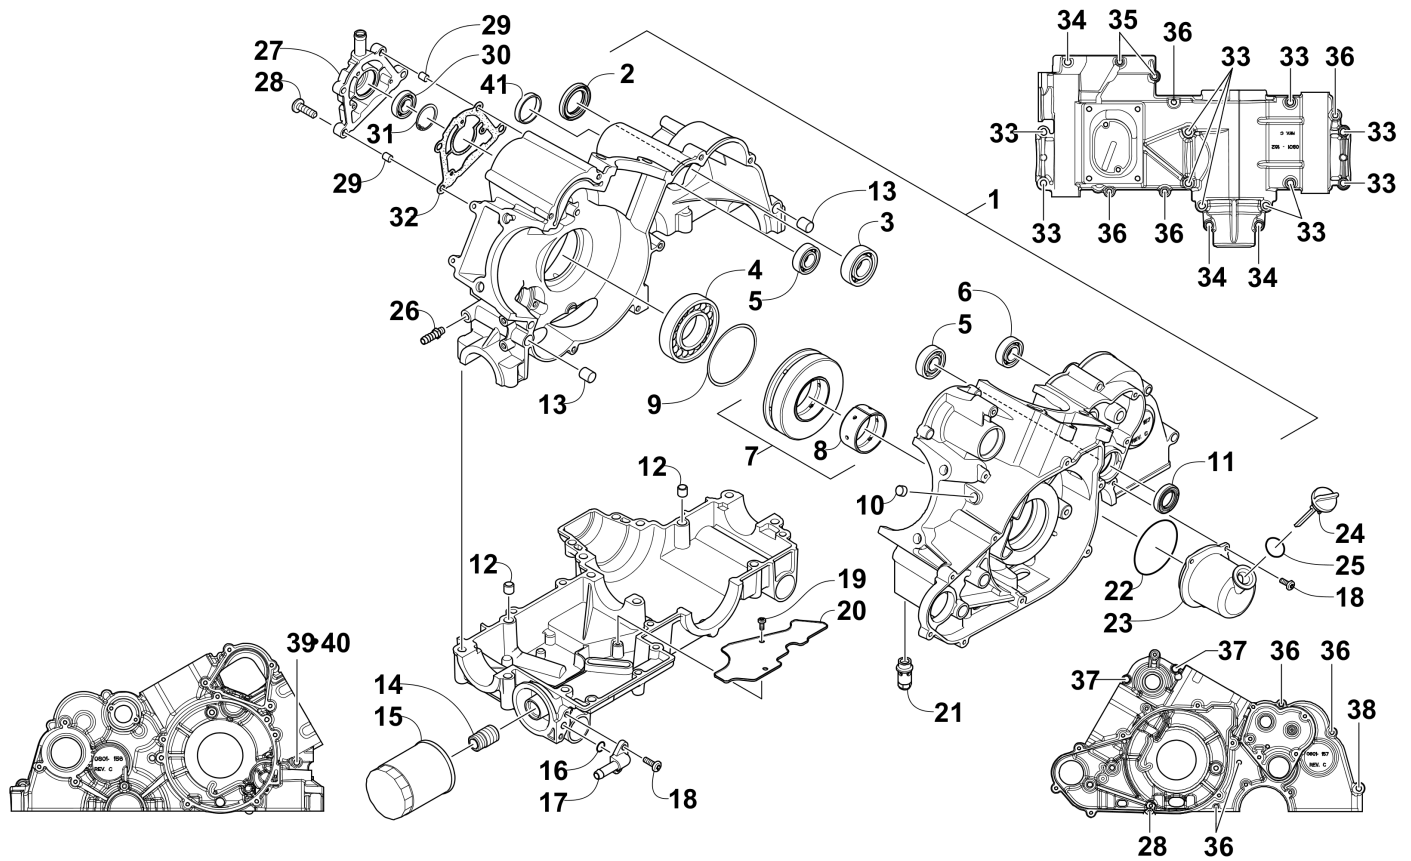

Item	Part No.	Qty	Name	Context	Footnote
1	0801-222	1	Crankcase - Assembly	(inc. 2-14)	
.2	0830-035	1	Seal, Driveshaft		
.3	0832-048	1	Bearing		
.4	0832-042	1	Bearing		
.5	0832-050	2	Bearing		
.6	0832-049	1	Bearing		
.7	0832-055	1	Bearing - Assembly	(inc. 8)	
..8	0832-057	1	Bearing		
.9	0830-221	1	O-Ring		
.10	0801-002	1	Plug		
.11	0822-052	1	Seal, Countershaft		
.12	0829-003	2	Pin, Dowel		
.13	0829-002	2	Pin, Dowel		
.14	0812-066	1	Union, Oil Filter		
15	0812-034	1	Filter, Oil		
16	0830-172	1	O-Ring		
17	0812-060	1	Fitting, Oil		
18	8468-616	5	Screw, Machine		
19	0623-914	2	Screw, Self-Tapping		
20	0801-218	1	Plate, Oil Sump		


Item	Part No.	Qty	Name	Context	Footnote
21	0812-052	1	Valve, Oil-Relief - Assembly		
22	0830-162	1	O-Ring, Oil Filler Cover		
23	0812-081	1	Cover, Oil Filler		
24	0801-073	1	Stick, Oil Level		
25	0830-010	1	O-Ring		
26	0812-078	1	Fitting, Oil - Threaded		
27	0801-193	1	Cover, Breather		
28	8468-625	5	Screw, Machine		
29	0829-062	2	Pin, Dowel		
30	0832-084	1	Bearing		
31	0831-086	1	Circlip		
32	0830-191	1	Gasket, Breather		
33	8412-860	10	Screw, Cap		
34	8412-830	3	Screw, Cap		
35	8468-640	2	Screw, Machine		
36	8468-660	8	Screw, Machine		
37	8468-630	2	Screw, Machine		
38	8412-875	1	Screw, Cap		
39	8412-850	1	Screw, Cap		
40	0830-008	1	Gasket		
41	0818-103	1	Plug		

 CRANKSHAFT AND PISTON ASSEMBLY [100670]

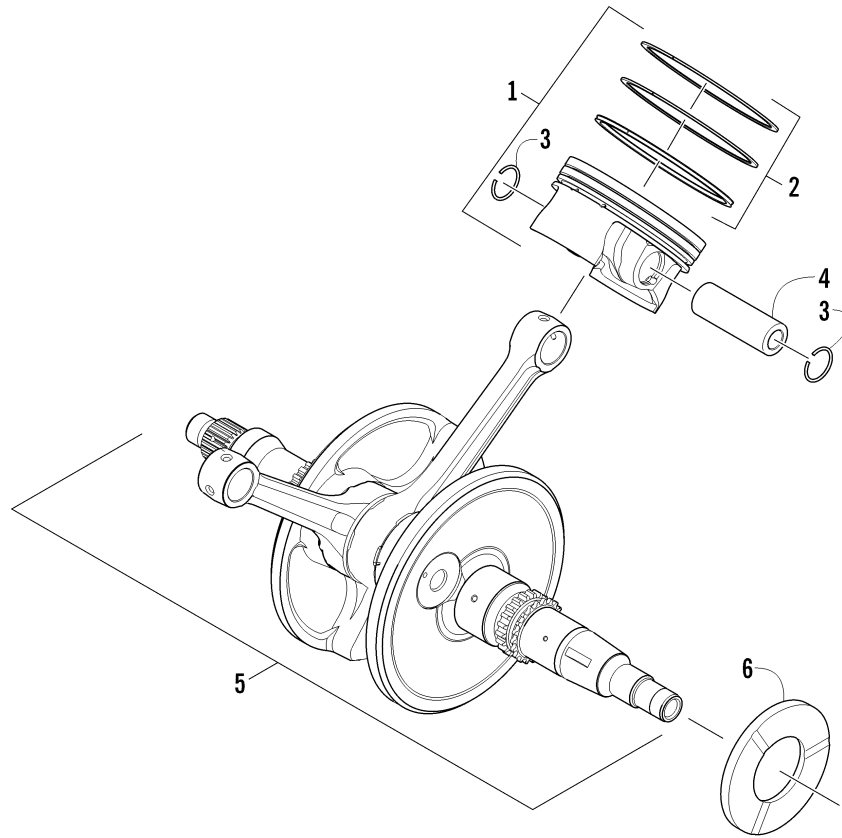


Item	Part No.	Qty	Name	Context	Footnote
1	0805-362	2	Piston Set - Assembly	(inc. 2-4)	
2	0805-164	2	Ring, Piston - Set		
3	0805-199	4	Circlip, Piston Pin		
4	0805-198	2	Pin, Piston		
5	0805-339	1	Crankshaft - Assembly		
6	0805-273	1	Washer, Thrust		

 CYLINDER ASSEMBLY [300147]

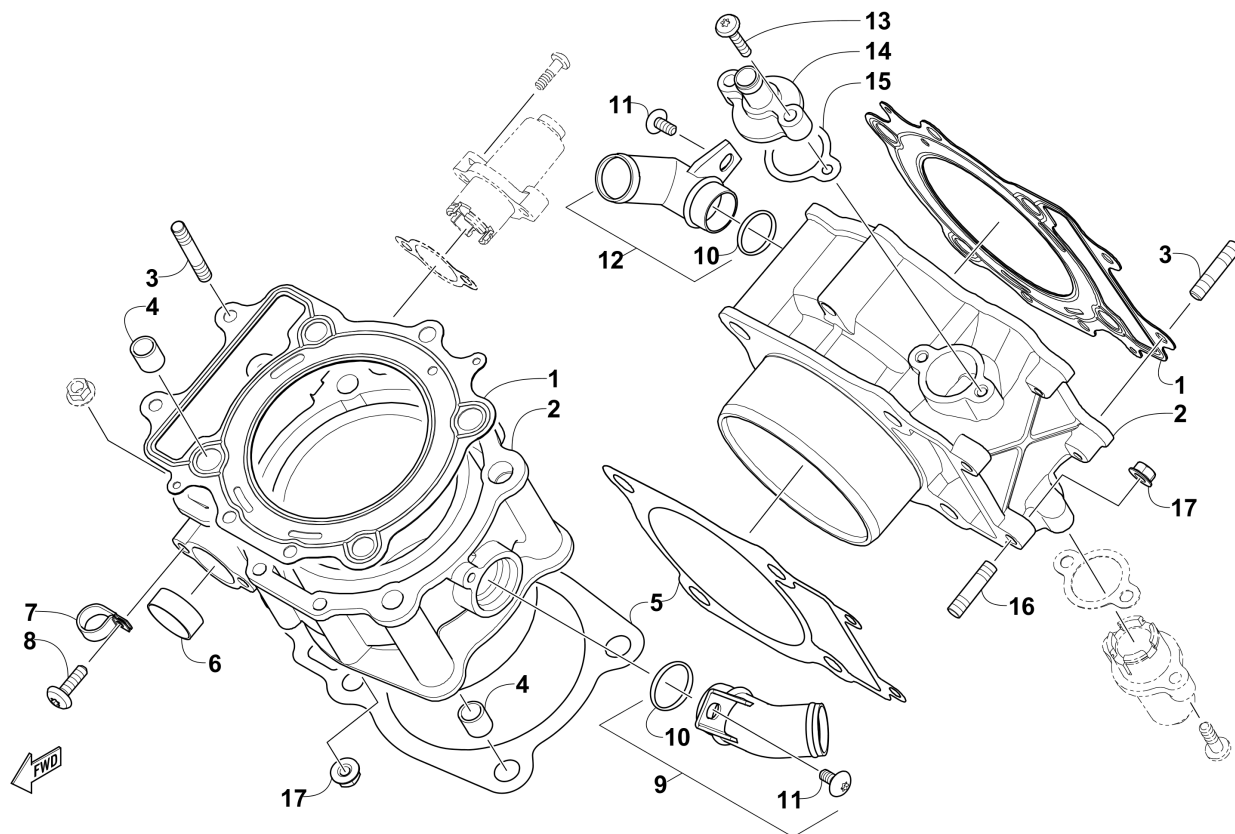

Item	Part No.	Qty	Name	Context	Footnote
1	0830-209	2	Gasket, Head		
2	0804-061	2	Cylinder		
3	0827-002	4	Bolt, Stud		
4	0829-002	8	Pin, Dowel		
5	0830-193	2	Gasket, Base		
6	0804-037	1	Plug, Cylinder		
7	1623-675	1	Clamp, Routing		
8	8468-612	1	Screw, Machine		
9	0804-068	1	Union, Coolant Hose Assembly	(inc. 10-11)	
.10	0830-007	2	O-Ring		
.11	8468-616	2	Screw, Machine		
12	0804-069	1	Union, Coolant Hose Assembly	(inc. 10-11)	
13	8468-620	2	Screw, Machine		
14	0801-174	1	Cover, Breather		
15	0830-018	1	Gasket		
16	0827-018	4	Bolt, Stud		
17	8424-604	8	Nut		

 
CYLINDER HEAD AND CAMSHAFT/VALVE ASSEMBLY [100543]

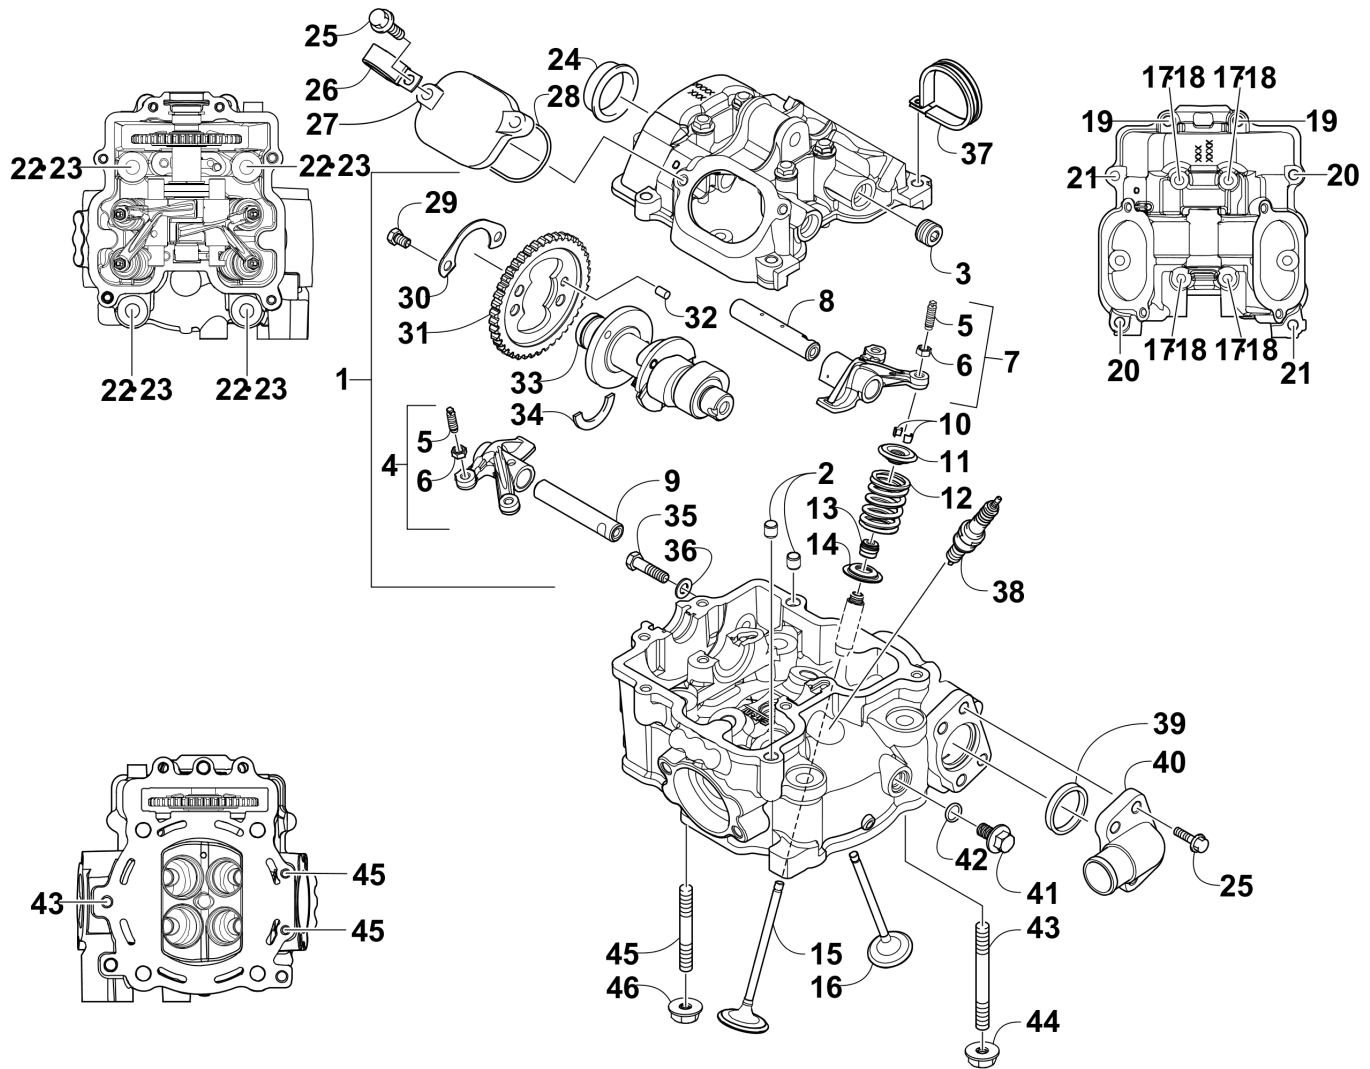

Item	Part No.	Qty	Name	Context	Footnote
1	0808-227	2	Head, Cylinder - Assembly	(inc. 2-17)	
.2	0829-062	4	Pin, Dowel		
.3	0831-092	4	Plug, Shaft		
.4	0809-319	2	Arm, Valve Rocker - Exhaust	(inc. two No. 5-6)	
..5	0809-240	8	Screw, Adjuster		
..6	0827-059	8	Nut		
.7	0809-318	2	Arm, Valve Rocker - Intake	(inc. two No. 5-6)	
.8	0809-241	2	Shaft, Rocker Arm - Intake		
.9	0809-242	2	Shaft, Rocker Arm - Exhaust		
.10	0809-233	16	Cotter, Valve		
.11	0809-232	8	Retainer, Spring		
.12	0809-231	8	Spring, Valve		
.13	0830-186	8	Seal, Oil		
.14	0809-230	8	Seat, Spring - Valve		
.15	0809-228	4	Valve, Intake		

Item	Part No.	Qty	Name	Context	Footnote
.16	0809-229	4	Valve, Exhaust		
.17	0826-149	8	Screw, Cap		
18	0830-155	8	Gasket		
19	0826-002	5	Screw, Cap		
20	0826-005	4	Screw, Cap		
21	0826-006	3	Screw, Cap		
22	0808-090	8	Screw, Cap		
23	0830-147	8	Washer		
24	0808-077	2	Plug, Cylinder Head		
25	0826-007	12	Screw, Cap		
26	1623-675	1	Clamp, Routing		
27	0808-003	4	Cap, Inspection		
28	0830-004	4	O-Ring		
29	0826-034	4	Screw, Cap		
30	0828-004	2	Plate, Retainer		
31	0809-212	2	Sprocket		
32	0829-049	2	Pin, Dowel		
33	0809-313	1	Camshaft, Front Cylinder		
33	0809-314	1	Camshaft, Rear Cylinder		
34	0809-003	2	C-Ring		
35	8400-812	2	Screw, Cap		
36	0830-025	2	Washer, Crush		
37	0623-761	1	Clamp, Routing		
38	0217-799	2	Spark Plug - CPR8E		
39	0830-120	2	Seal		
40	0808-210	2	Cover, Thermostat		
41	0826-157	2	Screw, Cap		
42	0830-213	2	O-Ring		
43	0827-069	2	Bolt, Stud		
44	8424-804	2	Nut		
45	0827-068	4	Bolt, Stud		
46	8424-604	4	Nut		

 
DASH ASSEMBLY [300158]

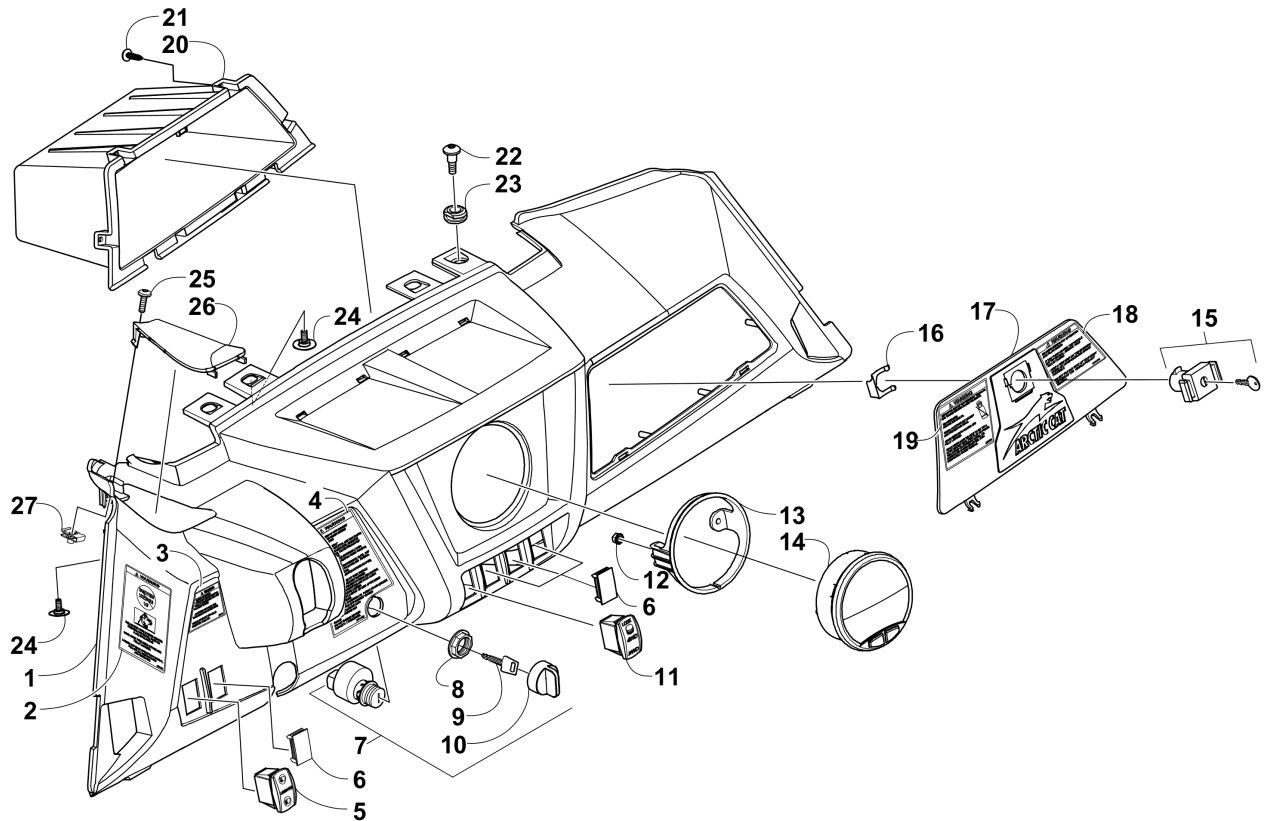

Item	Part No.	Qty	Name	Context	Footnote
1	5506-225	1	Panel, Dash	(inc. 2-4)	
.2	3411-259	1	Decal, Warning - Age		
.3	2411-893	1	Decal, Warning - Dash - Left		
.4	2411-892	1	Decal, Warning - Dash - Right		
5	0409-149	1	Switch, Light		
6	0409-070	4	Plug, Switch Hole		
7	0430-106	1	Switch, Ignition	(inc. 8-10)	
.8	0430-112	1	Nut, Retaining		
.9	0430-109	1	Key, Ignition - A		
.9	0430-110	1	Key, Ignition - B		
.10	0430-111	1	Cover, Key		
11	0409-148	1	Switch, 2WD/4WD/Differential Lock		
12	0423-493	2	Nut w/Washer		
13	0620-322	1	Bracket, Retaining		
14	0520-249	1	Gauge, Analog/LCD		
15	2416-985	1	Latch, Glove Box		
16	2416-984	1	Clip, Retaining		
17	5506-191	1	Cover, Glove Box	(inc. 18-19)	
.18	2411-970	1	Decal, Warning - Occupant - Right		
.19	4411-789	1	Decal, Warning - Occupant - Left		

Item	Part No.	Qty	Name	Context	Footnote
20	2416-842	1	Box, Glove		
21	0423-342	6	Screw, Self-Tapping		
22	0423-356	2	Screw, Shoulder		
23	1423-104	2	Grommet		
24	1423-133	4	Screw, Shoulder		
25	8477-620	1	Screw, Machine		
26	2416-840	1	Panel, Access - Master Cylinder		
27	0423-577	3	Clip, U-Nut		

 
DOOR ASSEMBLY [300175]

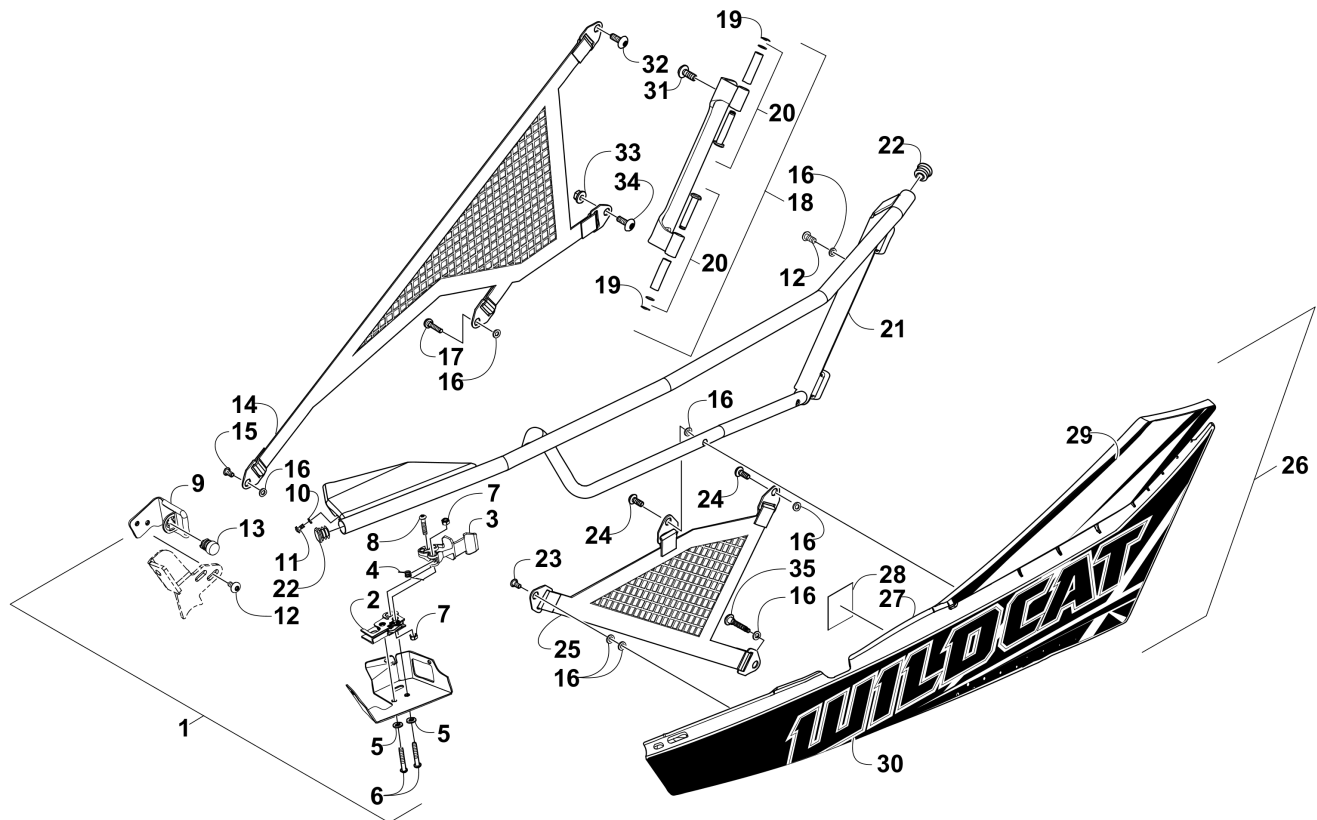

Item	Part No.	Qty	Name	Context	Footnote
1		1	Latch, Door Assembly - Right	(inc. 2-8)	
1		1	Latch, Door Assembly - Left	(inc. 2-8)	
2	4406-908	1	Latch, Rotary - Right		
2	4406-909	1	Latch, Rotary - Left		
3	4406-454	2	Handle, Door		
4	1423-235	2	Spring		
5	1423-120	4	Washer		
6	1423-232	4	Screw, Machine		
7	1423-153	4	Nut, Lock		
8	1423-231	2	Screw		
9	4406-792	1	Plate, Striker - Right		
9	4406-793	1	Plate, Striker - left		
10	1423-283	6	Washer, Lock		
11	1423-282	6	Screw, Cap		
12	1423-113	4	Screw, Machine		
13	4406-419	2	Bumper, Door Stopper		
14	4406-304	2	Net, Restraint - Upper		
15	1423-157	2	Screw, Shoulder		
16	1423-152	16	Washer		
17	1423-186	2	Screw, Shoulder		

Item	Part No.	Qty	Name	Context	Footnote
18	1436-476	1	Hinge, Door - Right Assembly	(inc. 19-20)	
18	1436-454	1	Hinge, Door - Left Assembly	(inc. 19-20)	
.19	1423-118	4	Circlip		
.20	0518-096	4	Kit, Hinge Pin		
21	5506-930	1	Frame, Door - Right		
21	5506-931	1	Frame, Door - Left		
22	4406-013	4	Plug, Hole		
23	1423-196	2	Screw, Shoulder		
24	1423-197	4	Screw, Shoulder		
25	4406-305	2	Net, Restraint - Lower		
26	0518-194	1	Door w/Decals - Right - Blue	(inc. 27 and 29-30)	
26	0518-195	1	Door w/Decals - Left - Blue	(inc. 27-30)	
.27	4406-788	1	Door w/o Decals - Right - Black		
.27	0518-240	1	Door w/o Decals - Left - Black	(inc. 28)	
..28	2411-891	1	Decal, Warning - Tire Pressure		
.29	4411-244	1	Decal, Door - Upper Right - Blue		
.29	4411-245	1	Decal, Door - Upper Left - Blue		
.30	4411-246	1	Decal, Door - Lower Right - Blue		
.30	4411-247	1	Decal, Door - Lower Left - Blue		
31	0423-817	4	Screw, Machine		
32	0423-355	4	Screw, Shoulder		
33	8427-602	2	Nut, Lock		
34	0826-029	2	Screw, Machine		
35	1423-205	2	Screw, Shoulder		

 
DRIVE TRAIN ASSEMBLY [100542]

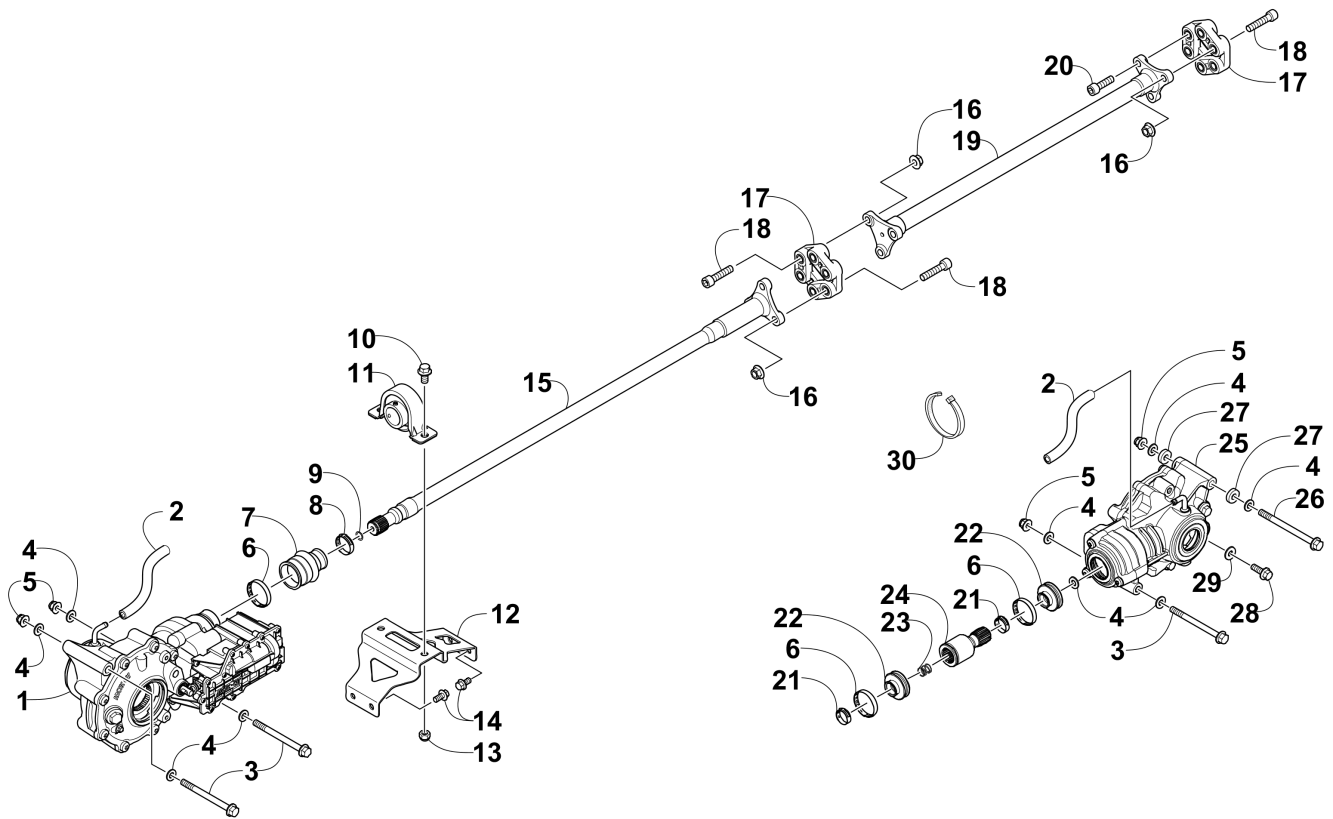

Item	Part No.	Qty	Name	Context	Footnote
1	2502-082	1	Gearcase, Front		
2	0410-070	AR	Hose - 25 ft		
3	0423-404	3	Screw, Cap		
4	0423-426	9	Washer		
5	8428-002	4	Nut, Lock		
6	0423-393	3	Clamp		
7	0402-985	1	Boot, Shaft		
8	0423-411	1	Clamp		
9	1423-090	1	O-Ring		
10	8408-020	2	Screw, Cap		
11	1402-968	1	Bearing		
12	2502-019	1	Bracket, Mounting - Bearing Assembly		
13	8422-002	2	Nut, Lock		
14	8408-816	4	Screw, Cap		
15	2402-058	1	Driveshaft, Front		
16	0423-157	9	Nut		
17	2402-014	2	Isolator, Driveshaft		
18	1423-094	9	Screw, Cap		
19	2402-056	1	Driveshaft, Center Rear		
20	1423-093	3	Screw, Cap		

Item	Part No.	Qty	Name	Context	Footnote
21	1423-061	2	Clamp		
22	1402-951	2	Boot		
23	1402-026	1	Spring		
24	2402-134	1	Driveshaft, Rear		
25	2502-083	1	Gearcase, Rear		
26	0423-576	1	Screw, Cap		
27	1423-062	2	Spacer		
28	8408-826	1	Screw, Cap		
29	8050-252	1	Washer		
30	0123-788	AR	Tie, Cable - 8 in.		
30	0123-903	AR	Tie, Cable - 11.5 in.		

 
ENGINE AND EXHAUST [300165]

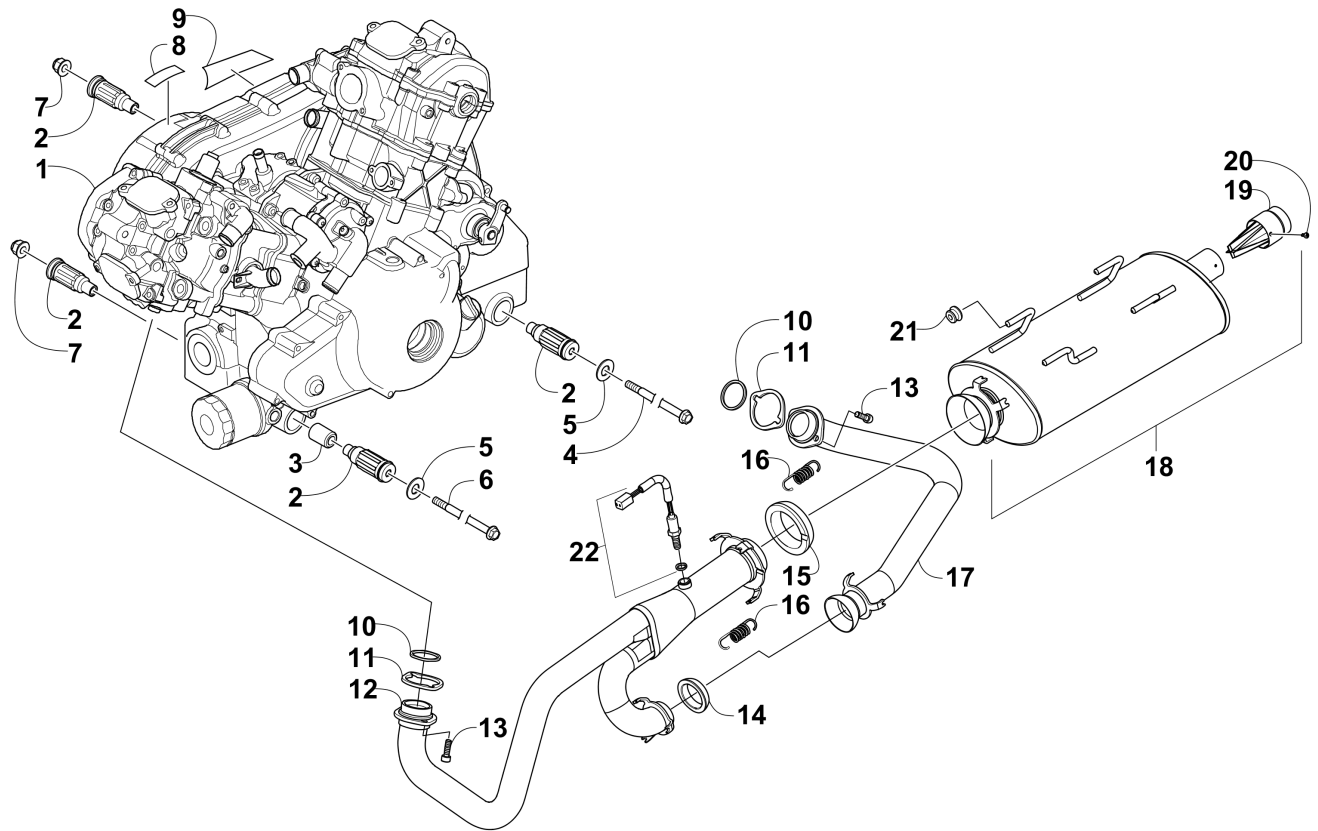

Item	Part No.	Qty	Name	Context	Footnote
1	0800-157	1	Engine, A950Q	(inc. 2-3)	
.2	0801-091	4	Mount, Engine		
.3	0801-128	1	Spacer, Engine Mount		
4	0423-451	1	Screw, Cap		
5	0423-426	2	Washer		
6	0423-734	1	Screw, Cap		
7	8428-002	2	Nut, Lock		
8	0411-426	1	Decal, Warning - Clutch		
9	3411-555	1	Decal, "Rapid Response"		
10	0412-338	2	Gasket, Exhaust		
11	0412-636	2	Spacer, Exhaust Pipe		
12	0512-810	1	Pipe, Exhaust - Front		
13	1423-300	4	Screw, Cap		
14	0412-375	1	Seal, Exhaust		
15	2612-615	1	Gasket, Exhaust - Manifold		
16	0612-668	7	Spring, Extension		
17	0512-811	1	Pipe, Exhaust - Rear		
18	0512-836	1	Muffler Assembly	(inc. 19-20)	
.19	0512-832	1	Arrester, Spark		
.20	1423-323	1	Screw, Self-Tapping		

Item	Part No.	Qty	Name	Context	Footnote
21	0412-544	4	Bushing		
22	0630-302	4	Sensor, Oxygen		

 
FRAME, HEADLIGHTS, AND RELATED PARTS [300174]

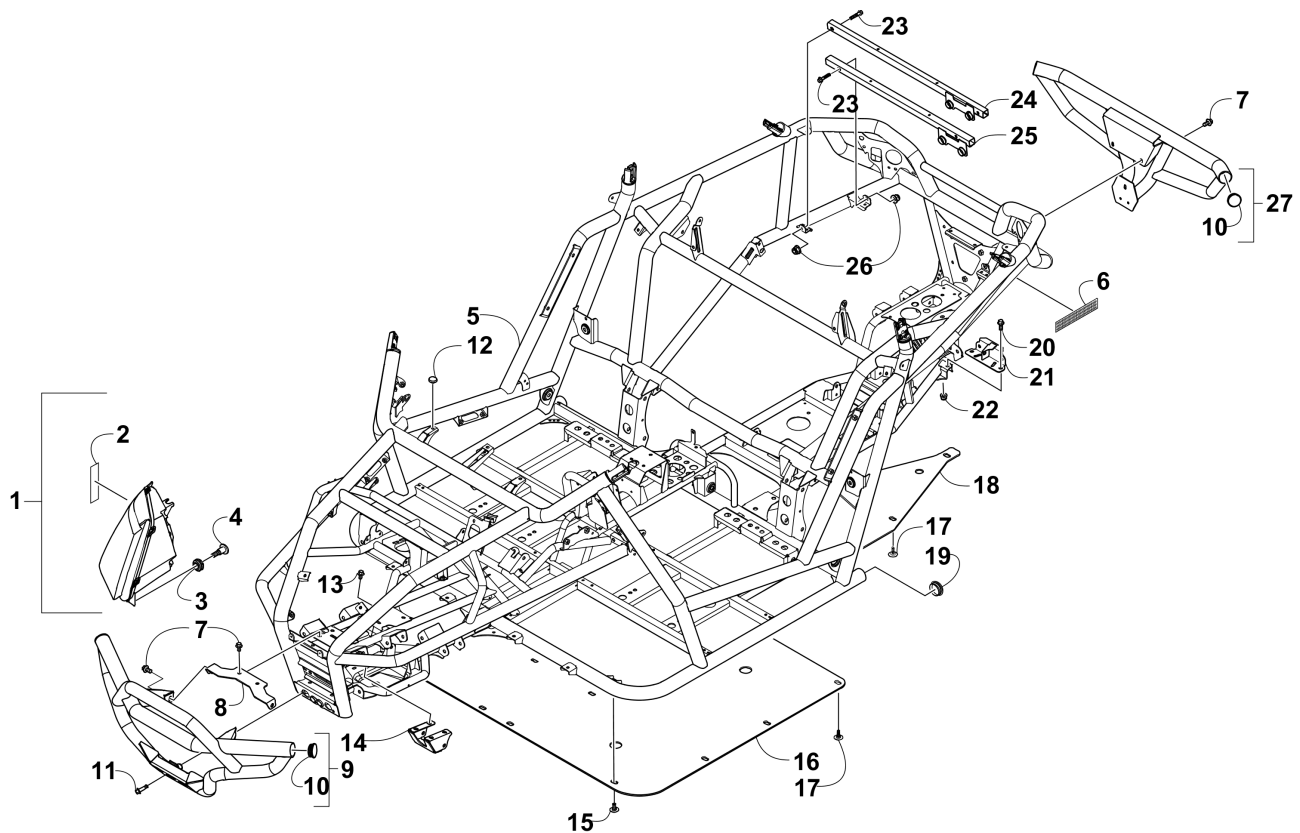

Item	Part No.	Qty	Name	Context	Footnote
1	0509-064	1	Headlight Assembly - Right	(inc. 2)	
1	0509-065	1	Headlight Assembly - Left	(inc. 2)	
.2	2411-972	1	Decal, Reflector - Right - Amber		
.2	2411-973	1	Decal, Reflector - Left - Amber		
3	1423-104	6	Grommet		
4	0423-356	6	Screw, Shoulder		
5	7506-005	1	Frame, Main	(inc. 6)	
.6	2411-974	2	Reflector, Rear		
7	8410-816	5	Screw, Cap		
8	5506-176	1	Bracket, Mounting		
9	5506-441	1	Bumper, Front - Blue	(inc. two No. 10)	
.10	1423-190	4	Caps - Black		
11	8410-640	2	Screw, Cap		
12	0406-877	1	Bumper		
13	8409-018	4	Screw, Cap		
14	4506-703	1	Bracket, Support - Front Gearcase		
15	0423-101	2	Screw, Body		
16	4506-406	1	Plate, Skid - Front		
17	1423-109	21	Screw, Shoulder		
18	4506-407	1	Plate, Skid - Rear		

Item	Part No.	Qty	Name	Context	Footnote
19	2416-962	2	Plug, Hole		
20	8409-025	2	Screw, Cap		
21	4506-637	1	Bracket, Support - Rear Gearcase		
22	8428-002	2	Nut, Lock		
23	8408-845	4	Screw, Cap		
24	4506-680	1	Tube, Support - Front		
25	4506-682	1	Tube, Support - Rear		
26	8427-802	4	Nut, Lock		
27	5506-442	1	Bumper, Rear - Blue	(inc. two No. 10)	

 
FRONT AND SIDE PANEL ASSEMBLIES [300172]

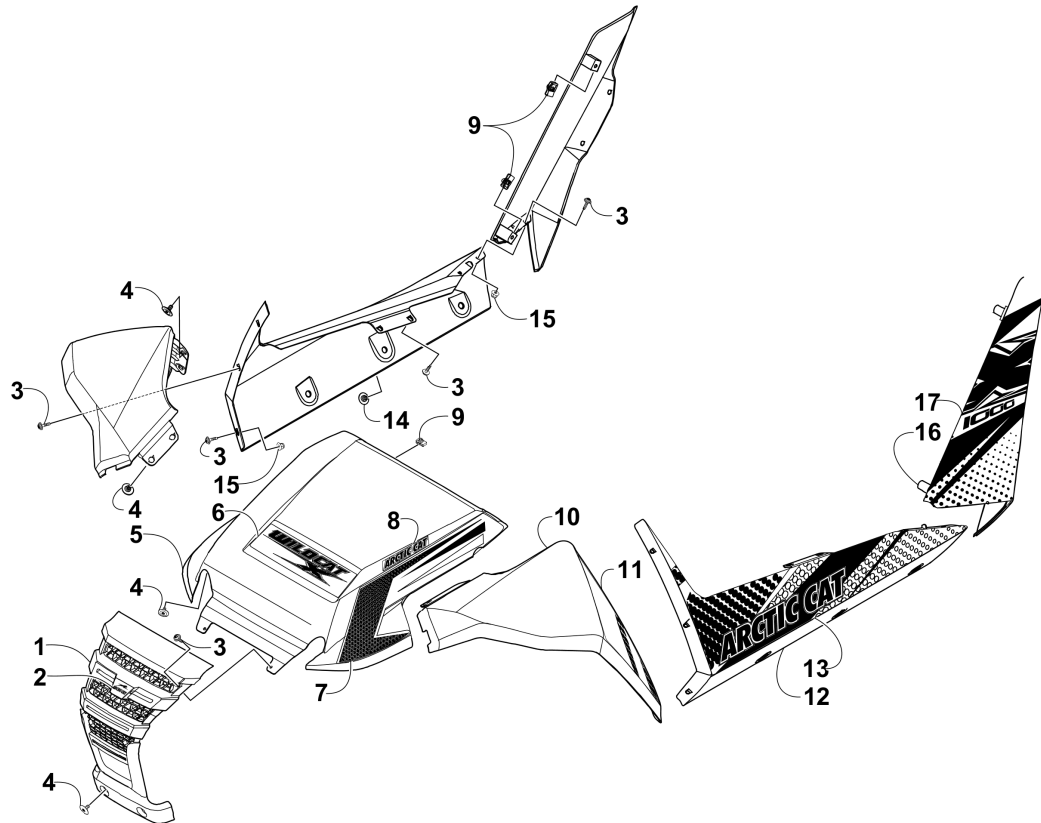

Item	Part No.	Qty	Name	Context	Footnote
1	2416-685	1	Fascia, Front - Black		
2	2411-943	1	Decal, "Arctic Cat"		
3	0423-609	16	Screw, Machine		
4	0423-101	12	Screw, Body		
5	5506-415	1	Hood - Blue		
6	4411-221	1	Decal, Wildcat X		
7	4411-242	1	Decal, Hood - Front Right - Blue		
7	4411-243	1	Decal, Hood - Front Left - Blue		
8	4411-231	2	Decal, Hood Side - Blue		
9	0423-577	6	Clip, U-Nut		
10	5506-418	1	Fender, Front - Right - Blue		
10	5506-419	1	Fender, Front - Left - Blue		
11	4411-248	1	Decal, Fender - Right - Blue		
11	4411-249	1	Decal, Fender - Left - Blue		
12	2416-988	1	Panel, Side - Lower Front - Right - Black		
12	2416-989	1	Panel, Side - Lower Front - Left - Black		
13	4411-494	1	Decal, Lower Side Panel - Right - Blue		
13	4411-495	1	Decal, Lower Side Panel - Left - Blue		
14	1423-133	6	Screw, Shoulder		
15	8427-602	4	Nut, Lock		

Item	Part No.	Qty	Name	Context	Footnote
16	2416-990	1	Panel, Side - Upper Rear - Right - Black		
16	2416-991	1	Panel, Side - Upper Rear - Left - Black		
17	4411-250	1	Decal, Upper Side Panel - Right - Blue		
17	4411-251	1	Decal, Upper Side Panel - Left - Blue		

 FRONT DRIVE GEARCASE ASSEMBLY [100521]

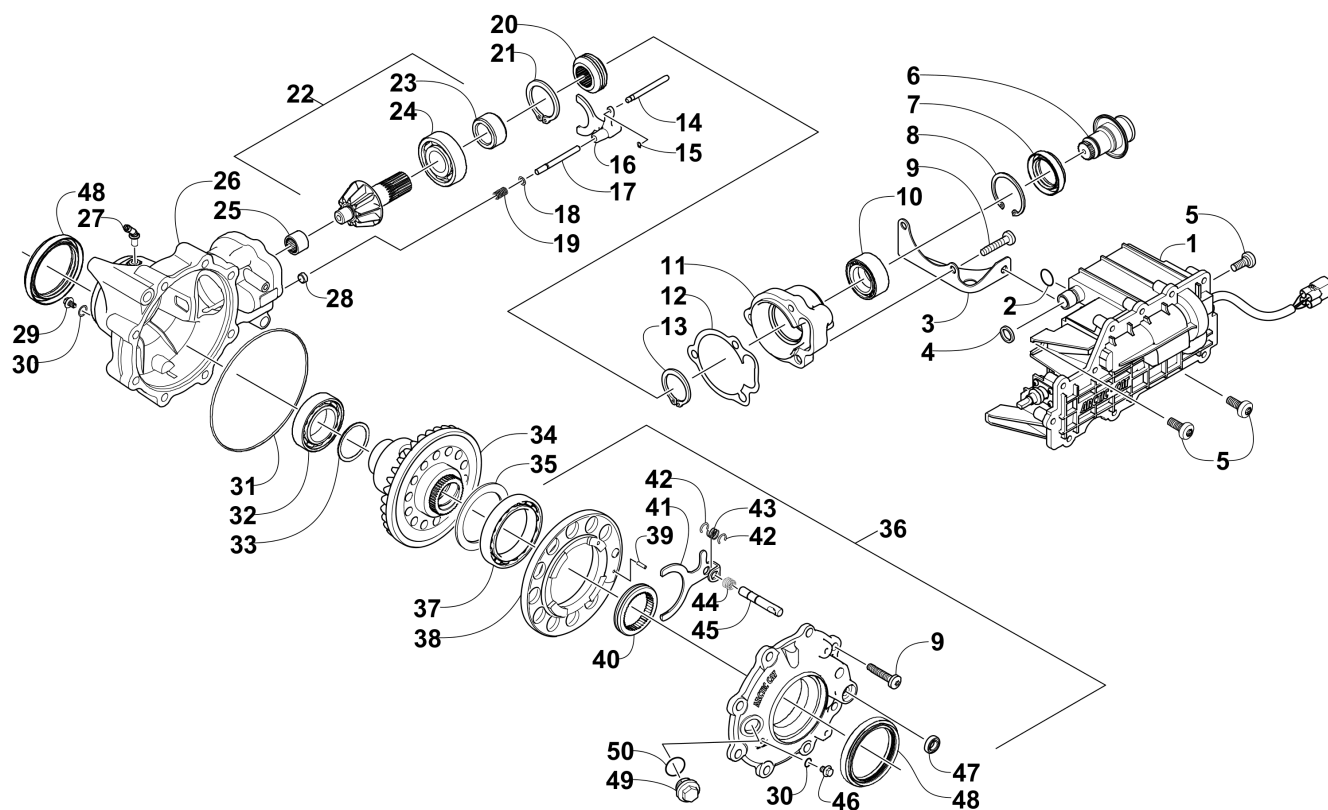


Item	Part No.	Qty	Name	Context	Footnote
Not Shown	2502-082	1	Gearcase, Front		
1	1502-909	1	Actuator	(inc. 2)	
2	1402-981	1	O-Ring		
3	1502-237	1	Bracket, Actuator		
4	0423-892	1	O-Ring		
5	0423-396	3	Screw, Self-Tapping		
6	1502-085	1	Shaft, Input		
7	1402-011	1	Seal		
8	0423-423	1	Ring, Retaining		
9	0423-118	11	Screw, Self-Tapping		
10	1402-043	1	Bearing		
11	0502-528	1	Housing, Pinion		
12	0402-947	1	Gasket, Flange		
13	0423-417	1	Ring, Retaining		
14	0402-997	1	Shaft, Selector		
15	0423-402	1	Ring, Retaining		
16	0402-998	1	Fork, Selector		
17	0402-417	1	Shaft, Shuttle		
18	0423-147	1	O-Ring		

Item	Part No.	Qty	Name	Context	Footnote
19	0402-999	1	Spring, Return		
20	0402-413	1	Coupler, Drive		
21	1423-067	1	Ring, Retaining		
22	1502-851	1	Gear, Pinion - Assembly - 11T	(inc. 23-24)	
23	1402-977	1	Collar, Retaining		
24	0402-327	1	Bearing		
25	0402-328	1	Bearing		
26	1502-856	1	Housing, Gearcase		
27	2402-162	1	Fitting, Elbow		
28	0402-411	1	Pin, Dowel		
29	1402-210	1	Plug, Magnetic	(inc. one No. 30)	
30	0423-153	2	O-Ring		
31	0423-149	1	O-Ring		
32	0402-393	1	Bearing		
33	0402-405	AR	Shim, 41 x 49 x 1.3 mm		
33	0402-406	AR	Shim, 41 x 49 x 1.4 mm		
33	0402-407	AR	Shim, 41 x 49 x 1.5 mm		
33	0402-408	AR	Shim, 41 x 49 x 1.6 mm		
33	0402-409	AR	Shim, 41 x 49 x 1.7 mm		
34	1502-919	1	Gear, Ring - 34T		
35	1402-074	AR	Shim, 61 x 69 x 1.3 mm		
35	1402-075	AR	Shim, 61 x 69 x 1.4 mm		
35	1402-076	AR	Shim, 61 x 69 x 1.5 mm		
35	1402-077	AR	Shim, 61 x 69 x 1.6 mm		
35	1402-078	AR	Shim, 61 x 69 x 1.7 mm		
36	1502-858	1	Cover, Gearcase	(inc. one No. 30, 37-47, and one No. 48)	
37	1402-053	1	Bearing		
38	0502-413	1	Flange, Bearing		
39	1402-079	1	Pin, Parallel		
40	1402-042	1	Collar, Sliding		
41	1402-054	1	Fork		
42	1402-058	2	Ring, Retaining		
43	1402-057	1	Spring		
44	1402-063	1	Spring		
45	1402-656	1	Shaft, Lock		
46	1402-211	1	Plug, Oil Level	(inc. one No. 30)	
47	1402-056	1	Seal		
48	1402-930	2	Seal		
49	0402-333	1	Plug, Fill	(inc. 50)	

Item	Part No.	Qty	Name	Context	Footnote
.50	0423-154	1	O-Ring		

 
FRONT SUSPENSION ASSEMBLY [300176]

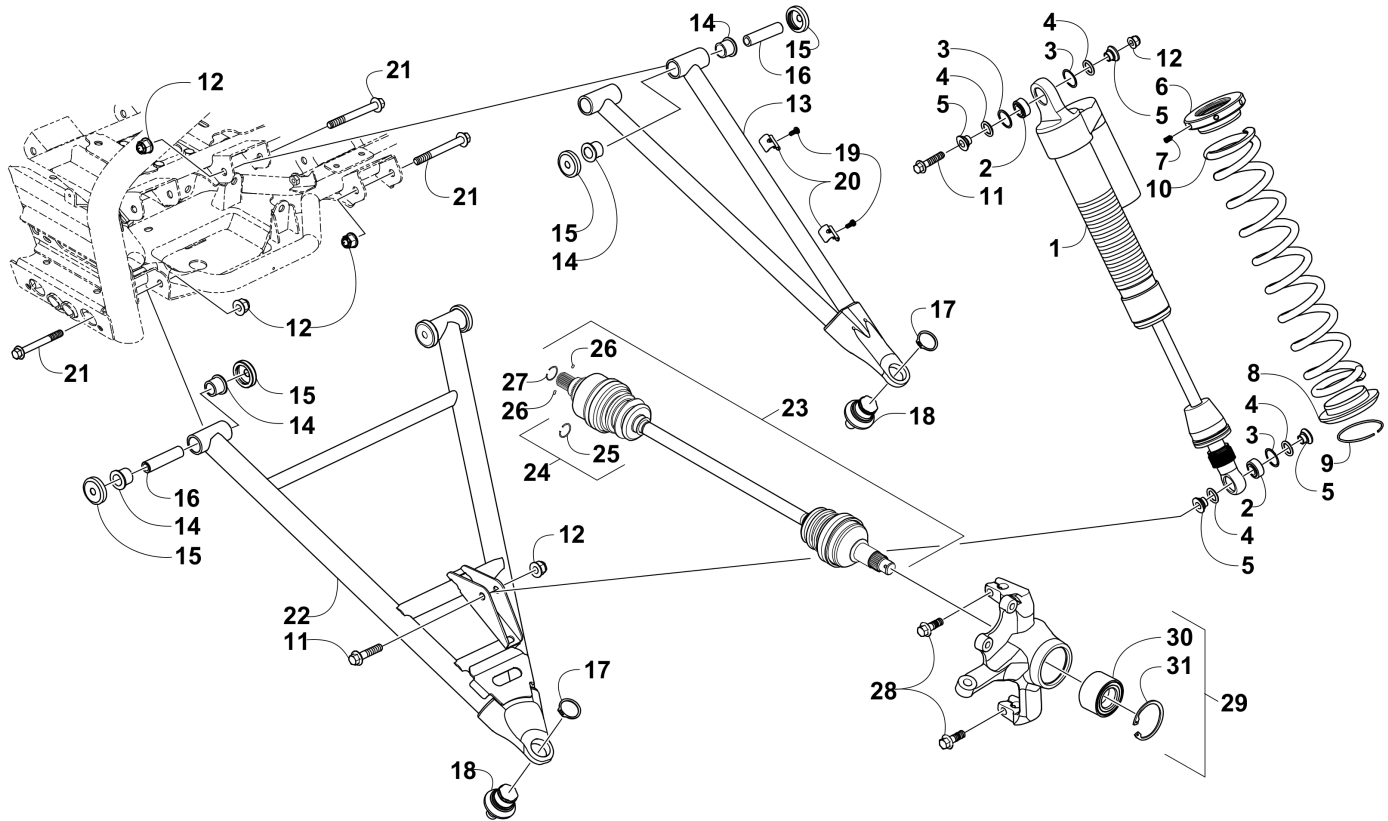

Item	Part No.	Qty	Name	Context	Footnote
1	0403-480	1	Shock Absorber - Right	(inc. 2-9)	
1	0403-481	1	Shock Absorber - Left	(inc. 2-9)	
.2	0403-506	4	Bearing		
.3	0403-507	6	Clip		
.4	0403-504	8	O-Ring		
.5	0403-505	8	Spacer		
.6	0403-500	1	Nut, Retainer Spring		
.7	0403-501	1	Screw, Set		
.8	0403-502	2	Retainer		
.9	0403-503	2	Clip		
10	0503-930	2	Spring, Suspension - White		
11	8409-050	4	Screw, Cap		
12	8428-002	12	Nut, Lock		
13	0503-762	1	A-Arm, Upper Right Blue	(inc. 14-18)	
13	0503-763	1	A-Arm, Upper Left Blue	(inc. 14-18)	
.14	0403-264	16	Bushing		
.15	1423-204	16	Seal		
.16	0403-250	8	Sleeve		
.17	0423-009	4	Ring, Retaining		
.18	0405-483	4	Ball Joint		

Item	Part No.	Qty	Name	Context	Footnote
19	0423-946	4	Screw, Self-Tapping		
20	0403-257	4	Bracket, Brakeline		
21	8413-090	8	Screw, Cap		
22	0503-774	1	A-Arm, Lower Right Blue	(inc. 14-18)	
22	0503-775	1	A-Arm, Lower Left Blue	(inc. 14-18)	
23	1502-774	2	Axle - Front - Locking	(inc. 24-27)	
24	1436-410	2	Repair Kit, Boot	(inc. 25)	
25	1441-988	2	Clip, Retaining		
26	1402-885	4	Pin, Detent		
27	1402-889	2	Clip, Retaining		
28	0423-998	4	Screw, Shoulder		
29	0503-548	1	Knuckle - Assembly - Right	(inc. 30-31)	
29	0503-549	1	Knuckle - Assembly - Left	(inc. 30-31)	
30	1402-809	2	Bearing		
31	0423-423	2	Ring, Retaining		

 
GAS TANK ASSEMBLY [300164]

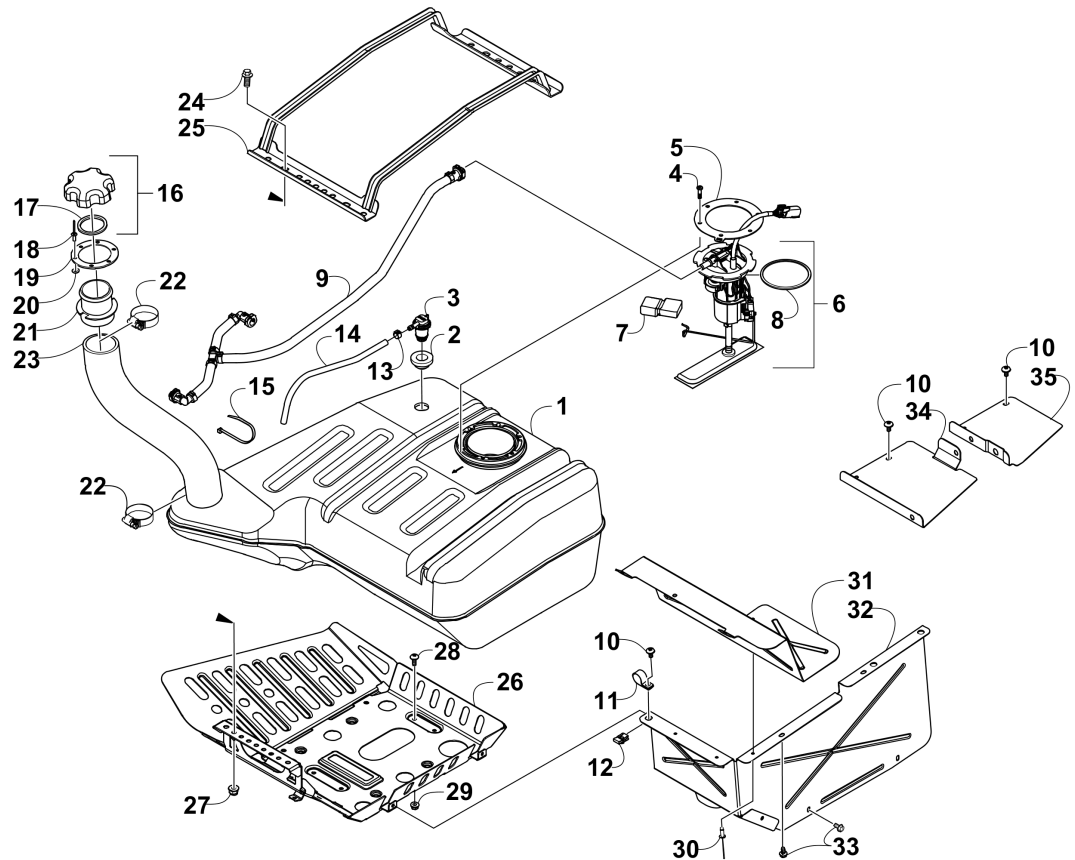

Item	Part No.	Qty	Name	Context	Footnote
1	0570-359	1	Tank, Gas - Assembly	(inc. 2-5)	
.2	1670-822	1	Grommet		
.3	1670-787	1	Valve, Check		
.4	0423-898	6	Screw, Self-Tapping		
.5	2670-042	1	Plate, Retaining		
6	0570-436	1	FUEL PUMP KIT	(inc. 7)	
.7	2670-235	1	Float		
8	0470-838	1	Seal		
9	0570-343	1	Hose, Gasline		
10	8476-616	5	Screw, Machine		
11	1623-675	2	Clamp, Routing		
12	0423-577	1	Clip, U-Nut		
13	0423-688	1	Clamp, Hose		
14	0410-070	AR	Hose - 25 ft		
15	0123-788	AR	Tie, Cable - 8 in.		
15	0123-903	AR	Tie, Cable - 11.5 in.		
16	2670-048	1	Cap, Gas Tank - Assembly	(inc. 17)	
.17	0109-733	1	Seal, Tank Cap		
18	8060-628	6	Rivet		
19	0670-304	1	Plate, Retaining		


Item	Part No.	Qty	Name	Context	Footnote
20	0123-802	6	Washer		
21	0470-970	1	Neck, Fill		
22	0624-390	2	Clamp, Hose		
23	0410-231	1	Hose, Gasline		
24	8408-825	4	Screw, Cap		
25	0570-352	1	Bracket, Hold-Down		
26	0570-371	1	Bracket, Gas Tank		
27	8427-805	4	Nut, Lock		
28	8477-616	4	Screw, Machine		
29	8427-602	4	Nut, Lock		
30	8060-602	4	Rivet		
31	0412-632	1	Shield, Heat - Upper		
32	0412-633	1	Shield, Heat - Lower		
33	0623-966	5	Screw, Self-Tapping		
34	0412-808	1	Shield, Heat - Front Upper		
35	0412-818	1	Shield, Heat - Rear Upper		

 GEAR SHIFTING ASSEMBLY [100525]

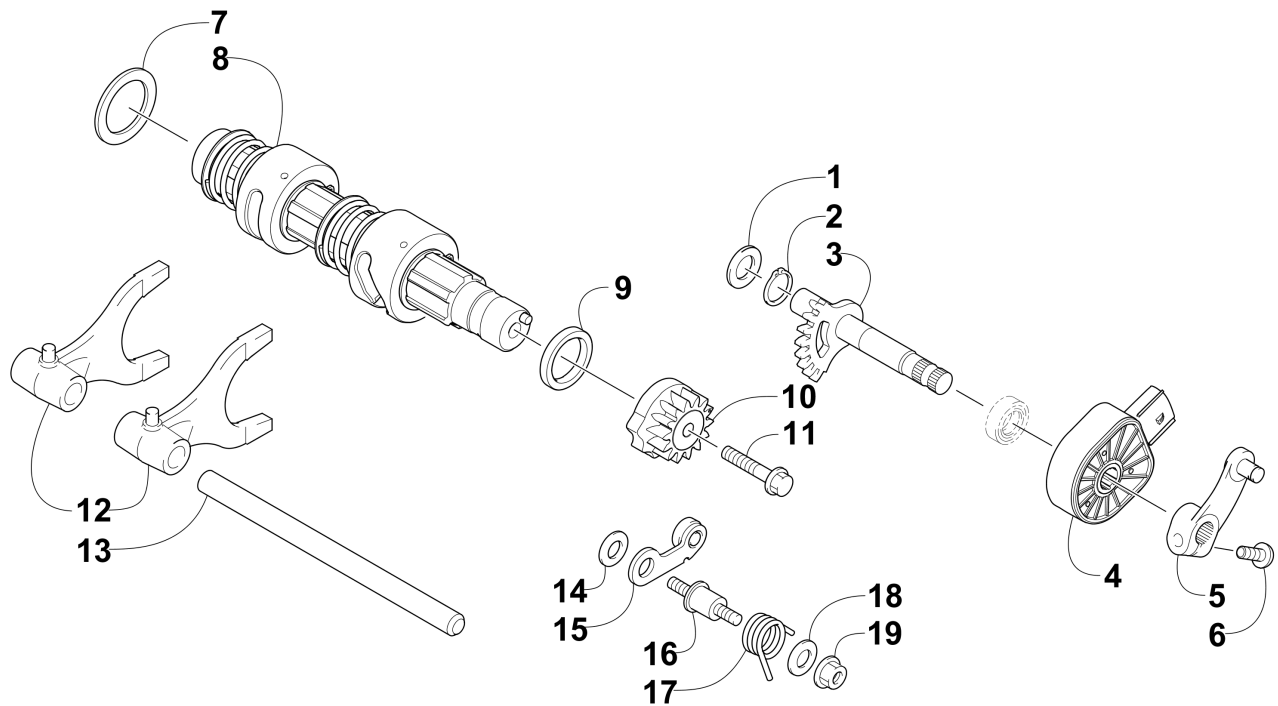

Item	Part No.	Qty	Name	Context	Footnote
1	0828-036	1	Washer		
2	0831-010	1	Ring, Retaining		
3	0818-095	1	Shaft, Sub-Gear Shift		
4	0409-125	1	Switch, Gear Position		
5	0818-164	1	Arm, Select		
6	8468-620	1	Screw, Machine		
7	0828-040	1	Washer		
8	0818-133	1	Shaft, Gear Shift - Assembly		
9	0828-131	1	Spacer		
10	0818-145	1	Cam, Gear Shift		
11	0826-006	1	Screw, Cap		
12	0818-072	2	Fork, Shift		
13	0818-006	1	Shaft, Shift Fork		
14	0828-038	1	Washer		
15	0818-002	1	Stopper, Cam		
16	0818-004	1	Support, Cam Stopper		
17	0818-144	1	Spring		
18	0828-035	1	Washer		
19	8424-602	1	Nut		

 
HYDRAULIC BRAKE ASSEMBLY [100540]

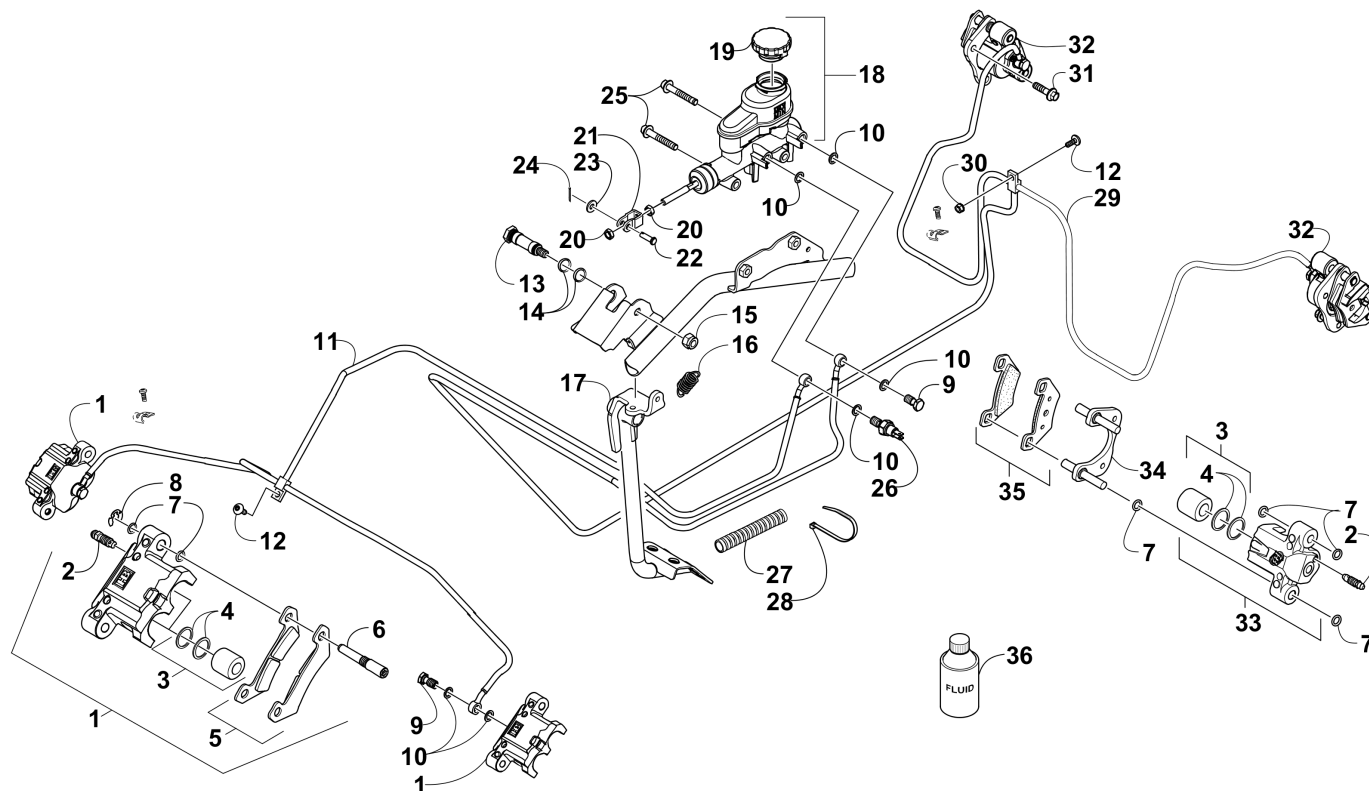

Item	Part No.	Qty	Name	Context	Footnote
1	2502-030	1	Caliper, Brake	(inc. 2-4)	Front Right
1	2502-031	1	Caliper, Brake	(inc. 2-4)	Front Left
.2	0502-609	4	Valve, Bleed		
.3	0502-606	4	Piston/Seal Set	(inc. 4)	
..4	0502-607	4	Seal Set		
5	2502-034	2	Pad, Brake - Set - Front		
6	2402-106	4	Pin, Retaining		
7	0502-608	4	O-Ring, Guide - Set		
8	2402-107	4	Ring, Retaining		
9	0423-413	5	Bolt, Banjo-Fitting		
10	0423-178	12	Washer, Crush		
11	2402-118	1	Hose, Brake - Front		
12	8476-616	2	Screw, Machine		
13	0402-872	1	Axle		
14	1602-213	2	O-Ring		
15	8422-002	1	Nut, Lock		
16	1612-178	1	Spring, Exhaust		
17	2502-075	1	Lever, Brake		
18	2502-043	1	Cylinder, Master Brake - Assembly	(inc. 19-21)	
.19	2502-044	1	Cap, Reservoir		


Item	Part No.	Qty	Name	Context	Footnote
.20	0402-592	2	Nut		
.21	1402-520	1	Clevis		
22	1402-377	1	Pin, Clevis		
23	8050-217	1	Washer		
24	0117-868	1	Pin, Cotter		
25	8408-850	2	Screw, Cap		
26	3313-239	1	Switch, Brake Pressure		
27	0619-776	AR	Conduit		
28	0123-903	AR	Tie, Cable - 11.5 in.		
29	1402-955	1	Hose, Brake - Rear		
30	0623-038	1	Nut w/Washer		
31	8408-831	4	Screw, Cap		
32	1436-423	1	Caliper, Brake	(inc. 2-4, 7, and 33-35)	Rear Right
32	1436-422	1	Caliper, Brake	(inc. 2-4, 7, and 33-35)	Rear Left
.33	1436-161	1	Housing, Caliper - Assembly	(inc. 2-4)	Rear Right
.33	1436-160	1	Housing, Caliper - Assembly	(inc. 2-4)	Rear Left
.34	0502-605	2	Bracket Assembly		
.35	1436-420	2	Pad, Brake - Set		
36	5639-848	AR	Fluid, Brake - 12 oz		

 MAGNETO ASSEMBLY [300154]

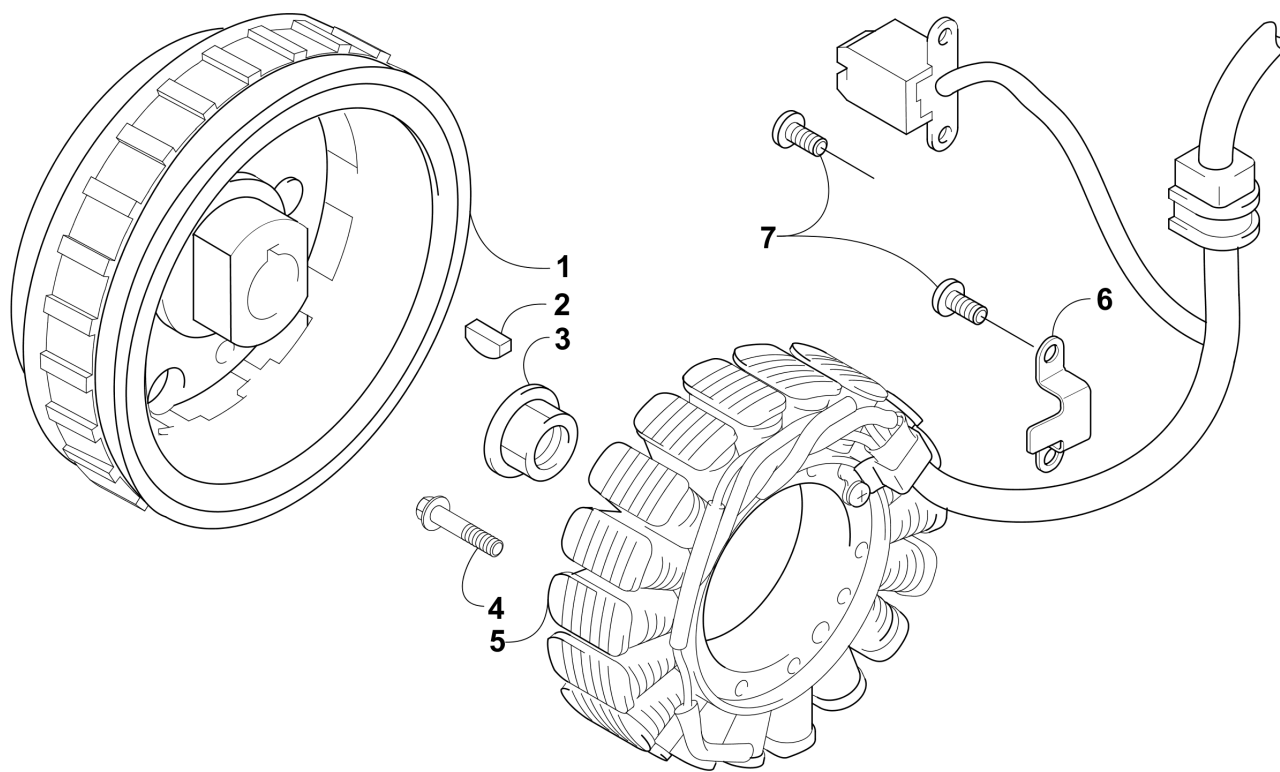


Item	Part No.	Qty	Name	Context	Footnote
1	0802-059	1	Rotor/Flywheel		
2	0829-012	1	Key		
3	0827-010	1	Nut		
4	8409-632	3	Screw, Machine		
5	0802-072	1	Stator - Assembly		
6	0831-064	1	Clamp		
7	8470-510	4	Screw, Machine		

 MAGNETO SIDE ENGINE COVERS [300155]

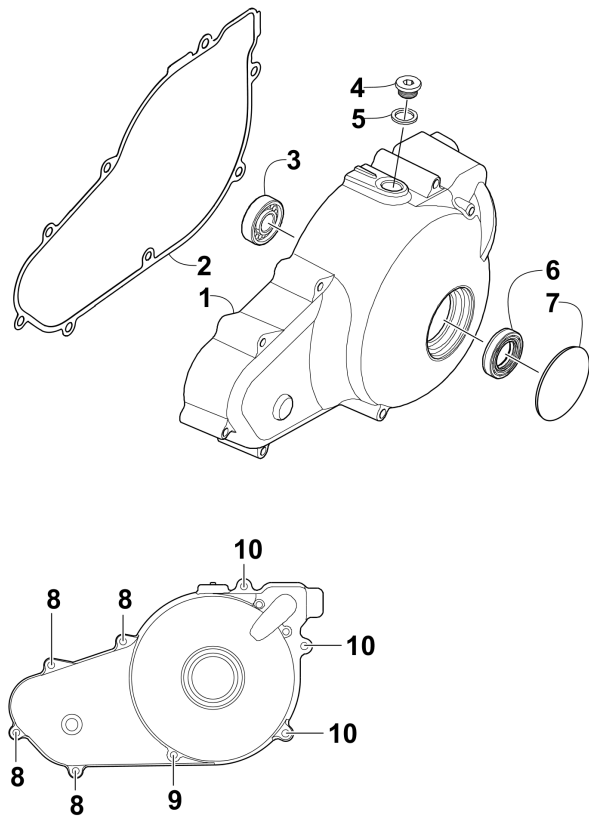


Item	Part No.	Qty	Name	Context	Footnote
1	0806-151	1	Cover, Magneto		
2	0830-132	1	Gasket, Magneto Cover		
3	0832-010	1	Bearing		
4	0826-155	1	Plug		
5	0830-015	1	Washer, Crush		
6	0830-176	1	Seal		
7	0806-066	1	Cap, Magneto Cover		
8	8468-650	4	Screw, Machine		
9	8468-695	1	Screw, Machine		
10	8468-665	3	Screw, Machine		

 OIL COOLER ASSEMBLY [98544]

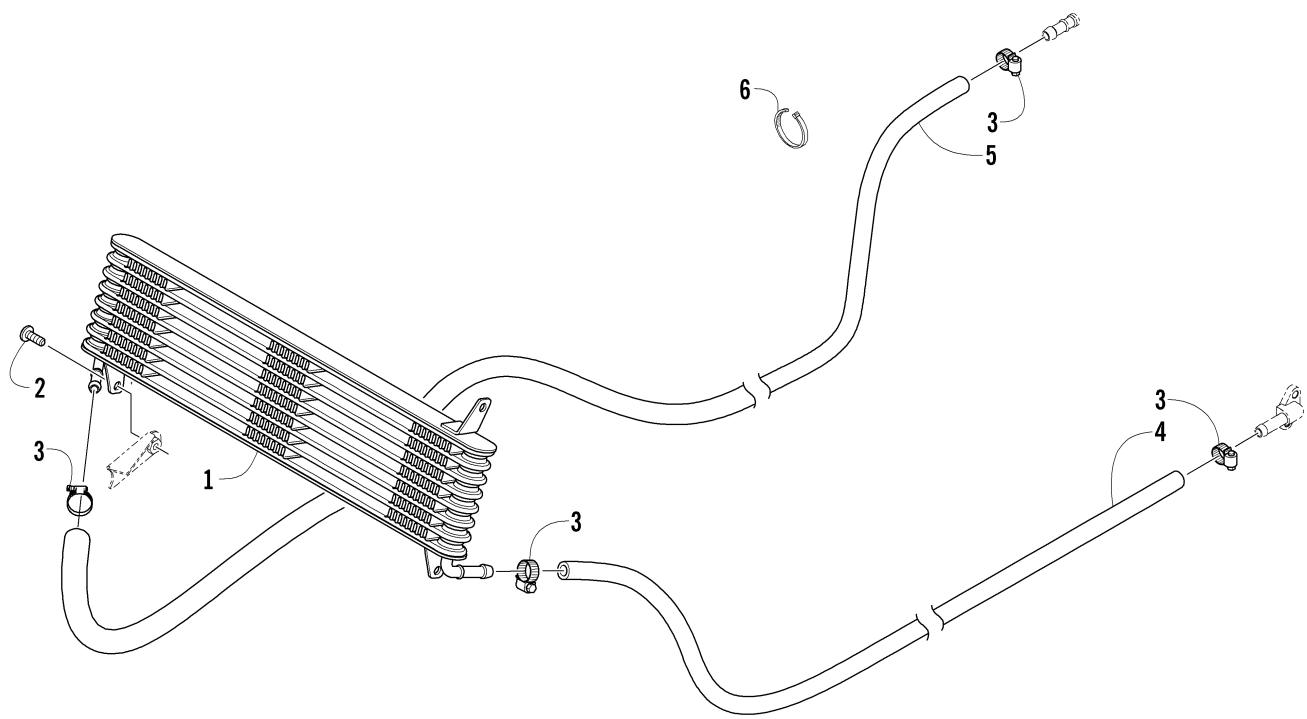


Item	Part No.	Qty	Name	Context	Footnote
1	0413-308	1	Cooler, Oil		
2	8476-616	3	Screw, Machine		
3	0423-632	4	Clamp, Hose		
4	0410-267	1	Hose, Oil Cooler - In		
5	0410-268	1	Hose, Oil Cooler - Out		
6	0123-903	AR	Tie, Cable - 11.5 in.		

 OIL PUMP ASSEMBLY [92690]

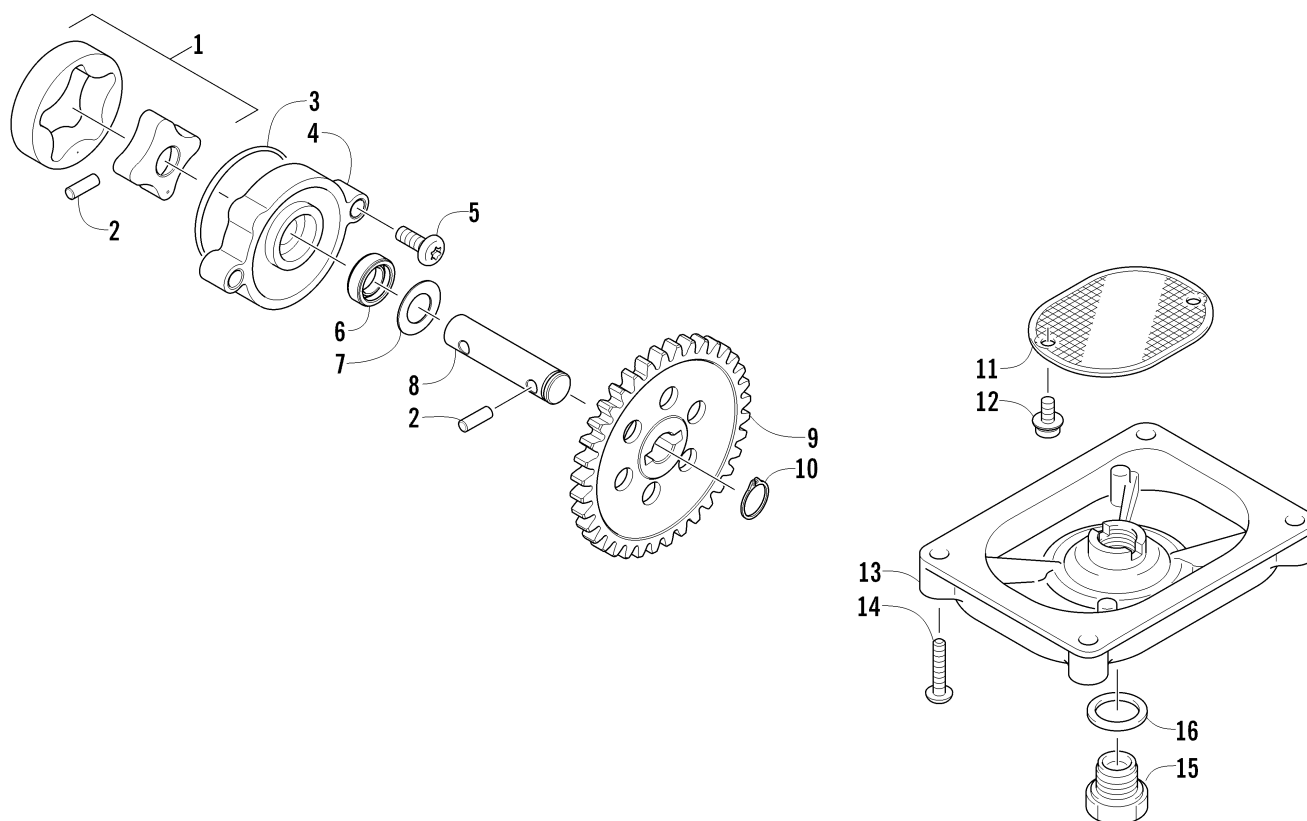

Item	Part No.	Qty	Name	Context	Footnote
1	0812-041	1	Gerotor - Set		
2	0829-009	2	Pin		
3	0812-048	1	O-Ring		
4	0812-040	1	Housing, Oil Pump		
5	8468-625	2	Screw, Machine		
6	0812-047	1	Seal, Oil Pump		
7	0828-007	1	Washer		
8	0812-046	1	Shaft, Oil Pump		
9	0812-045	1	Gear, Driven		
10	0831-002	1	Ring, Retaining		
11	0812-057	1	Strainer, Oil		
12	0826-040	2	Screw, Machine		
13	0812-053	1	Cap, Oil Strainer		
14	8468-625	4	Screw, Machine		
15	0812-006	1	Plug, Drain		
16	0830-017	1	Gasket, Drain Plug		

 
RACK AND PINION ASSEMBLY [100514]

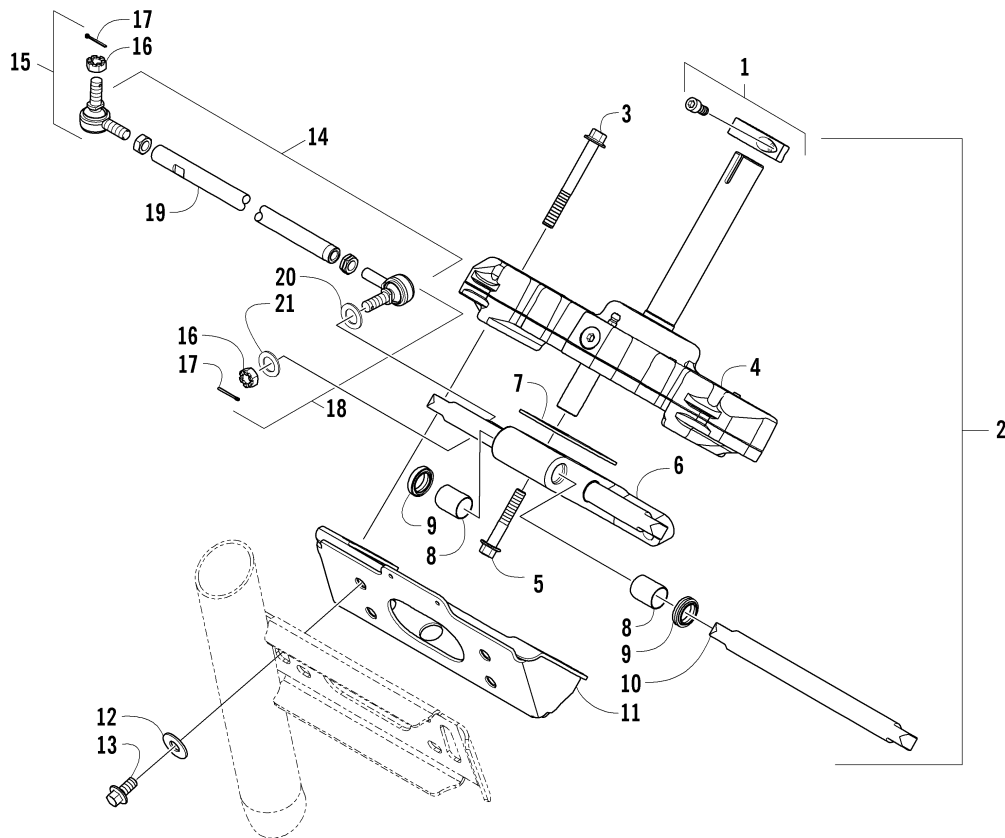

Item	Part No.	Qty	Name	Context	Footnote
1	0405-463	1	Collar, Locking		
2	0505-814	1	Complete Rack and Pinion Assembly	(inc. 3-11)	
3	8408-872	4	Screw, Cap		
4	0505-826	1	Rack and Pinion		
5	8409-847	1	Screw, Cap		
6	0505-888	1	Rack, Steering - Assembly	(inc. 7-9 and 20-21)	
7	0405-414	1	Pad, Felt		
8	0405-445	4	Bushing		
9	0405-475	4	Seal		
10	0405-457	2	Rod, Support		
11	4506-688	1	Bracket, Mounting		
12	0623-044	4	Washer		
13	8408-818	4	Screw, Cap		
14	0505-815	2	Tie Rod - Assembly	(inc. 15-19)	
15	0505-812	2	Kit, Tie Rod End - Outer	(inc. 16-17)	
16	1423-072	4	Nut, Castle		
17	0623-175	4	Pin, Cotter		
18	0505-811	2	Kit, Tie Rod End - Inner	(inc. 16-17)	
19	0405-404	2	Tie Rod		
20	1423-068	2	Washer		

Item	Part No.	Qty	Name	Context	Footnote
21	1423-071	2	Washer		

 
REAR DRIVE GEARCASE ASSEMBLY [100040]

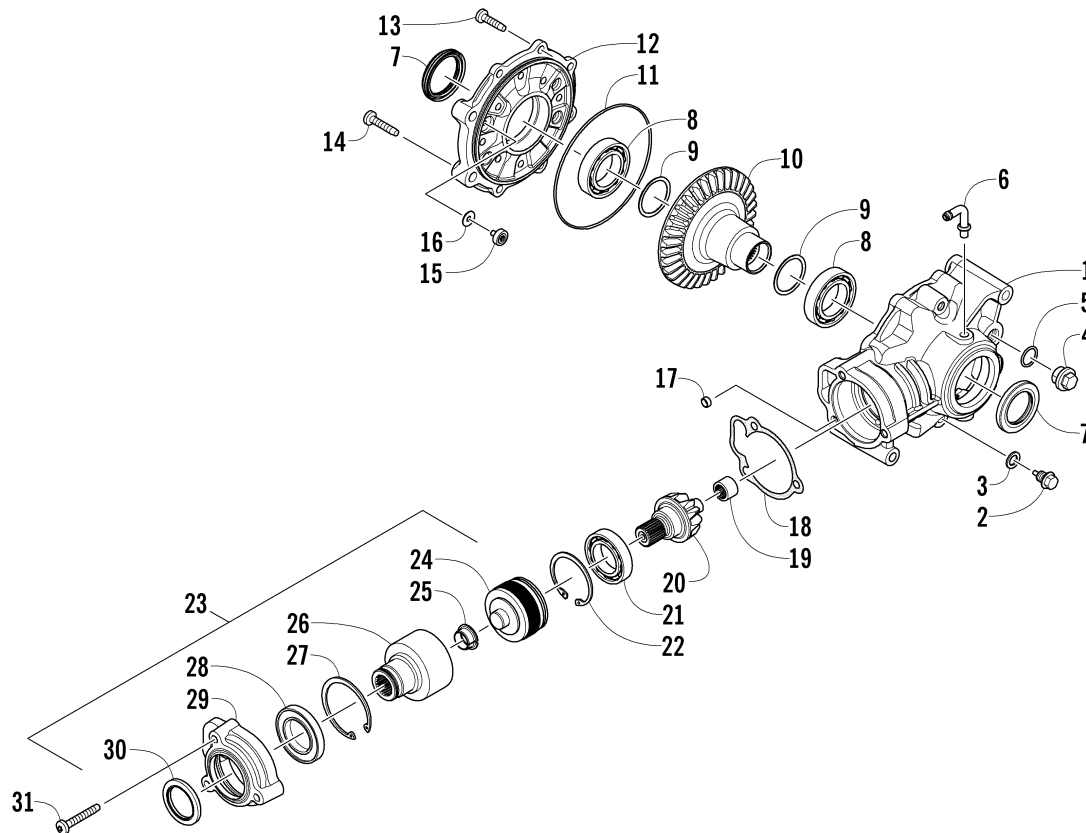

Item	Part No.	Qty	Name	Context	Footnote
Not Shown	2502-083	1	Gearcase, Rear		
1	1502-921	1	Housing, Gearcase		
2	2402-043	1	Plug, Drain - Magnetic		
3	2402-044	1	Washer		
4	0402-333	1	Plug, Fill	(inc. 5)	
.5	0423-154	1	O-Ring		
6	2402-162	1	Fitting, Elbow		
7	2402-140	2	Seal		
8	2402-042	2	Bearing		
9	0402-405	AR	Shim, 41 x 49 x 1.3 mm		
9	0402-406	AR	Shim, 41 x 49 x 1.4 mm		
9	0402-407	AR	Shim, 41 x 49 x 1.5 mm		
9	0402-408	AR	Shim, 41 x 49 x 1.6 mm		
9	0402-409	AR	Shim, 41 x 49 x 1.7 mm		
10	2402-035	1	Gear, Ring - 34T		
11	0423-149	1	O-Ring		
12	1502-922	1	Cover, Gearcase		
13	0423-118	6	Screw, Self-Tapping		
14	0423-115	2	Screw, Self-Tapping		
15	0402-326	1	Button, Thrust		

Item	Part No.	Qty	Name	Context	Footnote
16	0402-429	AR	Shim, 6.3 x 18 x 1.3 mm		
16	0402-430	AR	Shim, 6.3 x 18 x 1.4 mm		
16	0402-431	AR	Shim, 6.3 x 18 x 1.5 mm		
16	0402-432	AR	Shim, 6.3 x 18 x 1.6 mm		
16	0402-433	AR	Shim, 6.3 x 18 x 1.7 mm		
17	0402-411	1	Pin, Dowel		
18	0402-947	1	Gasket, Flange		
19	0402-328	1	Bearing		
20	2402-037	1	Gear, Pinion - Assembly - 11T		
21	0402-324	1	Bearing		
22	1423-067	1	Ring, Retaining		
23	1502-998	1	Shaft, Input	(inc. 24-30)	
.24	1502-997	1	Cartridge, Clutch - Assembly		
.25	1402-966	1	Bearing, Flange		
.26	1402-965	1	Basket, Clutch		
.27	0423-798	1	Ring, Retaining - Internal		
.28	1402-677	1	Bearing		
.29	1502-838	1	Housing, Input		
.30	0402-089	1	Seal, Wheel Bearing - Front		
31	1423-065	3	Screw, Self-Tapping		

 
REAR SUSPENSION ASSEMBLY [300177]

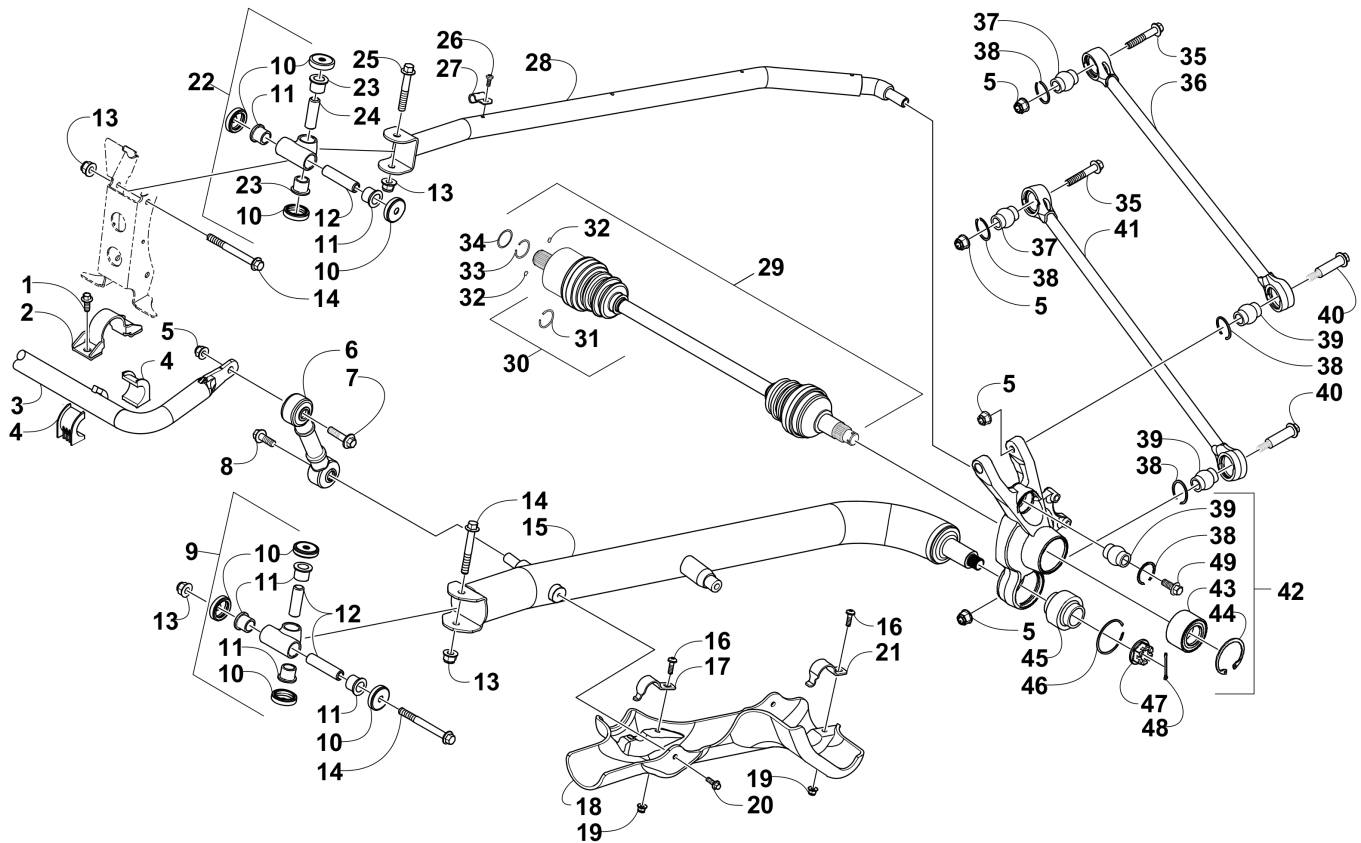

Item	Part No.	Qty	Name	Context	Footnote
1	1423-150	4	Screw, Cap		
2	0504-724	2	Clamp, Retaining		
3	0504-782	1	Bar, Sway		
4	0404-304	4	Bushing		
5	8428-002	14	Nut, Lock		
6	0404-302	2	Link, Sway Bar		
7	8409-045	2	Screw, Cap		
8	8409-041	2	Screw, Cap		
9	0504-748	2	Mount, Lower Trailing Arm - Assembly	(inc. 10-12)	
10	1423-159	16	Seal		
11	2402-077	12	Bearing		
12	0404-285	6	Axle		
13	8427-202	8	Nut, Lock		
14	8413-200	6	Screw, Cap		
15	0504-858	2	Arm, Trailing - Lower - Blue		
16	8468-620	4	Screw, Machine		
17	0504-701	2	Bracket, Retaining - Front		
18	2416-952	1	Guard, Trailing Arm - Right - Black		
18	2416-953	1	Guard, Trailing Arm - Left - Black		
19	8427-602	4	Nut, Lock		


Item	Part No.	Qty	Name	Context	Footnote
20	0423-538	4	Screw, Self-Tapping		
21	0504-700	2	Bracket, Retaining - Rear		
22	0504-756	2	Mount, Upper Trailing Arm - Assembly	(inc. 10-12 and 23-24)	
.23	2402-076	4	Bearing		
.24	0404-289	2	Axle		
25	8413-275	2	Screw, Cap		
26	0423-946	8	Screw, Self-Tapping		
27	0403-271	8	Clip, Routing		
28	0504-856	2	Arm, Trailing - Upper - Blue		
29	1502-914	2	Axle, Drive	(inc. 30-34)	
.30	1436-410	2	Repair Kit, Boot	(inc. 31)	
..31	1441-988	2	Clip, Retaining		
.32	1402-885	4	Pin, Detent		
.33	1402-889	2	Clip, Retaining		
.34	1402-963	2	O-Ring		
35	8409-060	6	Screw, Cap		
36	0504-738	4	Link, Suspension - Upper - Black	(inc. 37-39)	
.37	0404-249	6	Bearing		
.38	1423-085	14	Ring, Retaining		
.39	0404-248	8	Bearing		
40	1423-087	6	Screw, Shoulder		
41	0504-736	2	Link, Suspension - Lower - Black	(inc. 37-39)	
42	0504-840	1	Knuckle - Assembly - Right	(inc. 38-39 and 43-46)	
42	0504-841	1	Knuckle - Assembly - Left	(inc. 38-39 and 43-46)	
.43	1402-027	2	Bearing		
.44	0423-423	2	Ring, Retaining		
.45	0404-243	2	Bearing		
.46	1423-086	2	Ring, Retaining		
47	0423-394	2	Nut, Castle		
48	1423-147	2	Pin, Spring		
49	8409-025	2	Screw, Cap		

 REAR SUSPENSION SHOCK ASSEMBLY [300140]

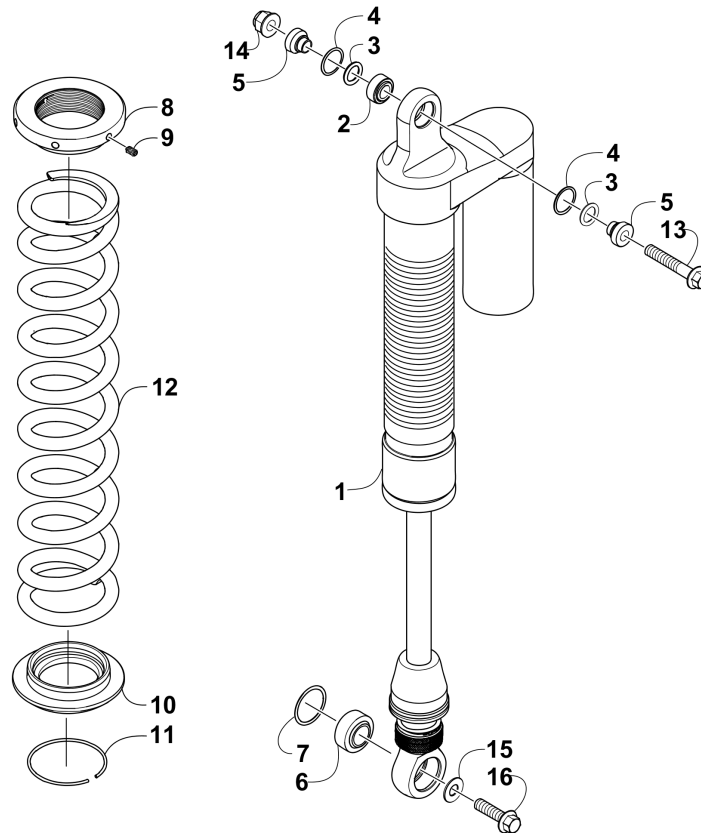


Item	Part No.	Qty	Name	Context	Footnote
1	0404-487	2	Shock Absorber	(inc. 2-11)	
2	0403-506	2	Bearing		
3	0403-507	4	Clip		
4	0403-504	4	O-Ring		
5	0404-513	4	Spacer		
6	0404-515	2	Bearing		
7	0404-514	2	Clip		
8	0404-510	2	Nut, Retainer		
9	0403-501	2	Screw, Set		
10	0404-511	2	Retainer - Lower Spring		
11	0403-503	2	Clip		
12	0504-993	2	Spring, Suspension - White		
13	8409-060	2	Screw, Cap		
14	8428-002	2	Nut, Lock		
15	0623-664	2	Washer		
16	8409-030	2	Screw, Cap		

 ROPS ASSEMBLY [300136]

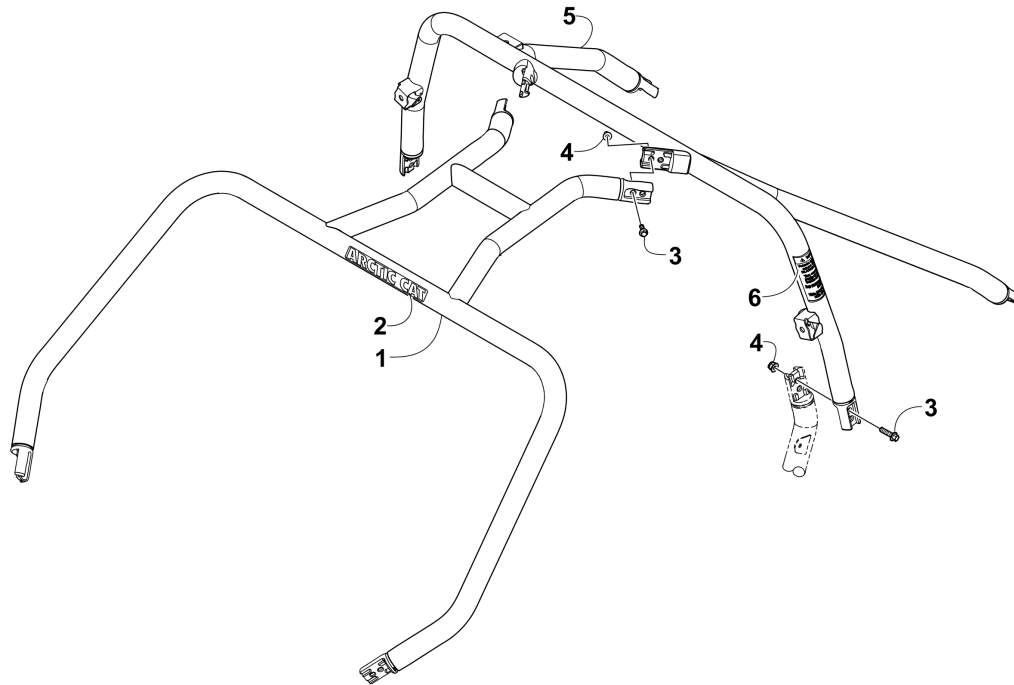

Item	Part No.	Qty	Name	Context	Footnote
1	5506-113	1	ROPS - Front Assembly		
2	0411-501	1	Decal, "Arctic Cat"		
3	1423-140	8	Screw, Cap		
4	1423-161	16	Nut, Lock		
5	5506-907	1	ROPS - Rear Assembly	(inc. 6)	
.6	3411-970	1	Decal, Warning - ROPS		

 
SEAT ASSEMBLY [300133]

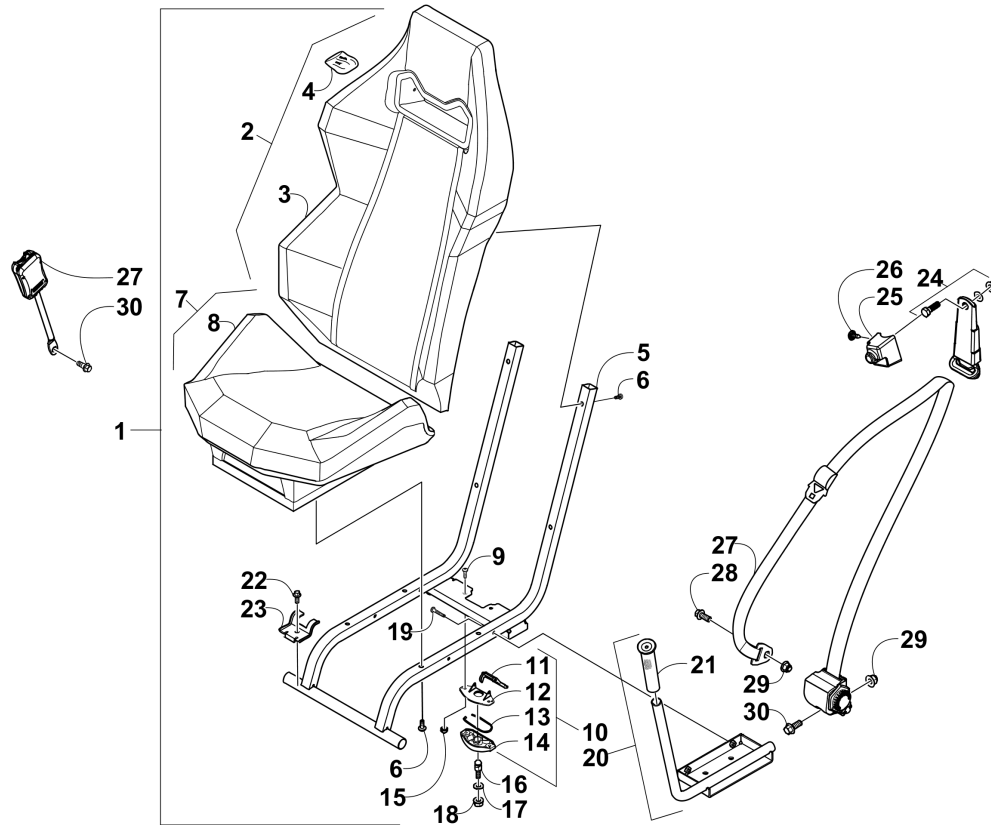

Item	Part No.	Qty	Name	Context	Footnote
1	5506-070	2	Seat - Assembly - Black	(inc. 2-15)	
..2	5506-075	2	Back, Seat		
..3	5506-637	2	Cover, Seat Back - Black		
..4	1423-265	1	Kit, Seat Hardware		
..5	5506-069	2	Frame, Seat - Black		
..6	8468-617	16	Screw, Machine		
..7	5506-074	2	Base, Seat		
..8	5506-636	2	Cover, Base Seat - Black		
..9	8468-620	4	Screw, Machine		
..10	2706-164	2	Latch, Seat - Assembly	(inc. 11-14)	
..11	2606-854	2	Lever, Seat Latch		
..12	1673-635	2	Cover, Seat Latch		
..13	0673-023	2	Clip, Spring		
..14	1673-634	2	Back, Seat Latch		
..15	0623-038	4	Nut w/Washer		
16	0423-559	2	Stud, Latch - Seat		
17	0423-073	2	Washer		
18	8424-002	2	Nut		
19	8477-635	2	Screw, Machine		
20	5506-173	1	Handle - Assembly	(inc. 21)	

Item	Part No.	Qty	Name	Context	Footnote
.21	4606-945	1	Grip		
22	8408-821	4	Screw, Cap		
23	5506-078	4	Bracket, Hold-Down		
24	1423-305	2	Screw, Shoulder - Assembly		
25	4406-922	1	Cover, Seat Belt - Right		
25	4406-923	1	Cover, Seat Belt - Left		
26	0623-784	4	Screw, Self-Tapping		
27	5506-890	2	Belt, Seat - Assembly		
28	1423-182	2	Screw, Cap		
29	1423-184	2	Nut, Lock		
30	1423-183	2	Screw, Cap		

 
SECONDARY DRIVE ASSEMBLY [300153]

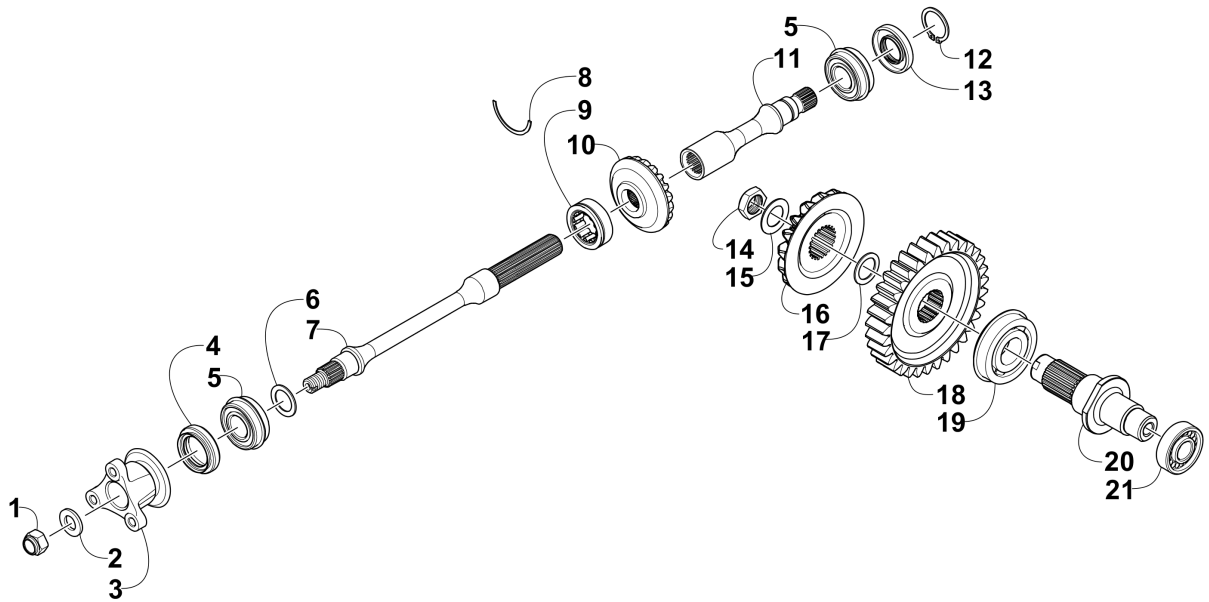

Item	Part No.	Qty	Name	Context	Footnote
1	0827-013	1	Nut		
2	0828-020	1	Washer		
3	0819-126	1	Flange, Output Joint		
4	0830-043	1	Seal, Oil		
5	0832-017	2	Bearing		
6	0828-021	AR	Shim, 25 x 34 x 0.25 mm		
6	0828-022	AR	Shim, 25 x 34 x 0.30 mm		
6	0828-023	AR	Shim, 25 x 34 x 0.70 mm		
6	0828-024	AR	Shim, 25 x 34 x 0.90 mm		
6	0828-025	AR	Shim, 25 x 34 x 0.95 mm		
6	0828-026	AR	Shim, 25 x 34 x 1.00 mm		
6	0828-027	AR	Shim, 25 x 34 x 1.05 mm		
6	0828-028	AR	Shim, 25 x 34 x 1.10 mm		
6	0828-029	AR	Shim, 25 x 34 x 1.15 mm		
7	0819-115	1	Shaft, Secondary Driven - Front		
8	0819-011	1	Ring, Driven Bearing		
9	0832-016	1	Bearing, Driven Gear		
10	0822-106	1	Gear, Secondary Driven		
11	0819-122	1	Shaft, Secondary Driven - Rear		
12	0831-011	1	Ring, Retaining		

Item	Part No.	Qty	Name	Context	Footnote
13	0830-214	1	Seal, Oil		
14	0827-070	1	Nut		
15	0828-019	1	Washer, Thrust		
16	0822-153	1	Gear, Secondary Drive		
17	0828-143	AR	Shim, 25.4 x 40 x 0.25 mm		
17	0828-144	AR	Shim, 25.4 x 40 x 0.30 mm		
17	0828-145	AR	Shim, 25.4 x 40 x 0.35 mm		
17	0828-146	AR	Shim, 25.4 x 40 x 0.90 mm		
17	0828-138	AR	Shim, 25.4 x 40 x 0.95 mm		
17	0828-139	AR	Shim, 25.4 x 40 x 1.00 mm		
17	0828-140	AR	Shim, 25.4 x 40 x 1.05 mm		
17	0828-141	AR	Shim, 25.4 x 40 x 1.10 mm		
17	0828-142	AR	Shim, 25.4 x 40 x 1.15 mm		
18	0822-150	1	Gear - 33T		
19	0832-083	1	Bearing		
20	0822-152	1	Shaft, Output		
21	0832-050	1	Bearing		

 
SECONDARY TRANSMISSION ASSEMBLY [300152]

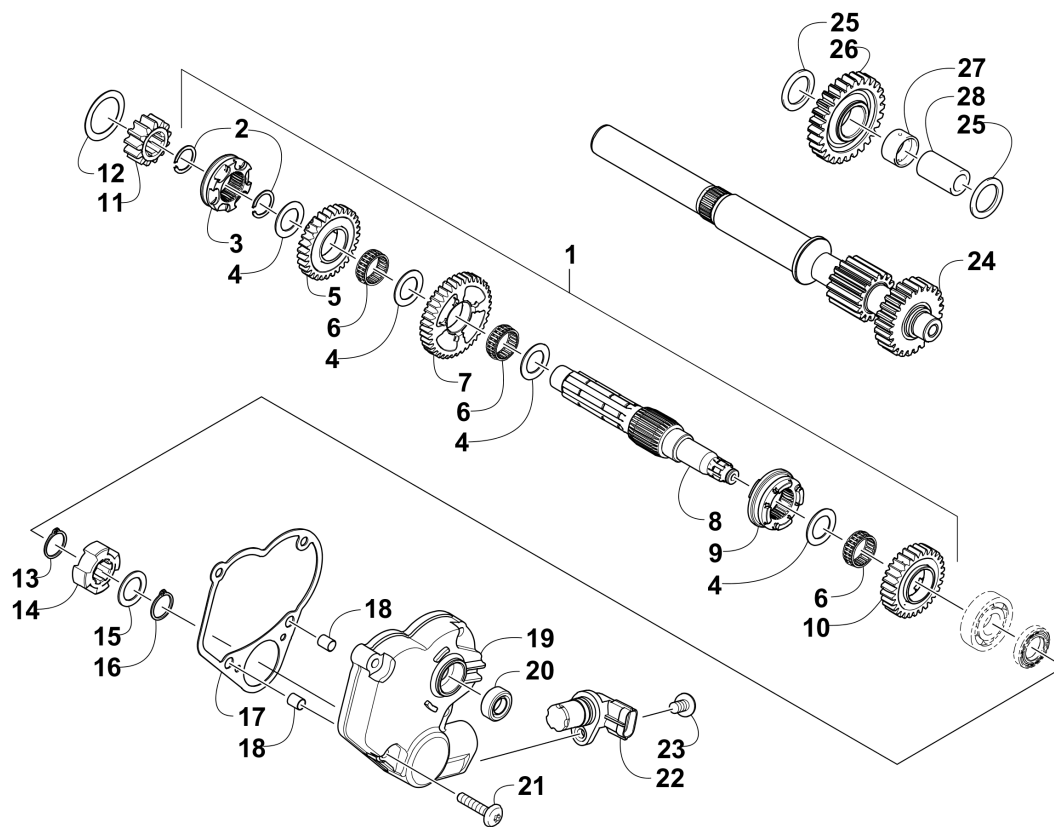

Item	Part No.	Qty	Name	Context	Footnote
1	0822-144	1	Countershaft Assembly	(inc. 2-10)	
2	0831-085	2	Ring, Retaining		
3	0822-120	1	Gear Select, Reverse		
4	0822-121	4	Shim		
5	0822-119	1	Gear, Reverse Driven		
6	0832-082	3	Bearing		
7	0822-114	1	Gear, Driven - Low		
8	0822-113	1	Countershaft		
9	0822-145	1	Gear Select, Sliding		
10	0822-148	1	Gear, Driven - High		
11	0822-149	1	Gear, Drive		
12	0828-011	1	Washer		
13	0831-040	1	Ring, Retaining		
14	0822-050	1	Trigger, Speedometer Sensor		
15	0828-069	1	Washer, Thrust		
16	0831-039	1	Ring, Retaining		
17	0830-194	1	Gasket		
18	0829-062	2	Pin, Dowel		


Item	Part No.	Qty	Name	Context	Footnote
19	0806-105	1	Housing, Speedometer Sensor		
20	0830-044	1	Seal, Sub-Gear Shift Shaft		
21	8468-630	4	Screw, Machine		
22	0430-121	1	Sensor, Speedometer		
23	8468-620	1	Screw, Machine		
24	0822-151	1	Shaft, Input		
25	0828-016	2	Washer, Thrust		
26	0822-011	1	Gear, Reverse Idle		
27	0822-012	1	Bushing		
28	0822-015	1	Shaft, Reverse Idle		

 SHIFTER ASSEMBLY [300201]

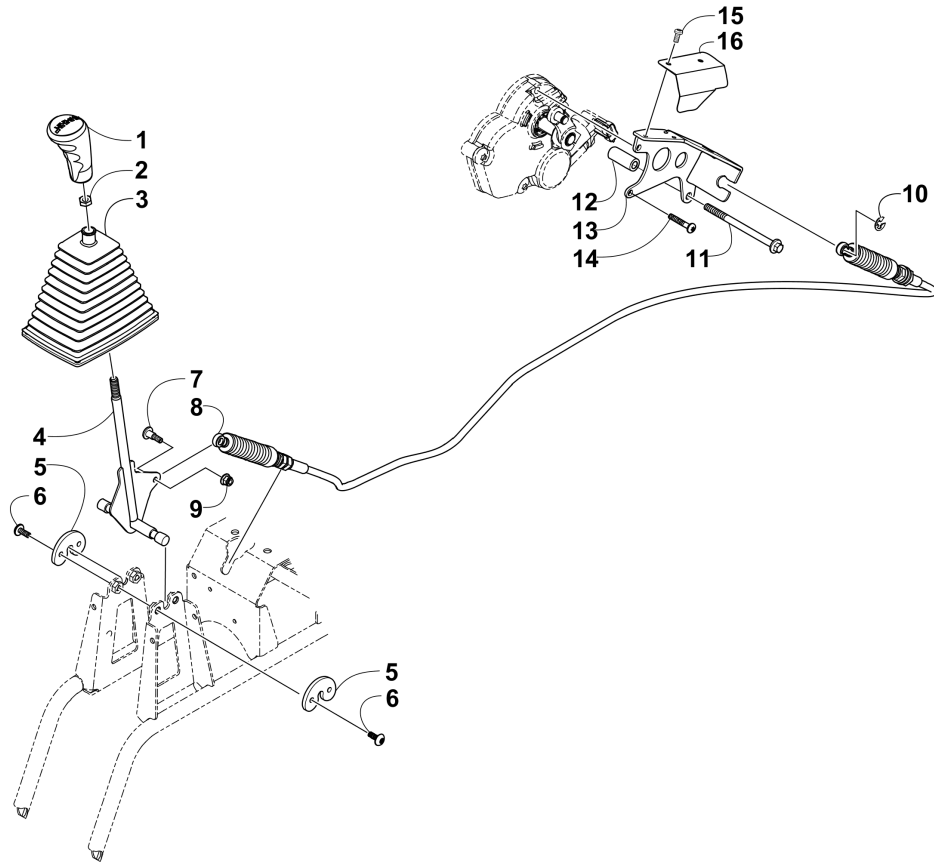


Item	Part No.	Qty	Name	Context	Footnote
1	2402-004	1	Knob, Shift		
2	0423-885	1	Nut		
3	2416-765	1	Boot, Shift Lever		
4	1502-841	1	Lever, Shift		
5	1402-275	2	Retainer, Shift Linkage		
6	0423-910	4	Screw, Machine		
7	0423-356	1	Screw, Shoulder		
8	0487-090	1	Cable, Shift		
9	8427-602	1	Nut, Lock		
10	0124-057	1	E-Ring		
11	1423-135	1	Screw, Cap		
12	1423-134	1	Spacer		
13	1502-846	1	Bracket, Shift Cable		
14	8468-635	2	Screw, Machine		
15	0423-946	3	Screw, Self-Tapping		
16	2402-222	1	Shield, Heat		

 STARTER CLUTCH ASSEMBLY [92689]

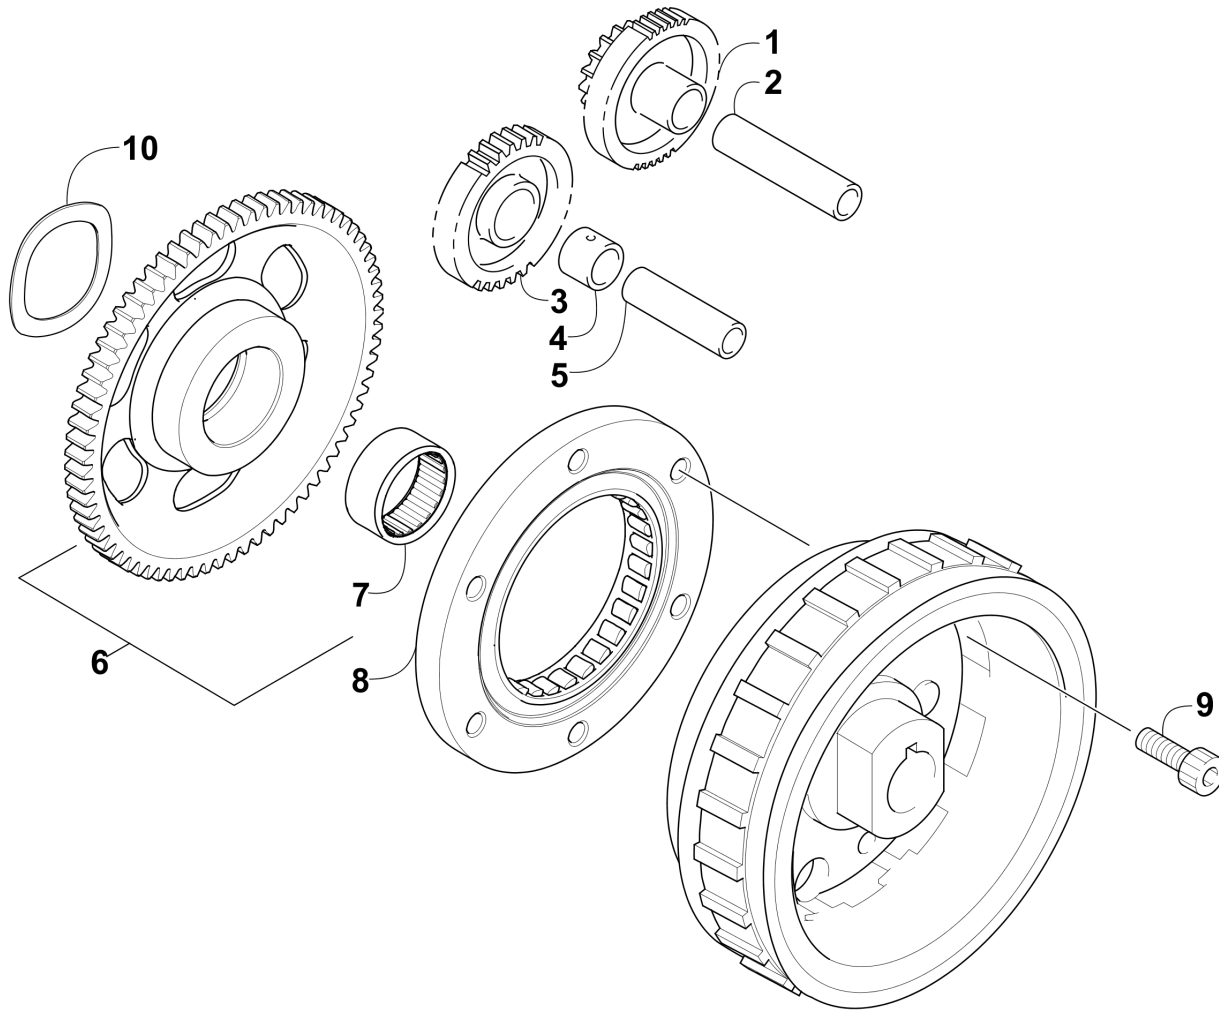

Item	Part No.	Qty	Name	Context	Footnote
1	0815-032	1	Gear, Starter Idler - No. 1		
2	0829-031	1	Shaft, Starter Gear		
3	0815-002	1	Gear, Starter Idler - No. 2		
4	0815-003	1	Spacer, Starter Idler Gear - No. 2		
5	0829-032	1	Shaft, Starter Gear		
6	0815-004	1	Gear, Starter Clutch	(inc. 7)	
7	0832-079	1	Bearing		
8	0802-035	1	Clutch, Starter		
9	0826-069	6	Screw, Cap		
10	0828-113	1	Washer, Wave		

 
STEERING ASSEMBLY [300138]

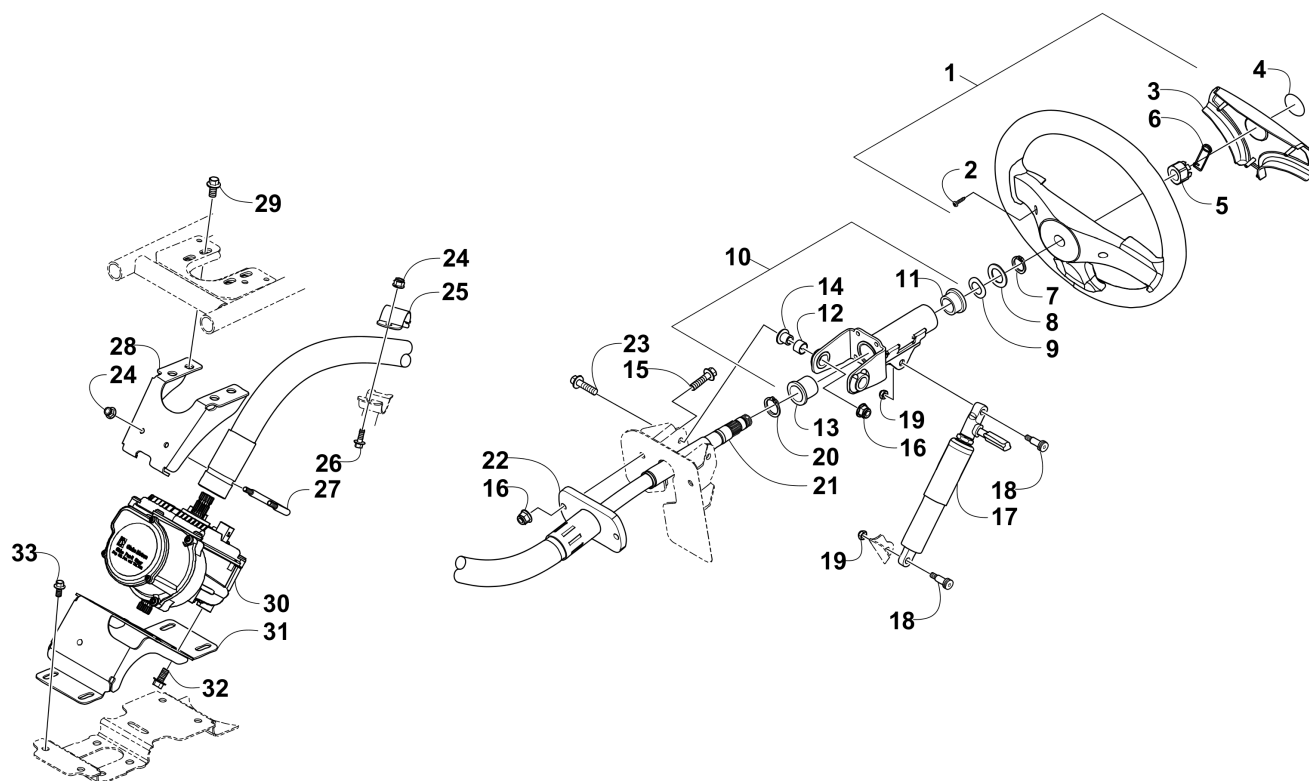

Item	Part No.	Qty	Name	Context	Footnote
1	0502-884	1	Wheel, Steering - Assembly	(inc. 2-3)	
.2	0423-613	3	Screw, Self-Tapping		
.3	0405-239	1	Cap, Steering Wheel		
4	1411-798	1	Decal, Steering Wheel		
5	0423-884	1	Nut		
6	1423-045	1	Clip, Retaining		
7	1423-110	1	Ring, Retaining		
8	0828-071	1	Washer		
9	0423-558	1	Washer		
10	0505-721	1	Bracket, Mounting - Tilt Steering	(inc. 11-13)	
.11	0405-472	1	Bushing		
.12	0405-405	2	Bushing		
.13	0405-473	1	Bushing		
14	0423-669	2	Spacer		
15	8408-831	2	Screw, Cap		
16	8427-802	4	Nut, Lock		
17	0405-468	1	Lift, Support		
18	1423-250	2	Screw, Shoulder		
19	0623-056	2	Nut, Lock		
20	1423-111	1	Ring, Retaining		


Item	Part No.	Qty	Name	Context	Footnote
21	0405-403	1	Shaft, Steering		
22	0405-506	1	Bracket, Mounting - Steering		
23	8408-830	2	Screw, Cap		
24	8427-602	3	Nut, Lock		
25	0505-765	1	Bracket, Retaining		
26	8408-617	1	Screw, Cap		
27	1423-203	1	U-Clamp		
28	0505-835	1	Bracket, Mounting		
29	8408-816	4	Screw, Cap		
30	0505-925	1	KIT, EPS ASSY-G2C (015 1000 WC)		
31	4506-619	1	Bracket, Mounting		
32	8409-020	4	Screw, Cap		
33	8408-818	4	Screw, Cap		

 THROTTLE BODY ASSEMBLY [98636]

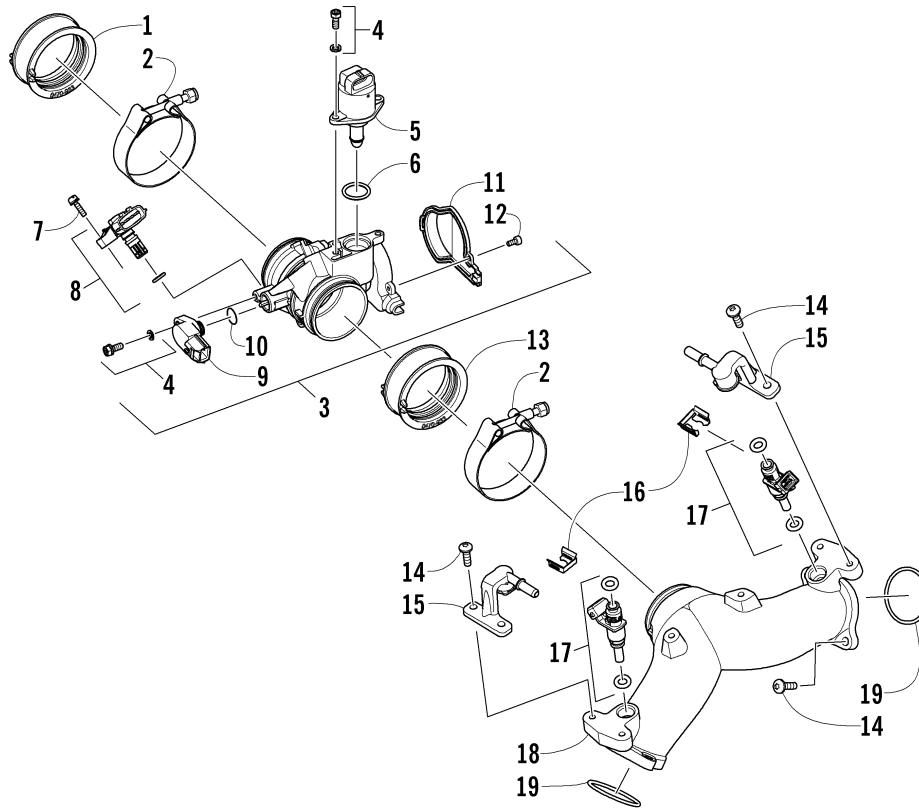


Item	Part No.	Qty	Name	Context	Footnote
1	0470-932	1	Boot, Intake		
2	1423-041	2	Clamp		
3	0570-390	1	Throttle Body - Assembly	(inc. 4-10)	
4	1423-081	3	Screw, Cap		
5	0824-054	1	Valve, Bypass - Idle Air		
6	0832-088	1	Seal		
7	1423-080	1	Screw, Machine		
8	0824-052	1	Sensor, Air Temperature		
9	0824-067	1	Sensor, Throttle Position		
10	3306-150	1	O-Ring		
11	0470-961	1	Cover		
12	1423-095	1	Screw, Cap		
13	0470-933	1	Boot, Intake		
14	8468-620	8	Screw, Machine		
15	0470-885	2	Rail, Fuel		
16	0470-889	2	Clip, Retaining		
17	0470-910	2	Injector, Fuel		
18	0570-380	1	Manifold, Intake		
19	0830-090	2	O-Ring		

 WATER PUMP ASSEMBLY [300202]

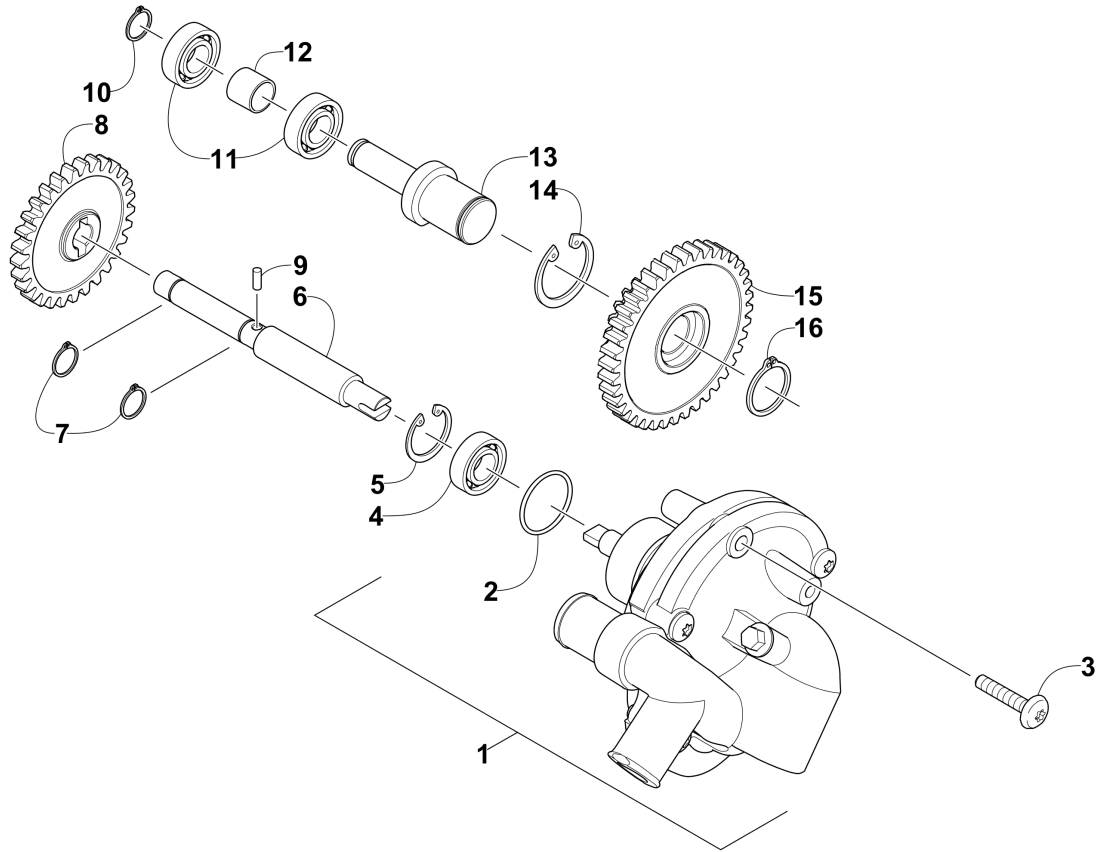


Item	Part No.	Qty	Name	Context	Footnote
1	0813-071	1	Pump, Water - Assembly	(inc. 2)	
2	0830-029	1	O-Ring		
3	8468-625	3	Screw, Machine		
4	0832-084	1	Bearing		
5	0831-086	1	Circlip		
6	0813-041	1	Shaft, Driven Gear		
7	0831-010	2	Ring, Retaining		
8	0813-043	1	Gear, Driven		
9	0829-009	1	Pin		
10	0831-002	1	Ring, Retaining		
11	0832-046	2	Bearing		
12	0813-028	1	Spacer, Idler - Water Pump		
13	0813-060	1	Shaft, Water Pump Idler Gear		
14	0831-004	1	Ring, Retaining		
15	0813-061	1	Gear, Idler - Water Pump - Drive		
16	0831-040	1	Ring, Retaining		

 WHEEL AND TIRE ASSEMBLY [98630]

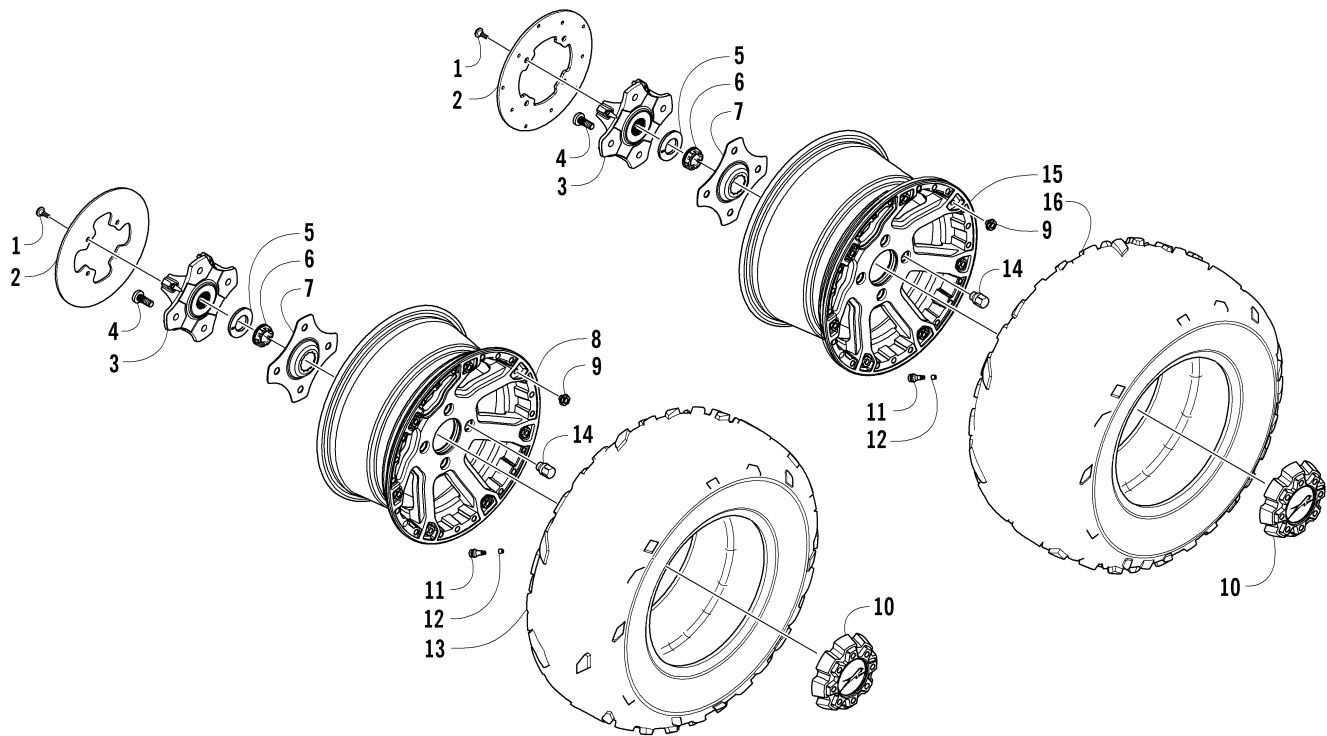

Item	Part No.	Qty	Name	Context	Footnote
1	0423-557	16	Screw, Shoulder		
2	1436-807	2	Disc, Brake - Front		
2	1436-808	2	Disc, Brake		
3	1502-971	4	Hub, Wheel	(inc. 4)	
4	0402-974	16	Stud		
5	2402-088	4	Washer		
6	1423-164	4	Nut, Castle		
7	2402-087	4	Plate, Retaining		
8	2402-017	2	Wheel - Front	(inc. 9-10)	
9	1423-079	28	Insert, Cap Screw		
10	2402-003	4	Cap, Wheel		
11	0402-064	4	Stem, Valve	(inc. 12)	
12	0402-140	4	Cap, Valve Stem		
13	1402-937	2	Tire - Front		
14	0423-618	16	Nut, Lug - Chrome		
15	2402-018	2	Wheel - Rear	(inc. 9-10)	
16	1402-938	2	Tire - Rear		

 WIRING HARNESS ASSEMBLY [300146]

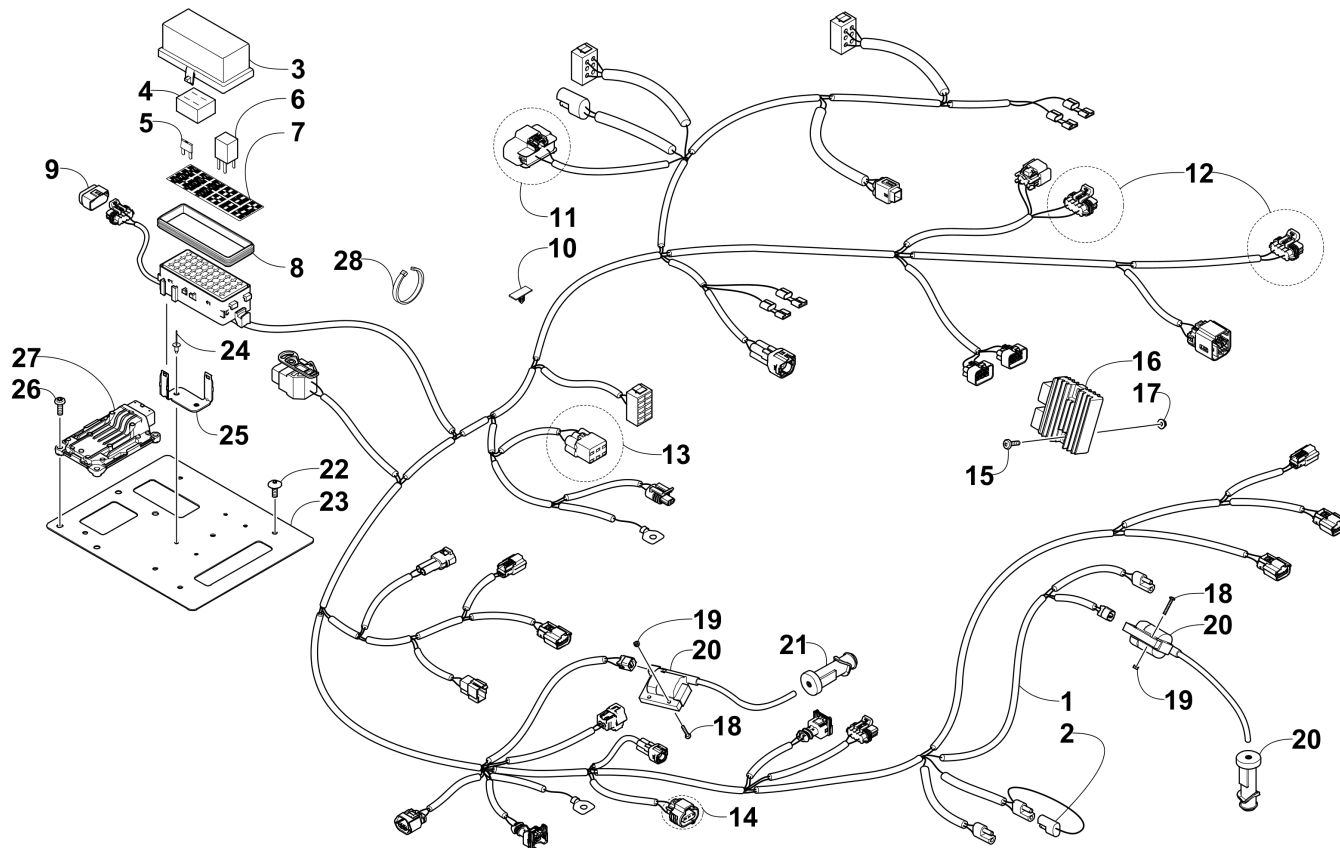

Item	Part No.	Qty	Name	Context	Footnote
1	0486-524	1	Harness, Main	(inc. 2-10)	
.2	0486-164	1	Tether, Accessory Connector		
.3	0430-085	1	Cover, Fuse Block		
.4	0430-037	1	Holder, Fuse		
.5	0430-032	7	Fuse - 10 Amp		
.5	0430-031	4	Fuse - 15 Amp		
.5	0430-030	4	Fuse - 30 Amp		
.6	0430-045	6	Relay (4-Pin) - 20 Amp		
.6	0430-033	1	Relay (5-Pin) - 30 Amp		
.7	2411-883	1	Decal, Fuse Block		
.8	0430-086	1	Seal		
.9	0430-103	1	Cover, Diagnostics Connector		
.10	0430-102	AR	Clip, Routing		
11	1436-415	1	Repair Kit, Connector - LCD Gauge		
12	1436-487	AR	Repair Kit, Connector - Headlight		
13	1436-416	1	Repair Kit, Connector - Tilt Sensor		
14	1436-484	1	Repair Kit, Connector - 4P - Map		
15	8476-625	2	Screw, Machine		
16	0824-072	1	Regulator, Voltage		
17	0623-038	2	Nut w/Washer		

Item	Part No.	Qty	Name	Context	Footnote
18	8468-425	4	Screw, Machine		
19	0423-493	4	Nut w/Washer		
20	0824-071	2	Coil, Ignition - Assembly	(inc. 21)	
21	0824-049	2	Cap, Spark Plug		
22	0623-784	4	Screw, Self-Tapping		
23	4506-731	1	Tray, Electrical		
24	8060-686	2	Rivet		
25	0745-388	1	Bracket, Mounting - PDM		
26	8476-620	4	Screw, Machine		
27	0530-140	1	ECM		
28	0123-788	AR	Tie, Cable - 8 in.		
28	0123-903	AR	Tie, Cable - 11.5 in.		



The illustrations used in this Parts Manual are for reference to replacement part numbers only and are not to be used for assembly. For assembly procedures, use an Arctic Cat Service Manual. For a complete list of related items, refer to the current accessory catalog. Once printed, Arctic Cat does not guarantee the accuracy of the information contained in this manual. Our parts lists and illustrations are constantly revised to reflect part number changes, discrepancies, and enhancements.

®™ Trademarks of Arctic Cat Inc., Thief River Falls, MN 56701