

2016

SERVICE MANUAL



ALTERRA 400



2016 Alterra 400 Service Manual

Table Of Contents

| | | | |
|---|-----------|---|------------|
| General Information/Foreword..... | 2 | Fuel/Lubrication/Cooling | 71 |
| Specifications | 2 | Electric Choke | 71 |
| Torque Specifications..... | 3 | Carburetor | 71 |
| Torque Conversions (ft-lb/N-m)..... | 4 | Throttle Cable Free-Play | 77 |
| Gasoline - Oil - Lubricant..... | 4 | Engine RPM (Idle)..... | 77 |
| Preparation For Storage | 5 | Gas Tank | 78 |
| Preparation After Storage | 5 | Oil Pump | 79 |
| Periodic Maintenance/Tune-Up..... | 6 | Oil Cooler | 80 |
| Air Filter | 6 | Troubleshooting | 81 |
| Valve/Tappet Clearance..... | 7 | Electrical System..... | 82 |
| Testing Engine Compression | 8 | Battery..... | 82 |
| Spark Plug | 8 | Ignition Switch | 83 |
| Muffler/Spark Arrester | 9 | Ignition Coil | 84 |
| Engine/Transmission Oil - Filter | 9 | Ignition Timing | 84 |
| Front Differential/Rear Drive Lubricant | 10 | Accessory Receptacle/Connector | 84 |
| Driveshaft/Coupling | 10 | Switches..... | 84 |
| Shift Lever..... | 11 | Fan Motor | 86 |
| Hydraulic Brake Systems..... | 11 | Lights..... | 86 |
| Burnishing Brake Pads | 13 | Fuse Block/Power Distribution Module | 87 |
| Checking/Replacing V-Belt | 13 | Sensors/Components | 87 |
| Steering/Body/Controls..... | 16 | RPM Limiter | 88 |
| Front Rack/Body Panel/Fender | 16 | Stator Coil | 88 |
| Rear Rack/Body Panel..... | 17 | Regulator/Rectifier | 89 |
| Steering Post/Tie Rods..... | 19 | Starter Motor | 89 |
| LCD Gauge..... | 21 | Starter Relay | 90 |
| Handlebar Grip | 21 | CDI Unit..... | 90 |
| Throttle Control | 22 | Troubleshooting | 91 |
| Steering Knuckles..... | 23 | Drive System..... | 92 |
| Front Wheel Alignment | 24 | Front Differential | 93 |
| Exhaust System..... | 25 | Drive Axles | 103 |
| Seat | 25 | Rear Gear Case | 104 |
| Lights | 25 | Hub | 105 |
| Troubleshooting | 28 | Hand Brake Lever/Master Cylinder Assembly | 105 |
| Engine/Transmission..... | 29 | Hydraulic Brake Caliper..... | 106 |
| Troubleshooting | 30 | Troubleshooting Drive System..... | 109 |
| Removing Engine/Transmission | 32 | Troubleshooting Brake System..... | 110 |
| Top-Side Components | 34 | Suspension | 111 |
| Removing Top-Side Components | 34 | Shock Absorbers | 111 |
| Servicing Top-Side Components | 37 | Front A-Arms | 111 |
| Installing Top-Side Components | 42 | Rear A-Arms | 112 |
| Left-Side Components | 46 | Wheels and Tires | 113 |
| Removing Left-Side Components | 46 | Troubleshooting | 114 |
| Servicing Left-Side Components | 48 | | |
| Installing Left-Side Components..... | 50 | | |
| Right-Side Components | 50 | | |
| Removing Right-Side Components | 51 | | |
| Servicing Right-Side Components | 54 | | |
| Installing Right-Side Components | 55 | | |
| Center Crankcase Components | 58 | | |
| Separating Crankcase Halves | 58 | | |
| Disassembling Crankcase Half..... | 58 | | |
| Servicing Center Crankcase Components | 60 | | |
| Assembling Crankcase Half..... | 64 | | |
| Joining Crankcase Halves | 67 | | |
| Installing Engine/Transmission | 67 | | |

General Information/Foreword

This Arctic Cat Service Manual contains service, maintenance, and troubleshooting information for the 2016 Arctic Cat Alterra 400 ATV model and is designed to aid in service-oriented applications.

This manual is divided into sections. Each section covers a specific ATV component or system and, in addition to the standard service procedures, includes disassembling, inspecting, and assembling instructions. When using this manual as a guide, the technician should use discretion as to how much disassembly is needed to address any given condition.

This service manual is designed primarily for use by an Arctic Cat CatMaster Basic Level technician. The procedures found in this manual are of varying difficulty, and certain service procedures in this manual require one or more special tools to be completed. The technician should use sound judgment when determining which procedures can be completed based on their skill level and access to appropriate special tools.

■NOTE: Whenever a part is worn excessively, cracked, or damaged in any way, replacement is necessary.

When replacement of parts is necessary, use only genuine Arctic Cat ATV parts. They are precision-made to ensure high quality and correct fit. Refer to the Illustrated Parts Manual for the correct part number, quantity, and description.

Arctic Cat ATV publications and decals display the words Warning, Caution, Note, and At This Point to emphasize important information. The symbol  **WARNING** identifies personal safety-related information. Be sure to follow the directive because it deals with the possibility of serious injury or even death. A **CAUTION** identifies unsafe practices which may result in ATV-related damage. Follow the directive because it deals with the possibility of damaging part or parts of the ATV. The symbol **■ NOTE:** identifies supplementary information worthy of particular attention. The symbol  **AT THIS POINT** directs the technician to certain and specific procedures to promote efficiency and to improve clarity.

At the time of publication, all information, photographs, and illustrations were technically correct. Some photographs used in this manual are used for clarity purposes only and are not designed to depict actual conditions. Because Arctic Cat Inc. constantly refines and improves its products, no retroactive obligation is incurred. All materials and specifications are subject to change without notice.

Product Service and
Warranty Department
Arctic Cat Inc.

Specifications

■NOTE: Specifications subject to change without notice.

| CHASSIS | |
|---|--|
| Tire Size | Front - 24 x 8-12 Rear - 24 x 10-12 |
| Tire Inflation Pressure | 27.6 kPa (4 psi) |
| MISCELLANY | |
| Spark Plug Type | NGK CPR8E |
| Spark Plug Gap | 0.7-0.8 mm (0.028-0.031 in.) |
| Gas Tank Capacity (rated) | 15.1 L (4.0 U.S. gal.) |
| Rear Drive Capacity | 250 ml (8.5 fl oz)* |
| Front Differential Capacity | 275 ml (9.3 fl oz)** |
| Engine Oil Capacity | 3.3 L (3.5 U.S. qt) - Overhaul 2.8 L (3.0 U.S. qt) - Change |
| Gasoline (recommended) | 87 Octane Regular Unleaded |
| Engine Oil (recommended) | Arctic Cat ACX All Weather (Synthetic) |
| Differential/Rear Drive Lubricant | SAE Approved 80W-90 Hypoid |
| Drive Belt Width | 28.5 mm (1.12 in.) |
| Brake Fluid | DOT 4 |
| Taillight/Brakelight | 12V/5W/21W |
| Headlight | 12V/35W (4) |
| FUEL SYSTEM | |
| Carburetor Type | Keihin CVK34 |
| Main Jet | 112 |
| Slow Jet | 38 |
| Pilot Screw Setting (turns) | 2 1/2 |
| Jet Needle | NLGB |
| Idle RPM (engine warm) | 1250-1350 |
| Starter Jet | 75 |
| Float Height | 17 mm |
| Throttle Cable Free-Play (at lever) | 3-6 mm (1/8-1/4 in.) |
| ELECTRICAL SYSTEM | |
| Ignition Timing | 10° BTDC @ 1500 RPM |
| Spark Plug Cap | 4000-6000 ohms |
| Ignition Coil Resistance (primary) (secondary) | Less than 1 ohm N.A. |
| Ignition Coil Peak Voltage (primary/CDI) | 250-375 DC volts |
| Stator Coil Resistance (trigger) (charging) | 90-110 ohms Less than 1 ohm |
| Peak Voltage (trigger) | 7.8-9.3 volts |
| AC Generator Output (no load) | 60 AC volts @ 3000 RPM |
| Generator Output (approx) | 220W @ 5000 RPM |
| CYLINDER, PISTON, AND RINGS | |
| Piston Skirt/Cylinder Clearance | 0.060-0.073 mm |
| Piston Diameter 15 mm from Skirt End | 80.98-81.00 mm |
| Piston Ring Free End Gap (max) (1st) (2nd) | 11.6 mm 10.1 mm |
| Bore x Stroke | 81.0 x 71.2 mm |
| Cylinder Trueness (max) | 0.01 mm |
| Piston Ring End Gap - Installed (min) | 0.15 mm |
| Piston Ring to Groove Clearance (max)(1st/2nd) | 0.06 mm |
| Piston Ring Groove Width (1st) (2nd) (oil) | 1.01-1.03 mm 1.21-1.23 mm 2.01-2.03 mm |
| Piston Ring Thickness (1st) (2nd) | 0.97-.99 mm 1.17-1.19 mm |
| Piston Pin Bore (max) | 20.008 mm |
| Piston Pin (min) | 19.994 mm |

* One inch below plug threads. ** At the plug threads.

| CRANKSHAFT | |
|---|----------------------------------|
| Connecting Rod (small end) (max) | 20.021 mm |
| Connecting Rod (big end side-to-side) (max) | 0.7 mm |
| Connecting Rod (big end width) | 21.95-22.00 mm |
| Connecting Rod (small end deflection)(max) | 3.0 mm |
| Crankshaft (web-to-web) | 60.9 mm |
| Crankshaft Runout (max) | 0.03 mm |
| VALVES AND GUIDES | |
| Valve Face Diameter (intake) (exhaust) | 30.6 mm 27.9 mm |
| Valve/Tappet Clearance (cold engine) (intake) (exhaust) | 0.10 mm 0.23 mm |
| Valve Guide/Stem Clearance (max) (intake) (exhaust) | 0.10 mm 0.30 mm |
| Valve Guide Inside Diameter | 5.000-5.012 mm |
| Valve Head Thickness (min) | 2.30 mm |
| Valve Seat Angle (intake/exhaust) | 45° |
| Valve Spring Free Length (min) | 40.4 mm |
| Valve Spring Tension @ 31.1 mm | 21.4 kg (47.18 lb) |
| CAMSHAFT AND CYLINDER HEAD | |
| Cam Lobe Height (min) (intake/exhaust) | 33.53 mm |
| Camshaft Journal Oil Clearance (max) | 0.040 mm |
| Camshaft Journal Holder (right & center) Inside Diameter (left) | 21.98-22.04 mm 17.48-17.53 mm |
| Camshaft Journal Outside Diameter (right & center) (left) | 21.97-21.98 mm 17.47-17.48 mm |
| Camshaft Runout (max) | 0.03 mm |
| Cylinder Head/Cover Distortion (max) | 0.05 mm |

| Part | Part Bolted To | Torque | |
|--------------------------------------|-------------------------------|-----------|-----|
| | | ft-lb | N-m |
| Driven Pulley Nut** | Driveshaft | 147 | 199 |
| Ground Cable | Engine | 8 | 11 |
| Output Shaft Flange Nut | Output Shaft | 74 | 101 |
| Magneto Rotor Nut | Crankshaft | 107 | 146 |
| Cam Sprocket** | Camshaft | 11 | 15 |
| Valve Adjuster Jam Nut | Valve Adjuster | 7 | 9.5 |
| Starter Motor | Crankcase | 8 | 11 |
| Oil Fitting | Engine | 8 | 11 |
| Starter One-Way Clutch | Flywheel | 26 | 35 |
| Oil Pump* | Crankcase | 8 | 11 |
| Movable Drive Face Nut** | Clutch Shaft | 147 | 199 |
| Oil Cooler Hose Clamps | Engine/Oil Cooler | 30 in.-lb | 3.4 |
| Valve Inspection Cover | Cylinder Head Cover | 8 | 11 |
| SUSPENSION COMPONENTS (Front) | | | |
| A-Arm | Frame | 35 | 47 |
| Knuckle | Ball Joint | 35 | 47 |
| Shock Absorber | Frame | 35 | 47 |
| Shock Absorber | Upper A-Arm | 35 | 47 |
| Knuckle | A-Arm | 35 | 47 |
| SUSPENSION COMPONENTS (Rear) | | | |
| Shock Absorber (Upper) | Frame | 35 | 47 |
| Shock Absorber (Lower) | Lower A-Arm | 35 | 47 |
| A-Arm | Frame | 35 | 47 |
| Knuckle | A-Arm | 35 | 47 |
| BRAKE COMPONENTS | | | |
| Brake Disc* | Hub | 15 | 20 |
| Brake Hose | Caliper | 20 | 27 |
| Brake Hose | Master Cylinder | 20 | 27 |
| Brake Hose | Auxiliary Brake Cylinder | 20 | 27 |
| Master Cylinder (Rear) | Frame | 8 | 11 |
| Master Cylinder Clamp (Front) | Master Cylinder | 5.5 | 8 |
| Hydraulic Caliper**** | Knuckle | 20 | 27 |
| Auxiliary Brake Pedal | Pivot | 20 | 27 |
| DRIVE TRAIN COMPONENTS | | | |
| Engine Mounting Through-Bolt | Frame | 38 | 52 |
| Front Differential | Frame/Differential Bracket | 38 | 52 |
| Output Flange | Rear Output Flange Joint | 20 | 27 |
| Input Shaft Housing | Differential Housing | 18 | 25 |
| Pinion Housing | Gear Case Housing | 18 | 25 |
| Differential Housing Cover*** | Differential Housing | 18 | 25 |
| Drive Bevel Gear Nut** | Shaft | 59 | 80 |
| Driven Bevel Gear Nut** | Driven Shaft | 59 | 80 |
| Thrust Button | Gear Case Cover | 8 | 11 |
| Hub Nut | Shaft/Axle (max) | 200 | 272 |
| Oil Drain Plug | Front Differential/Rear Drive | 45 in.-lb | 5 |
| Oil Fill Plug | Front Differential/Rear Drive | 16 | 22 |
| Oil Drain Plug | Engine | 20 | 27 |
| Rear Drive Input Shaft Housing | Differential Housing | 23 | 31 |
| Lock Collar | Differential Housing | 125 | 169 |
| Wheel (Steel) | Hub | 40 | 54 |
| Wheel (Aluminum) | Hub | 80 | 108 |
| Rear Drive Gear Case | Frame | 38 | 52 |
| Engine Output Flange | Rear Gear Case Input Flange | 20 | 27 |

| EXHAUST COMPONENTS | | | |
|---------------------------------------|-------------------|-----------|------|
| Part | Part Bolted To | Torque | |
| | | ft-lb | N-m |
| Exhaust Pipe | Engine | 20 | 27 |
| Spark Arrester | Muffler | 48 in.-lb | 5.5 |
| ELECTRICAL COMPONENTS | | | |
| Coil | Frame | 12 | 16 |
| Starter Motor Positive Cable | Starter Motor | 8 | 11 |
| CHASSIS COMPONENTS | | | |
| Footrest | Frame (8 mm) | 20 | 27 |
| Bumper | Frame (8 mm) | 20 | 27 |
| STEERING COMPONENTS | | | |
| Steering Post Bearing Housing | Frame | 20 | 27 |
| Handlebar Cap | Steering Post | 20 | 27 |
| Lower Steering Post Bearing Cap Screw | Steering Post | 40 | 54 |
| Tie Rod End** | Steering Post Arm | 30 | 41 |
| ENGINE/TRANSMISSION | | | |
| Clutch Shoe** | Crankshaft | 147 | 199 |
| Clutch Cover/Housing Assembly | Crankcase | 8 | 11 |
| Left-Side Cover | Crankcase | 8 | 11 |
| Crankcase Half (6 mm) | Crankcase Half | 10 | 13.5 |
| Crankcase Half (8 mm) | Crankcase Half | 21 | 28 |
| Cylinder Nut | Crankcase Half | 8 | 11 |
| Cylinder Head (Cap Screw) | Crankcase | 28 | 38 |
| Cylinder Head Nut | Cylinder | 20 | 27 |
| Cylinder Head (6 mm) | Cylinder | 8 | 11 |
| Cylinder Head (8 mm) | Cylinder | 20 | 27 |
| Cylinder Head Cover | Cylinder Head | 8 | 11 |
| Oil Pump Drive Gear** | Crankshaft | 63 | 86 |

* w/Blue Loctite #243 ** w/Red Loctite #271
*** w/Green Loctite #609 ****w/patch-lock"

Torque Conversions (ft-lb/N·m)

| ft-lb | N·m | ft-lb | N·m | ft-lb | N·m | ft-lb | N·m |
|-------|------|-------|------|-------|-------|-------|-------|
| 1 | 1.4 | 26 | 35.4 | 51 | 69.4 | 76 | 103.4 |
| 2 | 2.7 | 27 | 36.7 | 52 | 70.7 | 77 | 104.7 |
| 3 | 4.1 | 28 | 38.1 | 53 | 72.1 | 78 | 106.1 |
| 4 | 5.4 | 29 | 39.4 | 54 | 73.4 | 79 | 107.4 |
| 5 | 6.8 | 30 | 40.8 | 55 | 74.8 | 80 | 108.8 |
| 6 | 8.2 | 31 | 42.2 | 56 | 76.2 | 81 | 110.2 |
| 7 | 9.5 | 32 | 43.5 | 57 | 77.5 | 82 | 111.5 |
| 8 | 10.9 | 33 | 44.9 | 58 | 78.9 | 83 | 112.9 |
| 9 | 12.2 | 34 | 46.2 | 59 | 80.2 | 84 | 114.2 |
| 10 | 13.6 | 35 | 47.6 | 60 | 81.6 | 85 | 115.6 |
| 11 | 15 | 36 | 49 | 61 | 83 | 86 | 117 |
| 12 | 16.3 | 37 | 50.3 | 62 | 84.3 | 87 | 118.3 |
| 13 | 17.7 | 38 | 51.7 | 63 | 85.7 | 88 | 119.7 |
| 14 | 19 | 39 | 53 | 64 | 87 | 89 | 121 |
| 15 | 20.4 | 40 | 54.4 | 65 | 88.4 | 90 | 122.4 |
| 16 | 21.8 | 41 | 55.8 | 66 | 89.8 | 91 | 123.8 |
| 17 | 23.1 | 42 | 57.1 | 67 | 91.1 | 92 | 125.1 |
| 18 | 24.5 | 43 | 58.5 | 68 | 92.5 | 93 | 126.5 |
| 19 | 25.8 | 44 | 59.8 | 69 | 93.8 | 94 | 127.8 |
| 20 | 27.2 | 45 | 61.2 | 70 | 95.2 | 95 | 129.2 |
| 21 | 28.6 | 46 | 62.6 | 71 | 96.6 | 96 | 130.6 |
| 22 | 29.9 | 47 | 63.9 | 72 | 97.9 | 97 | 131.9 |
| 23 | 31.3 | 48 | 65.3 | 73 | 99.3 | 98 | 133.3 |
| 24 | 32.6 | 49 | 66.6 | 74 | 100.6 | 99 | 134.6 |
| 25 | 34 | 50 | 68 | 75 | 102 | 100 | 136 |

Gasoline - Oil - Lubricant

FILLING GAS TANK

⚠ WARNING

Always fill the gas tank in a well-ventilated area. Never add fuel to the ATV gas tank near any open flames or with the engine running. **DO NOT SMOKE** while filling the gas tank.

Since gasoline expands as its temperature rises, the gas tank must be filled to its rated capacity only. Expansion room must be maintained in the tank particularly if the tank is filled with cold gasoline and then moved to a warm area.

⚠ WARNING

Do not overflow gasoline when filling the gas tank. A fire hazard could materialize. Always allow the engine to cool before filling the gas tank.

Tighten the gas tank cap securely after filling the tank.

⚠ WARNING

Do not over-fill the gas tank.

RECOMMENDED GASOLINE

The recommended gasoline to use is 87 minimum octane regular unleaded. In many areas, oxygenates are added to the gasoline. Oxygenated gasolines containing up to 10% ethanol or 5% methane are acceptable gasolines.

When using ethanol blended gasoline, it is not necessary to add a gasoline antifreeze since ethanol will prevent the accumulation of moisture in the fuel system.

CAUTION

Do not use white gas. Only Arctic Cat approved gasoline additives should be used.


RECOMMENDED ENGINE/ TRANSMISSION OIL

CAUTION

Any oil used in place of the recommended oil could cause serious engine damage. Do not use oils which contain graphite or molybdenum additives. These oils can adversely affect clutch operation. Also, not recommended are racing, vegetable, non-detergent, and castor-based oils.

The recommended oil to use is Arctic Cat ACX All Weather synthetic engine oil, which has been specifically formulated for use in this Arctic Cat engine. Although Arctic Cat ACX All Weather synthetic engine oil is the only oil recommended for use in this engine, use of any API certified SM 0W-40 oil is acceptable.

Multi-Grade Engine Oil

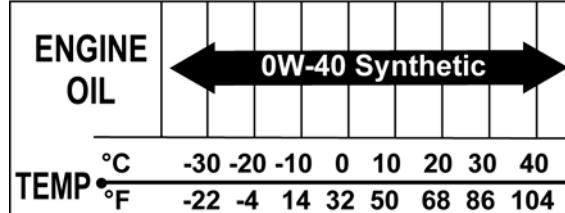

OILCHARTJ

RECOMMENDED FRONT DIFFERENTIAL/REAR DRIVE LUBRICANT

The recommended lubricant is Arctic Cat Gear Lube or an equivalent gear lube which is SAE approved 80W-90 hypoid. This lubricant meets all of the lubrication requirements of the Arctic Cat ATV front differentials and rear drives.

CAUTION

Any lubricant used in place of the recommended lubricant could cause serious front differential/rear drive damage.

Preparation For Storage

CAUTION

Prior to storing the ATV, it must be properly serviced to prevent rusting and component deterioration.

Arctic Cat recommends the following procedure to prepare the ATV for storage.

1. Clean the seat cushion (cover and base) with a damp cloth and allow to dry.
2. Clean the ATV thoroughly by washing dirt, oil, grass, and other foreign matter from the entire ATV. Allow the ATV to dry thoroughly. DO NOT get water into any part of the engine or air intake.
3. Either drain the gas tank or add a fuel stabilizer to the gas in the gas tank.
4. Clean the interior of the air filter housing.
5. Drain the carburetor float bowl and turn off the fuel valve (located on the right side of the gas tank).
6. Plug the hole in the exhaust system with a clean cloth.
7. Apply light oil to the upper steering post bushing and plungers of the shock absorbers.
8. Tighten all nuts, bolts, cap screws, and screws. Care must be taken that all calibrated nuts, cap screws, and bolts are tightened to specifications.

■NOTE: For storage, use a battery maintainer or make sure the battery is fully charged (see Battery section in this manual).

9. Disconnect the battery cables (negative cable first); then remove the battery, clean the battery posts and cables, and store in a clean, dry area.
10. Store the ATV indoors in a level position.

CAUTION

Avoid storing outside in direct sunlight and avoid using a plastic cover as moisture will collect on the ATV causing rusting.

Preparation After Storage

Taking the ATV out of storage and correctly preparing it will assure many miles and hours of trouble-free riding. Arctic Cat recommends the following procedure to prepare the ATV.

1. Clean the ATV thoroughly.
2. Clean the engine. Remove the cloth from the exhaust system.
3. Check all control wires and cables for signs of wear or fraying. Replace if necessary.
4. Change the engine/transmission oil and filter.
5. Charge the battery; then install. Connect the battery cables making sure to connect the positive cable first.

CAUTION

Before installing the battery, make sure the ignition switch is in the OFF position.

6. Check the entire brake systems (fluid level, pads, etc.), all controls, headlights, taillight, brakelight, and headlight aim; adjust or replace if necessary.
7. Check the tire pressure. Inflate to recommended pressure as necessary.
8. Tighten all nuts, bolts, cap screws, and screws making sure all calibrated nuts, cap screws, and bolts are tightened to specifications.
9. Make sure the steering moves freely and does not bind.
10. Check the spark plug. Clean or replace as necessary.
11. Check the air filter and the air filter housing. Clean or replace as necessary.

Periodic Maintenance/Tune-Up

Tighten all nuts, bolts, and cap screws. Care must be taken that all calibrated nuts, bolts, and cap screws are tightened to specifications.

It is advisable to lubricate certain components periodically to ensure free movement. Apply light oil to the components using the following list as reference.

- A. Throttle Lever Pivot/Cable Ends
- B. Brake Lever Pivot/Cable Ends
- C. Auxiliary Brake Cable Ends

SPECIAL TOOLS

A number of special tools must be available to the technician when performing service procedures in this section. Refer to the current Special Tools Catalog for the appropriate tool description.

■NOTE: When indicated for use, each special tool will be identified by its specific name, as shown in the chart below, and capitalized.


| Description | p/n |
|--------------------------|----------|
| Compression Tester Kit | 0444-213 |
| Oil Filter Wrench | 0644-389 |
| Tachometer | 0644-275 |
| Timing Light | 0644-296 |
| Valve Clearance Adjuster | 0444-178 |

■NOTE: Special tools are available from the Arctic Cat Service Department.

Air Filter

CLEANING AND INSPECTING FILTER

1. Rotate the three locking tabs free of the lugs on the air filter cover; then rotate the cover forward and away from the filter housing.

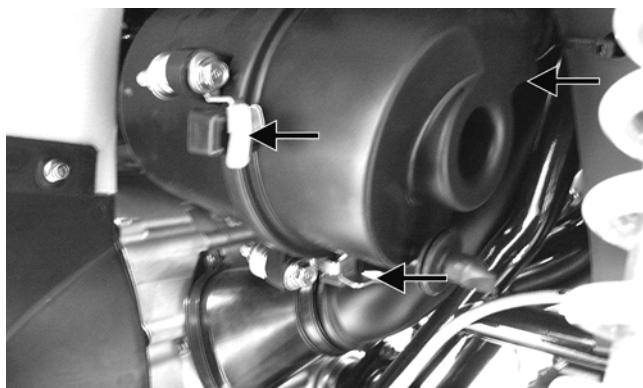

KC0056A




KC147

2. Remove the foam filter element from the air filter housing and separate the foam element from the spring.



KC148

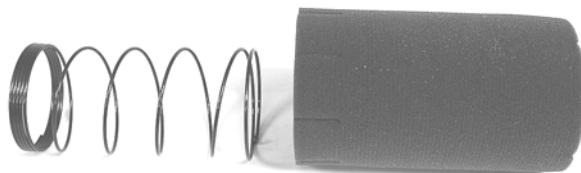

KC143

3. Fill a wash pan larger than the element with a non-flammable cleaning solvent; then dip the element in the solvent and wash it.

■NOTE: Foam Air Filter Cleaner and Foam Air Filter Oil are available from Arctic Cat.

4. Dry the element.
5. Put the element in a plastic bag; then pour in air filter oil and work the oil into the element. Insert the forming spring into the element with the closely wrapped end of the spring toward the open end of the element.

CAUTION

A torn air filter element can cause damage to the ATV engine. Dirt and dust may get inside the engine if the element is torn. Carefully examine the element for tears before and after cleaning it. Replace the element with a new one if it is torn.

- Clean any dirt or debris from inside the air cleaner. Be sure no dirt enters the carburetor.
- Place the filter assembly in the air filter housing making sure it is properly positioned and properly seated with the filter element straight in the housing.




KC147

CAUTION

Failure to properly seat and align the filter element may cause severe engine damage.


- Install the air filter housing cover and secure with the locking tabs.

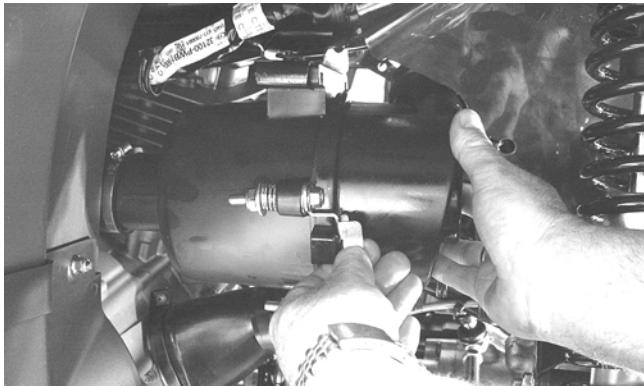

KC123

CHECKING AND CLEANING DRAIN

- Inspect the drain on the filter housing cover and clean out any dirt or debris.

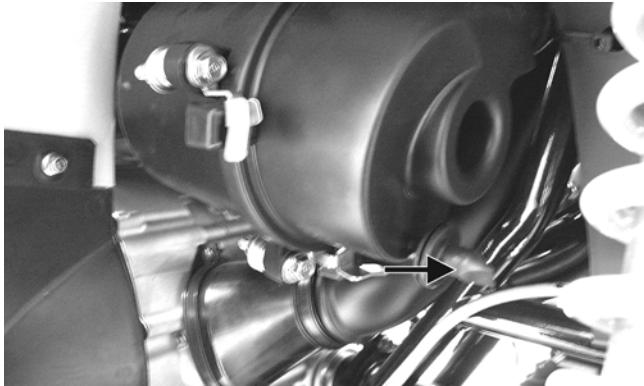

KC0056C


- Replace any drain that is cracked or shows any signs of hardening or deterioration.
- Wipe any accumulation of oil or gas from the filter housing and drain.

Valve/Tappet Clearance

To check and adjust valve/tappet clearance, use the following procedure.

■NOTE: The seat, left-side and right-side engine covers, and gas tank must be removed for this procedure.

- Remove the timing inspection plug and spark plug; then remove the valve inspection covers (for more detailed information, see Engine/Transmission - Servicing Top-Side Components).

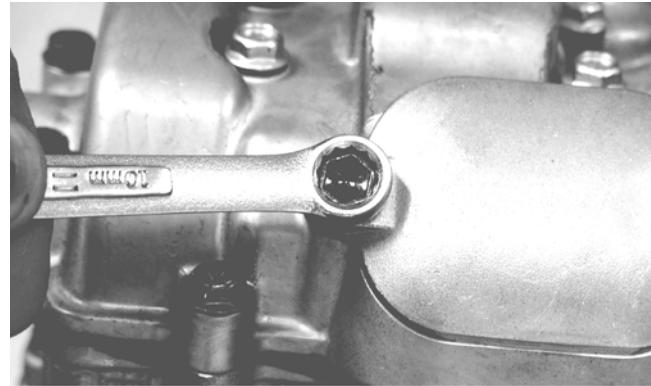

CF005

- Rotate the crankshaft to the TDC position on the compression stroke.

■NOTE: At this point, the rocker arms and adjuster screws must not have pressure on them.

CHECKING


Using a feeler gauge, check each valve/tappet clearance. If clearance is not within specifications, loosen the jam nut and rotate the tappet adjuster screw until the clearance is within specifications. Tighten each jam nut securely after completing the adjustment.

CAUTION

The feeler gauge must be positioned at the same angle as the valve and valve adjuster for an accurate measurement of clearance. Failure to measure the valve clearance accurately could cause valve component damage.

VALVE/TAPPET CLEARANCE

| | |
|---------|----------------------------------|
| Intake | 0.076-0.127 mm (0.003-0.005 in.) |
| Exhaust | 0.152-0.203 mm (0.006-0.008 in.) |

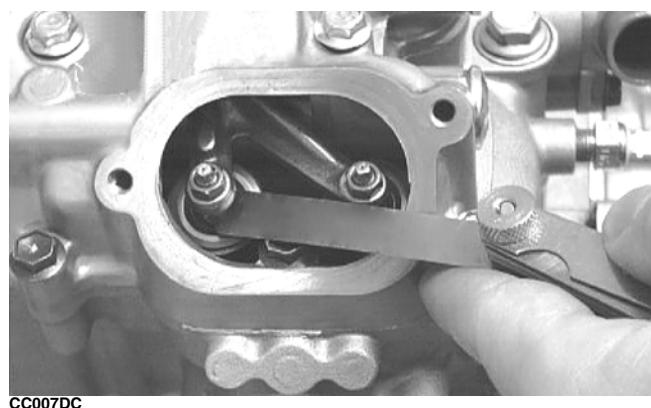

CC007DC

ADJUSTING

- A. Place the Valve Clearance Adjuster onto the jam nut securing the tappet adjuster screw; then rotate the valve adjuster dial clockwise until the end is seated in the tappet adjuster screw.
- B. While holding the valve adjuster dial in place, use the valve adjuster handle and loosen the jam nut; then rotate the tappet adjuster screw clockwise until friction is felt.
- C. Align the valve adjuster handle with one of the marks on the valve adjuster dial.
- D. While holding the valve adjuster handle in place, rotate the valve adjuster dial counterclockwise until proper valve/tappet clearance is attained.

■NOTE: Refer to the appropriate specifications in CHECKING for the proper valve/tappet clearance.

■NOTE: Rotating the valve adjuster dial counterclockwise will open the valve/tappet clearance by 0.05 mm (0.002 in.) per mark.

- E. While holding the adjuster dial at the proper clearance setting, tighten the jam nut securely with the valve adjuster handle.
3. Place the two valve inspection covers with O-rings into position; then tighten the covers securely.
4. Install the spark plug; then install the timing inspection plug.

Testing Engine Compression

1. Remove the high tension lead from the spark plug.
2. Using compressed air, blow any debris from around the spark plug.

WARNING

Always wear safety glasses when using compressed air.

3. Remove the spark plug; then attach the high tension lead to the plug and ground the plug on the cylinder head well away from the spark plug hole.

4. Attach the Compression Tester Kit.

■NOTE: The engine must be warm and the battery must be fully charged for this test.

5. While holding the throttle lever in the full-open position, crank the engine over with the electric starter until the gauge shows a peak reading of 95-115 psi (five to 10 compression strokes).
6. If compression is abnormally low, inspect the following items.

- A. Verify starter cranks engine over at normal speed (approximately 400 RPM).
- B. Gauge functioning properly.

C. Throttle lever in the full-open position.

D. Valve/tappet clearance correct.

E. Valve not bent or burned.


F. Valve seat not burned.

■NOTE: To service valves, see Engine/Transmission.

7. Pour approximately 30 ml (1 fl oz) of oil into the spark plug hole, reattach the gauge, and retest compression.
8. If compression is now evident, service the top end (see Engine/Transmission - Servicing Top-Side Components).

Spark Plug

A light brown insulator indicates that a plug and fuel/air mixture are correct. A white or dark insulator indicates that the engine may need to be serviced or the carburetor may need to be adjusted. To maintain a hot, strong spark, keep the plug free of carbon.

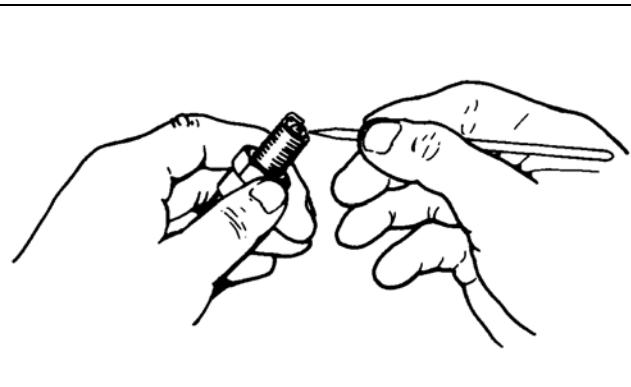


ATV-0051

CAUTION

Before removing a spark plug, be sure to clean the area around the spark plug. Dirt could enter engine when removing or installing the spark plug.

Adjust the gap to specification (see General Information/Foreword - Specifications). Use a feeler gauge to check the gap.

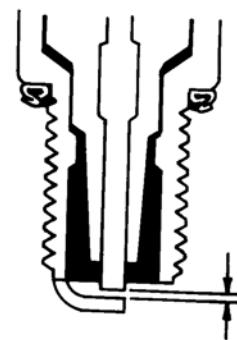

ATV0052

A new spark plug should be tightened 1/2 turn once the washer contacts the cylinder head. A used spark plug should be tightened 1/8 - 1/4 turn once the washer contacts the cylinder head.


Muffler/Spark Arrester

Clean the spark arrester using the following procedure.

⚠ WARNING

Wait until the muffler cools to avoid burns.

1. Remove the cap screws securing the spark arrester assembly to the muffler; then loosen and remove the arrester.

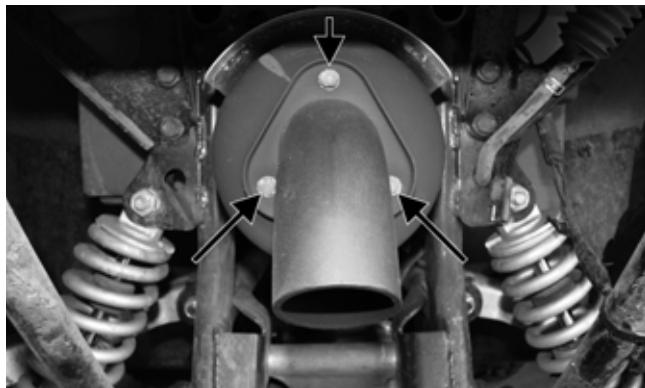

2. Using a suitable brush, clean the carbon deposits from the screen taking care not to damage the screen.

■**NOTE: If the screen or gasket is damaged in any way, it must be replaced.**

3. Install the spark arrester assembly with gasket; then secure with the cap screws. Tighten to 48 in.-lb.



Engine/Transmission Oil - Filter

The engine should always be warm when the oil is changed so the oil will drain easily and completely.


1. Park the ATV on level ground.
2. Remove the left-side access panel.

3. Remove the oil level stick/filler plug.



XA001

4. Remove the drain plug from the bottom of the engine and drain the oil into a drain pan.

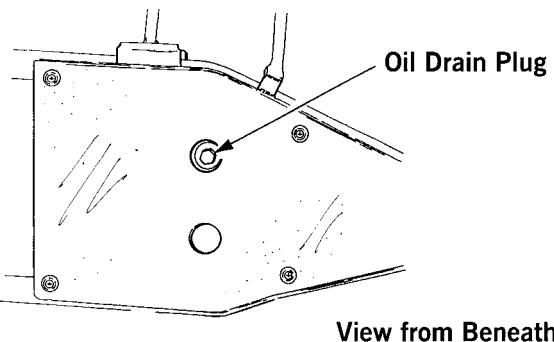

733-441A

⚠ WARNING

Use extreme caution when removing the oil drain plug. Hot oil can cause severe injury and skin burns.

5. Remove the oil filter plug from the filter mounting boss (located on the front side of the transmission case) and allow the filter to drain completely. Install the plug and tighten securely.
6. Using the adjustable Oil Filter Wrench and a suitable wrench, remove the old oil filter.

■**NOTE: Clean up any excess oil after removing the filter.**

7. Apply oil to a new filter seal ring and check to make sure it is positioned correctly; then install the new oil filter. Tighten securely.
8. Install the engine drain plug and tighten to 20 ft-lb. Pour the specified amount of the recommended oil in the filler hole. Install the oil level stick/filler plug.

CAUTION

Any oil used in place of the recommended oil could cause serious engine damage. Do not use oils which contain graphite or molybdenum additives. These oils can adversely affect clutch operation. Also, not recommended are racing, vegetable, non-detergent, and castor-based oils.

9. Start the engine (while the ATV is outside on level ground) and allow it to idle for a few minutes.
10. Turn the engine off and wait approximately one minute.


11. Remove the oil level stick and wipe it with a clean cloth; then install the oil level stick into engine case.

■**NOTE: The oil level stick should be threaded into the case for checking purposes.**


12. Remove the oil level stick; the engine oil level should be above the illustrated "L" mark but not higher than the illustrated "F" mark.

CAUTION

Do not over-fill the engine with oil. Always make sure that the oil level is above the "L" mark but not higher than the "F" mark.

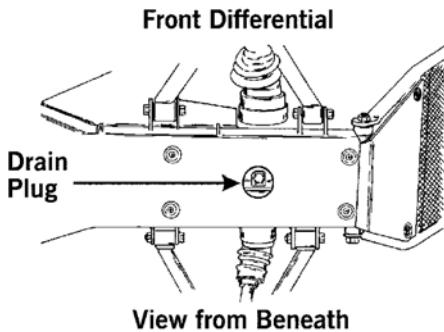

ATV0082A

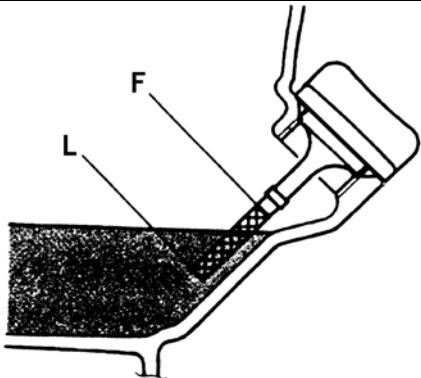

13. Inspect the area around the drain plug and oil filter for leaks.

14. Install the left-side access panel.


Front Differential/Rear Drive Lubricant

When changing the lubricant, use approved SAE 80W-90 hypoid gear lube.


To check lubricant, remove the rear drive filler plug; the lubricant level should be 1 in. below the threads of the plug. If low, add SAE approved 80W-90 hypoid gear lubricant as necessary.

To change the lubricant, use the following procedure.

1. Place the ATV on level ground; then remove each fill plug.

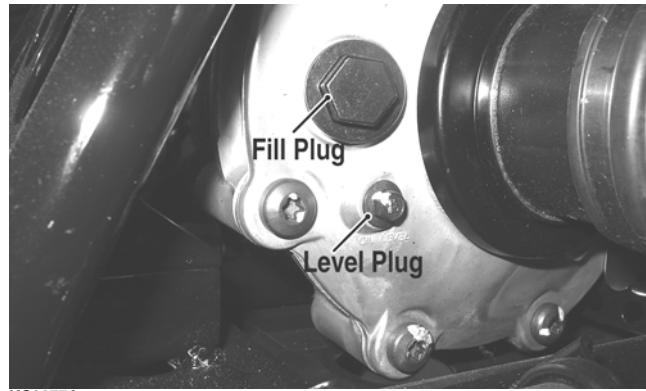

2. Drain the lubricant into a drain pan by removing the drain plug from each.

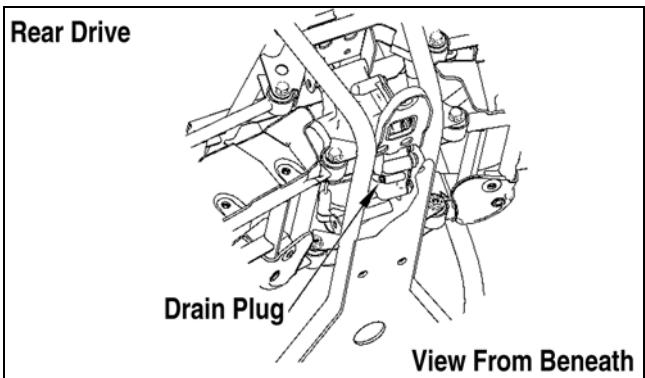

737-651B

3. After all the oil has been drained, install the drain plugs and tighten to 45 in.-lb.
4. Pour the appropriate amount of approved SAE 80W-90 hypoid gear lubricant into the filler hole.
5. Install the fill plugs and tighten to 16 ft-lb.

■**NOTE: If the differential/rear drive oil is contaminated with water, inspect the drain plug, filler plug, and/or bladder.**

CAUTION

Water entering the outer end of the axle will not be able to enter the rear drive unless the seals are damaged.


Driveshaft/Coupling

The following drive system components should be inspected periodically to ensure proper operation.

- A. Spline lateral movement (slop).
- B. Coupling cracked, damaged, or worn.

Shift Lever

CHECKING ADJUSTMENT

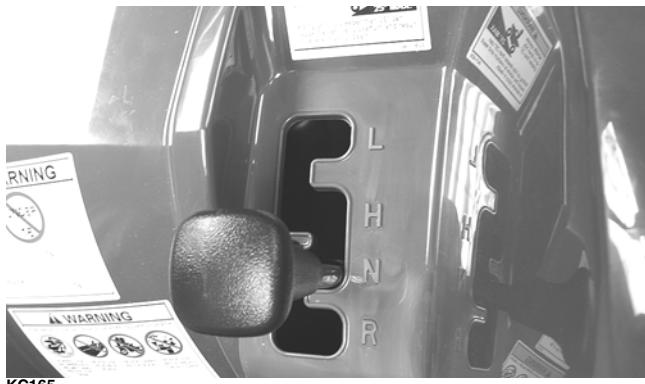

With the engine stopped and the brake lever lock engaged, turn the ignition switch to the ON position; then shift the transmission into each of the gear positions and note that the gear position indicated on the LCD corresponds to the gear position selected by the lever.

If the indicator does not correspond to the selected gear, it will be necessary to test drive the ATV to determine if the gear position switch is faulty or the shift lever needs adjustment.


If the ATV functions in the gear selected by the shift lever, troubleshoot the gear position switch (see Electrical System).

If the ATV functions but the shift lever does not correspond with the gear indicated on the LCD, adjust the shift linkage. To adjust, proceed to ADJUSTING.

ADJUSTING

■NOTE: The shift linkage is located behind the front left tire.

1. With the ignition switch in the ON position, loosen jam nut (A) (left-hand threads); then loosen jam nut (C) and with the shift lever in the reverse position, adjust the coupler (B) until the transmission is in reverse and the "R" icon appears on the LCD.

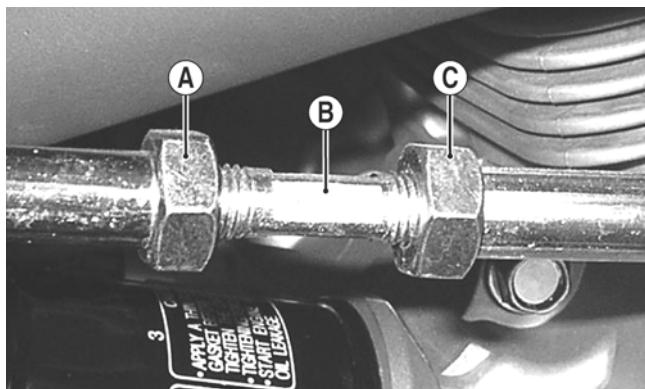


2. Tighten the jam nuts securely; then shift the transmission to each position and verify correct adjustment.

Hydraulic Brake Systems


CHECKING/BLEEDING

The hydraulic brake systems have been filled and bled at the factory.

1. With the master cylinder in a level position, check the fluid level in the reservoir. On the hand brake if the level in the reservoir is adequate, the sight glass will appear dark. If the level is low, the sight glass will appear clear. On the auxiliary brake the level must be between the lower and upper lines on the reservoir.

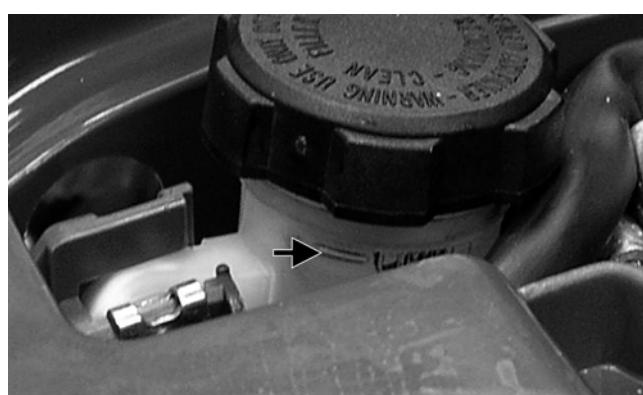

2. Compress the brake lever/pedal several times to check for a firm brake. If the brake is not firm, the system must be bled.
3. To bleed the brake system, use the following procedure.
 - A. Remove the cover and fill the reservoir with DOT 4 Brake Fluid.
 - B. Install and secure the cover; then slowly compress the brake lever/pedal several times.
 - C. Remove the protective cap, install one end of a clear hose onto the REAR RIGHT bleeder screw, and direct the other end into a container; then while holding slight pressure on the brake lever/pedal, open the bleeder screw and watch for air bubbles. Close the bleeder screw before releasing the brake lever/pedal. Repeat this procedure until no air bubbles are present.

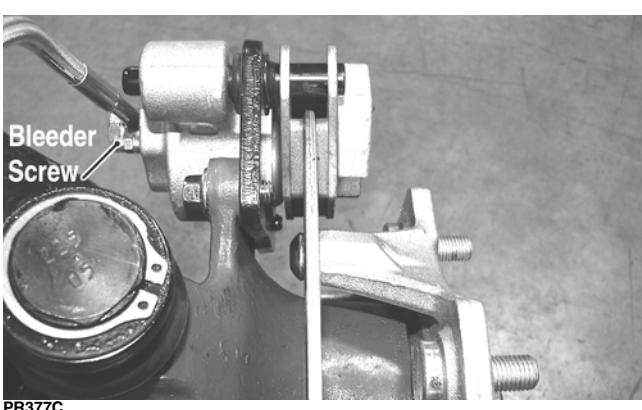

■NOTE: During the bleeding procedure, watch the appropriate reservoir very closely to make sure there is always a sufficient amount of brake fluid. If low, refill the reservoir before the bleeding procedure is continued. Failure to maintain a sufficient amount of fluid in the reservoir will result in air in the system.

- D. Repeat step C until the brake lever/pedal is firm.
- E. At this point, perform step B, C, and D on the FRONT RIGHT bleeder screw; then move to the FRONT LEFT bleeder screw and follow the same procedure.
- 4. Carefully check the entire hydraulic brake system that all hose connections are tight, the bleed screws are tight, the protective caps are installed, and no leakage is present.

CAUTION

Brake fluid that has been drained or bled from the brake system must NEVER be re-used or severe brake system corrosion and damage may occur. Always discard used brake fluid in an appropriate manner.

CAUTION

This hydraulic brake system is designed to use DOT 4 brake fluid only. If brake fluid must be added, care must be taken as brake fluid is very corrosive to painted surfaces.


INSPECTING HOSES

Carefully inspect the hydraulic brake hoses for cracks or other damage. If found, the brake hoses must be replaced.

CHECKING/REPLACING PADS

The clearance between the brake pads and brake discs is adjusted automatically as the brake pads wear. The only maintenance that is required is replacement of the brake pads when they show excessive wear. Check the thickness of each of the brake pads as follows.

1. Remove a front wheel.
2. Measure the thickness of each brake pad.
3. If thickness of either brake pad is less than 1.0 mm (0.039 in.), the brake pads must be replaced.

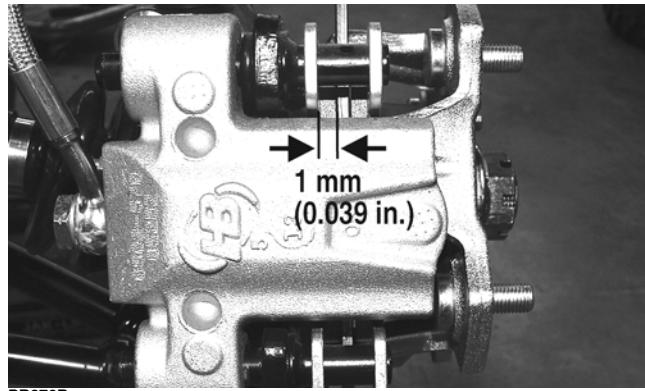


■NOTE: The brake pads should be replaced as a set.

4. To replace the brake pads, use the following procedure.
 - A. Remove the cap screws securing the caliper to the knuckle; then remove the pads.



- B. Install the new brake pads.
- C. Secure the caliper to the knuckle and/or axle housing with new "patch-lock" cap screws. Tighten to 20 ft-lb.

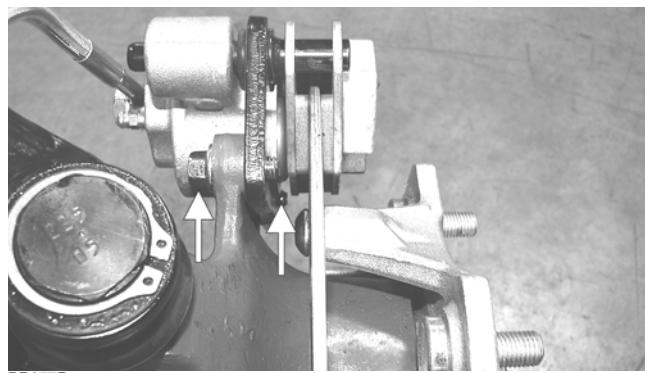

5. Install the wheel; then using a crisscross pattern, tighten the wheel nuts in 20 ft-lb increments to a final torque of 40 ft-lb (steel wheel), 60 ft-lb (aluminum wheel w/black nuts), or 80 ft-lb (aluminum wheel w/chrome nuts).
6. Burnish the brake pads.


Burnishing Brake Pads

Brake pads (both main and auxiliary) must be burnished to achieve full braking effectiveness. Braking distance will be extended until brake pads are properly burnished.

⚠️ WARNING


Failure to properly burnish the brake pads could lead to premature brake pad wear or brake loss. Brake loss can result in severe injury or death.

1. Choose an area large enough to safely accelerate the ATV to 30 mph and to brake to a stop.
2. Accelerate to 30 mph; then release the throttle lever and compress the brake lever or apply the auxiliary brake to decelerate to 0-5 mph.
3. Repeat procedure on each brake system twenty times.
4. Adjust the auxiliary brake (if necessary).
5. Verify that the brakelight illuminates when the hand lever is compressed or the brake pedal is depressed.

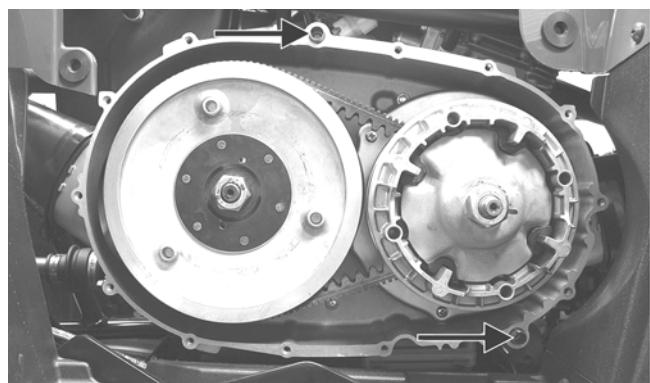


KC142A

3. Remove the nut securing the movable drive face to the clutch shaft; then remove the movable drive face assembly being careful not to let the roller fall out. Account for the drive spacer.

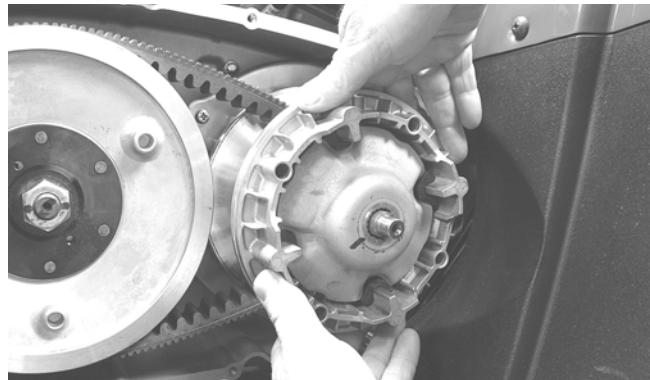


KC127

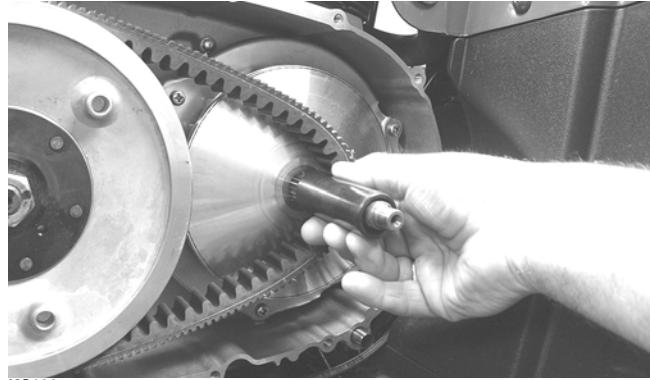


KC128

4. Thread a cap screw from the V-belt cover into the driven pulley fixed face and push the movable face open allowing the V-belt to drop down between the pulley faces approximately 3/4 in.

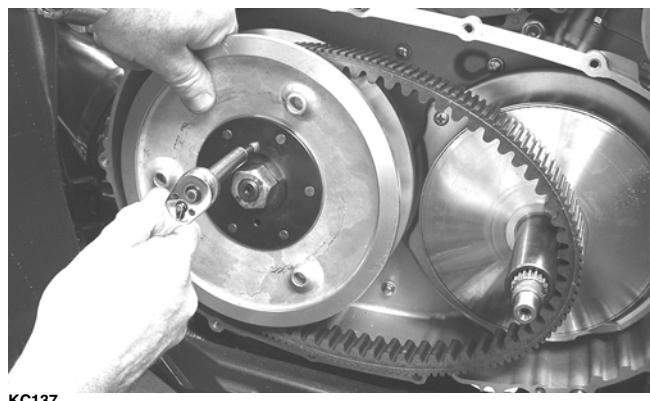


KC137

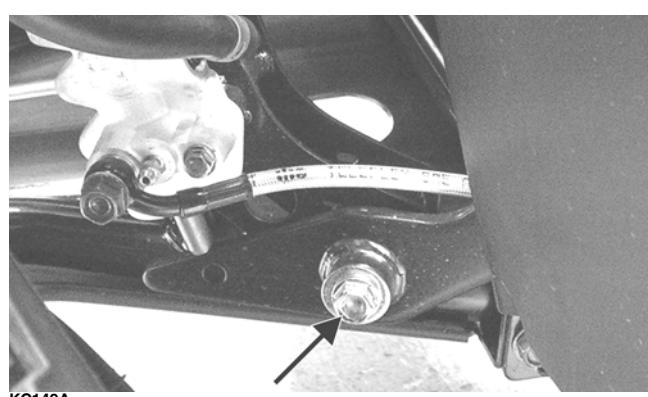

KC149A

2. Slide the auxiliary brake pedal part way off the pivot stud but do not remove; then remove the cap screws from the V-belt housing and remove the cover. Account for two alignment pins and a gasket.

5. Pinching the V-belt together in front of the driven pulley, pull it forward and outward off the clutch shaft; then remove it from the driven pulley.

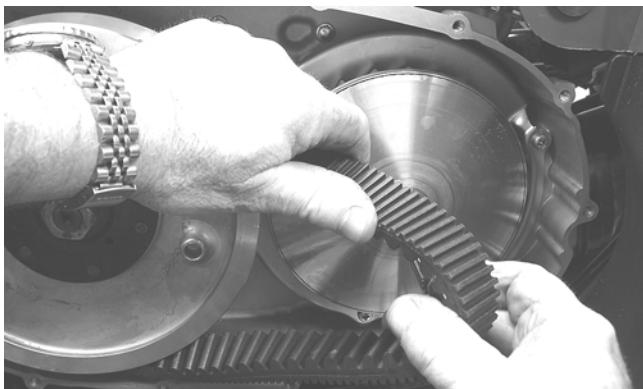

KC136


6. Inspect the faces of the drive and driven pulleys for scoring, pitting, cracks, or grooving; then clean any dirt and debris from the V-belt housing and cover.

CHECKING


Use the Drive Belt Gauge to identify any abnormal wear. Measure across the top of the V-belt (in multiple locations) using a Vernier caliper. Do not squeeze the belt as doing so may produce an inaccurate measurement. The V-belt must be at least 28.5 mm at any point.

INSTALLING

1. Place the V-belt onto the driven pulley making sure the arrows point in the direction of rotation; then pinch the belt together in front of the driven pulley and place it over the clutch shaft.

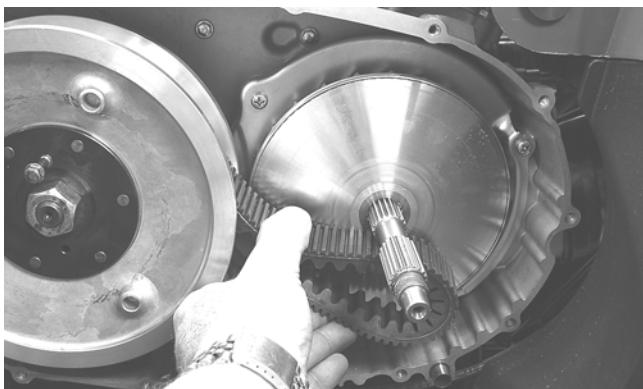


KC135

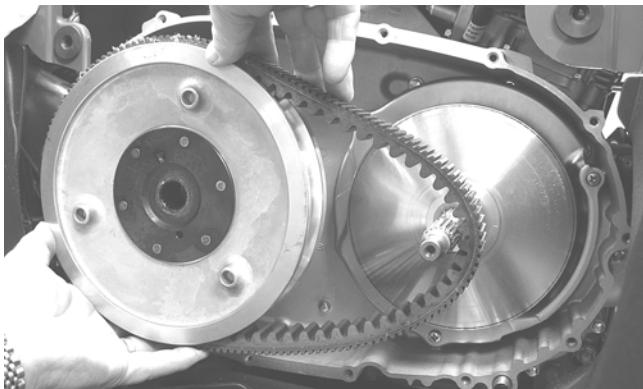

KC131

2. Install the spacer over the clutch shaft; then install the movable drive face assembly on the clutch shaft.

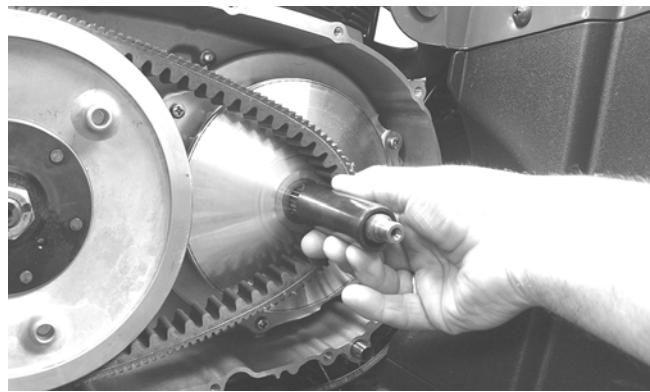


KC128




KC138

3. With two drops of red Loctite #271 on the threads and with the splines of the clutch shaft protruding through the movable drive face, install the nut and tighten to 147 ft-lb.

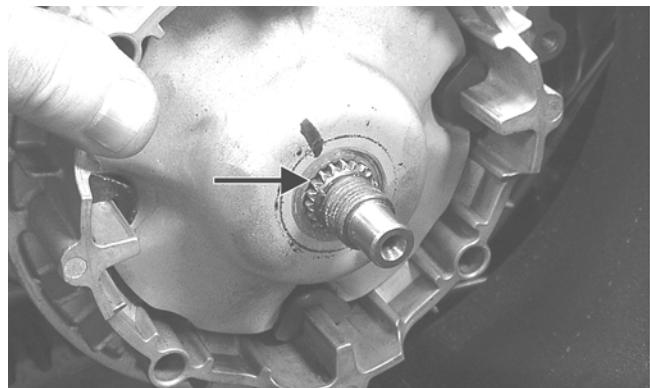


KC152A

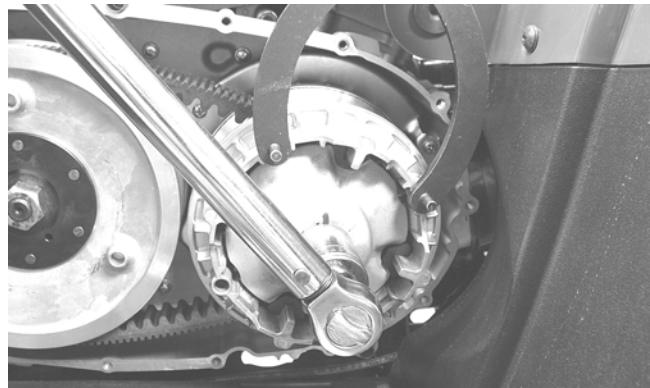


KC141

4. Remove the cap screw from the fixed driven face; then rotate the pulleys counterclockwise until the driven pulley faces are together.

5. With the two alignment pins installed in the V-belt housing and a new V-belt cover gasket in place, install the V-belt cover. Using the pattern shown, secure with the cap screws tightened to 8 ft-lb.

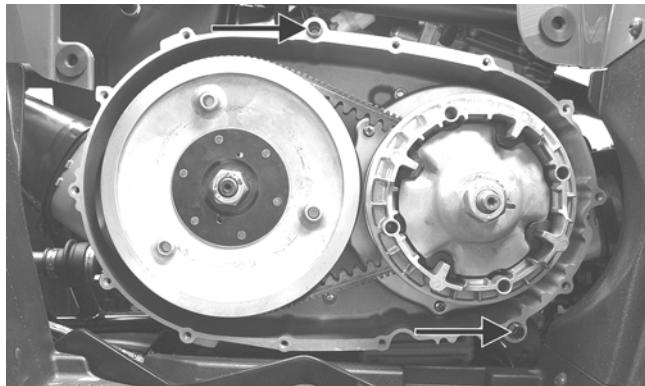

KC142A

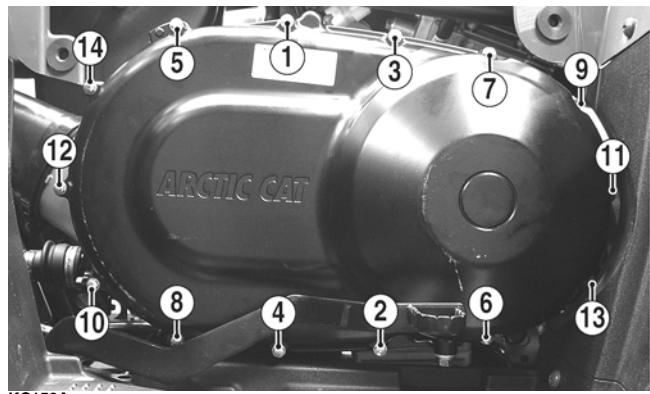

KC153A

6. Slide the auxiliary brake pedal fully onto the pivot stud engaging the master cylinder; then secure with the flat washer and cap screw and tighten to 20 ft-lb.

Steering/Body/Controls

The following steering components should be inspected periodically to ensure safe and proper operation.

- A. Handlebar grips not worn, broken, or loose.
- B. Handlebar not bent, cracked, and has equal and complete full-left and full-right turning capability.
- C. Steering post bearing assembly/bearing housing not broken, worn, or binding.
- D. Ball joints not worn, cracked, or damaged.
- E. Tie rods not bent or cracked.
- F. Knuckles not worn, cracked, or damaged.
- G. Cotter pins not damaged or missing.

The frame, welds, and racks should be checked periodically for damage, bends, cracks, deterioration, broken components, and missing components.


Front Rack/Body Panel/Fender

REMOVING


1. Remove the seat and both side panels.
2. Remove the front rack overmold from the rack; then remove the rack. Account for two nuts and four cap screws.



3. Disconnect the headlight/running light connectors located on the frame.

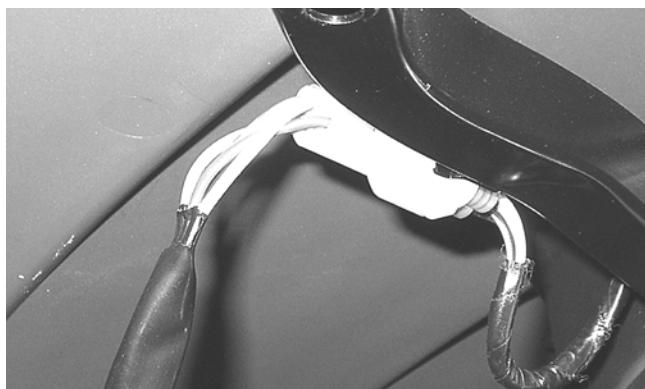


■**NOTE:** Use a small screwdriver to disengage the tab connector allowing the connector assembly to be removed from the frame.

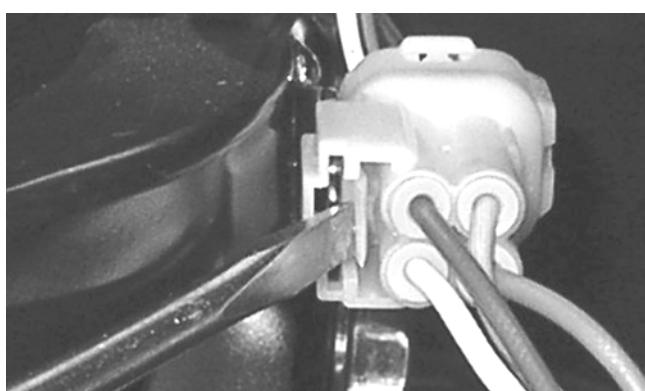

4. Remove the two push pins from the front access cover; then remove the cap screws (A). Remove the reinstallable rivets (B) and the tank cover.



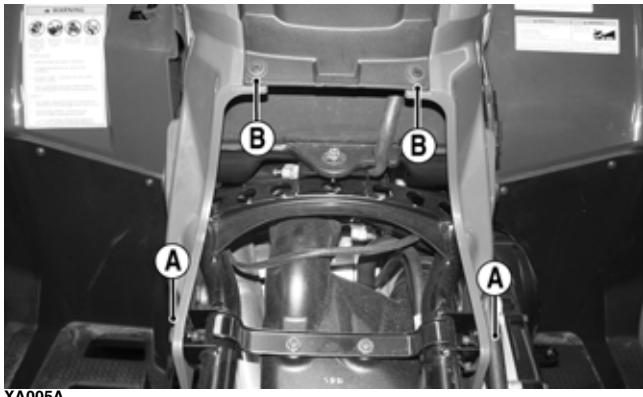

XA005A

5. Remove the shift knob; then remove the shift mechanism splash shield. Remove the shift lever via the cap screw and nut. Account for spring.




XA006

6. Remove the screws securing the front body to the front body supports.



XA007A

7. Remove the left-side and right-side footwell fasteners.

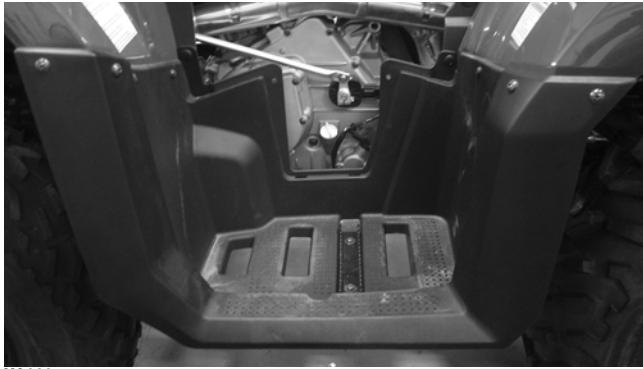

XA008


8. Remove the front body panel/fender.

CLEANING AND INSPECTING

1. Clean all components with warm soap and water.
2. Inspect fenders for cracks.
3. Inspect for any missing decals.

INSTALLING

1. Place the front body panel/fender onto the ATV. Making sure the shift spring is in place, the shift lever is properly positioned, and with the front rack in place, loosely install the front rack hardware.
2. Connect the light connectors and attach onto the frame.

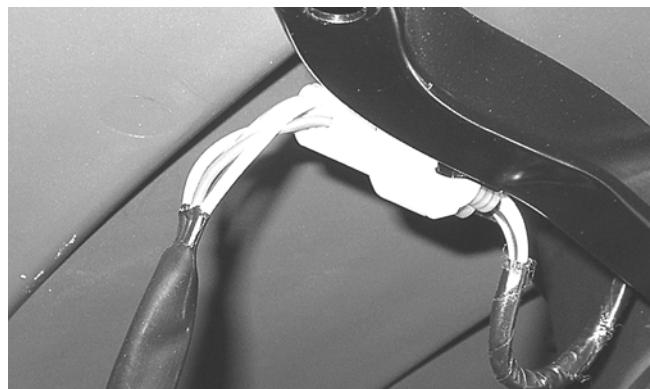

KC224

3. Install the screws securing the front body to the front body supports.



XA007A

4. Install the left-side and right-side footwell fasteners. Do not tighten at this time.
5. Place the gas tank cover and front access panel into position and secure with the existing hardware; then install the two cap screws securing the rear of the panel to the frame. Tighten all cap screws and fasteners securely.
6. Install the side panels and seat.


Rear Rack/Body Panel

REMOVING

1. Remove the machine screws securing the rear rack overmold to the rear rack; then remove the cap screws securing the rear rack to the frame and frame brackets. Remove the rack.



XA009

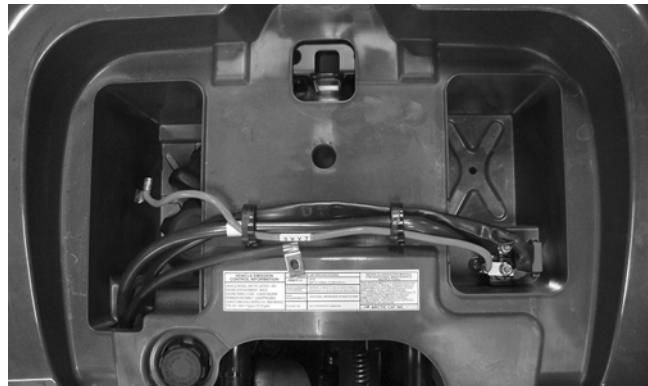


XA013




XA010

2. Remove two cap screws securing the rear body panel/fender to the side frame and the cap screws securing the rear fenders to the footwells.

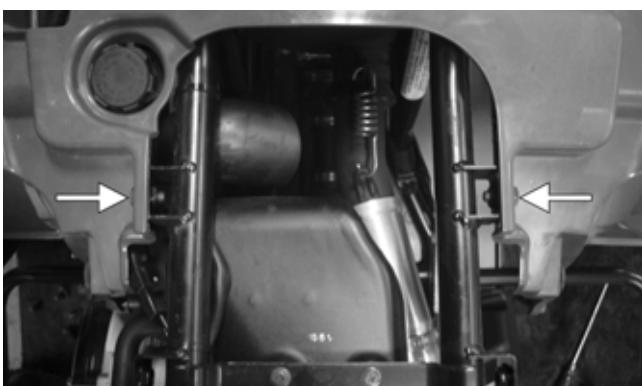

XA011A

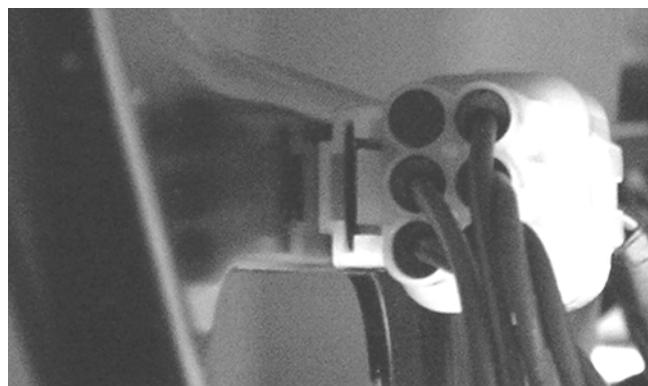

KC281



KC279



XA012


3. Disconnect the battery (negative cable first) and remove from the battery compartment; then disconnect the starter relay wires and route the wiring out of the compartment.

CLEANING AND INSPECTING

1. Clean all rear body panel components with warm soap and water.
2. Inspect side panels and rear body panel for cracks.
3. Inspect threaded areas of all mounting bosses for stripping.
4. Inspect for missing decals.

INSTALLING


1. Place the rear body panel/fender in place on the ATV; then secure with the cap screws on the side frame and the rear rack assembly. Fasten the rear rack overmold to the rear rack. Tighten all fasteners securely.

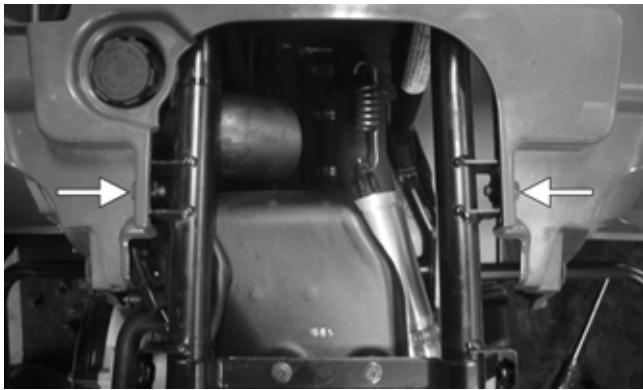

XA011A



XA015

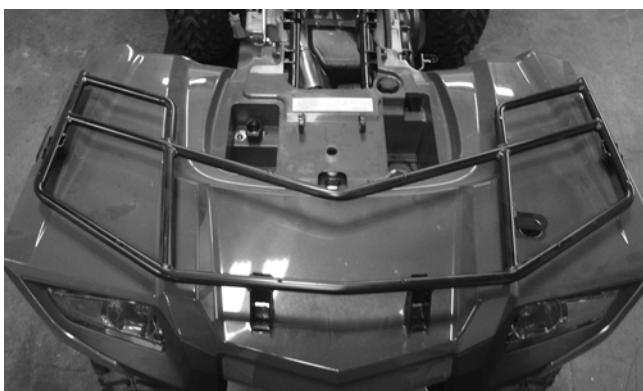

XA014

2. Connect the light connectors and secure to the frame; then install the battery and starter relay. Connect all wiring making sure to connect the positive cables first.




KC279

3. Secure the rear fenders to the footwells and tighten the nuts securely.
4. Install the seat.

Steering Post/Tie Rods


REMOVING

1. Remove the front body panel and left-side fender well.

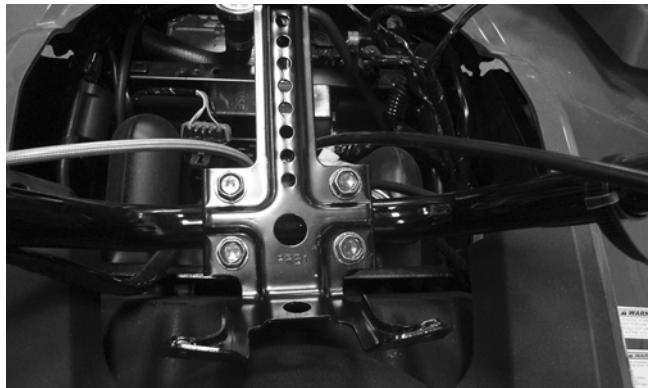


XA016

4. Remove the cap screws securing the upper steering post to the frame. Account for the housing cap, outer housing, and inner housing.

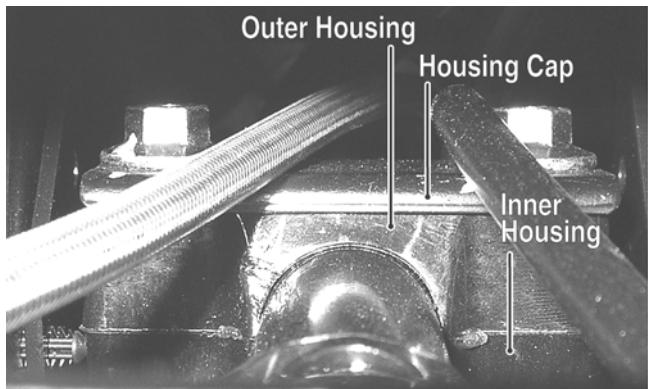

KC307A


5. Remove the cotter pins from the inner tie rod ends; then remove the nuts and disconnect the inner tie rod ends.

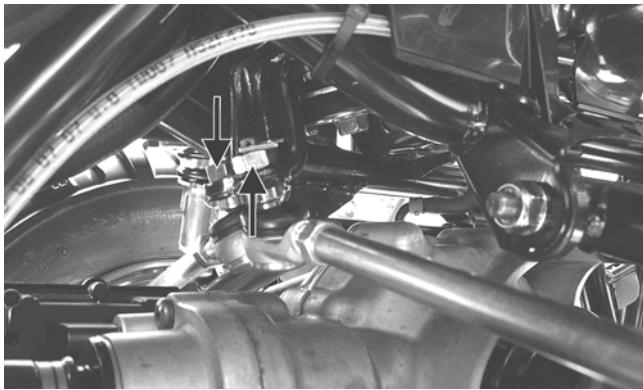

KC184A

■NOTE: If tie rods are to be completely removed, remove the outer tie rod ends from the knuckles at this time.

6. Remove the cap screw securing the lower steering post to the bearing. Account for a flat washer.

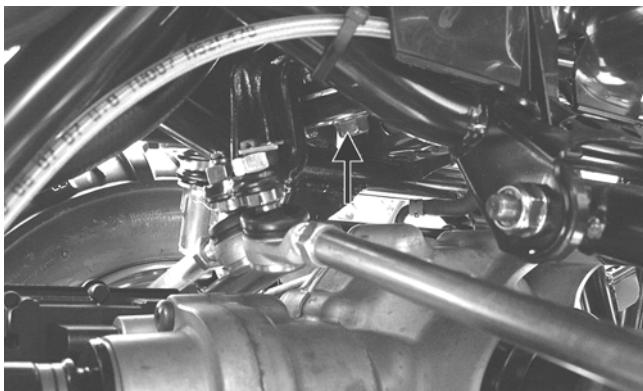

KC184B

7. Remove the steering post from the ATV.

CLEANING AND INSPECTING

1. Wash the tie rod ends in parts-cleaning solvent. Dry with compressed air. Inspect the pivot area for wear. Apply a low-temperature grease to the ends.


⚠️ WARNING

Always wear safety glasses when using compressed air.

2. Inspect the tie rods for damaged threads or wear.
3. Inspect the tie rods for cracks or unusual bends.
4. Inspect all welded areas for cracks or deterioration.
5. Inspect the steering post and steering-post brackets for cracks, bends, or wear.
6. Inspect the bearing halves, bearing caps, and bearing housings for cracks or wear.
7. Inspect the handlebar tube for cracks, wear, or unusual bends.
8. Inspect the handlebar grips for damage or wear.


INSTALLING

1. Install the steering post into the frame and secure the lower end in the bearing with a flat washer and cap screw. Tighten to 40 ft-lb.

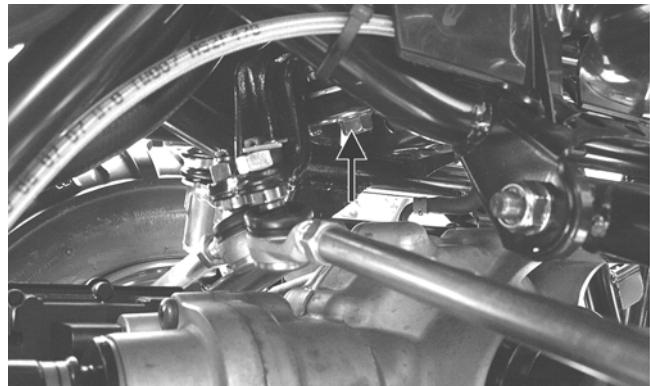


KC184B

2. Apply grease to the inner and outer housings of the upper steering post support; then with the housing cap in place, secure with the cap screws. Tighten to 20 ft-lb.

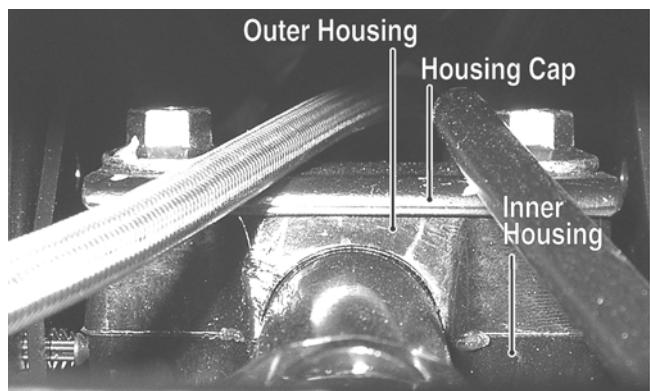


KC307A

3. Using red Loctite #271 on the threads, install the tie rod ends into the lower steering post arm and tighten to 30 ft-lb; then install new cotter pins.

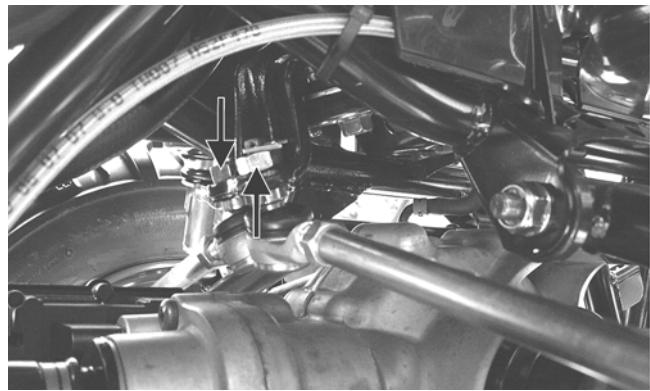

KC184A

4. Place the handlebar and caps in place on the steering post and with the handlebar correctly positioned, tighten the cap screws to 20 ft-lb.

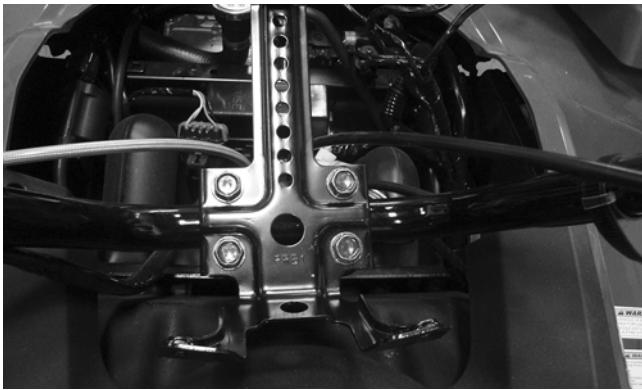

XA016

5. Install the steering post cover; then install the left-side fender well and front access panel.

LCD Gauge


REPLACING

1. Remove the two screws securing the instrument pod to the pod mounting bracket.



XA017A

2. Unplug the gauge from the wiring harness; then remove the nuts and bracket securing the gauge to the instrument pod.

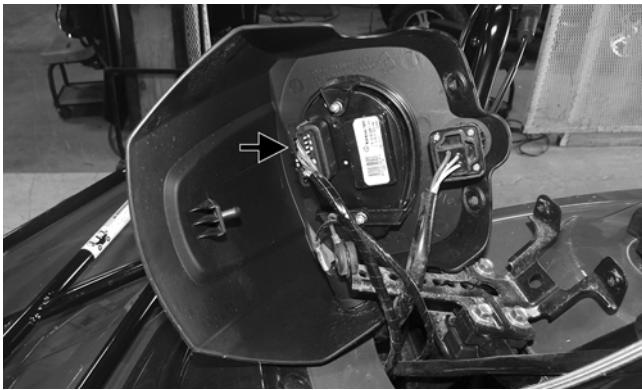

KC516A



KC516B

3. Install the new gauge and mounting bracket; then connect the wiring harness to the gauge.
4. Put the instrument pod into position making sure the rear tab is in position first; then install the screws on the front.




KC516C


Handlebar Grip

REMOVING

1. Loosen but do not remove the cap screw in the end of the handlebar; then tap lightly on the head to dislodge the handlebar plug.

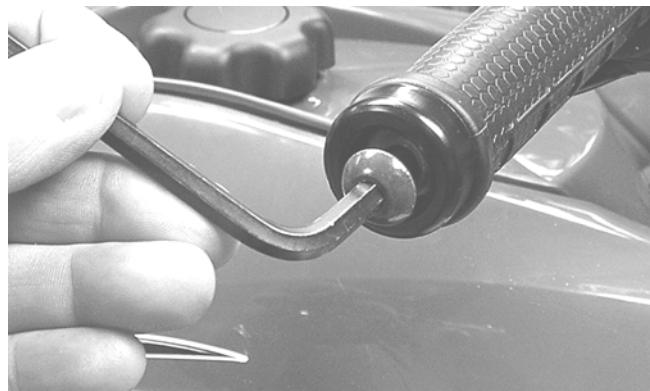

KC310

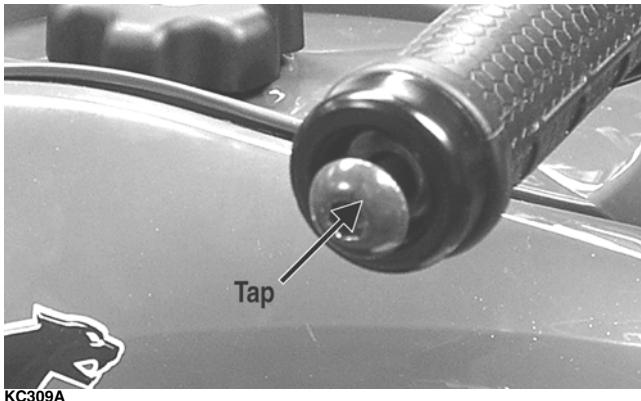

2. Grasp the end and remove the cap screw, plug, and end cap.



3. Using a sharp utility knife, split the handlebar grip from end to end and peel off the rubber.
4. Using an adhesive solvent, clean all glue residue from the handlebar.

INSTALLING

1. Apply a liberal amount of Handlebar Grip Adhesive to the inside of the new grip.
2. Slide the grip onto the handlebar until it is fully seated with the smooth part of the grip facing up.


■NOTE: A quick, firm push is required to seat the grip completely on the handlebar. Install while the glue is wet.

3. Wipe off any excess glue; then secure the grip with the plug, end cap, and cap screw.


Throttle Control

REMOVING


1. Remove the two machine screws securing the throttle control to the handlebar.
2. Slide the grommet out of the lower half of the throttle control; then remove the cable from the actuator arm.

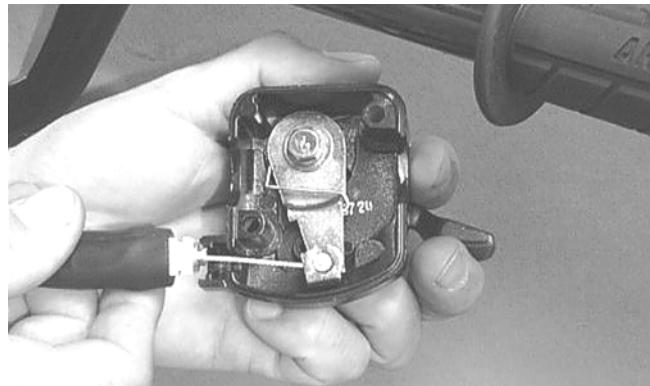

3. Remove the cap screw, lock washer, and washer securing the actuator arm to the throttle control lever.

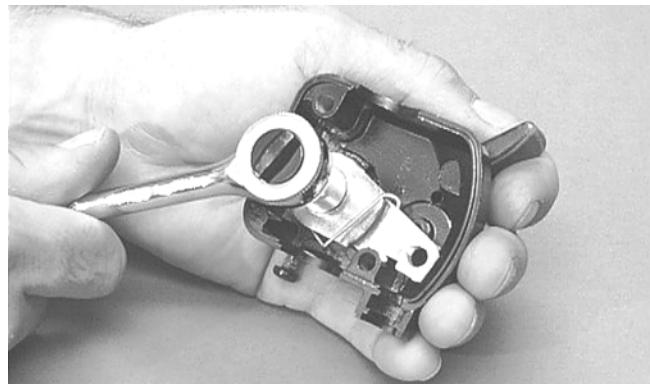


4. Remove the actuator arm and account for a bushing. Note the position of the return spring for installing purposes.

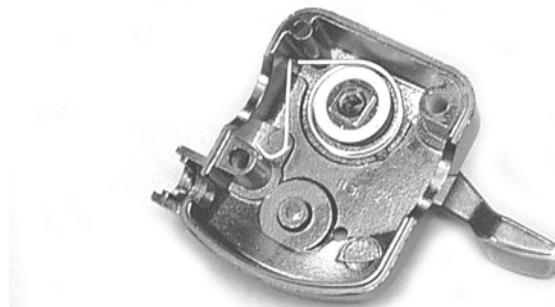


INSTALLING

1. Place the return spring into the throttle control; then place the bushing and actuator arm into position. Secure with the cap screw, lock washer, and washer.

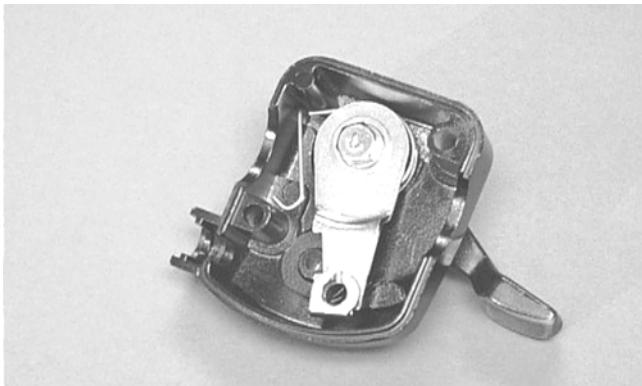

AF679D

2. Using a pair of needle-nose pliers, place the spring into position on the actuator arm.

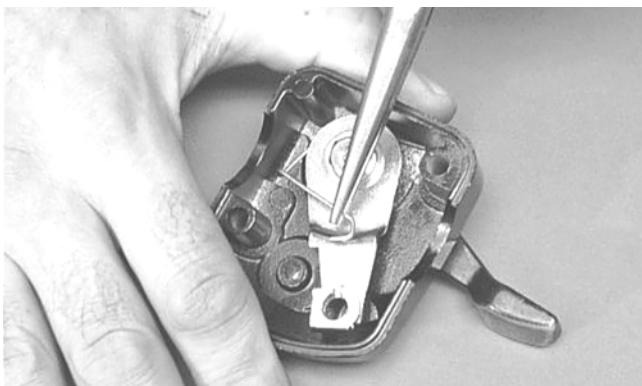

AF680D

3. Place the two halves of the throttle control onto the handlebar and secure with the two machine screws.

ADJUSTING

To adjust throttle cable free-play, see Fuel/Lubrication/Cooling.

Steering Knuckles

REMOVING AND DISASSEMBLING

1. Secure the ATV on a support stand to elevate the wheel; then remove the wheel.

⚠️ WARNING

Make sure the ATV is solidly supported on the support stand to avoid injury.

2. Remove the wheel cap from the hub; then remove the cotter pin from the nut.
3. Remove the nut securing the hub.
4. Remove the brake caliper.
5. Remove the hub assembly.
6. Remove the cotter pin from the tie rod end and remove the tie rod end from the knuckle.
7. Remove the two cap screws securing the ball joints in the knuckle.
8. Tap the ball joint end out of the knuckle; then remove the knuckle.

9. Remove the snap ring from the knuckle; then remove the bearing.



PR287A



PR288

CAUTION

Use extreme care when removing the bearing. If the bearing is allowed to fall, it will be damaged and will have to be replaced.

CLEANING AND INSPECTING

1. Clean all knuckle components.
2. Inspect the bearing for pits, gouges, rusting, or premature wear.
3. Inspect the knuckle for cracks, breaks, or porosity.
4. Inspect threads for stripping or damage.

ASSEMBLING AND INSTALLING

1. Install the bearing; then install the snap ring making sure it seats into the knuckle.



PR287A

2. Install the knuckle to the upper and lower ball joints and secure with the two cap screws. Tighten to 35 ft-lb.



KC313A

3. Install the tie rod end and secure with the nut. Tighten to 30 ft-lb; then install a new cotter pin and spread the pin.


■NOTE: During assembling, new cotter pins should be installed.

4. Apply a small amount of grease to the hub splines.
5. Install the hub assembly onto the splines of the shaft.
6. Secure the hub assembly with the nut. Tighten only until snug.



KC305

7. Secure the brake caliper to the knuckle with the "patch-lock" cap screws. Tighten to 20 ft-lb.

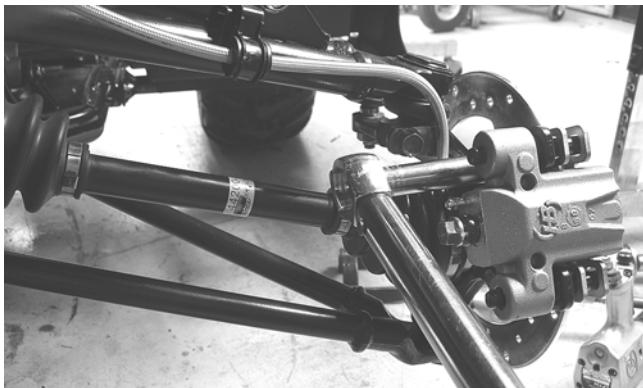

KC283

8. Pump the hand brake lever; then engage the brake lever lock.
9. Secure the hub nut (from step 6) to the shaft. Tighten to 200 ft-lb.

10. Install a new cotter pin and spread the pin to secure the nut.

11. Install the wheel; then using a crisscross pattern, tighten the wheel nuts in 20 ft-lb increments to a final torque of 40 ft-lb (steel wheel), 60 ft-lb (aluminum wheel w/black nuts), or 80 ft-lb (aluminum wheel w/chrome nuts).

12. Remove the ATV from the support stand.

Front Wheel Alignment

1. Thoroughly wash the ATV to remove excess weight (mud, etc.).

2. Refer to the specifications and ensure the tires are properly inflated to the recommended pressure.

■NOTE: Ensure the inflation pressure is correct in the tires or inaccurate measurements can occur.

3. Place the ATV in a level position taking care not to push down or lift up on the front end; then turn the handlebar to the straight ahead position.

■NOTE: When measuring and adjusting, there should be a normal operating load on the ATV (without an operator but with Arctic Cat approved accessories).

4. Measure the distance from the outside edge of each handlebar grip to equal reference points on each side.

5. Adjust the handlebar direction until the two measurements are equal; then secure the handlebar.

■NOTE: Care must be taken not to allow the handlebar to turn while securing it.

■NOTE: The front wheels do not have to be removed to adjust the tie rod. Also, care should be taken not to disturb the handlebar position.

6. Using a permanent marker of some type, mark the center of each front tire (at a height parallel to the belly panel).




AF789D

7. Measure the distance between the marks (at a height parallel to the belly panel) at the front side; then record the measurement.
8. Push the ATV forward until the marks are parallel to the belly panel on the back side; then measure the distance between the marks.

- The difference in the measurements must show 1/8-1/4 in. toe-out (the front measurement 1/8-1/4 in. more than the rear measurement).
- If the difference in the measurements is not within specifications, adjust both tie rods equally until within specifications.

■NOTE: Prior to locking the jam nuts, make sure the ball joints are at the center of their normal range of motion and at the correct angle.

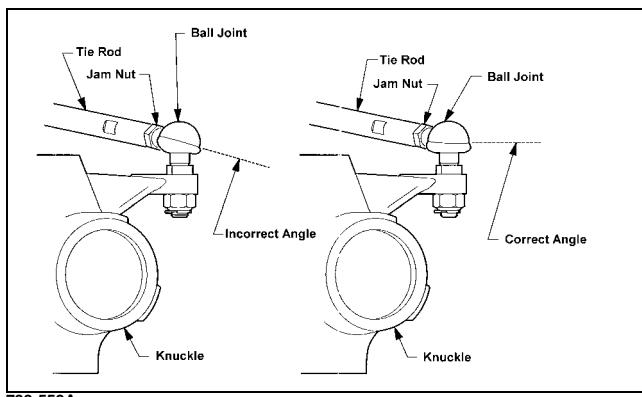


733-559A

Exhaust System

REMOVING MUFFLER

- Remove the two exhaust springs at the muffler/exhaust pipe juncture.

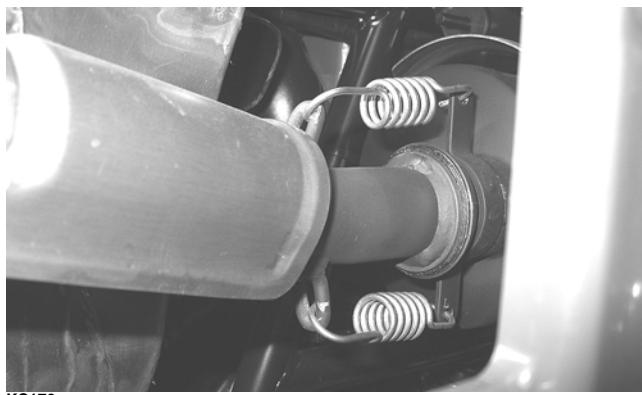

- Slide the muffler rearward to clear the mounting lugs and remove the muffler. Account for a grafoil seal.

INSPECTING MUFFLER

- Inspect muffler externally for cracks, holes, and dents.
- Inspect the muffler internally by shaking the muffler back and forth and listening for rattles or loose debris inside the muffler.

■NOTE: For additional details on cleaning the muffler/spark arrester, see Periodic Maintenance/Tune-Up.

INSTALLING MUFFLER

- Using a new grafoil seal, place the muffler into position engaging the mounting lugs into the grommets; then slide the muffler forward.
- Install the two exhaust springs.

Seat

REMOVING/INSTALLING

- To remove the seat, lift up on the latch release (located at the rear of the seat). Raise the rear of the seat and slide it rearward.
- To lock the seat into position, slide the front of the seat into the seat retainers and push down firmly on the rear of the seat. The seat should automatically lock into position.

Lights

Rotate the ignition switch to the lights position; the headlights and taillights should illuminate. Test the brake-lights by compressing the brake lever. The brakelights should illuminate.

HEADLIGHTS


■NOTE: The bulb portion of a headlight is fragile. HANDLE WITH CARE. When replacing a headlight bulb, do not touch the glass portion of the bulb. If the glass is touched, it must be cleaned with a dry cloth before installing. Skin oil residue on the bulb will shorten the life of the bulb.

WARNING

Do not attempt to remove a bulb when it is hot. Severe burns may result.

To replace the headlight bulb, use the following procedure.

- Remove the protective rubber boot from the rear of the headlight housing; then remove the wiring harness connector from the back of the headlight bulb.

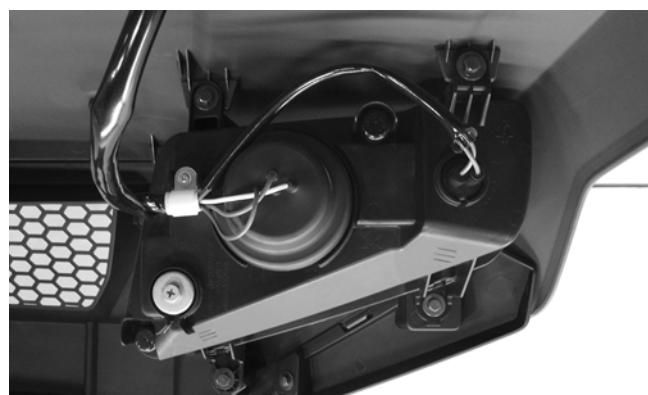

XA018



KC162

2. Press in and release the spring retainer and pull rearward clear of the bulb assembly.




KC163A

3. Remove the headlight bulb assembly from the headlight housing.
4. Install the new headlight bulb into the headlight housing being careful not to get fingerprints or other contaminates on the glass; then secure with the spring.



KC163B

5. Connect the wiring harness connector to the bulb; then install the protective rubber boot making sure it seals completely on the headlight harness.

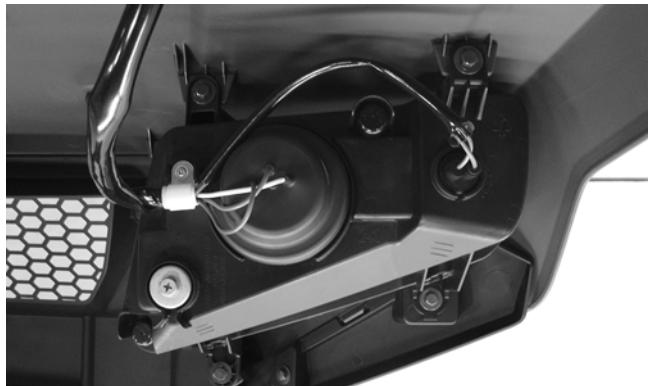

XA018

TAILLIGHTS-BRAKELIGHTS

To replace a taillight-brakelight bulb, use the following procedure.

1. Remove the protective rubber boot; then turn the bulb socket assembly counterclockwise and remove from the housing.




XA019

2. Press in and turn the bulb counterclockwise to remove. Press in and turn clockwise to install the bulb.
3. Insert the bulb socket assembly into the housing and turn it clockwise to secure. Install the rubber boot.


RUNNING LIGHTS

The running lights are located outboard of the headlights. To replace the bulbs, use the following procedure.

1. Rotate the bulb socket counterclockwise; then pull the bulb from the socket.

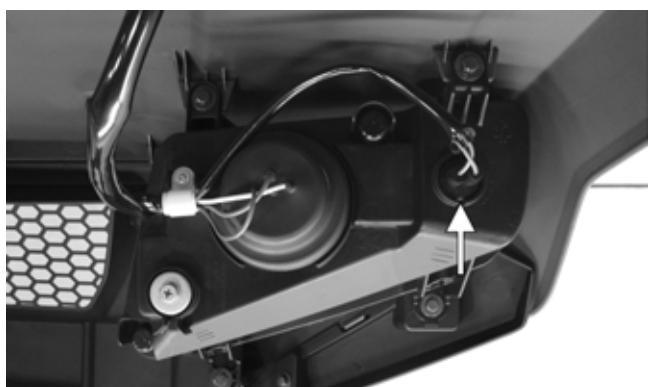

XA018B

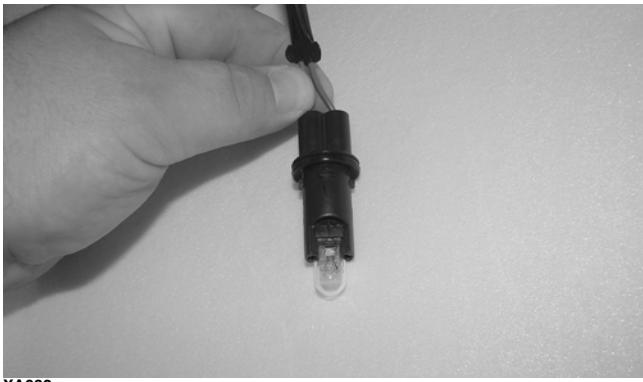


XA032

2. Push a new bulb into the socket; then place the socket into the light housing and turn clockwise to secure.

CHECKING/ADJUSTING HEADLIGHT AIM

The headlights can be adjusted vertically and horizontally. The geometric center of the HIGH beam light zone is to be used for vertical and horizontal aiming.


1. Position the ATV on a level floor so the headlights are approximately 6.1 m (20 ft) from an aiming surface (wall or similar aiming surface).

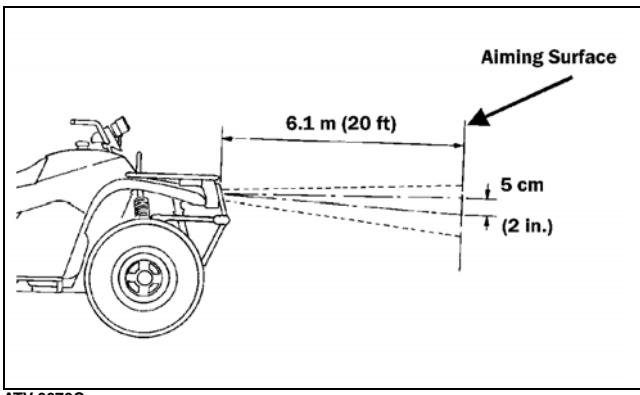

ATV-0070C

■NOTE: There should be an average operating load on the ATV when adjusting the headlight aim.

2. Measure the distance from the floor to the mid-point of each headlight.
3. Using the measurements obtained in step 2, make horizontal marks on the aiming surface.
4. Make vertical marks which intersect the horizontal marks on the aiming surface directly in front of the headlights.
5. Switch on the lights. Make sure the HIGH beam is on. DO NOT USE LOW BEAM.
6. Observe each headlight beam aim. Proper aim is when the most intense beam is centered on the vertical mark 5 cm (2 in.) below the horizontal mark on the aiming surface.
7. Adjust each headlight by turning the adjuster screw clockwise to raise the beam or counterclockwise to lower the beam.

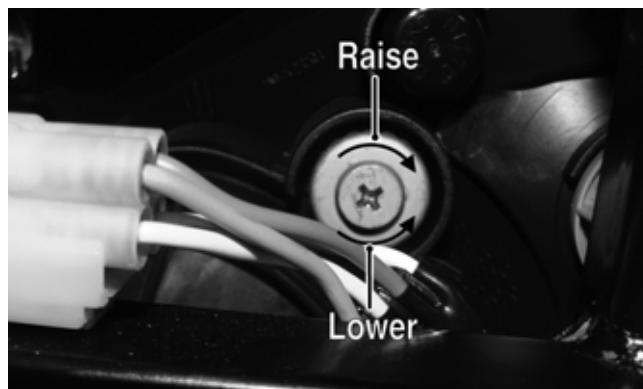

KC406A

Troubleshooting

| Problem: Handling too heavy or stiff | |
|---|---|
| Condition | Remedy |
| 1. Front wheel alignment incorrect 2. Lubrication inadequate 3. Tire inflation pressure low 4. Tie rod ends seizing 5. Linkage connections seizing | 1. Adjust alignment 2. Lubricate steering shaft 3. Adjust pressure 4. Replace tie rod ends 5. Repair - replace connections |
| Problem: Steering oscillation | |
| Condition | Remedy |
| 1. Tires inflated unequally 2. Wheel(s) bent 3. Wheel lug nut(s)/wheel stud(s) loose - missing 4. Wheel hub bearing worn - damaged 5. Tie rod ends worn - loose 6. Tires defective - incorrect 7. A-arm bushings damaged 8. Bolts - nuts (frame) loose | 1. Adjust pressure 2. Replace wheel(s) 3. Tighten - replace lug nuts/wheel studs 4. Replace bearing 5. Replace - tighten tie rod ends 6. Replace tires 7. Replace bushings 8. Tighten bolts - nuts |
| Problem: Steering pulling to one side | |
| Condition | Remedy |
| 1. Tires inflated unequally 2. Front wheel alignment incorrect 3. Wheel hub bearings worn - broken 4. Frame distorted 5. Shock absorber defective | 1. Adjust pressure 2. Adjust alignment 3. Replace bearings 4. Repair - replace frame 5. Replace shock absorber |
| Problem: Tire wear rapid or uneven | |
| Condition | Remedy |
| 1. Wheel hub bearings worn - loose 2. Front wheel alignment incorrect 3. Tire inflation pressure incorrect | 1. Replace bearings 2. Adjust alignment 3. Adjust pressure |
| Problem: Steering noise | |
| Condition | Remedy |
| 1. Cap screws - nuts loose 2. Wheel hub bearings broken - damaged 3. Lubrication inadequate | 1. Tighten cap screws - nuts 2. Replace bearings 3. Lubricate appropriate components |

Engine/Transmission

This section has been organized into sub-sections which show a progression for the complete servicing of the Arctic Cat ATV engine/transmission.

To service the center crankcase halves, the engine/transmission must be removed from the frame. To service top-side, left-side, and right-side components, the engine/transmission does not have to be removed from the frame.

■NOTE: Arctic Cat recommends the use of new gaskets, lock nuts, and seals and lubricating all internal components when servicing the engine/transmission.

■NOTE: A new ATV and an overhauled ATV engine require a “break-in” period. The first 10 hours (or 200 miles) are most critical to the life of this ATV. Proper operation during this break-in period will help assure maximum life and performance from the ATV. Instruct the customer to follow the proper break-in procedure as described in the Operators Manual.

SPECIAL TOOLS

A number of special tools must be available to the technician when performing service procedures in this section. Refer to the current Special Tools Catalog for the appropriate tool description.

■NOTE: When indicated for use, each special tool will be identified by its specific name, as shown in the chart below, and capitalized.

| Description | p/n |
|--|----------|
| Crankcase Separator/Crankshaft Remover | 0444-152 |
| Magneto Rotor Remover Set | 0444-254 |
| Oil Filter Wrench | 0644-389 |
| Piston Pin Puller | 0644-328 |
| Spanner Wrench | 0444-251 |
| Surface Plate | 0644-016 |
| V Blocks | 0644-535 |

■NOTE: Special tools are available from the Arctic Cat Service Department.

Troubleshooting

| Problem: Engine will not start or is hard to start (Compression too low) | |
|---|--|
| Condition | Remedy |
| 1. Valve clearance out of adjustment 2. Valve guides worn 3. Valve timing incorrect 4. Piston rings worn excessively 5. Cylinder bore worn 6. Spark plug seating poorly 7. Starter motor cranks too slowly - does not turn | 1. Adjust clearance 2. Replace cylinder head 3. Correct valve timing - check chain, sprockets, and cam chain tensioner 4. Replace rings 5. Replace cylinder 6. Tighten plug 7. Check - replace starter motor |
| Problem: Engine will not start or is hard to start (No spark) | |
| Condition | Remedy |
| 1. Spark plug fouled 2. Spark plug wet 3. Magneto defective 4. CDI unit defective 5. Ignition coil defective 6. High-tension lead open - shorted | 1. Clean - replace plug 2. Clean - dry plug 3. Replace stator coil 4. Replace CDI unit 5. Replace Ignition coil 6. Replace high tension lead |
| Problem: Engine will not start or is hard to start (No fuel reaching the carburetor) | |
| Condition | Remedy |
| 1. Gas tank vent hose obstructed 2. Fuel hose obstructed 3. Fuel screens obstructed 4. Carburetor float valve defective | 1. Clean vent hose 2. Clean - replace hose 3. Clean - replace inlet screen - valve screen 4. Replace valve |
| Problem: Engine stalls easily | |
| Condition | Remedy |
| 1. Spark plug fouled 2. Magneto defective 3. CDI unit defective 4. Valve clearance out of adjustment 5. Carburetor jets obstructed | 1. Clean plug 2. Replace stator coil 3. Replace CDI unit 4. Adjust clearance 5. Clean jets |
| Problem: Engine noisy (Excessive valve chatter) | |
| Condition | Remedy |
| 1. Valve clearance excessive 2. Valve spring(s) weak - broken 3. Rocker arm - rocker arm shaft worn 4. Camshaft worn 5. Valve tappets worn | 1. Adjust clearance 2. Replace spring(s) 3. Replace arm - shaft 4. Replace camshaft 5. Replace tappets |
| Problem: Engine noisy (Noise seems to come from piston) | |
| Condition | Remedy |
| 1. Piston - cylinder worn 2. Combustion chamber carbon buildup 3. Piston pin bore worn 4. Piston pin worn 5. Piston rings - ring groove(s) worn | 1. Replace - service piston - cylinder 2. Clean chamber 3. Replace piston 4. Replace piston pin 5. Replace rings - piston |
| Problem: Engine noisy (Noise seems to come from timing chain) | |
| Condition | Remedy |
| 1. Chain stretched 2. Sprockets worn 3. Tension adjuster malfunctioning | 1. Replace chain 2. Replace sprockets 3. Repair - replace adjuster |
| Problem: Engine noisy (Noise seems to come from crankshaft) | |
| Condition | Remedy |
| 1. Bearing worn - burned 2. Lower rod-end bearing worn - burned 3. Connecting rod side clearance too large | 1. Replace bearing 2. Replace crankshaft 3. Replace crankshaft |
| Problem: Engine noisy (Noise seems to come from transmission) | |
| Condition | Remedy |
| 1. Gears worn - chipped 2. Splines worn 3. Primary gears worn - chipped 4. Bearings worn 5. Bushing worn | 1. Replace gears 2. Replace shaft(s) 3. Replace gears 4. Replace bearings 5. Replace bushing |

| Problem: Engine noisy (Noise seems to come from secondary bevel gear and final driven shaft) | |
|---|--|
| Condition | Remedy |
| 1. Drive - driven bevel gears damaged - worn 2. Backlash excessive 3. Tooth contact improper 4. Bearing damaged 5. Gears worn - chipped 6. Splines worn | 1. Replace gears 2. Adjust backlash 3. Adjust contact 4. Replace bearing 5. Replace gears 6. Replace shaft(s) |
| Problem: Engine idles poorly | |
| Condition | Remedy |
| 1. Valve clearance out of adjustment 2. Valve seating poor 3. Valve guides defective 4. Rocker arms - arm shaft worn 5. Magneto defective 6. CDI unit defective 7. Spark plug fouled - gap too wide 8. Ignition coil defective 9. Float out of adjustment 10. Jets obstructed 11. Pilot screw setting improper | 1. Adjust clearance 2. Replace - service seats - valves 3. Replace cylinder head 4. Replace arms - shafts 5. Replace stator coil 6. Replace CDI unit 7. Adjust gap - replace plug 8. Replace ignition coil 9. Adjust float height 10. Clean jets 11. Adjust pilot screw |
| Problem: Engine runs poorly at high speed | |
| Condition | Remedy |
| 1. High RPM "cut out" against RPM limiter 2. Valve springs weak 3. Valve timing incorrect 4. Cam - rocker arms - tappets worn 5. Spark plug gap too narrow 6. Ignition coil defective 7. Float level too low 8. Air cleaner element obstructed 9. Fuel hose obstructed | 1. Shift into higher gear - decrease speed 2. Replace springs 3. Correct timing - check chain, sprockets, and cam chain tensioner 4. Replace cam - arms - tappets 5. Adjust gap 6. Replace ignition coil 7. Adjust float height 8. Clean element 9. Clean or replace hose |
| Problem: Exhaust smoke dirty or heavy | |
| Condition | Remedy |
| 1. Oil (in the engine) overfilled - contaminated 2. Piston rings - cylinder worn 3. Valve guides worn 4. Cylinder wall scored - scuffed 5. Valve stems worn 6. Stem seals defective | 1. Drain excess oil - replace oil 2. Replace - service rings - cylinder 3. Replace cylinder head 4. Replace - service cylinder 5. Replace valves 6. Replace seals |
| Problem: Engine lacks power | |
| Condition | Remedy |
| 1. Valve clearance incorrect 2. Valve springs weak 3. Valve timing incorrect 4. Piston ring(s) - cylinder worn 5. Valve seating poor 6. Spark plug fouled 7. Rocker arms - shafts worn 8. Spark plug gap incorrect 9. Air cleaner element obstructed 10. Oil (in the engine) overfilled - contaminated 11. Intake manifold leaking air 12. Cam chain worn 13. Carburetor jets obstructed 14. Float level out of adjustment | 1. Adjust clearance 2. Replace springs 3. Re-time valve gear 4. Replace - service rings - cylinder 5. Replace cylinder head/valves 6. Clean - replace plug 7. Replace arms - shafts 8. Adjust gap - replace plug 9. Clean element 10. Drain excess oil - change oil 11. Tighten - replace manifold 12. Replace cam chain 13. Clean jets 14. Adjust float height |
| Problem: Engine overheats | |
| Condition | Remedy |
| 1. Carbon deposit (piston crown) excessive 2. Oil low 3. Octane low - gasoline poor 4. Oil pump defective 5. Oil circuit obstructed 6. Intake manifold leaking air 7. Fan malfunctioning 8. Fan switch malfunctioning 9. Gasoline level (in float chamber) too low | 1. Clean piston 2. Add oil 3. Drain - replace gasoline 4. Replace pump 5. Clean circuit 6. Tighten - replace manifold 7. Check fan fuse - replace fan 8. Replace fan switch 9. Adjust float height |

Removing Engine/Transmission

Many service procedures can be performed without removing the engine/transmission from the frame. Closely observe the note introducing each sub-section for this important information.

AT THIS POINT

If the technician's objective is to service Top-Side Components, Left-Side Components, or Right-Side Components, the engine/transmission does not have to be removed from the frame.

AT THIS POINT



If the technician's objective is to service/replace left-side cover oil seals or the oil strainer (from beneath the engine/transmission), the engine/transmission does not have to be removed from the frame.

Secure the ATV on a support stand to elevate the wheels.


WARNING

Make sure the ATV is solidly supported on the support stand to avoid injury.


1. Remove the front rack, left and right footwells, and front body panel (see Steering/Body/Controls - Front Rack/Body Panel/Fender); then disconnect the negative battery cable from the battery.
2. Remove the heat shield; then remove the gas tank (see Fuel/Lubrication/Cooling - Gas Tank).
3. Remove the oil fittings from the engine and account for two O-rings; then disconnect the oil temperature connector and cooling fan connector.

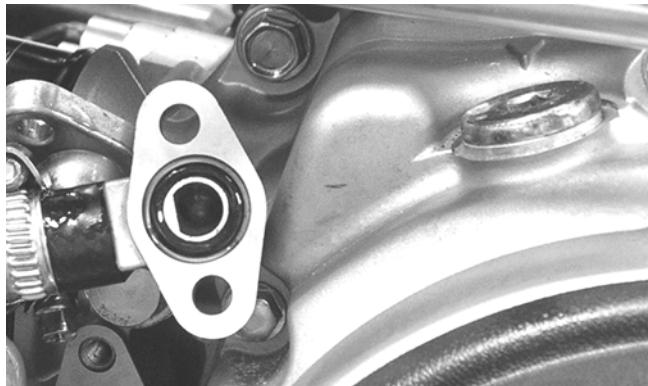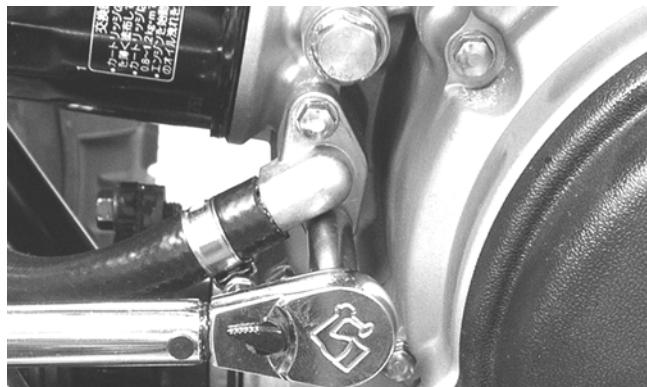


4. Disconnect the speedometer sensor; then remove the E-clip securing the shift rod to the shift arm and disconnect the shift rod. Account for a bushing and flat washer.

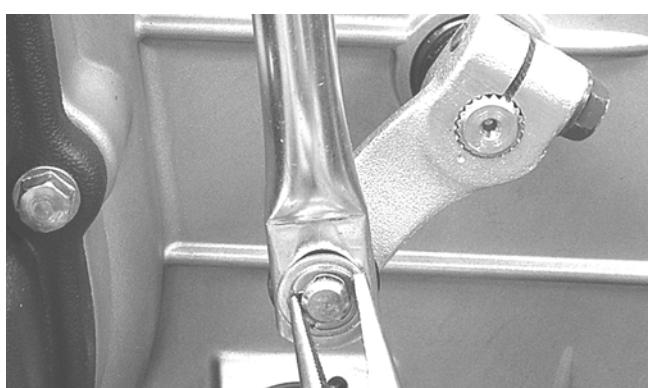


5. Remove the inlet air duct, air filter housing, and air silencer duct; then remove the carburetor and set aside leaving the throttle cable attached.

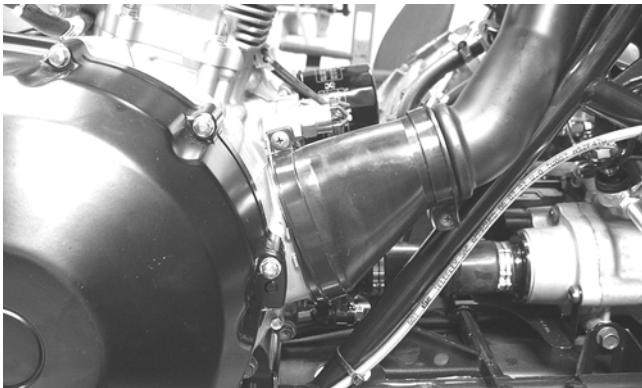

KC235

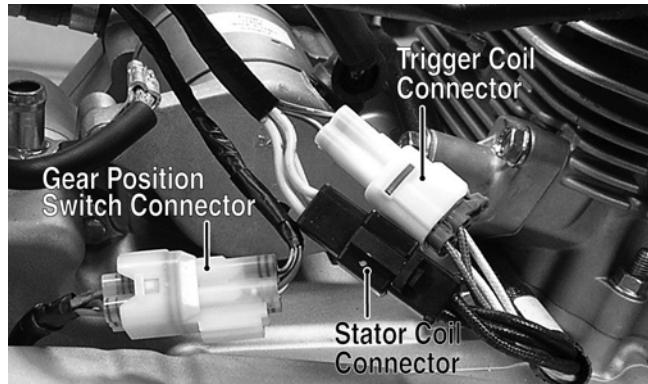


KC228C

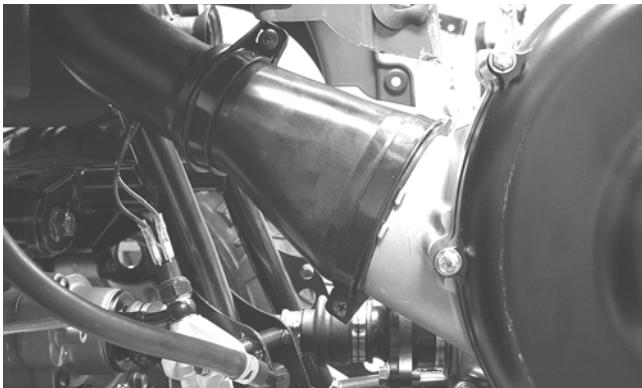


KC236

6. Remove the cap screws securing the exhaust pipe to the cylinder head; then disconnect the exhaust pipe to muffler springs and remove the exhaust pipe. Account for a grafoil seal and seal ring.

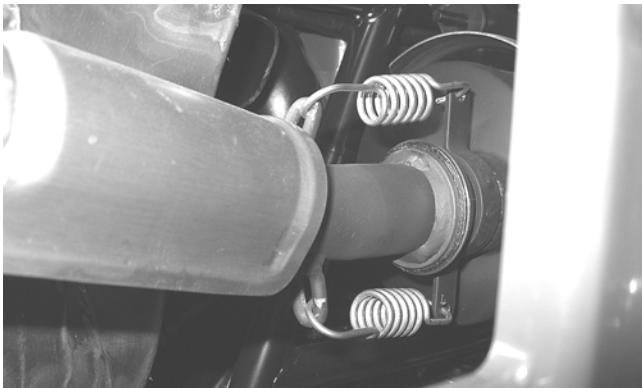


KC170

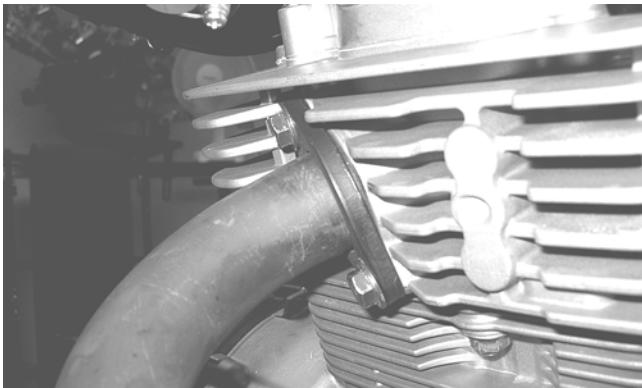


KC238

7. Disconnect the gear position switch, starter cable, and engine ground cable; then disconnect the trigger coil and stator coil connectors.

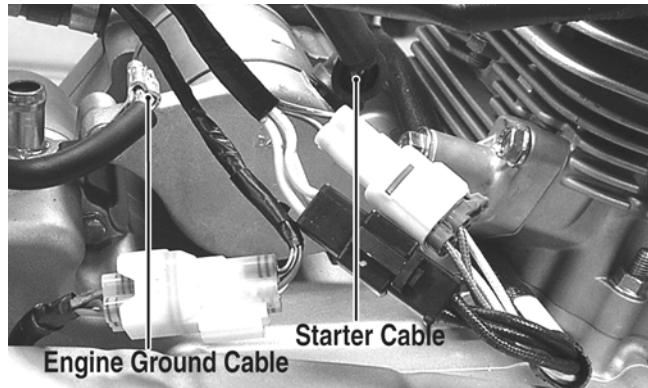


KC228B

8. Remove the front and rear V-belt cooling boots from the V-belt housing.
9. Remove the cap screws from the front and rear output flanges; then remove the front and rear engine mounting through-bolts.

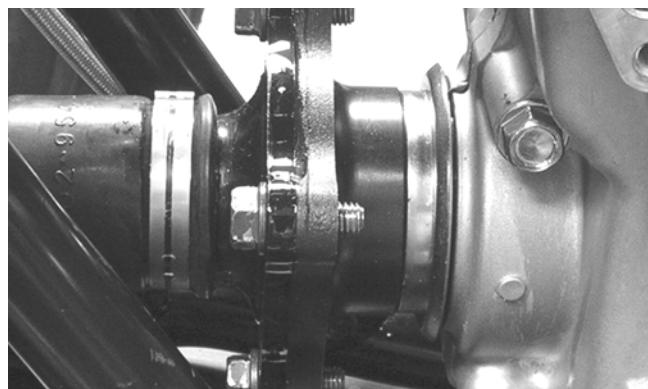


KC242

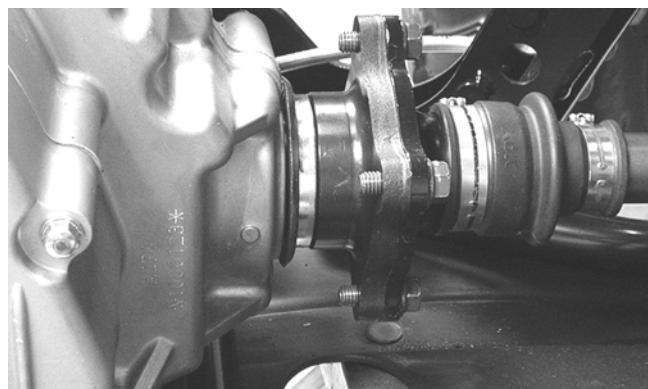


KC243

10. Lift the rear of the engine/transmission and swing to the right; then tilt the assembly sufficiently to remove through the right-side frame opening.

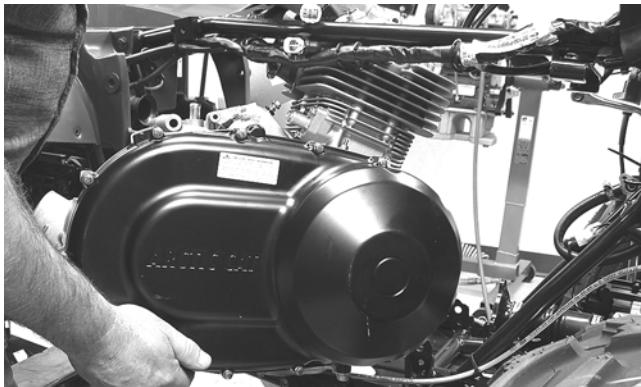


KC216

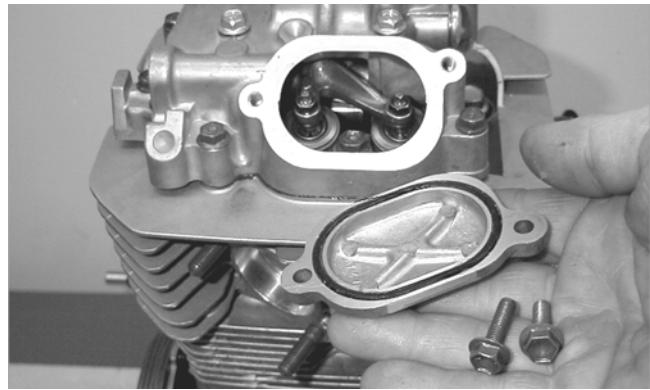


MD1264

■**NOTE:** Keep the mounting hardware with the covers for assembly purposes.

2. Remove the cylinder head cover cap screws. Note the rubber washers on the four top-side cap screws; remove the cylinder head cover. Note the orientation of the cylinder head plug and remove it. Note the location of the two alignment pins.

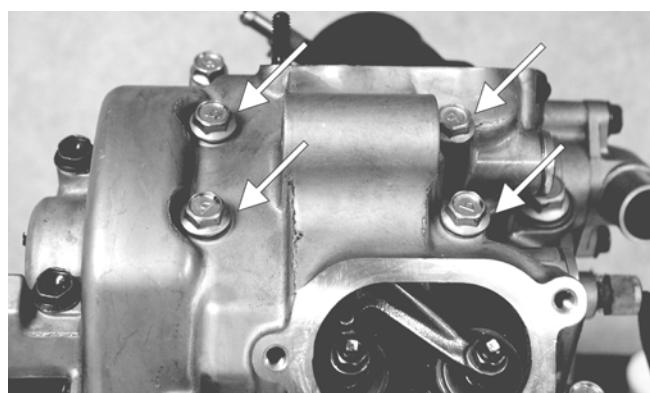

CF007A

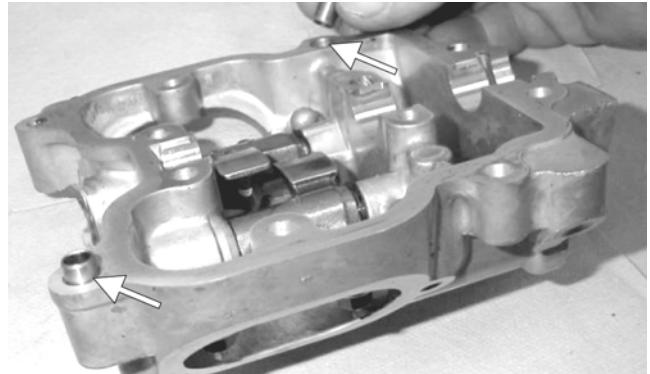

MD1354A

3. Remove the cam chain tensioner. Account for a gasket.

Top-Side Components

■**NOTE:** For efficiency, it is preferable to remove and disassemble only those components which need to be addressed and to service only those components. The technician should use discretion and sound judgment.

☞ AT THIS POINT

To service any one specific component, only limited disassembly of components may be necessary. Note the AT THIS POINT information in each sub-section.

■**NOTE:** The engine/transmission does not have to be removed from the frame for this procedure.

Removing Top-Side Components


A. Cylinder Head Cover/Rocker Arms

B. Cylinder Head/Camshaft

■**NOTE:** Remove the spark plug, timing inspection plug, and outer magneto cover; then using an appropriate wrench, rotate the crankshaft to top-dead-center of the compression stroke.

■**NOTE:** Arctic Cat recommends the use of new gaskets, lock nuts, and seals and lubricating all internal components when servicing the engine/transmission.



1. Remove the cap screws securing the two valve inspection covers. Remove the two covers. Account for the O-rings.

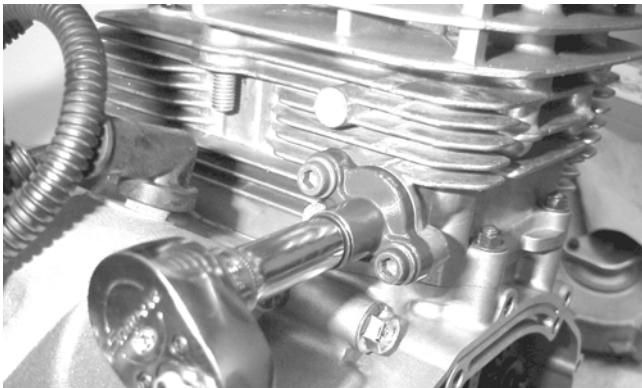


■**NOTE:** Remove the cam chain tensioner pivot cap screw and washer.



4. Bend the washer tabs and remove the two cap screws securing the sprocket to the camshaft.

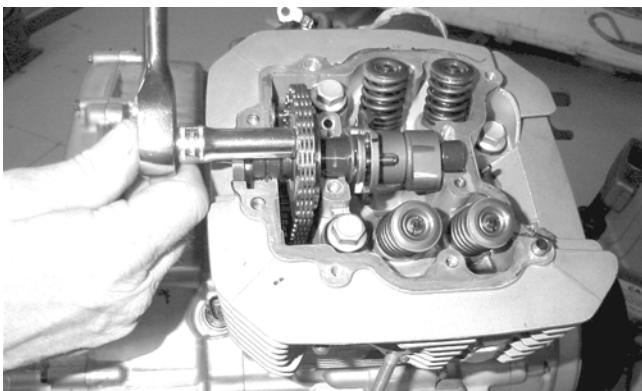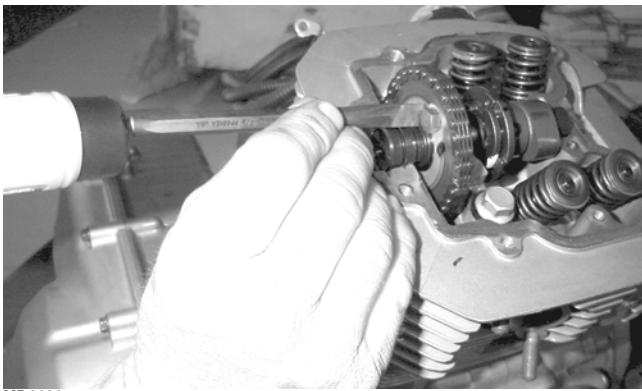


5. Using an awl, rotate the C-ring in its groove until it is out of the cylinder head; then remove the C-ring.

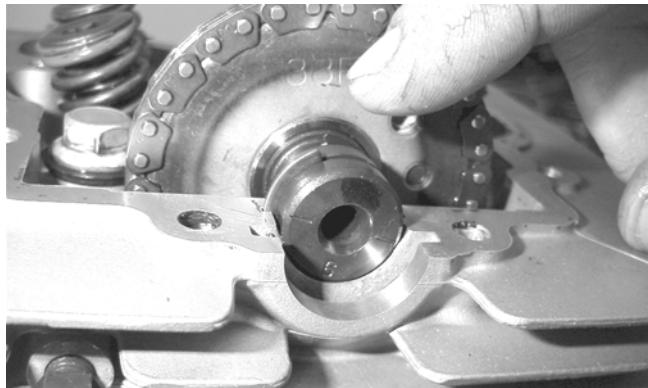


■**NOTE:** Care should be taken not to drop the C-ring down into the crankcase.

6. Noting the timing marks for installing purposes, drop the sprocket off the camshaft. While holding the cam chain, slide the sprocket and camshaft out of the cylinder head. Account for an alignment pin.

■**NOTE:** Loop the chain over the cylinder and secure it to keep it from falling into the crankcase.

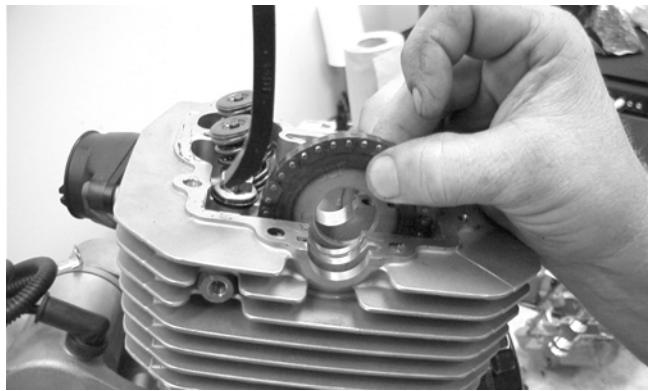


7. Remove the cam chain tensioner by lifting it from the chain cavity; then remove the two lower nuts securing the cylinder head to the cylinder, one in front and one in rear.

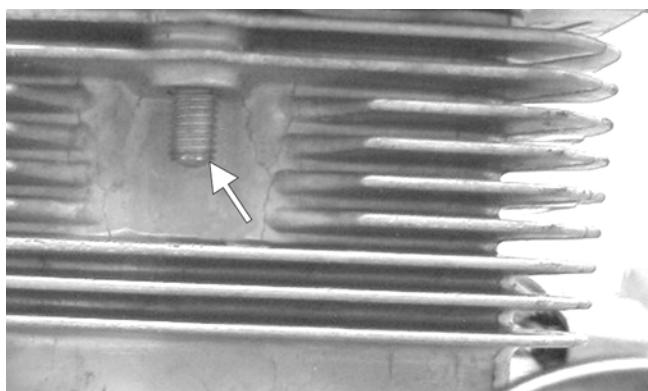

8. Remove the four cylinder head cap screws and washers. Note that the two cap screws on the right side of the cylinder head nearest the cam sprocket are longer than the two cap screws on the left (spark plug) side.

9. Remove the cylinder head from the cylinder, remove the gasket, and account for two alignment pins.

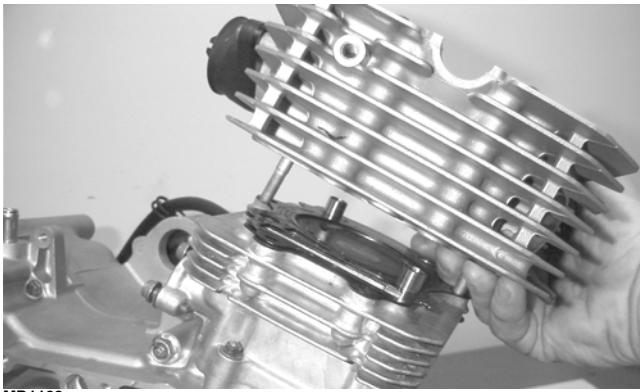

AT THIS POINT
To service valves and cylinder head, see Servicing Top-Side Components sub-section.

10. Remove the cam chain guide.

AT THIS POINT
To inspect cam chain guide, see Servicing Top-Side Components sub-section.




C. Cylinder


D. Piston

■NOTE: Steps 1-10 in the preceding sub-section must precede this procedure.

11. Remove the two nuts securing the right side of the cylinder to the right-side crankcase half.

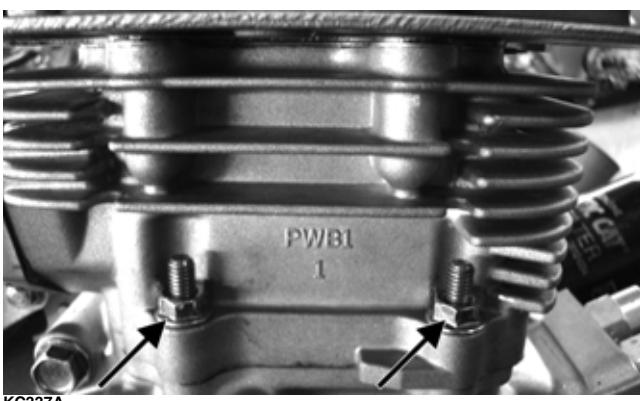

12. Lift the cylinder off the crankcase taking care not to allow the piston to drop against the crankcase. Account for the gasket and two alignment pins.

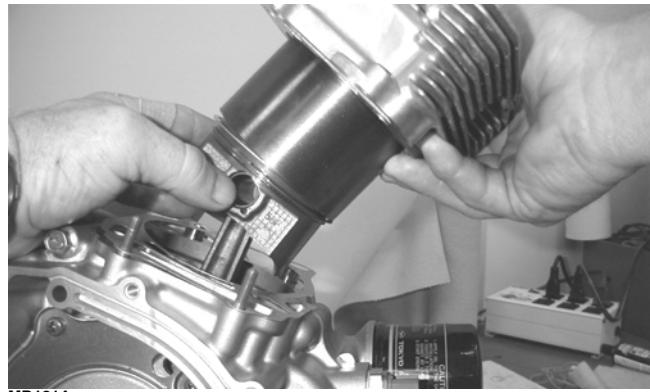


AT THIS POINT
To service cylinder, see Servicing Top-Side Components sub-section.

CAUTION


When removing the cylinder, be sure to support the piston to prevent damage to the crankcase and piston.

13. Using an awl, remove the piston-pin circlips. Take care not to drop them into the crankcase.

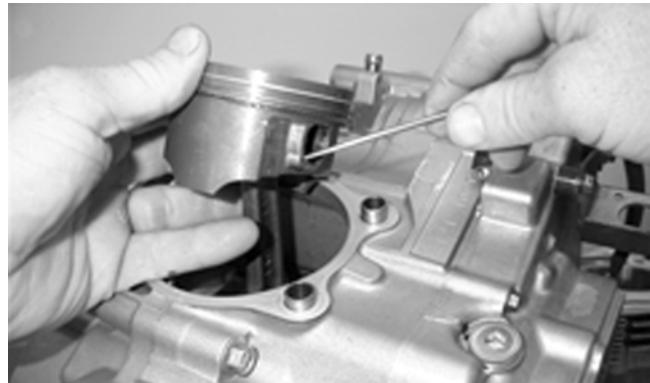

14. Using Piston Pin Puller, remove the piston pin. Account for the opposite-side circlip. Remove the piston.

■NOTE: It is advisable to remove the opposite-side circlip prior to using the puller.

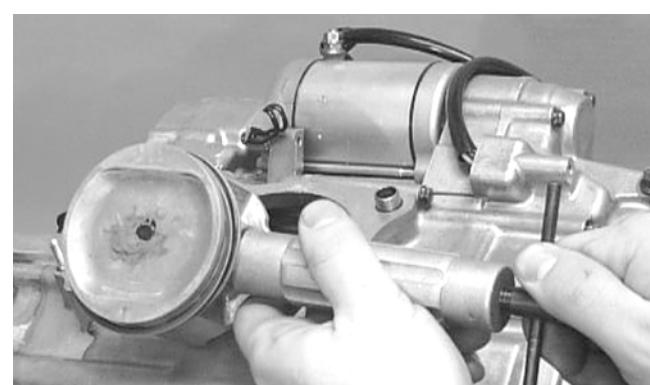

■NOTE: Support the connecting rod with rubber bands to avoid damaging the rod or install a connecting rod holder.

CAUTION

Do not allow the connecting rod to go down inside the crankcase. If the rod is down inside the crankcase and the crankshaft is rotated, severe damage will result.

☞ AT THIS POINT

To service piston, see Servicing Top-Side Components sub-section.

☞ AT THIS POINT

To service center crankcase components only, proceed to Removing Left-Side Components.

Servicing Top-Side Components

VALVE ASSEMBLY

When servicing valve assembly, inspect valve seats, valve stems, valve faces, and valve stem ends for pits, burn marks, or other signs of abnormal wear.

■NOTE: Whenever a valve is out of tolerance, it must be replaced.


Cleaning/Inspecting Cylinder Head Cover

■NOTE: If the cylinder head cover cannot be trued, the cylinder head assembly must be replaced.

1. Wash the cylinder head cover in parts-cleaning solvent.
2. Place the cylinder head cover on the Surface Plate covered with #400 grit wet-or-dry sandpaper. Using light pressure, move the cylinder head cover in a figure eight motion. Inspect the sealing surface for any indication of high spots. A high spot can be noted by a bright metallic finish. Correct any high spots before assembly by continuing to move the valve cover in a figure eight motion until a uniform bright metallic finish is attained.

CAUTION

Do not remove an excessive amount of the sealing surface or damage to the camshaft will result. Always check camshaft clearance when resurfacing the cylinder head cover.

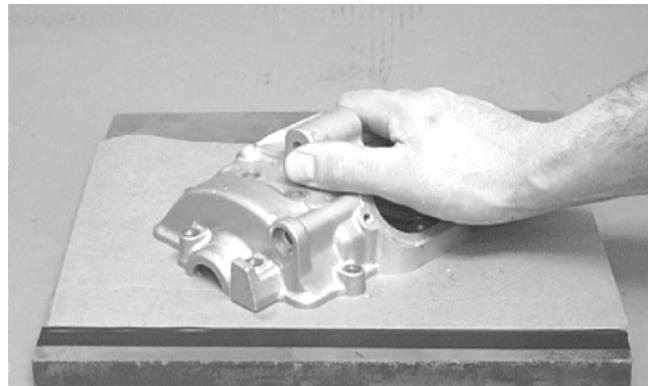

CC130D

CAUTION

Water or parts-cleaning solvent must be used in conjunction with the wet-or-dry sandpaper or damage to the sealing surface may result.

Removing Valves


■NOTE: Keep all valves and valve components as a set. Note the original location of each valve set for use during installation. Return each valve set to its original location during installation.

1. Using a valve spring compressor, compress the valve springs and remove the valve keepers. Account for an upper spring retainer.




CC994

2. Remove the valve seal and the lower remaining spring seat. Discard the valve seal.

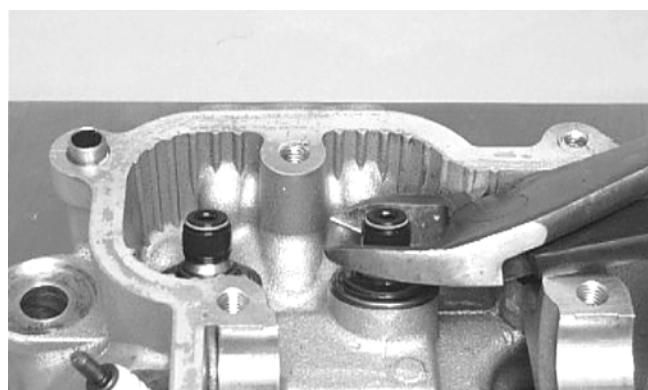

CC134D

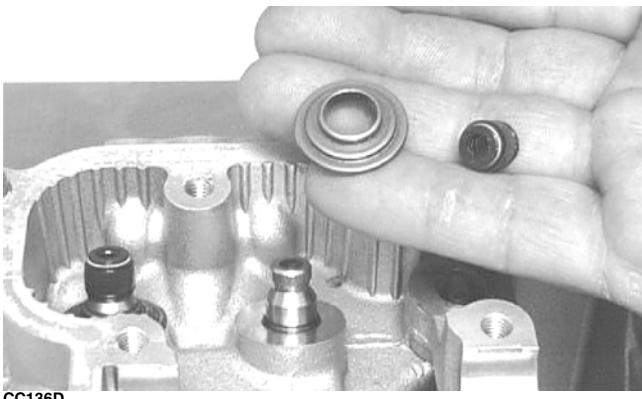

■NOTE: The valve seals must be replaced.

3. Remove the valve springs; then invert the cylinder head and remove the valves.

Measuring Valve Guide (Bore)

1. Insert a snap gauge 1/2 way down into each valve guide bore; then remove the gauge and measure it with a micrometer.
2. Acceptable inside diameter range must be within specifications.
3. If a valve guide is out of tolerance, the cylinder head must be replaced.

Servicing Valves/Valve Guides/Valve Seats


If valves, valve guides, or valve seats require servicing or replacement, Arctic Cat recommends that the components be taken to a qualified machine shop for servicing.

CAUTION

If valves are discolored or pitted or if the seating surface is worn, the valve must be replaced. Do not attempt to grind the valves or severe engine damage may occur.


Installing Valves

1. Apply grease to the inside surface of the valve seals; then place a lower spring seat and valve guide seal over each valve guide.

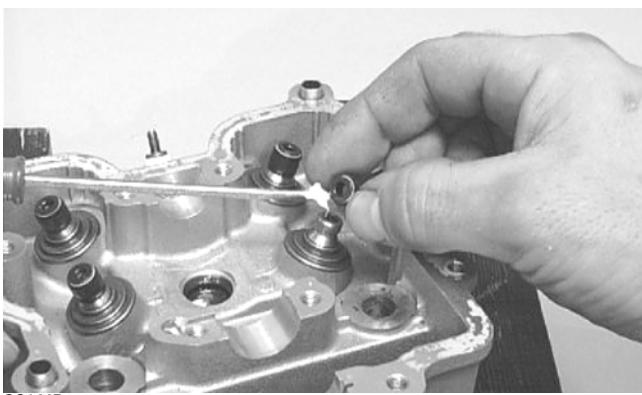

2. Insert each valve into its original valve location.
3. Install the valve springs with the painted end of the spring facing away from the cylinder head.

■NOTE: If the paint is not visible, install the ends of the springs with the closest wound coils toward the head.

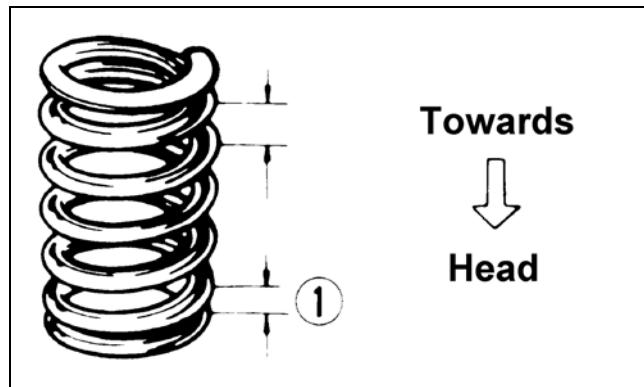

4. Place a spring retainer over the valve springs; then using the valve spring compressor, compress the valve springs and install the valve keepers.



PISTON ASSEMBLY

■NOTE: Whenever a piston, rings, or pin are out of tolerance, they must be replaced.

Inspecting Piston

1. Inspect the piston for cracks in the piston pin, boss, top, and skirt areas.
2. Inspect the piston for seizure marks or scuffing. If piston is scored or galled, replace it with a new one.
3. Inspect the perimeter of each piston for signs of "blowby" indicated by dark discoloration. "Blowby" is caused by worn piston rings, excessive carbon in ring grooves, or an out-of-round cylinder.

Removing Piston Rings

1. Starting with the top ring, slide one end of the ring out of the ring-groove.




CC400D

2. Remove each ring by working it toward the top of the piston while rotating it out of the groove.

■**NOTE:** When installing new rings, install as a complete set only.

Measuring Piston-Ring End Gap (Installed)


1. Place each piston ring in the wear portion of the cylinder. Use the piston to position each ring squarely in the cylinder.
2. Using a feeler gauge, measure each piston-ring end gap. Acceptable ring end gap must be within specifications.

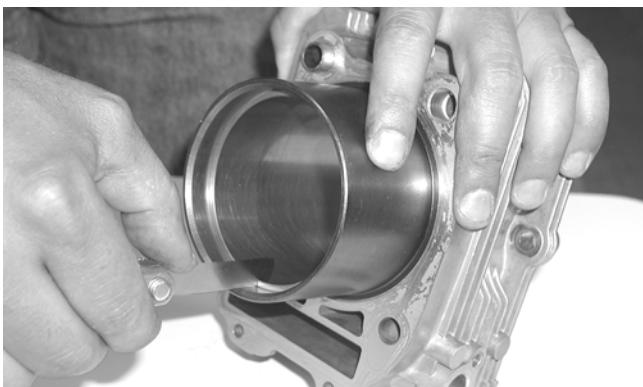

CC995


Measuring Piston Pin, Connecting Rod Small End, and Piston-Pin Bore

1. Measure the piston pin outside diameter at each end and in the center. If measurement exceeds specifications, the piston pin must be replaced.

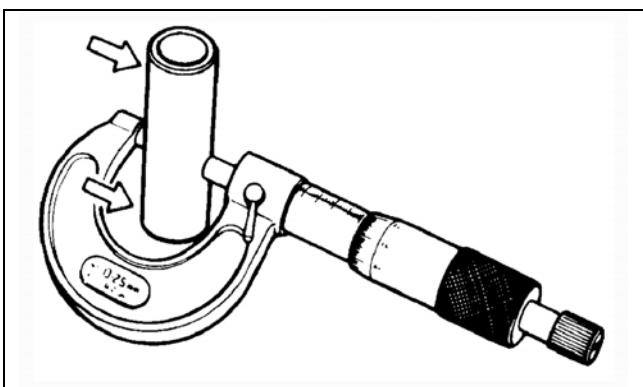

ATV-1070


2. Inspect and measure the connecting rod small end. If the measurement exceeds specifications, the connecting rod must be replaced (see Center Crankcase Components in this section).
3. Insert an inside dial indicator into the piston-pin bore. Take two measurements to ensure accuracy. The diameter must not exceed specifications. If the diameter exceeds specifications, the piston must be replaced.

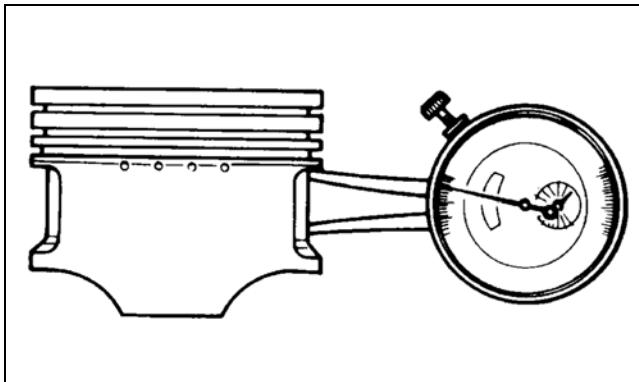

ATV-1069

Measuring Piston Skirt/Cylinder Clearance

1. Measure the cylinder front to back in six places.

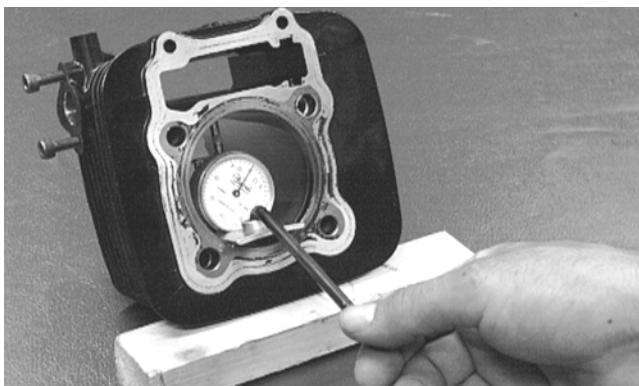


CC397D

2. Measure the corresponding piston diameter at a point 15 mm above the piston skirt at a right angle to the piston-pin bore. Subtract this measurement from the largest measurement in step 1. The difference (clearance) must be within specifications.

Installing Piston Rings

1. Install ring expander (4) in the bottom groove of the piston; then install the thin oil rings (3) over the expander making sure the expander ends do not overlap. Stagger the end gaps of the upper and lower thin oil rings according to the illustration.


■**NOTE:** Note the direction of the exhaust side of the piston (5) for correct ring end gap orientation.

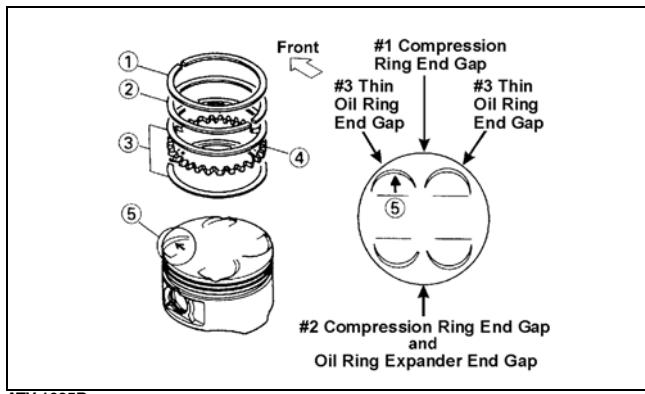

ATV-1085B

2. Install the compression rings (1 and 2) so the letter(s) on the top surface of each ring faces the dome of the piston. Rotate the rings until the ring end gaps are on directly opposite sides of the piston according to the illustration.

NOTE: The chrome (silver) ring should be installed in the top position.

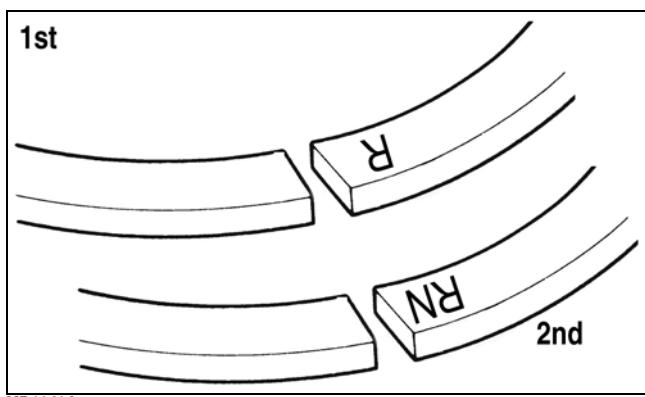

MD1343A

CAUTION

Incorrect installation of the piston rings will result in engine damage.

CYLINDER/CYLINDER HEAD ASSEMBLY

NOTE: If the cylinder/cylinder head assembly cannot be trued, they must be replaced.

Cleaning/Inspecting Cylinder Head

CAUTION

The cylinder head studs must be removed for this procedure.

1. Using a non-metallic carbon removal tool, remove any carbon buildup from the combustion chamber being careful not to nick, scrape, or damage the combustion chamber or the sealing surface.
2. Inspect the spark plug hole for any damaged threads. Repair damaged threads using a "heli-coil" insert.

3. Place the cylinder head on the surface plate covered with #400 grit wet-or-dry sandpaper. Using light pressure, move the cylinder head in a figure eight motion. Inspect the sealing surface for any indication of high spots. A high spot can be noted by a bright metallic finish. Correct any high spots before assembly by continuing to move the cylinder head in a figure eight motion until a uniform bright metallic finish is attained.

CAUTION

Water or parts-cleaning solvent must be used in conjunction with the wet-or-dry sandpaper or damage to the sealing surface may result.

Measuring Cylinder Head Distortion

1. Remove any carbon buildup in the combustion chamber.
2. Lay a straightedge across the cylinder head; then using a feeler gauge, check the distortion between the head and the straightedge.
3. Maximum distortion must not exceed specifications.




CC141D

Cleaning/Inspecting Cylinder

1. Wash the cylinder in parts-cleaning solvent.
2. Inspect the cylinder for pitting, scoring, scuffing, warpage, and corrosion. If marks are found, repair the surface using a cylinder hone (see Honing Cylinder in this sub-section).
3. Place the cylinder on the surface plate covered with #400 grit wet-or-dry sandpaper. Using light pressure, move the cylinder in a figure eight motion. Inspect the sealing surface for any indication of high spots. A high spot can be noted by a bright metallic finish. Correct any high spots before assembly by continuing to move the cylinder in a figure eight motion until a uniform bright metallic finish is attained.

CAUTION

Water or parts-cleaning solvent must be used in conjunction with the wet-or-dry sandpaper or damage to the sealing surface may result.

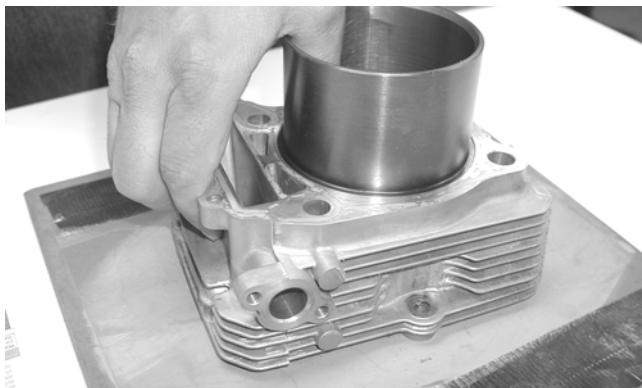


CC997

Inspecting Cam Chain Guide

1. Inspect cam chain guide for cuts, tears, breaks, or chips.
2. If the chain guide is damaged, it must be replaced.

Honing Cylinder


1. Using a slide gauge and a dial indicator or a snap gauge, measure the cylinder bore diameter in three locations from top to bottom and again from top to bottom at 90° from the first measurements for a total of six measurements. The trueness (out-of-roundness) is the difference between the highest and lowest reading. Maximum trueness (out-of-roundness) must not exceed specifications.

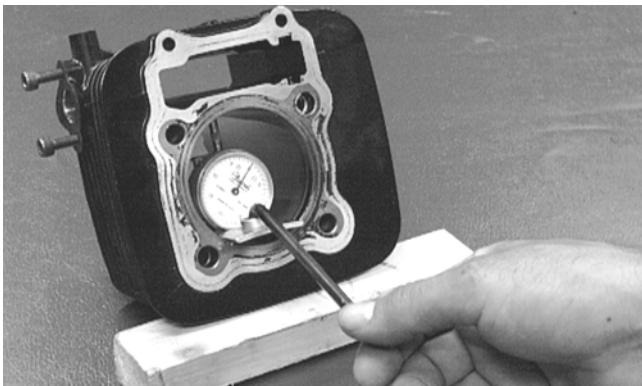

CC397D

2. Wash the cylinder in parts-cleaning solvent.
3. Inspect the cylinder for pitting, scoring, scuffing, and corrosion. If marks are found, repair the surface using a #320 grit ball hone.

■NOTE: To produce the proper 60° cross-hatch pattern, use a low RPM drill (600 RPM) at the rate of 30 strokes per minute. If honing oil is not available, use a lightweight petroleum-based oil. Thoroughly clean cylinder after honing using soap and hot water. Dry with compressed air; then immediately apply oil to the cylinder bore. If the bore is severely damaged or gouged, replace the cylinder.

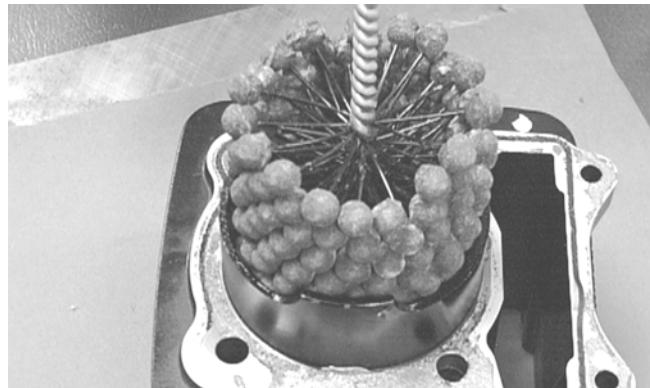


CC390D

4. If any measurement exceeds the limit, the cylinder must be replaced.

Measuring Camshaft Runout

■NOTE: If the camshaft is out of tolerance, it must be replaced.

1. Place the camshaft on a set of V blocks; then position the dial indicator contact point against the shaft and zero the indicator.

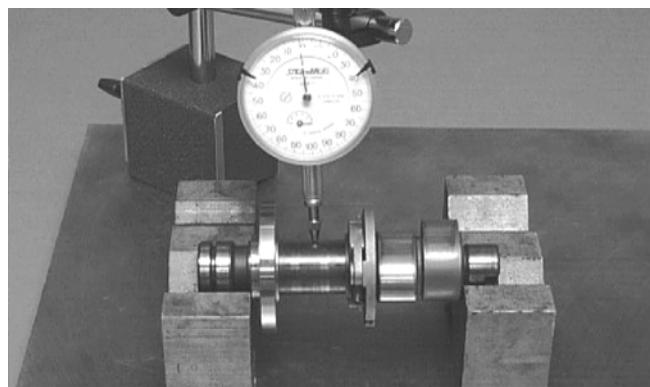


CC283D

2. Rotate the camshaft and note runout; maximum tolerance must not exceed specifications.

Measuring Camshaft Lobe Height

1. Using a calipers, measure each cam lobe height.

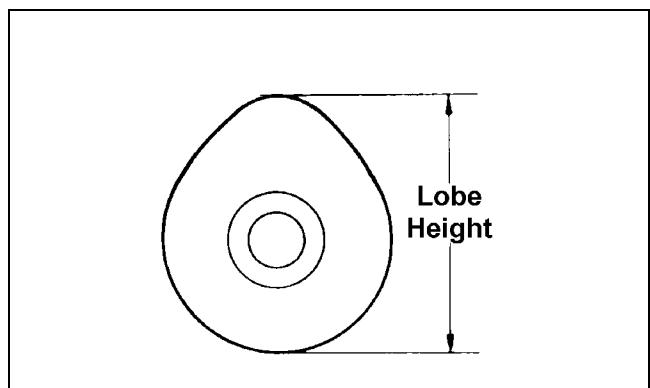

ATV1013A

2. The lobe heights must be greater than minimum specifications.

Inspecting Camshaft Bearing Journal


1. Inspect the bearing journal for scoring, seizure marks, or pitting.

2. If excessive scoring, seizure marks, or pitting is found, the cylinder head assembly must be replaced.

■NOTE: If the journals are worn, replace the cam-shaft.


Inspecting Camshaft Spring/Unloader Pin

1. Inspect the spring and unloader pin for damage.

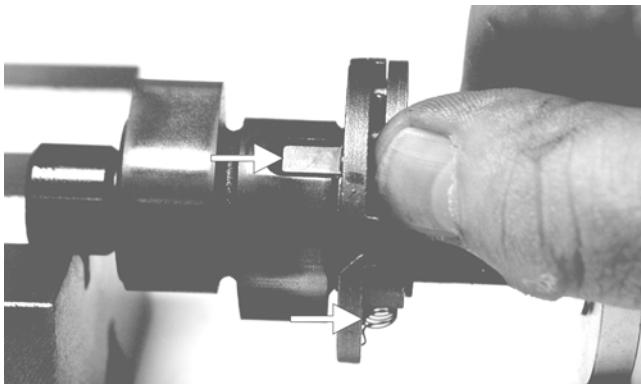

CF061A

■NOTE: With the weight extended, the unloader pin should be flat-side out; with the weight retracted, the unloader pin should be round-side out.

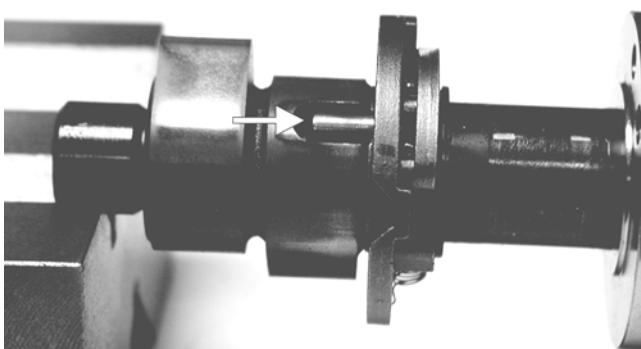

CF060A

2. If damaged, the camshaft must be replaced.


Installing Top-Side Components

A. Piston

B. Cylinder

1. Lubricate the piston pin, connecting rod, and piston pin bore with motor oil; then install the piston on the connecting rod making sure there is a circlip on each side.

■NOTE: The piston should be installed so the arrow points towards the exhaust.

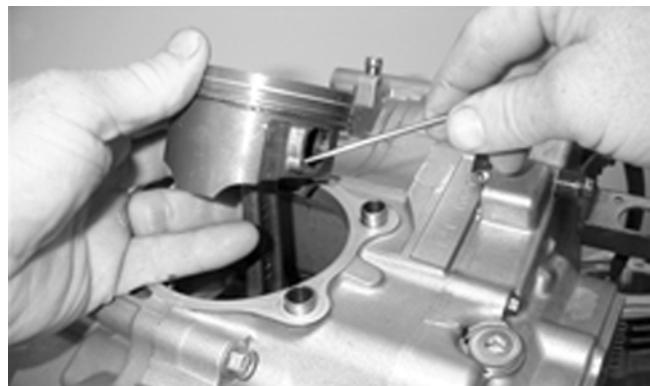

MD1213

2. Place the two alignment pins into position. Place a new cylinder gasket into position; then place a piston holder (or suitable substitute) beneath the piston skirt and square the piston in respect to the crankcase.




MD1344

3. Lubricate the inside wall of the cylinder; then using a ring compressor or the fingers, compress the rings and slide the cylinder over the piston. Route the cam chain up through the cylinder cam chain housing; then remove the piston holder and seat the cylinder firmly on the crankcase.

CAUTION


The cylinder should slide on easily. Do not force the cylinder or damage to the piston, rings, cylinder, or crankshaft assembly may occur.

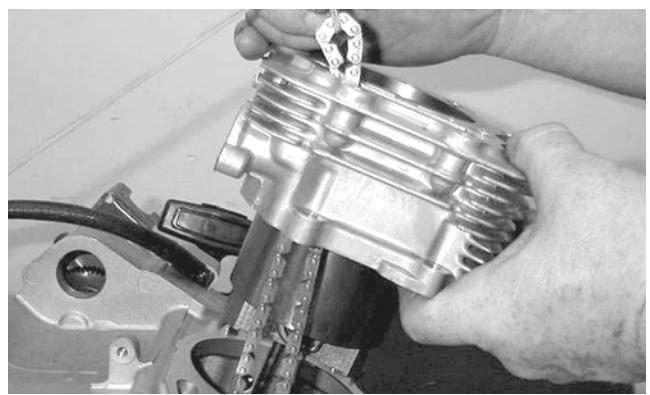

MD1345

4. Loosely install the two nuts securing the cylinder to the right-side crankcase half.

■NOTE: The two cylinder-to-crankcase nuts will be tightened in step 9.

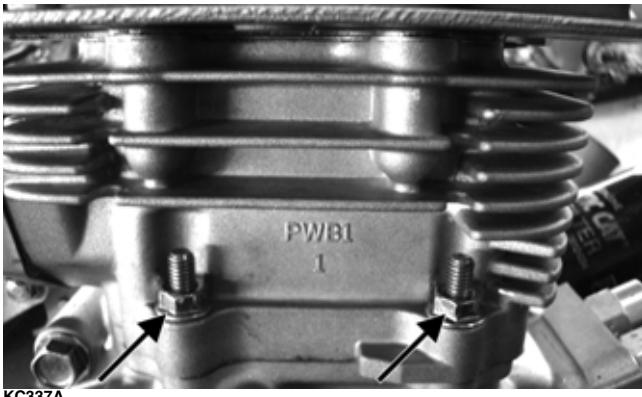


C. Cylinder Head/Camshaft **D. Cylinder Head Cover/Rocker Arms**

■**NOTE:** Steps 1-4 in the preceding sub-section must precede this procedure.

5. While keeping tension on the cam chain, place the front cam chain guide into the cylinder.

CAUTION



Care should be taken that the bottom of the chain guide is secured in the crankcase boss.

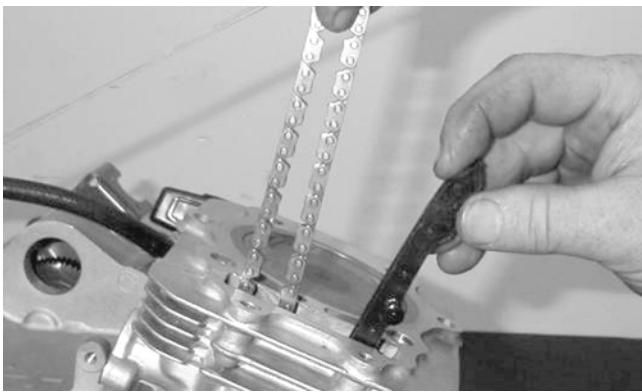

6. Place a new gasket into position on the cylinder. Place the alignment pins into position; then place the head assembly into position on the cylinder making sure the cam chain is routed through the chain cavity.

CAUTION


Keep tension on the cam chain to avoid damaging the crankcase boss.

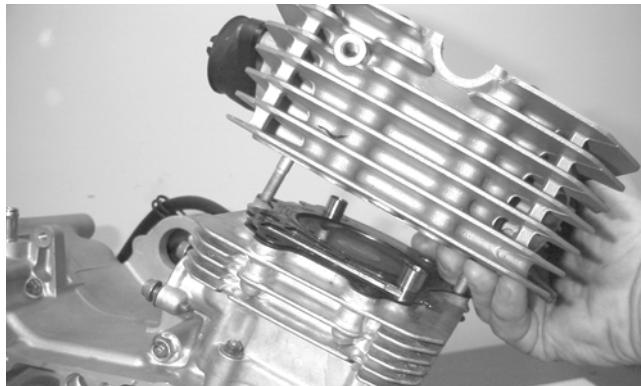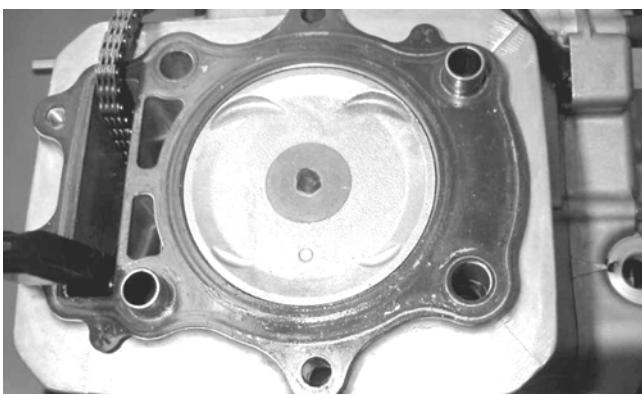


7. Install the four cylinder head cap screws with washers. Note that the two cap screws on the right side of the cylinder head nearest the cam sprocket are longer than the two cap screws on the left (spark plug) side. Tighten only until snug.



8. Install the two lower nuts securing the cylinder head to the cylinder, one in front and one in rear.

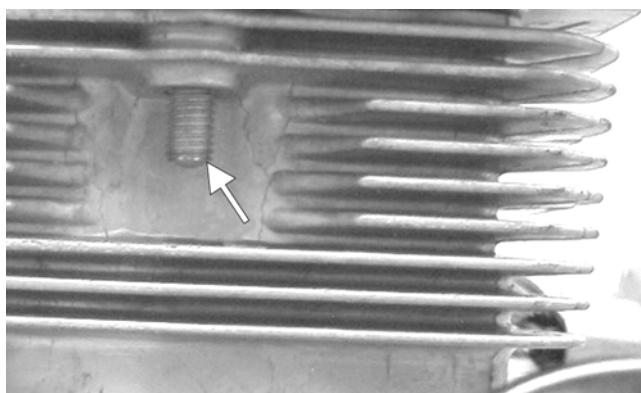


9. In a crisscross pattern, tighten the four cylinder head cap screws (from step 7) to 28 ft-lb. Tighten the two lower cylinder head nuts (from step 8) to 20 ft-lb and the cylinder-to-crankcase nuts (from step 4) to 8 ft-lb.
10. With the timing inspection plug removed and the cam chain held tight, rotate the crankshaft until the piston is at top-dead-center.
11. While holding the cam chain sprocket to the side, install the rear cam chain tensioner guide into the cylinder head. Install the pivot cap screw and washer. Tighten to 11 ft-lb.

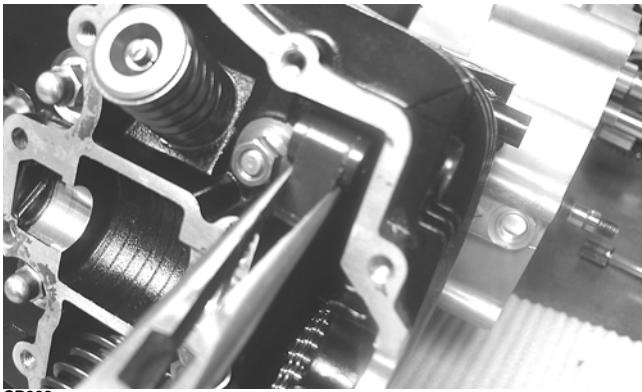


12. With the alignment pin installed in the camshaft and the cam lobes directed down (toward the piston), place the camshaft in position and verify that the timing mark on the magneto is visible through the inspection plug and that the timing marks on the camshaft sprocket are parallel with the cylinder head cover mating surface.

■NOTE: When the camshaft assembly is seated, make sure the alignment pin in the camshaft aligns with the smallest hole in the sprocket.

13. With the alignment pin installed in the camshaft, loosely place the cam sprocket (with the recessed side facing the camshaft lobes) onto the camshaft and place it into position with the cam chain over the sprocket.

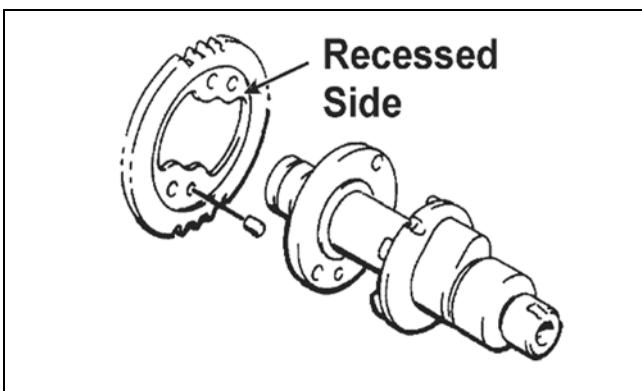

14. Place the C-ring into position in its groove in the cylinder head.

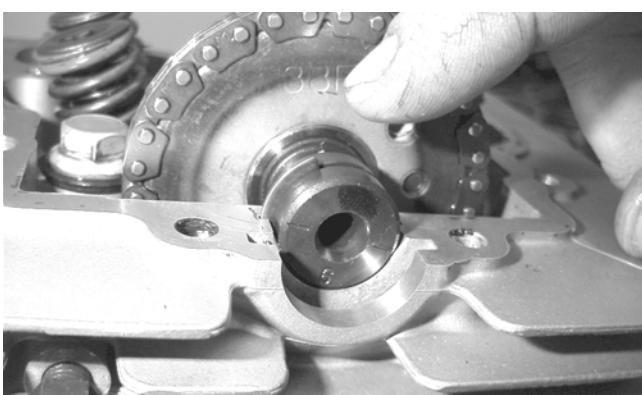

■NOTE: At this point, oil the camshaft bearings, cam lobes, and the three seating journals on the cylinder head.


■NOTE: Note the position of the alignment marks on the end of the camshaft. They must be parallel with the cylinder head cover mating surface. If rotating the camshaft and sprocket is necessary for alignment, do not allow the crankshaft to rotate and be sure the cam lobes end up in the down position.

15. When the camshaft assembly is seated, ensure the following.
 - A. Piston still at top-dead-center.
 - B. Camshaft lobes directed down (toward the piston).
 - C. Camshaft alignment marks parallel to the valve cover mating surface.
 - D. Recessed side of the sprocket directed toward the cam lobes.
 - E. Camshaft alignment pin and sprocket alignment hole (smallest) are aligned.

CAUTION

If any of the above factors are not as stated, go back to step 13 and carefully proceed.



16. Place the tab washer onto the sprocket making sure it covers the pin in the alignment hole.

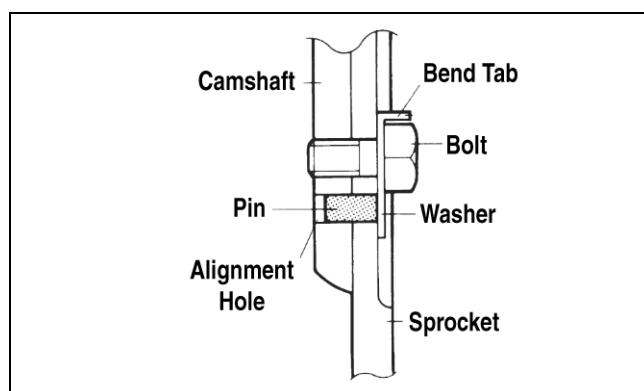


CAUTION

Care must be taken that the tab washer is installed correctly to cover the alignment hole on the sprocket. If the alignment pin falls out, severe engine damage will result.

17. Apply red Loctite #271 to the first cap screw securing the sprocket and tab washer to the camshaft; then install the cap screw and tab washer. Tighten cap screw only until snug.

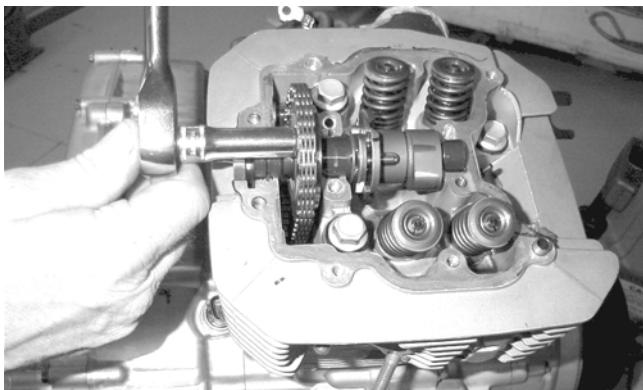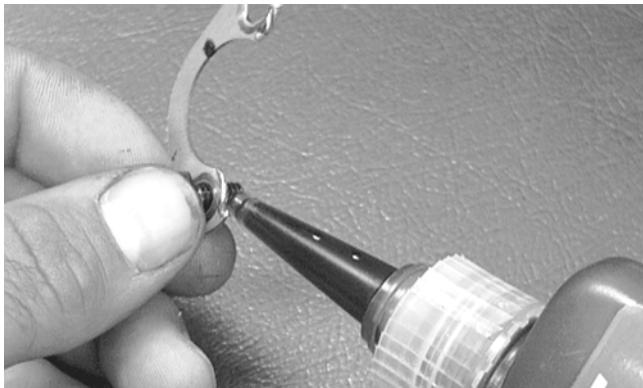

18. Rotate the crankshaft until the second cap screw securing the sprocket to the camshaft can be installed; then install the cap screw (threads coated with red Loctite #271). Tighten to 11 ft-lb; then bend the tab to secure the cap screw.

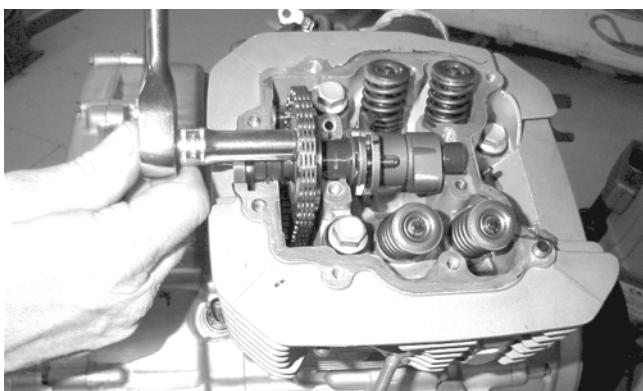

19. Rotate the crankshaft until the first cap screw (from step 17) securing the sprocket to the camshaft can be addressed; then tighten to 11 ft-lb. Bend the tab to secure the cap screw.

20. Install the cylinder head plug with the cupped end facing the camshaft and the opening directed downwards.


21. Remove the cap screw from the end of the chain tensioner. Account for the plunger, spring, and gasket.



22. Depress the spring-loaded lock and push the plunger into the tensioner.



23. Place the cam chain tensioner assembly and gasket into the cylinder making sure the ratchet side is facing toward the top of the cylinder and secure with the two cap screws.

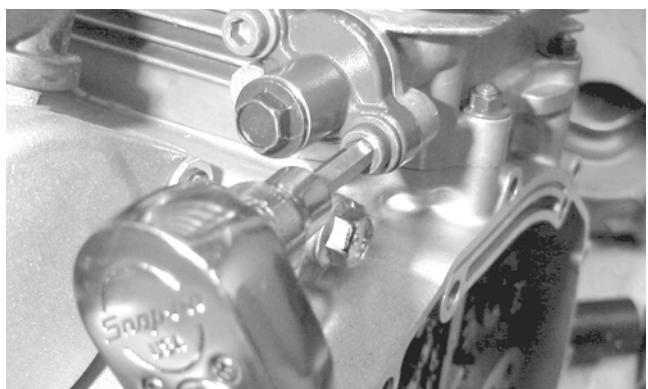

24. Install the cap screw and spring into the end of the cam chain tensioner. Tighten securely.




MD1245

25. Loosen the adjuster screw jam nuts; then loosen the adjuster screws on the rocker arms in the valve cover.
26. Apply a thin coat of Three Bond Sealant to the mating surface of the valve cover; then place the valve cover into position. Note that the two alignment pins are properly positioned.
- NOTE: At this point, the rocker arms and adjuster screws must not have pressure on them.**
27. Install the four top-side cap screws with rubber washers; then install the remaining cap screws. Tighten only until snug.



MD1261

28. In a crisscross pattern starting from the center and working outward, tighten the cap screws (from step 27) to 8 ft-lb.
29. Adjust valve/tappet clearance (see Periodic Maintenance/Tune-Up section -Valve/Tappet Clearance).
30. Place the two valve inspection covers with O-rings into position; then install and tighten the cap screws to 8 ft-lb.

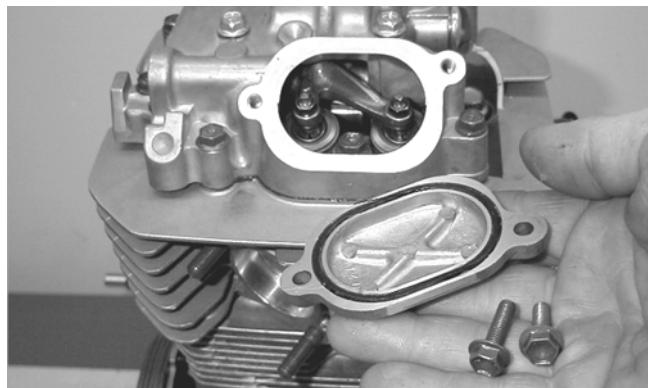

MD1264

31. Install the spark plug and tighten securely; then install the timing inspection plug.

Left-Side Components

■**NOTE:** For efficiency, it is preferable to remove and disassemble only those components which need to be addressed and to service only those components. The technician should use discretion and sound judgment.

☞ AT THIS POINT


To service any one specific component, only limited disassembly of components may be necessary. Note the **AT THIS POINT** information in each sub-section.

■**NOTE:** The engine/transmission does not have to be removed from the frame for this procedure.

Removing Left-Side Components


A. Cover/Stator Assembly

1. Remove the cap screws securing the outer magneto cover and remove the cover.
2. Remove the left-side cover-to-crankcase mounting cap screws noting the location of the 8 mm cap screw with the washer near the middle of the left-side cover. Keep the different-lengthed 6 mm cap screws in order for installing purposes.

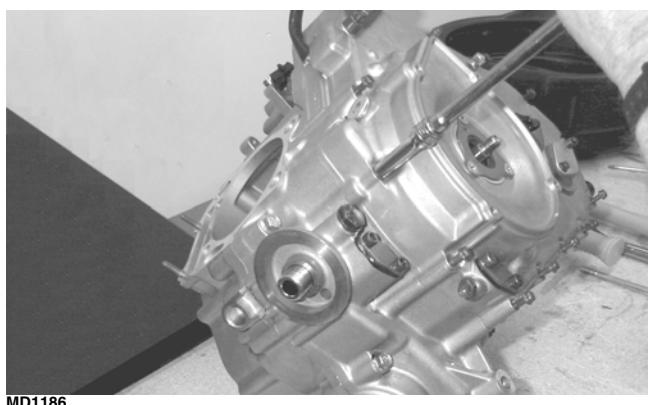


MD1186

3. Using Crankcase Separator/Crankcase Remover and the 6 mm adapter, remove the left-side cover w/stator assembly. Account for the two alignment pins and the position of the shifter bracket for installing purposes.

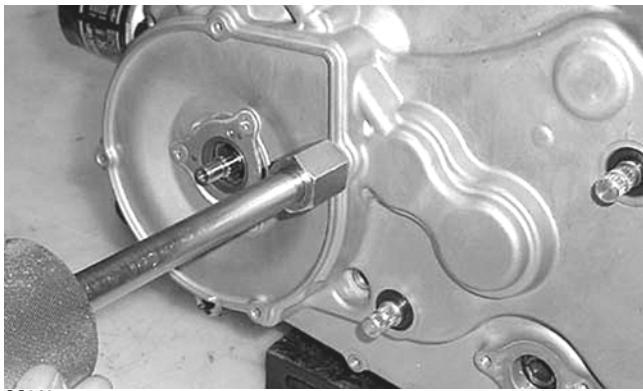

CC946

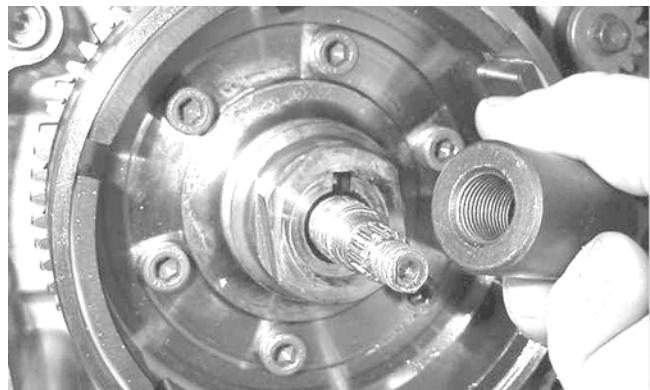


MD1365

6. Using Magneto Rotor Remover, break the rotor/flywheel assembly loose from the crankshaft. Remove the remover, the crankshaft protector, the rotor/flywheel, and the starter clutch gear. Account for the key.

CAUTION

Care must be taken that the remover is fully threaded onto the rotor/flywheel or damage may occur.

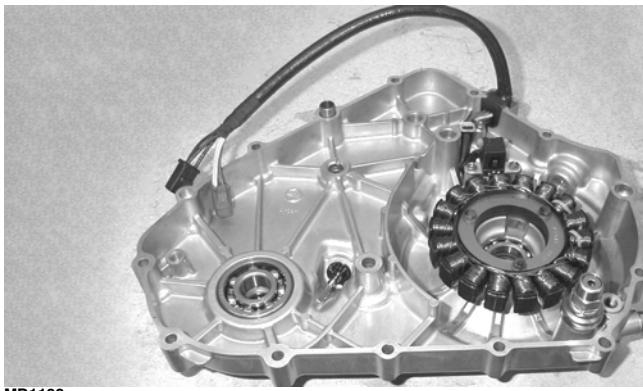

CC1188

■**NOTE:** Inspect the inside of the left-side cover for any shaft washers that may have come off with the cover. Make sure they are returned to their respective shafts and that the starter idler gear spacer is on the shaft or in the cover.

B. Rotor/Flywheel C. Starter Motor

■**NOTE:** Steps 1-3 in the preceding sub-section must precede this procedure.

4. Remove the rotor/flywheel nut.



MD1194


5. Install the crankshaft protector.



MD1368




MD1369

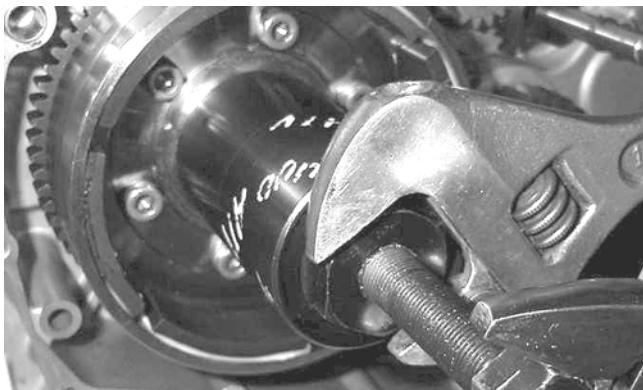

MD1370

7. Remove the starter idler gear (No. 1) and starter idler gear (No. 2).

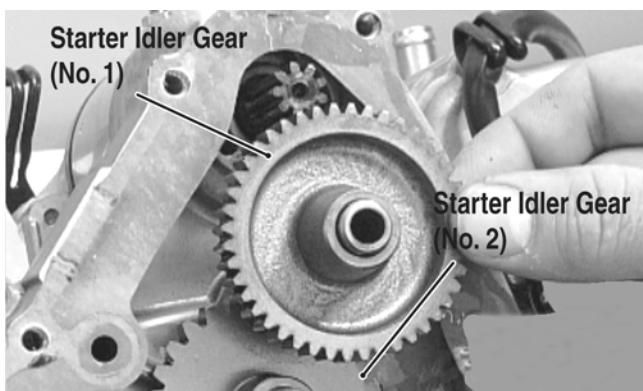


MD1305

8. Remove the gear shift shaft assembly and washer from the left-side crankcase. Note the positions of the alignment marks and washer for installing purposes; then release the cam stopper spring tension.



MD1239

9. Remove the shift detent cam.
10. Remove the cam stopper assembly.
11. Remove two starter motor cap screws.

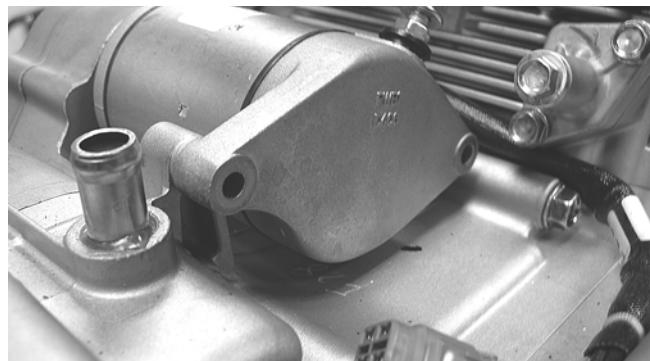

KC217

12. Remove starter motor by tapping lightly with a mallet.

■NOTE: The starter motor is a non-serviceable component and must be replaced as an assembly.

13. Using an impact screwdriver, remove the three Phillips-head screws holding the crankshaft bearing retainer. Remove the crankshaft bearing retainer.



MD1122

Servicing Left-Side Components

INSPECTING STARTER CLUTCH/GEAR

1. Place the starter clutch gear onto the rotor/flywheel and attempt to rotate the starter clutch gear clockwise. It should lock up to the rotor/flywheel. Rotate the gear counterclockwise and it should turn freely. If it moves or locks up both ways, the starter clutch must be replaced.
2. Inspect the starter clutch gear for chipped or missing teeth or discoloration/scoring of the clutch surface. Inspect the bearing for loose, worn, or discolored rollers. If bearing is damaged, it must be replaced.



FI569

3. Inspect the one-way bearing for chipped surfaces, missing rollers, or discoloration. If any of the above conditions exist, replace the starter clutch assembly.



FI572

REPLACING STARTER CLUTCH ASSEMBLY

1. Remove the cap screws securing the one-way clutch assembly to the flywheel; then remove from the flywheel.



FI570

2. Thoroughly clean the rotor/flywheel; then install the new one-way clutch and secure with the cap screws after applying a drop of red Loctite #271 to the threads. Tighten to 26 ft-lb using a crisscross pattern. Make sure the one-way bearing is installed with the notches directed away from the rotor/flywheel.



FI576A



FI578

REPLACING STARTER GEAR BEARING

1. Support the starter clutch gear in a press making sure to support the hub around the entire circumference; then using a suitable bearing driver, press the bearing from the gear.



FI583

2. Thoroughly clean the gear hub; then apply a drop of green Loctite #620 to the bearing outer race and press into the gear hub until even with the lower chamfer radius.




FI580

Installing Left-Side Components

A. Starter Idler Gears

B. Rotor/Flywheel

1. Place the crankshaft bearing retainer into position. Apply red Loctite #271 to the three cap screws. Install and tighten the three cap screws securely.

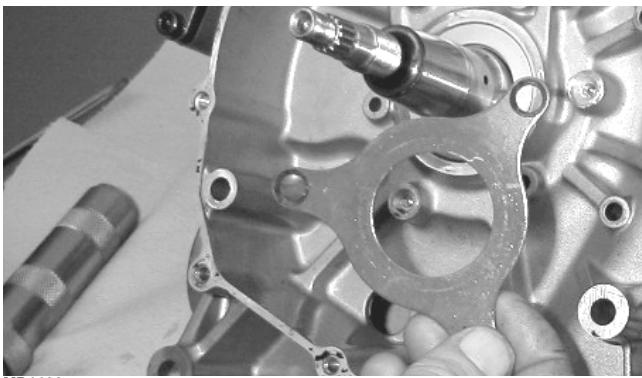

MD1122

2. Install the starter motor and tighten the two cap screws to 8 ft-lb.
3. Install the shift detent cam making sure the washer is properly positioned.




MD1086

4. Install the cam stopper assembly.
5. Install the gear shift shaft assembly and washer making sure to align the alignment marks.



MD1239

6. Install starter idler gear (No. 2) and starter idler gear (No. 1).

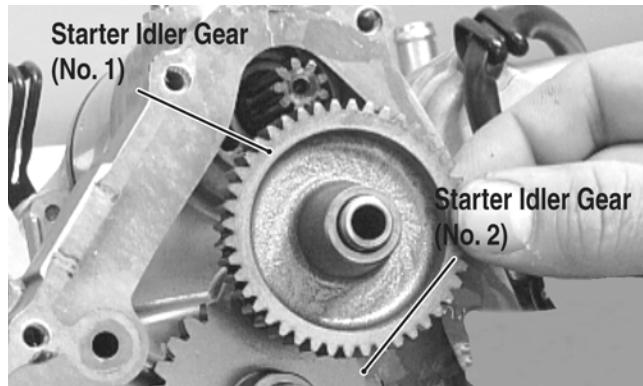

MD1305

7. Place the key into its notch; then slide the rotor/ flywheel (with the ring gear in place) over the crankshaft. Tighten the nut to 107 ft-lb.

C. Cover

■**NOTE:** Steps 1-7 in the preceding sub-section must precede this procedure.

8. Install two alignment pins and place the left-side cover gasket into position. Install the left-side cover. Noting the different-lengthed 6 mm cap screws, the position of the shifter bracket, and the location of the long cap screw with the washer, tighten cap screws in a crisscross pattern to 8 ft-lb.
9. Place the outer magneto cover into position on the left-side cover; then install and tighten the four cap screws securely.

Right-Side Components

☞ AT THIS POINT

To service center crankcase components only, proceed to Removing Right-Side Components.

■**NOTE:** For efficiency, it is preferable to remove and disassemble only those components which need to be addressed and to service only those components. The technician should use discretion and sound judgment.

AT THIS POINT


To service any one specific component, only limited disassembly of components may be necessary. Note the **AT THIS POINT** information in each sub-section.

■**NOTE:** The engine/transmission does not have to be removed from the frame for this procedure.


Removing Right-Side Components

A. V-Belt Cover **B. Driven Pulley** **C. Clutch Cover**


1. If the engine is still in the frame, remove the cap screw securing the brake pedal to the pivot shaft. Account for a flat washer.

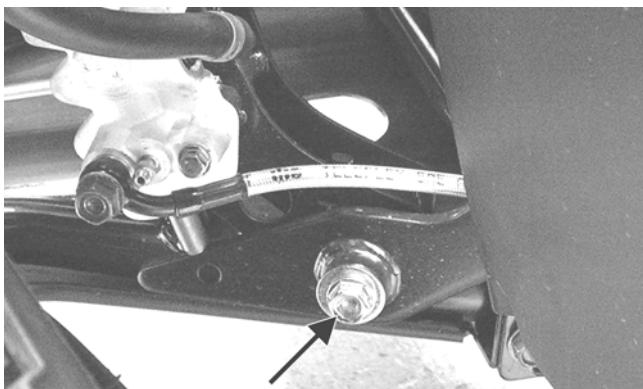

2. Remove the cap screws securing the V-belt cover to the clutch cover; then slide the brake pedal outward and remove the V-belt cover. Account for two alignment pins and a gasket.

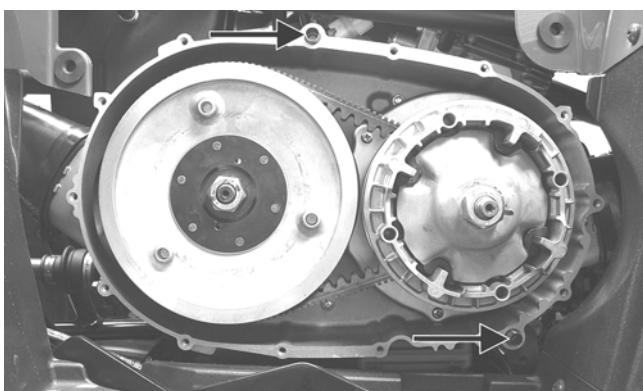


3. Mark the movable drive face and the fixed drive face for installing purposes; then remove the nut holding the movable drive face onto the crankshaft.

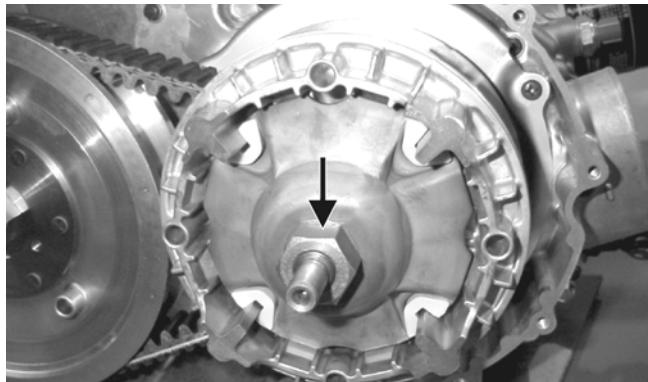

4. Remove the movable drive face and spacer. Account for the movable drive face rollers and outer drive face cover.




5. Remove the V-belt.

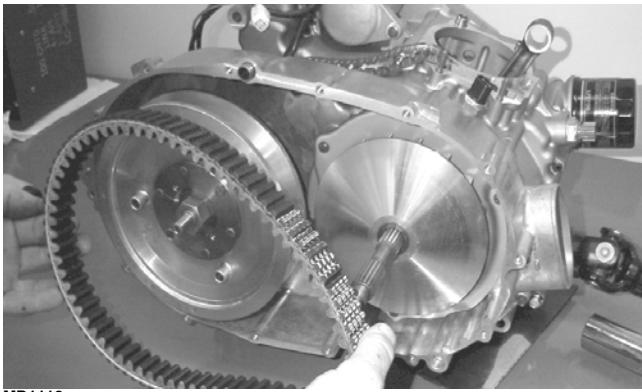


MD1118

6. Remove the fixed drive face.

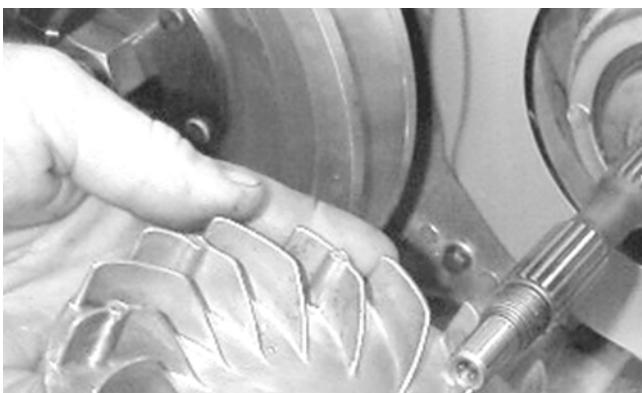


MD1094

7. Remove the nut holding the driven pulley assembly; then remove the driven pulley assembly.

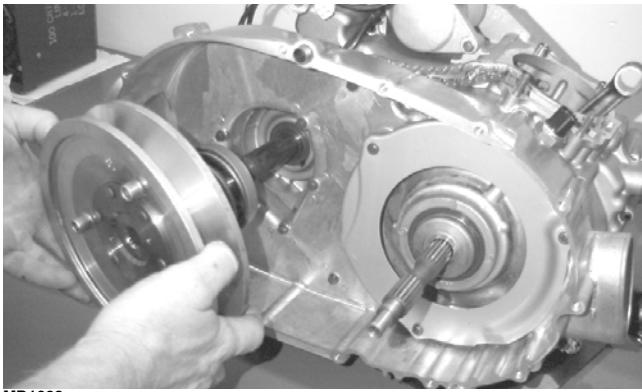


MD1068

8. Using an impact screwdriver, remove the three Phillips-head cap screws holding the air intake plate. Remove the air intake plate.

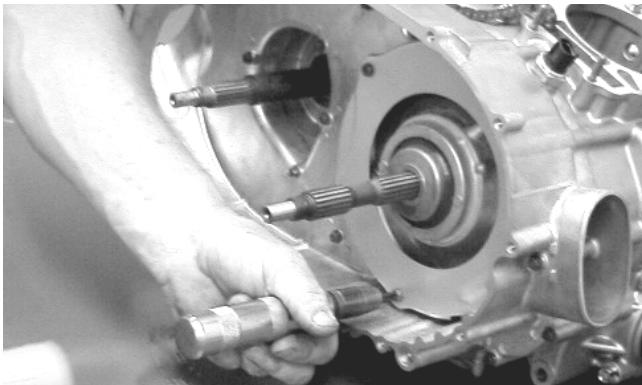

MD1092

9. Remove the cap screws holding the clutch cover onto the right-side crankcase half. Note the positions of the different-lengthed cap screws for installing purposes.
10. Using a rubber mallet, loosen the clutch cover; then pull it away from the right-side crankcase half. Account for two alignment pins and gasket.

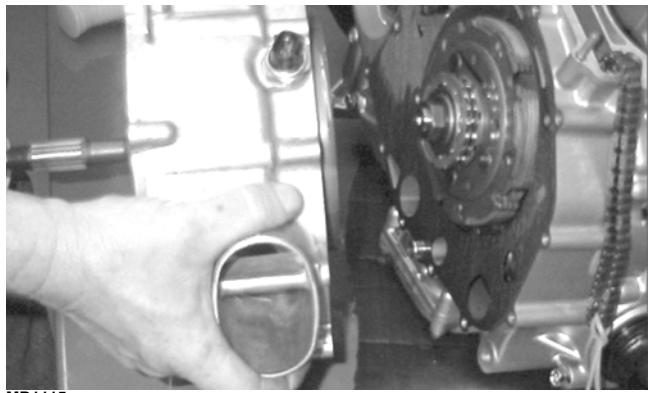

MD1115

D. Centrifugal Clutch Assembly

E. Oil Pump Drive Gear


F. Oil Pump Driven Gear

G. Oil Pump


■**NOTE:** Steps 1-10 in the preceding sub-section must precede this procedure.

☞ AT THIS POINT

Remove the cap screw holding the gear position switch onto the right-side crankcase half; then remove the gear position switch. Account for a spacer.

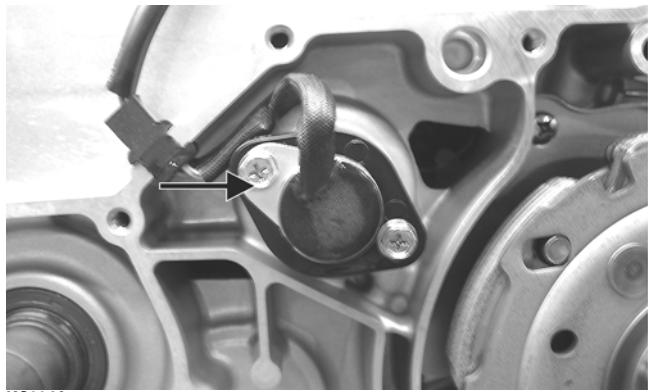

KC324A

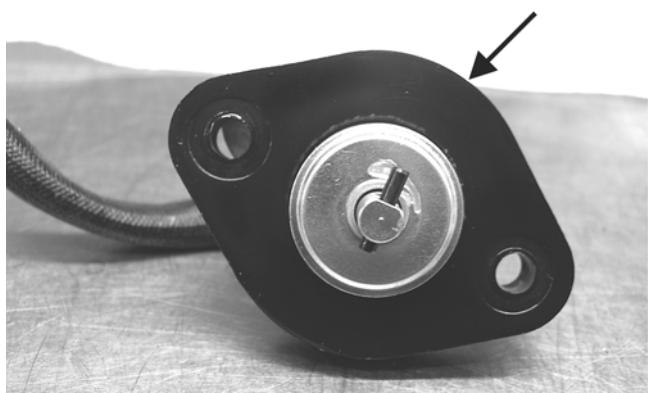

KC326A


11. Remove the one-way clutch noting the direction of the green dot or the word OUTSIDE for installing purposes.



12. Remove the left-hand threaded nut holding the centrifugal clutch assembly.

CAUTION


Care must be taken when removing the nut; it has "left-hand" threads.

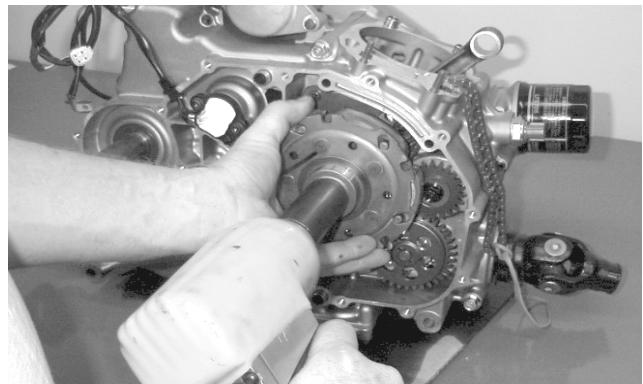

13. Remove the cam chain.



14. Remove the oil pump drive gear cap screw.

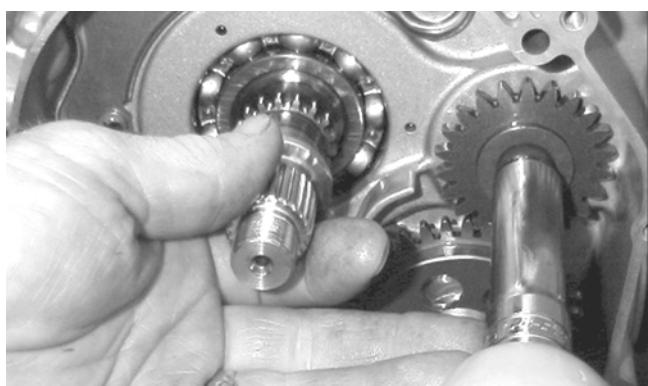

15. Remove oil pump drive gear. Account for the pin.




16. Remove the snap ring holding the oil pump driven gear.



■NOTE: Always use a new snap ring when installing the oil pump driven gear.

17. Remove oil pump driven gear. Account for the drive pin and thrust washer.

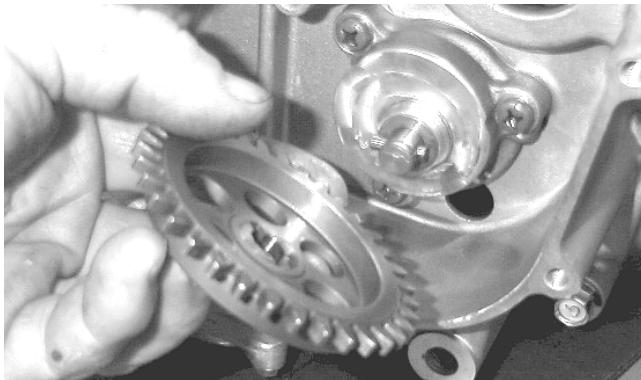


MD1020

AT THIS POINT

To service clutch components, see Servicing Right-Side Components sub-section.

18. Remove three screws holding the oil pump and remove the oil pump. Account for two alignment pins.

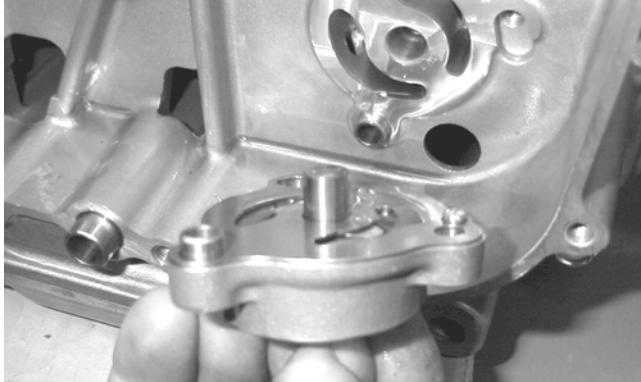

MD1060

AT THIS POINT

To service center crankcase components only, proceed to Separating Crankcase Halves.


Servicing Right-Side Components

INSPECTING CENTRIFUGAL CLUTCH SHOE

1. Inspect the clutch shoe for uneven wear, chips, cracks, or discoloration.
2. Inspect the depth of the grooves in the clutch shoes. If any shoe is worn to the bottom of the groove, replace the complete set.

CAUTION

Always replace clutch shoes as a complete set or severe imbalance could occur.

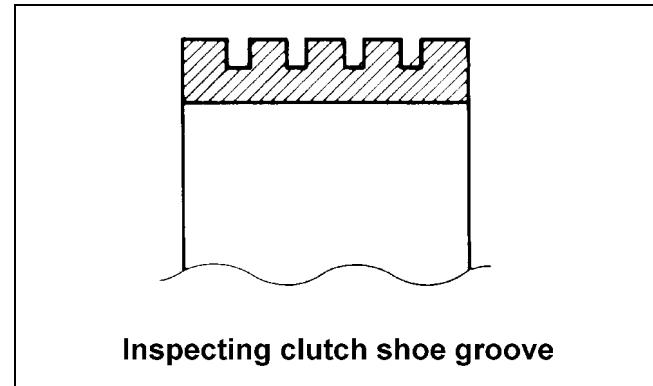

Inspecting clutch shoe groove


ATV1014

INSPECTING CENTRIFUGAL CLUTCH HOUSING

1. Inspect the clutch housing for burns, marks, scuffs, cracks, scratches, or uneven wear.
2. If the housing is damaged in any way, the housing must be replaced.

INSPECTING PRIMARY ONE-WAY DRIVE

1. Place the one-way clutch onto the clutch shoe assembly with the green dot or the word "OUTSIDE" directed away from the clutch shoe.

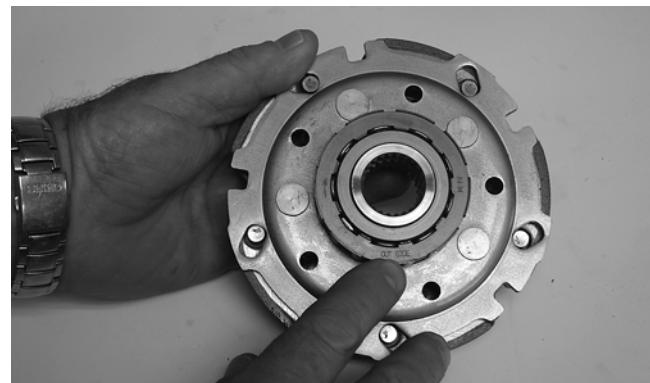

KC330

2. Place the clutch housing onto the clutch shoe/one-way clutch.

■NOTE: It will be necessary to rotate the clutch housing counterclockwise to properly seat the one-way clutch.



KC331A

3. Check that the clutch shoe can only be rotated counterclockwise in respect to the clutch housing. If the clutch shoe locks up or turns either direction, the one-way clutch must be replaced.



KC332A

INSPECTING OIL PUMP

1. Inspect the pump for damage.
2. It is inadvisable to remove the screw securing the pump halves. If the oil pump is damaged, it must be replaced.

■**NOTE: The oil pump is a non-serviceable component and must be replaced as a complete assembly.**


DRIVEN PULLEY ASSEMBLY

■**NOTE: The driven pulley assembly is a non-serviceable component and must be replaced as a complete assembly.**

Installing Right-Side Components

A. Oil Pump


1. Place two alignment pins and the oil pump into position on the crankcase and secure with the Phillips-head screws coated with blue Loctite #243. Tighten to 8 ft-lb.

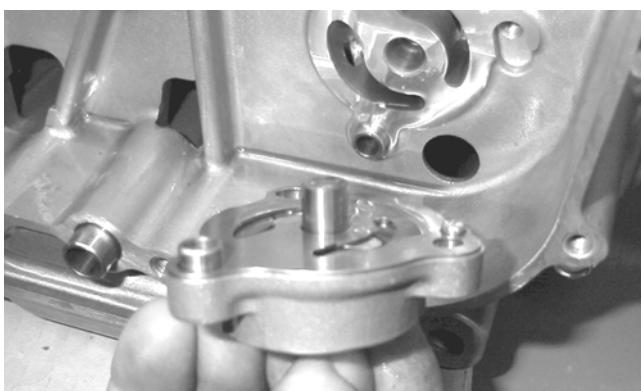


MD1060

2. Place the thrust washer and drive pin into position on the oil pump shaft, install the oil pump driven gear making sure the recessed side of the gear is directed inward, and secure with a new snap ring.

■**NOTE: Always use a new snap ring when installing the oil pump driven gear.**

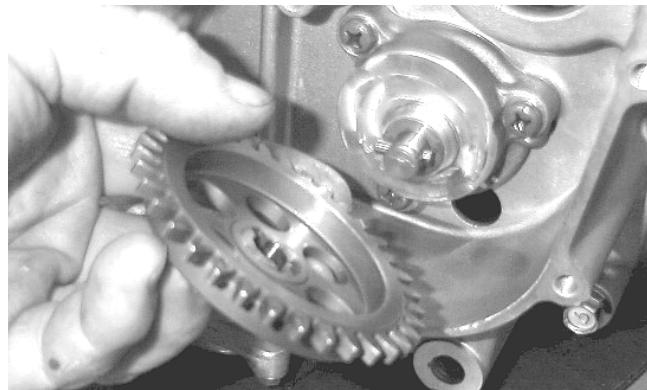

MD1020

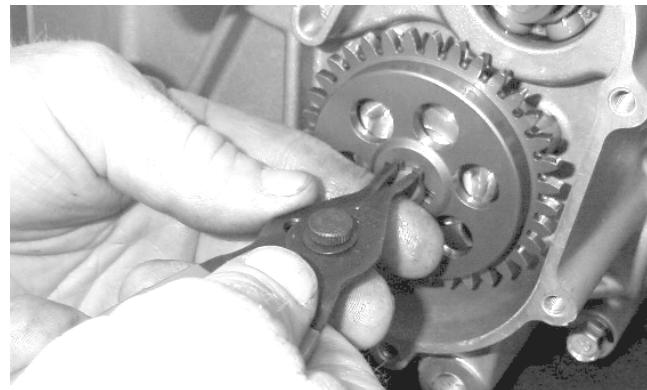


MD1019


3. Install the cam chain.

■**NOTE: Keep tension on the cam chain to avoid damaging the crankcase boss.**

4. Place the pin into position, install the oil pump drive gear, and tighten the cap screw (coated with red Loctite #271) to 63 ft-lb.

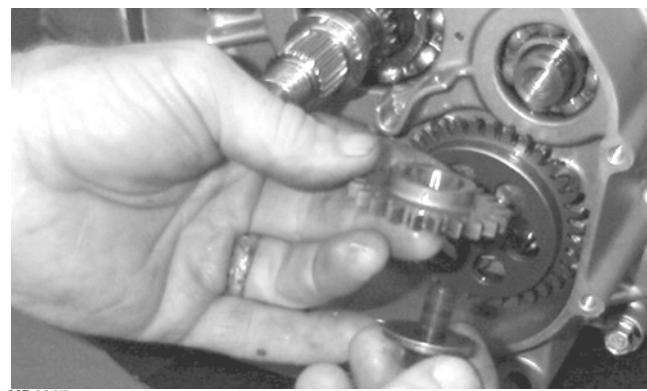

MD1017

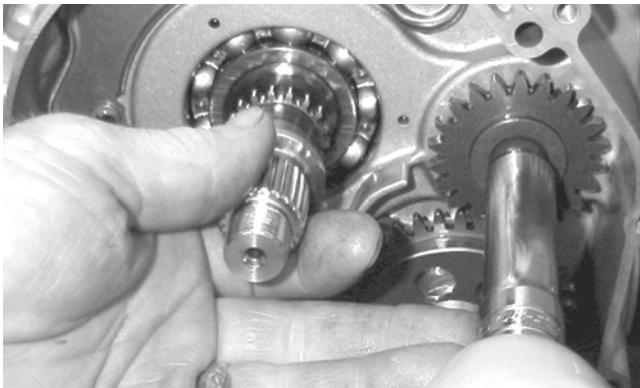

MD1018


5. Install the clutch shoe assembly on the crankshaft; then install the flange nut (left-hand thread) (coated with red Loctite #271). Tighten to 147 ft-lb.

■**NOTE:** The flat side of the flange nut should be directed towards the clutch shoe.

CAUTION

Care must be taken when installing the flange nut; it has "left-hand" threads.


6. Install the one-way clutch making sure that the green dot or the word OUTSIDE is directed away from the crankcase.

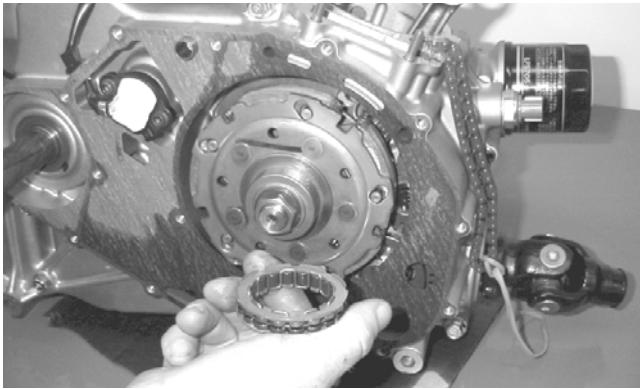

MD1286

AT THIS POINT

Install gear position switch spacer and switch making sure to align the drive pin with the slot in the shift shaft.

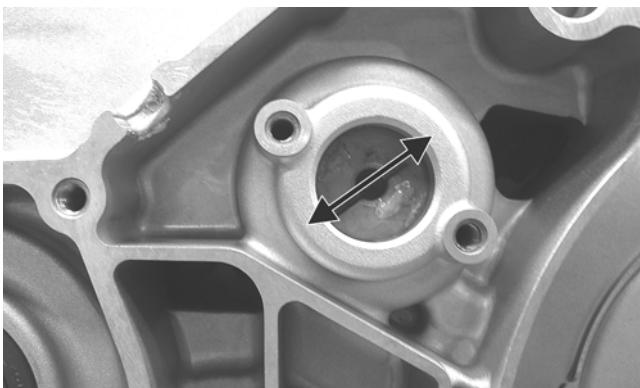

KC325A




KC326B

B. Clutch Cover C. Fixed Drive Face D. Movable Drive Face


■**NOTE:** Steps 1-6 in the preceding sub-section must precede this procedure.

7. Install two alignment pins and place the clutch cover gasket into position. Install the clutch cover.

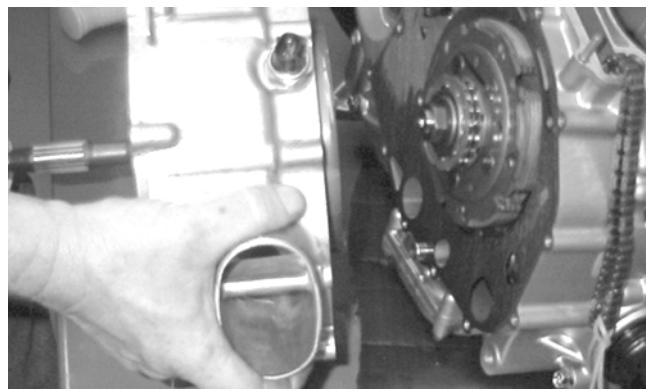


MD1115

8. Tighten the clutch cover cap screws to 8 ft-lb.

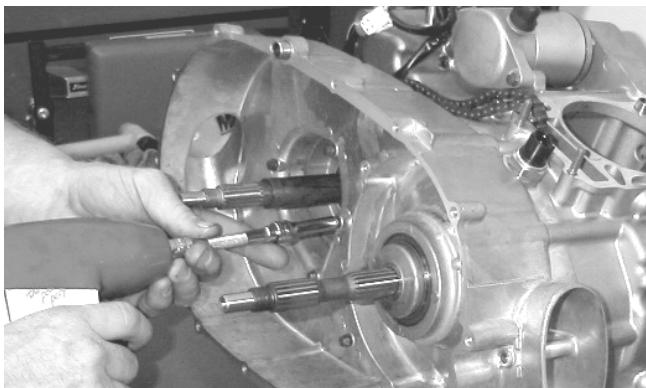


MD1117

9. Install the air intake plate. Apply red Loctite #271 to the threads of the three Phillips-head cap screws; then install and tighten securely.

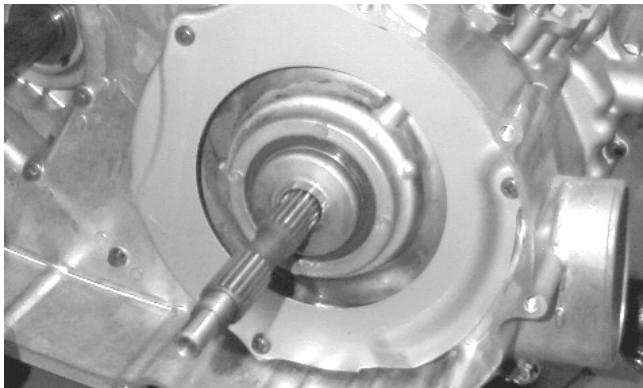


MD1342

10. Place the driven pulley assembly into position and secure with the nut (threads coated with red Loctite #271). Tighten to 147 ft-lb.

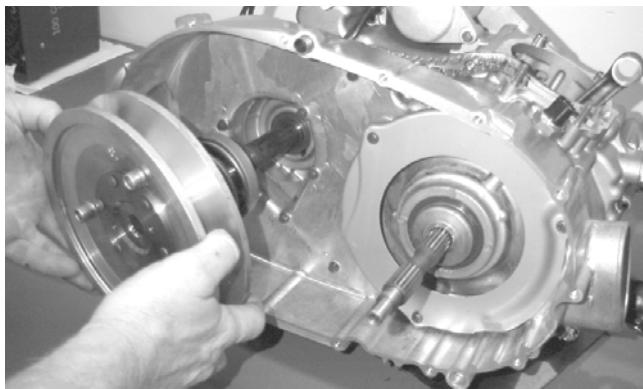


MD1068

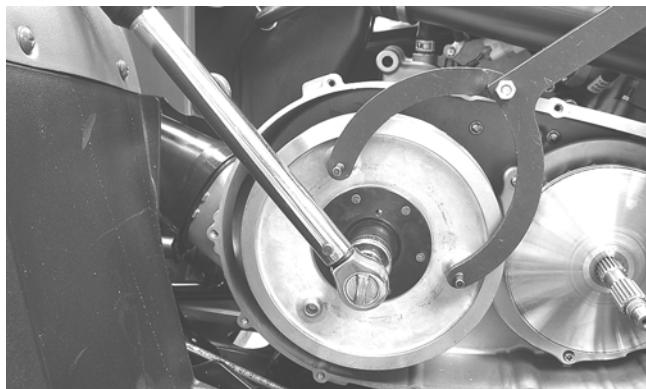

KC134


11. Slide the fixed drive face assembly onto the front shaft.
12. Spread the faces of the driven pulley by threading a V-belt cover cap screw into the fixed driven face and tightening until the faces open sufficiently to allow the V-belt to drop into the pulley approximately 3/4 in.

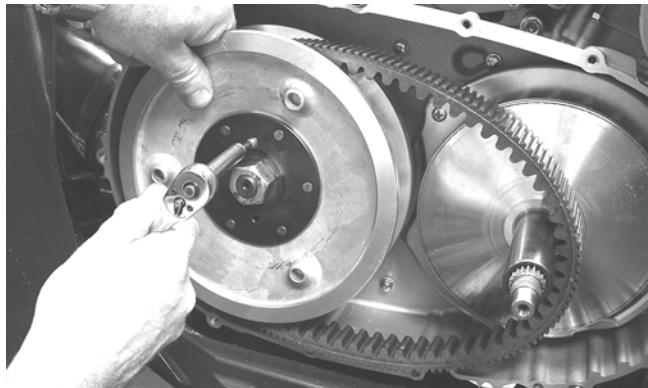

KC137

■**NOTE: The arrows on the V-belt should point in direction of engine rotation.**

13. Making sure the movable drive face rollers are in position, pinch the V-belt together near its center and slide the spacer and movable drive face onto the shaft.

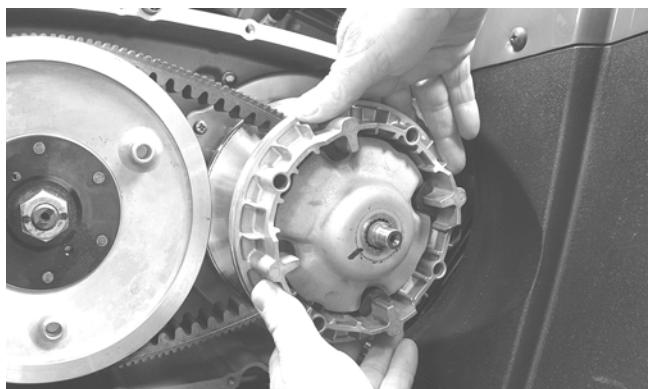


KC127

14. Coat the threads of the nut with red Loctite #271; then making sure the splines of the clutch shaft protrude through the cover plate, secure with the nut and tighten to 147 ft-lb.




KC138

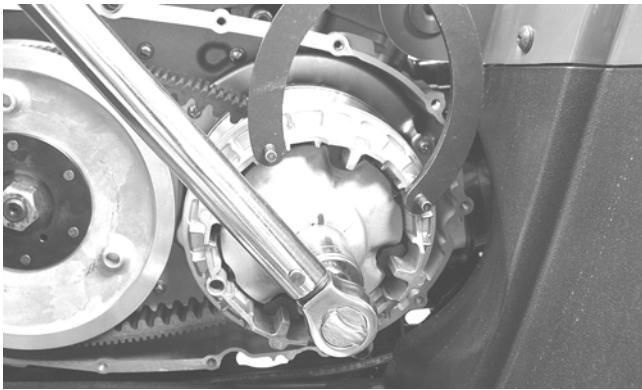

■NOTE: At this point, the cap screw can be removed from the driven pulley face.

15. Rotate the V-belt and drive/driven assemblies until the V-belt is flush with the top of the driven pulley.
16. Install two alignment pins and place a new V-belt cover gasket into position on the clutch cover. In a crisscross pattern, tighten cap screws to 8 ft-lb.

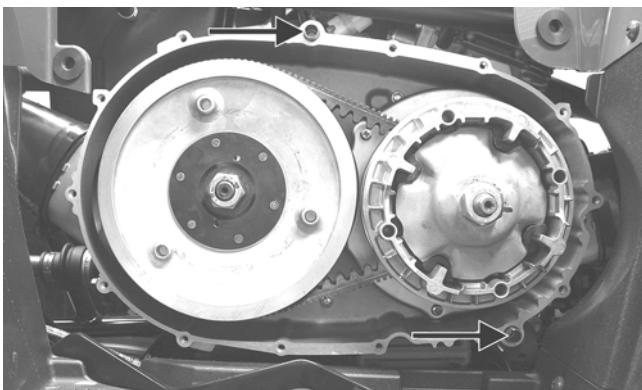


Center Crankcase Components

■NOTE: This procedure cannot be done with the engine/transmission in the frame. Complete Removing procedures for Top-Side, Left-Side, and Right-Side must precede this procedure.


■NOTE: For efficiency, it is preferable to remove and disassemble only those components which need to be addressed and to service only those components. The technician should use discretion and sound judgment.

Separating Crankcase Halves

1. Remove the left-side and right-side cap screws securing the crankcase halves noting the position of the different-sized cap screws for joining purposes.

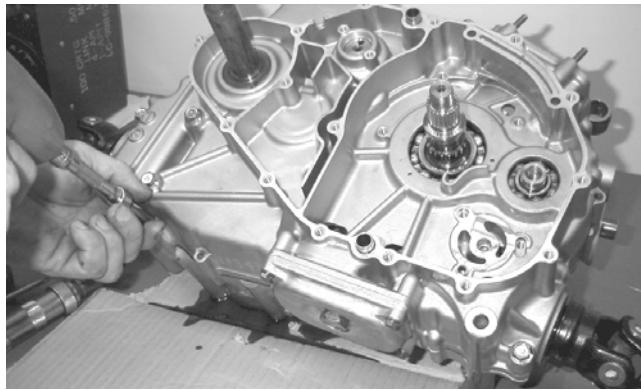

2. Using Crankcase Separator/Crankshaft Remover and tapping lightly with a rubber mallet, separate the crankcase halves. Account for two alignment pins.

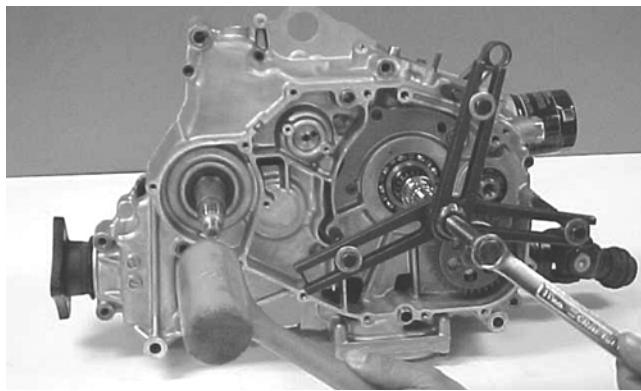


■NOTE: To keep the shaft/gear assemblies intact for identification, tap the shafts toward the left-side crankcase half when separating the halves.



Disassembling Crankcase Half

1. Remove the secondary and primary driveshaft assemblies. Account for the bearing alignment C-ring on the bearing boss next to the driven gear.

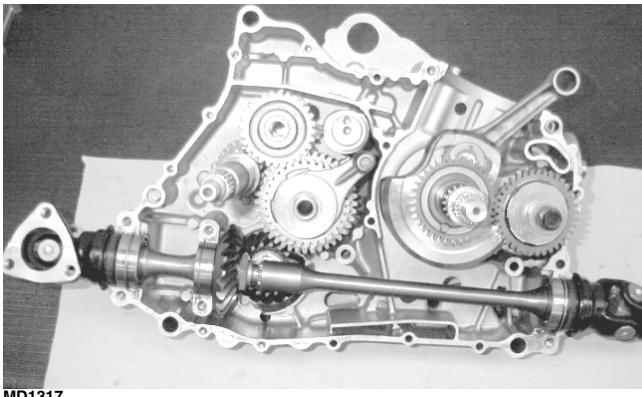

MD1317

■**NOTE: Note the location of the bearing alignment pin on the secondary output shaft.**

2. Remove the reverse idler gear, spacer, and sleeve. Account for the washer.



MD1325

3. Remove the driveshaft.



MD1326

4. Remove the shift fork shaft and the outer shift fork.



MD1327

5. Remove snap ring and gear from the output side of the gear cluster. Remove the gear cluster and the inner shift fork together. Account for snap ring, gear, and washer.




MD1328

6. Noting the position of the slot on the end, remove the shift cam assembly. Account for inner and outer washers.




KC325

7. Remove the counterbalance gear. Account for the key.
8. Remove the counterbalance shaft.

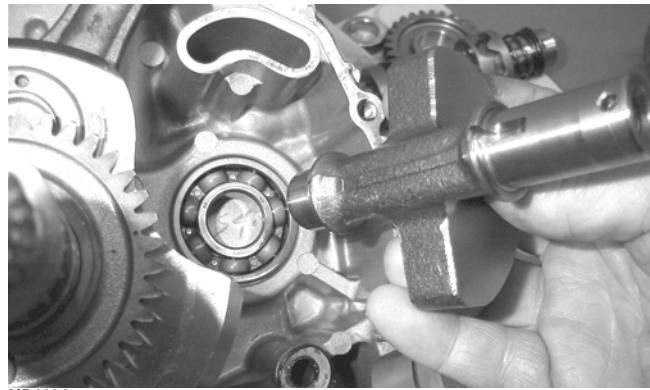

MD1024

9. Using Crankcase Separator/Crankshaft Remover, remove the crankshaft.

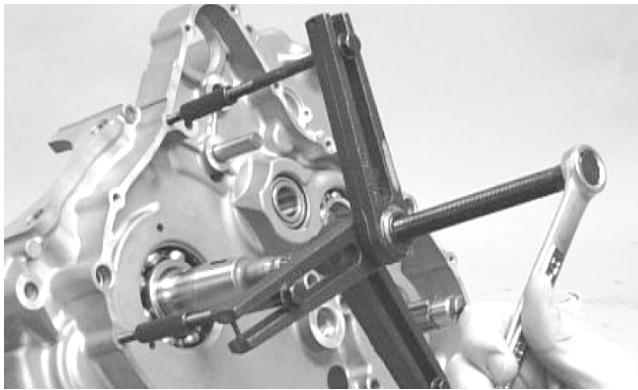

MD1330

CAUTION

Do not remove the remaining output shaft assembly unless absolutely necessary. If the shaft is removed, the shaft nut must be replaced with a new one and the shaft must be re-shimmed.

10. Remove the secondary drive gear/secondary driven gear retaining nut. From inside the crankcase using a rubber mallet, drive out the output shaft assembly. Account for the output shaft, a shim, a washer, and the nut.

☞ AT THIS POINT

To service crankshaft assembly, see Servicing Center Crankcase Components sub-section.

Servicing Center Crankcase Components

SECONDARY GEARS

■NOTE: When checking and correcting secondary gear backlash and tooth contact, the output drive flange must be secured to the front shaft or false measurements will occur.

Checking Backlash

■NOTE: The rear shaft and bevel gear must be removed for this procedure. Also, always start with the original shims on the rear shaft.

1. Place the left-side crankcase cover onto the left-side crankcase half to prevent runout of the secondary transmission output shaft.
2. Install the secondary driven output shaft assembly onto the crankcase.
3. Mount the indicator tip of the dial indicator on the secondary driven bevel gear (centered on the gear tooth).
4. While rocking the driven bevel gear back and forth, note the maximum backlash reading on the gauge.
5. Acceptable backlash range is 0.05-0.33 mm (0.002-0.013 in.).

Correcting Backlash

■NOTE: If backlash measurement is within the acceptable range, no correction is necessary.

1. If backlash measurement is less than specified, remove an existing shim, measure it, and install a new thinner shim.

2. If backlash measurement is more than specified, remove an existing shim, measure it, and install a thicker shim.

■NOTE: Continue to remove, measure, and install until backlash measurement is within tolerance. Note the following chart.


| Backlash Measurement | Shim Correction |
|-----------------------------------|-------------------------|
| Under 0.05 mm (0.002 in.) | Decrease Shim Thickness |
| At 0.05-0.33 mm (0.002-0.013 in.) | No Correction Required |
| Over 0.33 mm (0.013 in.) | Increase Shim Thickness |

Checking Tooth Contact

■NOTE: After correcting backlash of the secondary driven bevel gear, it is necessary to check tooth contact.


1. Remove the secondary driven output shaft assembly from the left-side crankcase half.
2. Clean the secondary driven bevel gear teeth of old oil and grease residue.
3. Apply a thin, even coat of a machinist-layout dye to several teeth of the gear.
4. Install the secondary driven output shaft assembly.
5. Rotate the secondary driven bevel gear several revolutions in both directions.
6. Examine the tooth contact pattern in the dye and compare the pattern to the illustrations.

Incorrect (contact at tooth top)

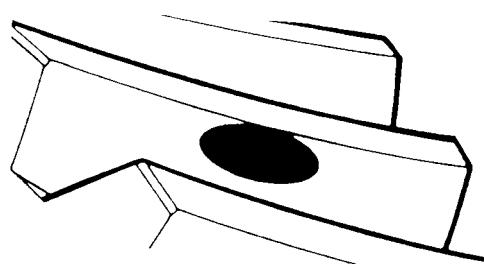


ATV-0103

Incorrect (contact at tooth root)

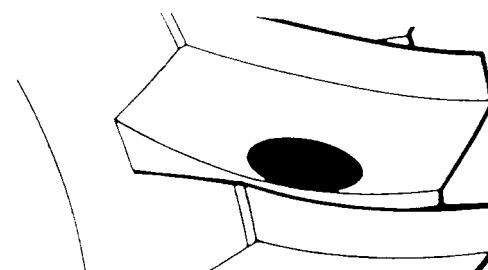

ATV-0105

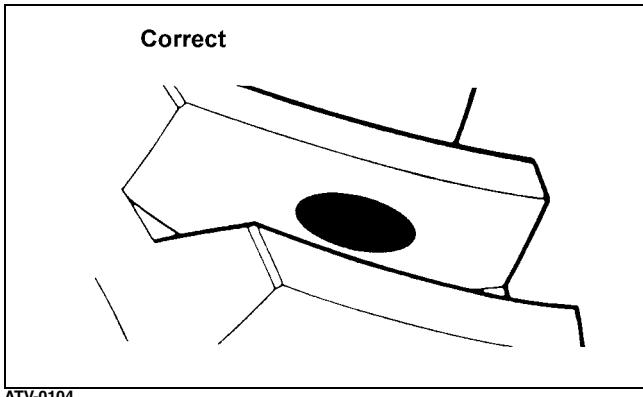

ATV-0104

Correcting Tooth Contact

■**NOTE:** If tooth contact pattern is comparable to the correct pattern illustration, no correction is necessary.

If tooth contact pattern is comparable to an incorrect pattern, correct tooth contact according to the following chart.

| Tooth Contact | Shim Correction |
|------------------|-------------------------|
| Contacts at Top | Decrease Shim Thickness |
| Contacts at Root | Increase Shim Thickness |

■**NOTE:** To correct tooth contact, steps 1 and 2 (with NOTE) of "Correcting Backlash" must be followed and the above "Tooth Contact/Shim Correction" chart must be consulted.

CAUTION


After correcting tooth contact, backlash must again be checked and corrected (if necessary). Continue the correcting backlash/correcting tooth contact procedures until they are both within tolerance values.

CRANKSHAFT ASSEMBLY

Measuring Connecting Rod (Small End Inside Diameter)

■**NOTE:** The crankshaft and connecting rod is a non-serviceable assembly. If any component is out of specification, the assembly must be replaced.

1. Insert a snap gauge into the upper connecting rod small end bore; then remove the gauge and measure it with micrometer.

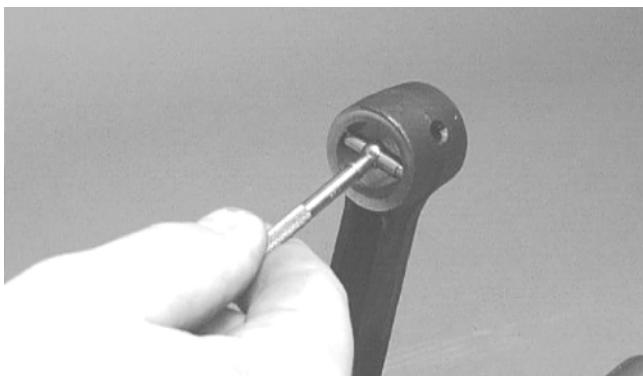

CC290D


2. Maximum diameter must not exceed specifications.

Measuring Connecting Rod (Small End Deflection)

1. Place the crankshaft on a set of V-blocks and mount a dial indicator and base on the surface plate. Position the indicator contact point against the center of the connecting rod small end journal.
2. Zero the indicator and push the small end of the connecting rod away from the dial indicator.
3. Maximum deflection must not exceed specifications.

Measuring Connecting Rod (Big End Side-to-Side)

1. Push the lower end of the connecting rod to one side of the crankshaft journal.
2. Using a feeler gauge, measure the gap between the connecting rod and crankshaft journal.

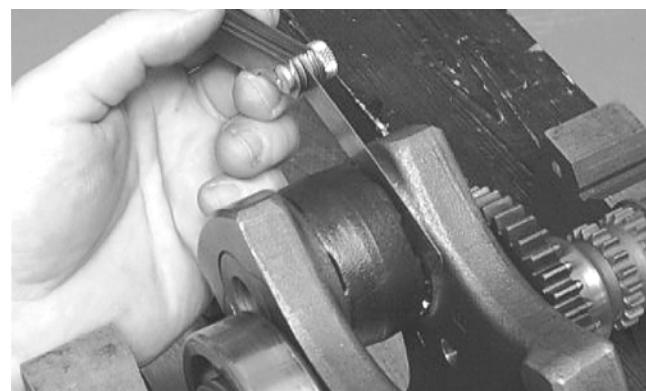

CC289D


3. Acceptable gap range must be within specifications.

Measuring Connecting Rod (Big End Width)

1. Using a calipers, measure the width of the connecting rod at the big-end bearing.
2. Acceptable width range must be within specifications.

Measuring Crankshaft (Runout)

1. Place the crankshaft on a set of V blocks.
2. Mount a dial indicator and base on the surface plate. Position the indicator contact at point 1 of the crankshaft.

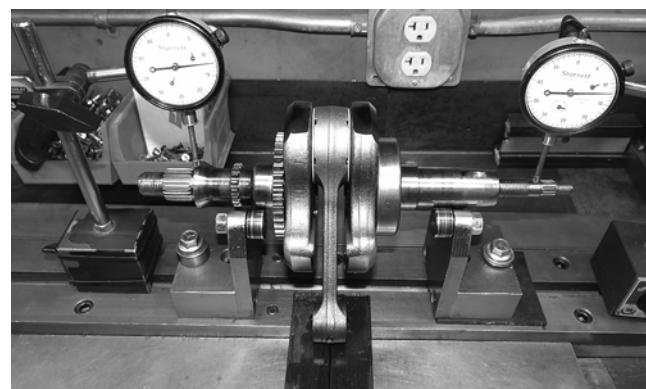

KC512

3. Zero the indicator and rotate the crankshaft slowly.

CAUTION


Care should be taken to support the connecting rod when rotating the crankshaft.

4. Maximum runout must not exceed specifications.

■**NOTE:** Proceed to check runout on the other end of the crankshaft by positioning the indicator contact at point 2 and following steps 3-4.

Measuring Crankshaft (Web-to-Web)

1. Using a calipers, measure the distance from the outside edge of one web to the outside edge of the other web.

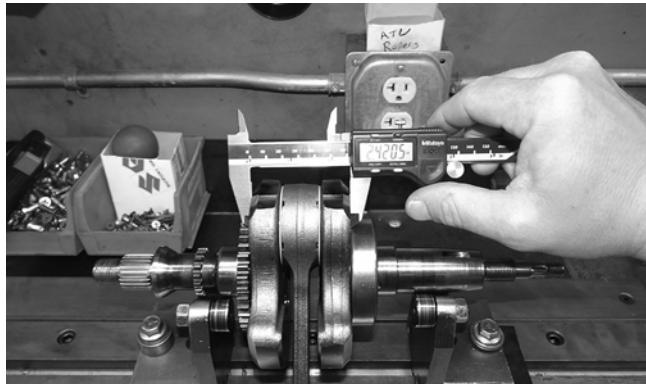

KC513

2. Acceptable width range must be within specifications.

COUNTERSHAFT

CAUTION

When disassembling the countershaft, care must be taken to note the direction each major component (dog, gear) faces. If a major component is installed facing the wrong direction, transmission damage may occur and/or the transmission will malfunction. In either case, complete disassembly and assembly will be required.

Disassembling

1. Remove the reverse driven gear dog; then remove the circlip securing the reverse driven gear.



FI663




FI664

2. Remove the splined washer; then remove the reverse driven gear along with the bearing and bushing.



FI665

3. Remove the low driven gear washer; then remove the low driven gear along with the bearing and bushing.

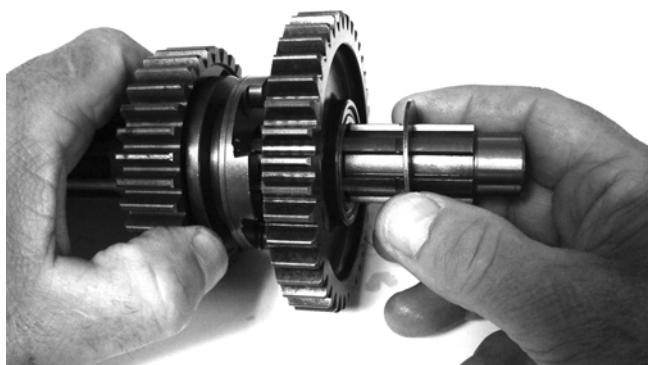

FI666



FI667

4. Remove the splined washer; then remove the circlip securing the high-low sliding dog. Remove the sliding dog.



FI668

Assembling

- With the high driven washer (1) on the countershaft, install the high driven gear bushing (3), bearings (2), and gear (4) on the countershaft; then install the washers (5) and secure with the snap-ring.



FI669

- Remove the circlip securing the high driven gear; then remove a washer, the high driven gear along with the bearing and bushing, and remove the high driven washer.




FI670

FI671A



FI670

- Install the high/low shift dog (6) on the countershaft and secure with snap-ring (7); then install the splined washer (8).

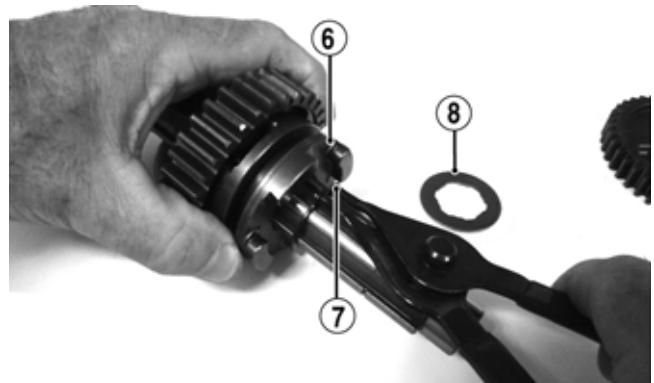


FI668A

- Install the low driven bushing (10), bearing (9), and gear (11) on the countershaft; then install splined washer (12).




FI671

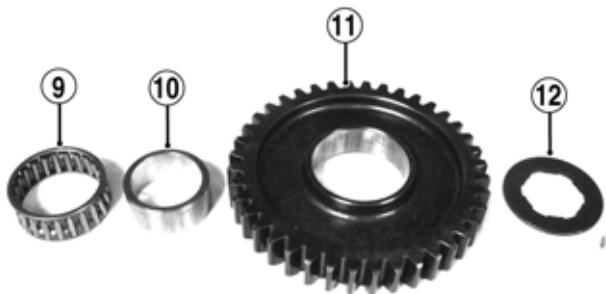

FI667A



FI663

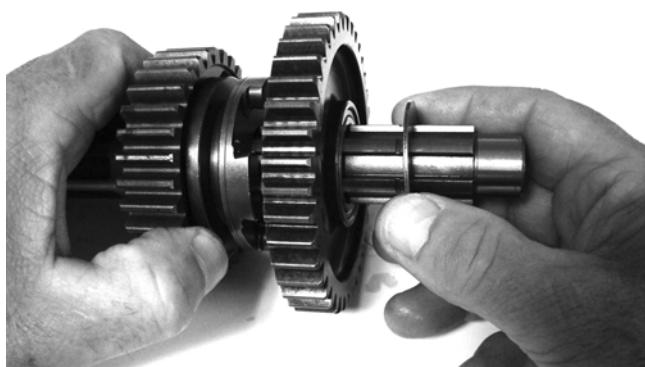

FI666

4. Place the reverse driven bushing (13) onto the shaft; then install the bearing (14), gear (15), and splined washer (16). Secure with a snap-ring.




FI665A



FI664

5. Install the reverse dog on the shaft; then place the shift forks and shift shaft into position.

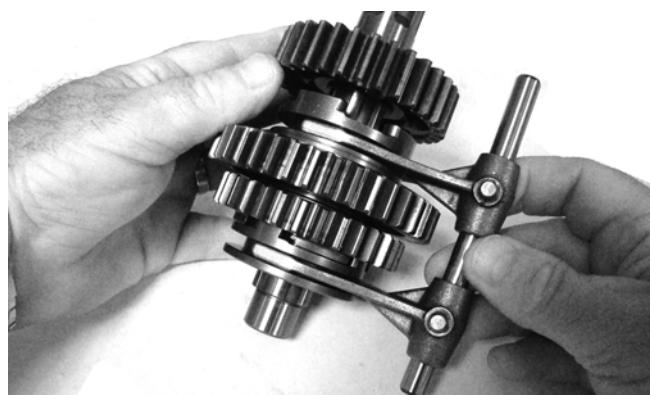

FI662


■**NOTE:** The countershaft assembly is now ready to be installed.

Assembling Crankcase Half

■**NOTE:** For ease of assembly, install components on the right-side crankcase half.

■**NOTE:** If the output shaft was removed, make sure that the proper shim is installed.

1. Install the output shaft into the crankcase making sure the two gears, shim, washer, and nut are in the correct order.

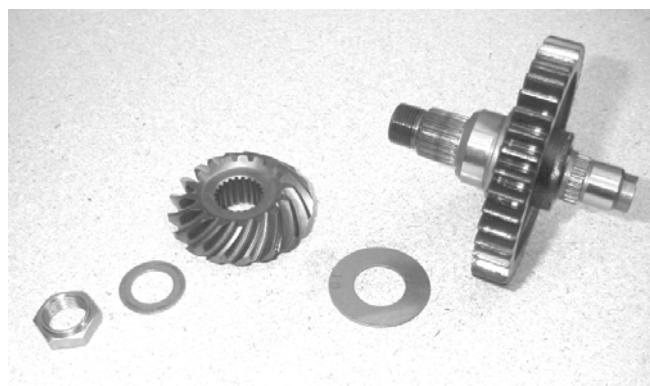


MD1199



MD1079

2. Apply red Loctite #271 to the threads of the output shaft. Install and tighten the nut 59 ft-lb. Using a punch, peen the nut.

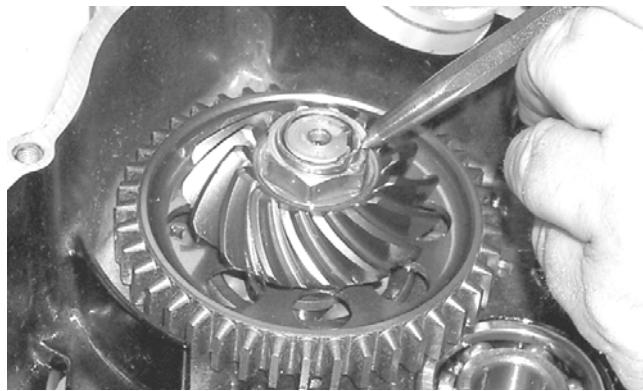

MD1333

3. Apply a liberal amount of oil to the crankshaft bearing. Using a propane torch, heat the bearing until the oil begins to smoke; then slide the crankshaft assembly into place.



MD1334


■NOTE: If heating the bearing is not possible, the crankshaft can be installed using a crankshaft installer.

4. Rotate the crankshaft so the counterweight is toward the rear of the engine. Install the crank balancer shaft.
5. Install the key in the crank balancer shaft; then install the gear and aligning the timing marks, slide the gear into place.




FI658

6. Align the shift cam fork slots with the shift fork shaft locating boss and with a washer on each end, install the shift shaft into the crankcase.

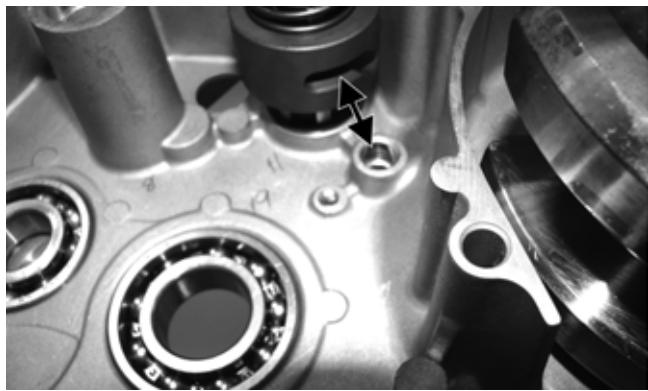

FI652A

7. Place the shift forks into position on the assembled countershaft and install into the crankcase as an assembly.

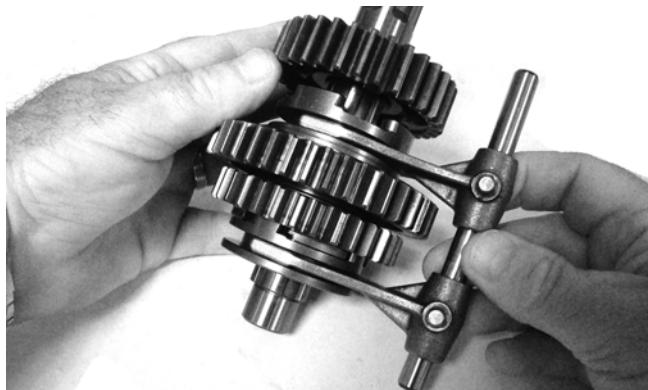

FI662



FI653

8. Align the shift forks to allow engagement with the shift cam; then engage the shift forks and slide the shift fork shaft into the locating boss in the crankcase.



FI653A




FI655A

9. Install the input driveshaft.




FI646

10. Install the spacer (1), shaft (2), reverse idler gear, and washer (3).

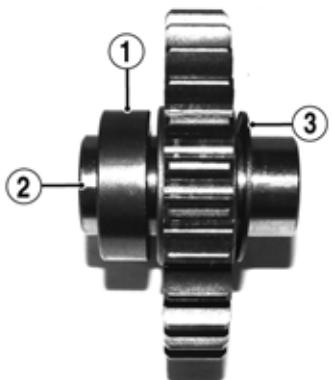


FI641A

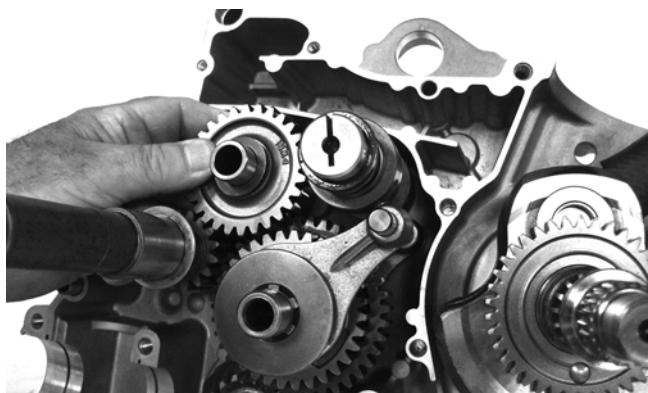


FI645

11. Install the secondary output driveshaft assembly into the crankcase half making sure the front and rear bearing alignment pins are seated in the recesses; then install the center carrier bearing alignment C-ring.

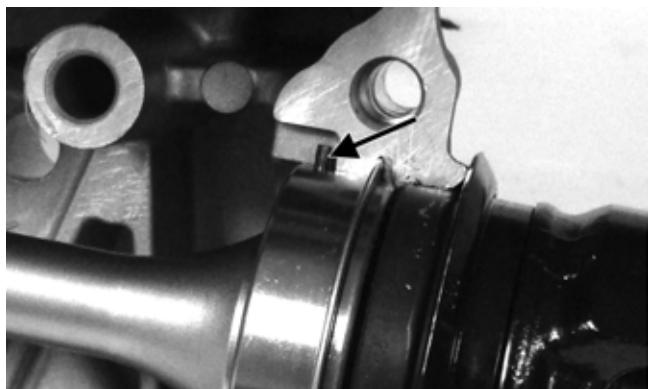

FI660A

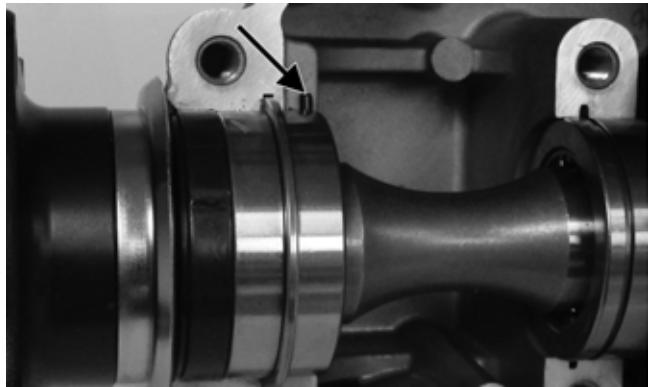


FI659A



FI661A


Joining Crankcase Halves

1. Verify that the two alignment pins are in place and that both case halves are clean and grease free. Apply Three Bond Sealant to the mating surfaces. Place the right-side half onto the left-side half.

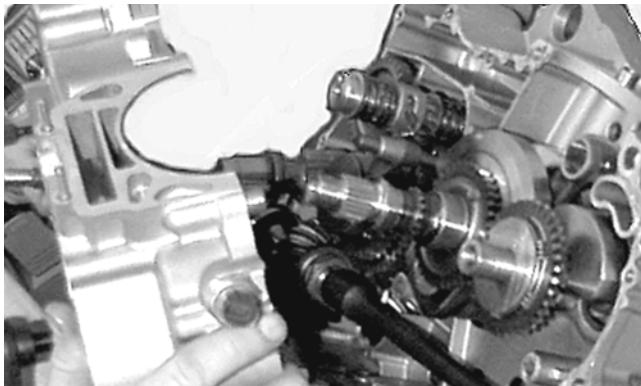


2. Using a plastic mallet, lightly tap the case halves together until cap screws can be installed.
3. From the right side, install the crankcase cap screws noting the location of the different-sized cap screws; then tighten only until snug.

■NOTE: Rotate the shafts back and forth to ensure no binding or sticking occurs while tightening the cap screws.

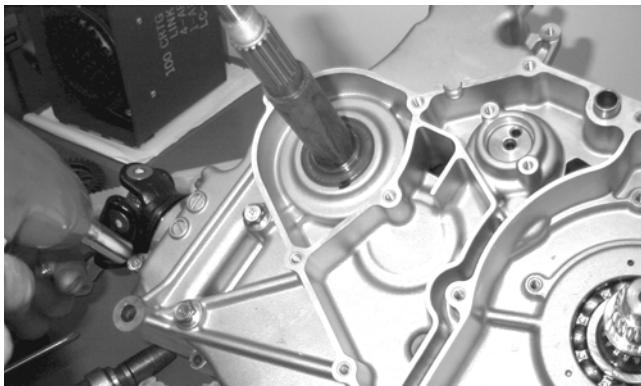

4. From the left side, install the remaining crankcase cap screws; then tighten only until snug.

■NOTE: Rotate the shafts back and forth to ensure no binding or sticking occurs while tightening the cap screws.

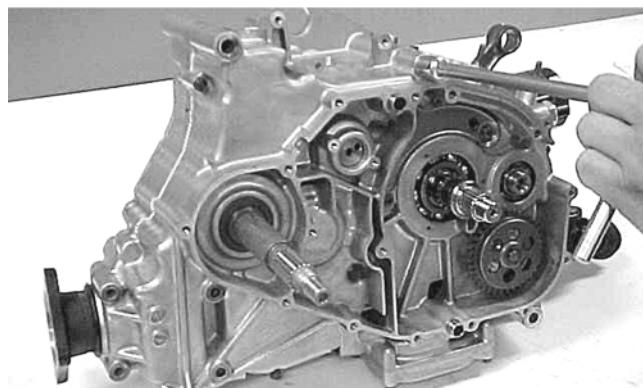

CC871

5. In a crisscross/case-to-case pattern, tighten the 8 mm cap screws until the halves are correctly joined; then tighten to 21 ft-lb.

■NOTE: Rotate the shafts back and forth to ensure no binding or sticking occurs.

6. In a crisscross/case-to-case pattern, tighten the 6 mm cap screws to 10 ft-lb.


■NOTE: Rotate the shafts back and forth to ensure no binding or sticking occurs.

AT THIS POINT

After completing center crankcase components, proceed to **Installing Right-Side Components**, to **Installing Left-Side Components**, and to **Installing Top-Side Components**.


Installing Engine/Transmission

1. From the right side, place the engine/transmission into the frame tilting the top-side forward to clear the frame member.

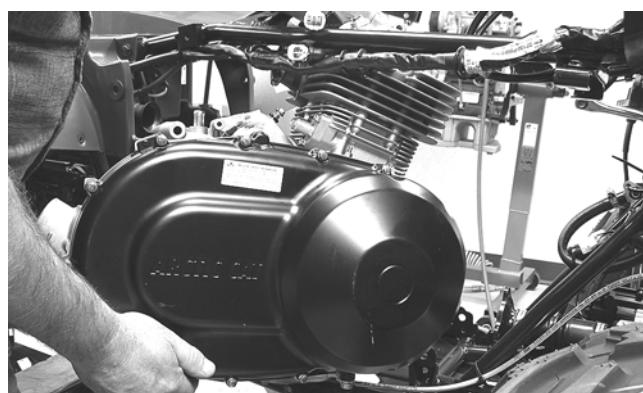


KC216


2. Install the front and rear engine mounting through-bolts and secure with the flange nuts. Tighten to 38 ft-lb.
3. Align the front and rear output flanges with the drive couplers; then secure with the screws and tighten to 20 ft-lb.

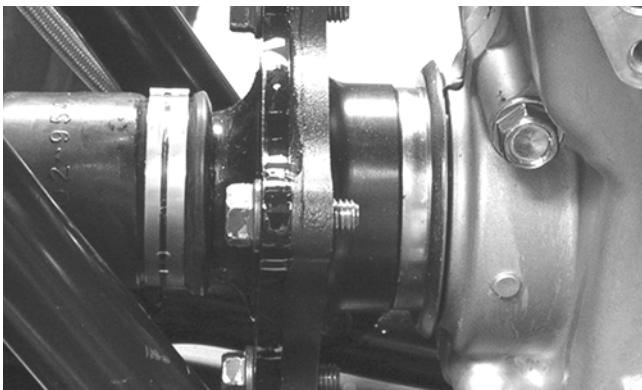


KC242

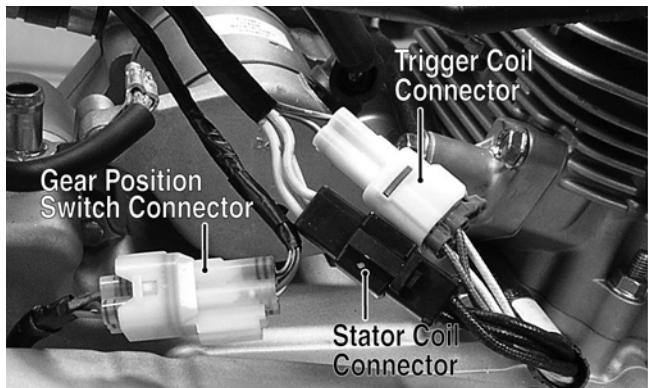


KC228C

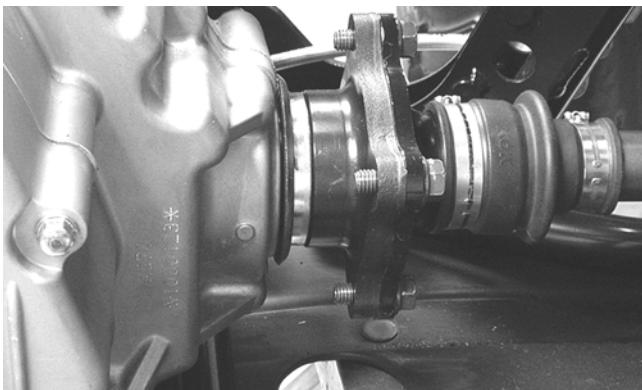


KC243

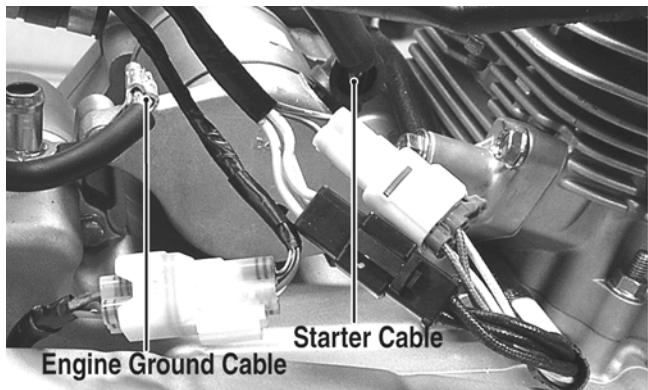


KC228B

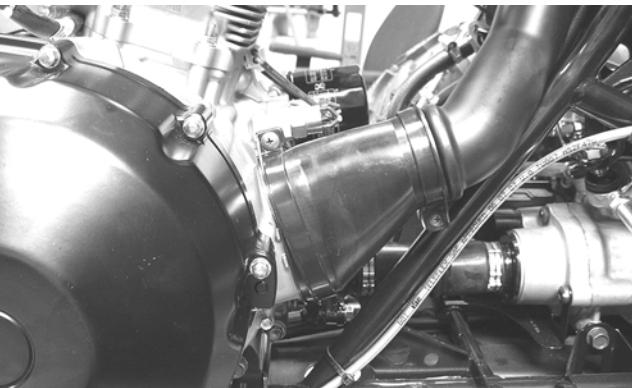

KC235

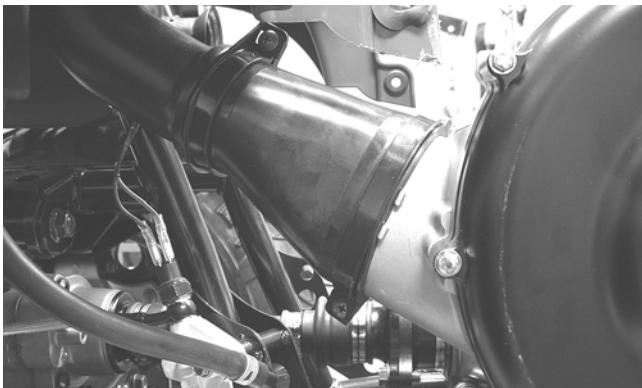


KC236

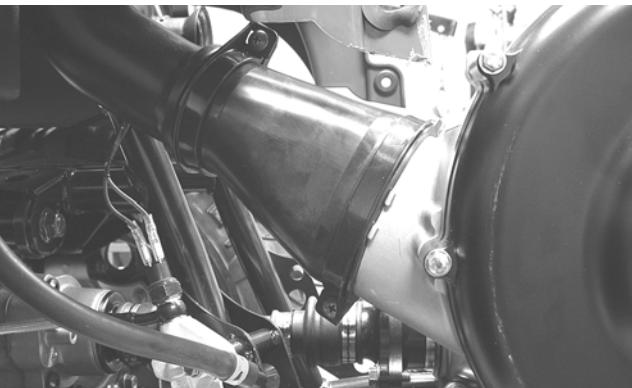


5. Connect the stator coil, trigger coil, and gear position switch connectors; then attach the engine ground cable and starter cable and secure with cap screws and nuts. Tighten to 8 ft-lb.



KC237

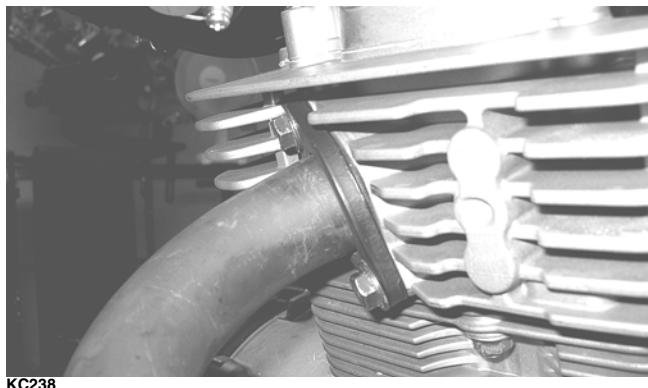


KC238

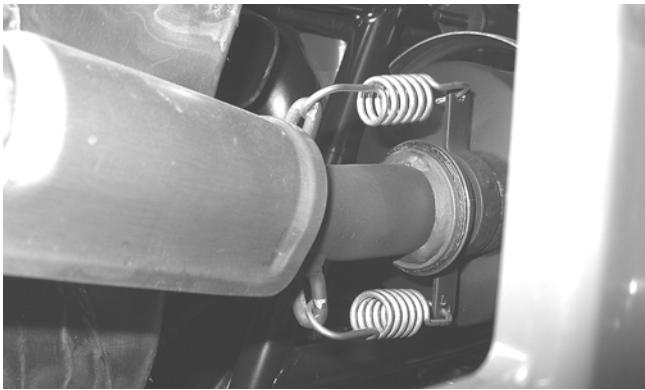


KC170

7. Place the carburetor into the intake pipe being careful to align the lug on the carburetor with the alignment tabs on the air intake pipe; then tighten the clamp securely.

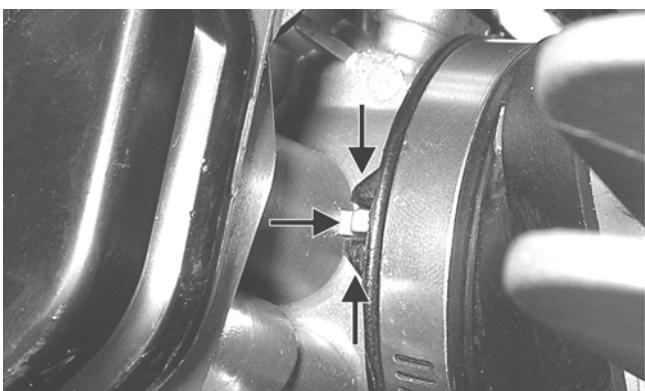


KC245A

8. Install the air filter housing onto the frame; then connect the inlet air duct, air silencer duct, and intake housing to carburetor boot and tighten all hose clamps securely.

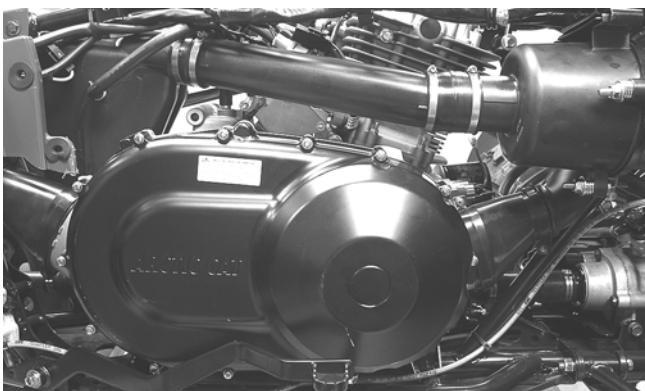

KC254

9. Install the shift rod onto the shift arm with bushing and flat washer and secure with an E-clip; then connect the speedometer sensor plug.

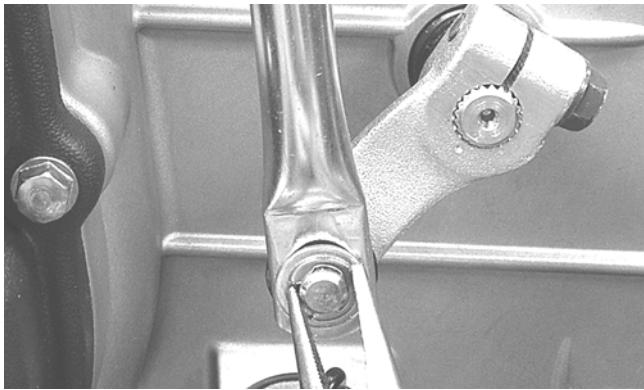

KC255




KC248


10. Connect the oil temperature connector and cooling fan connector; then using new O-rings, install the oil fittings onto the crankcase and secure with the cap screws. Tighten to 8 ft-lb.





KC249

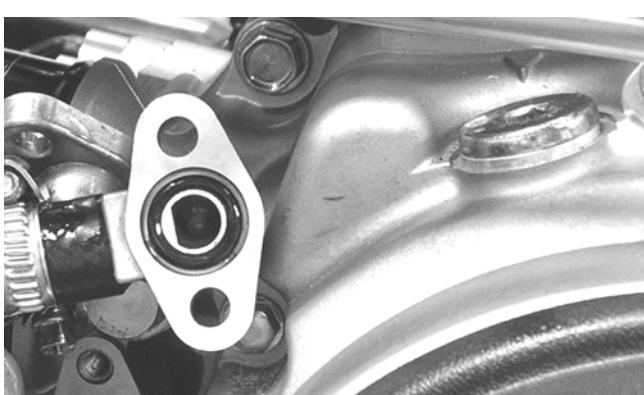

KC250

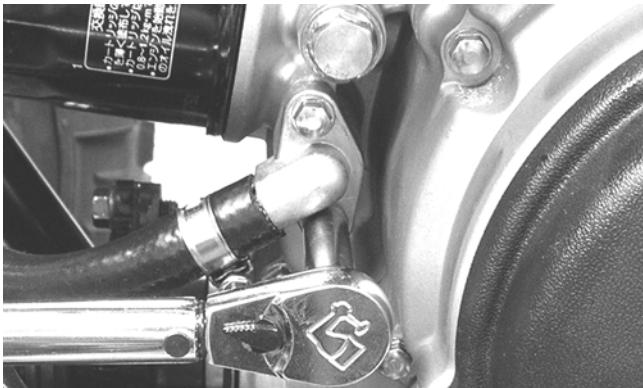

11. If the brake pedal was removed during disassembling, apply grease to the brake pedal pivot stud; then install the brake pedal and secure with a flat washer and cap screw. Tighten to 20 ft-lb.

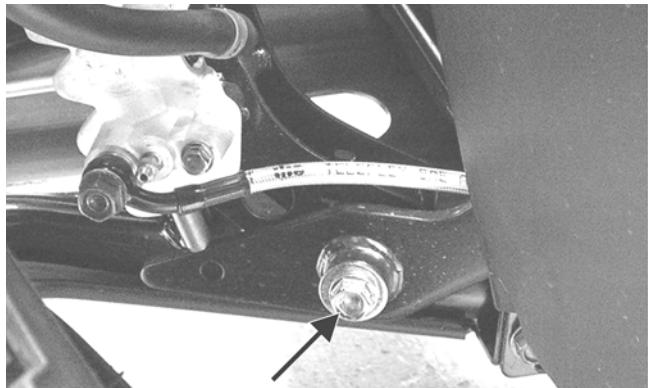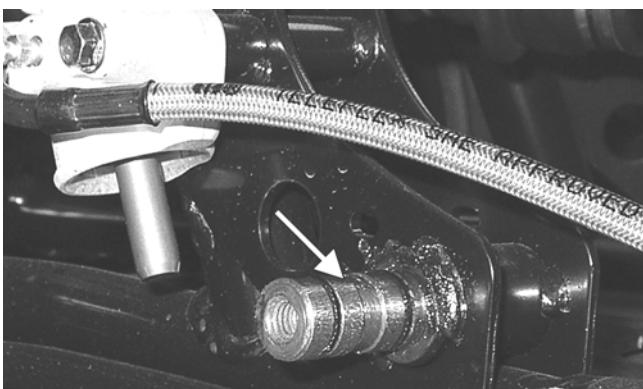

12. Install the heat shield; then install the gas tank (see Fuel/Lubrication/Cooling - Gas Tank).
13. Install the front body panel, front rack, and footwells.
14. Pour the appropriate quantity and grade oil into the crankcase; then connect the negative battery cable and move the ATV outside to a well ventilated area.
15. Start the engine and allow the engine to warm up while checking for oil leaks; then shut the engine off and check the oil level. Add oil as required.

Fuel/Lubrication/Cooling

■NOTE: Arctic Cat recommends the use of new gaskets, lock nuts, and seals and lubricating all internal components when servicing the engine/transmission.

SPECIAL TOOLS

A number of special tools must be available to the technician when performing service procedures in this section. Refer to the current Special Tools Catalog for the appropriate tool description.

■NOTE: When indicated for use, each special tool will be identified by its specific name, as shown in the chart below, and capitalized.

| Description | p/n |
|-----------------------------|----------|
| Electric Choke Test Harness | 0444-247 |
| Oil Pressure Test Kit | 0644-495 |
| Tachometer | 0644-275 |

■NOTE: Special tools are available from the Arctic Cat Service Department.


Electric Choke

REMOVING

1. Disconnect the electric choke connector from the wiring harness; then remove the screw securing the choke body to the carburetor.
2. Carefully remove the choke assembly from the carburetor taking care not to force the plunger from the carburetor body.


INSPECTING/TESTING

1. Inspect the plunger (A) for scoring or scratches, the needle (B) for damage to the tip, the spring (C) for breakage, and the O-ring (D) for breaks.

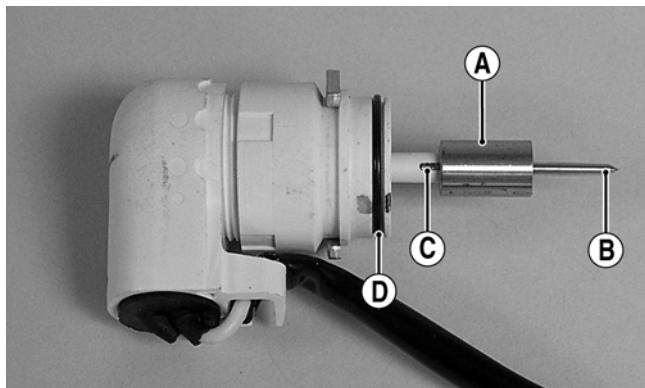


KC328A

2. With the choke at room temperature (approximately 70° F), measure plunger extension. Measurement (A) should be 18.6-19.1 mm.

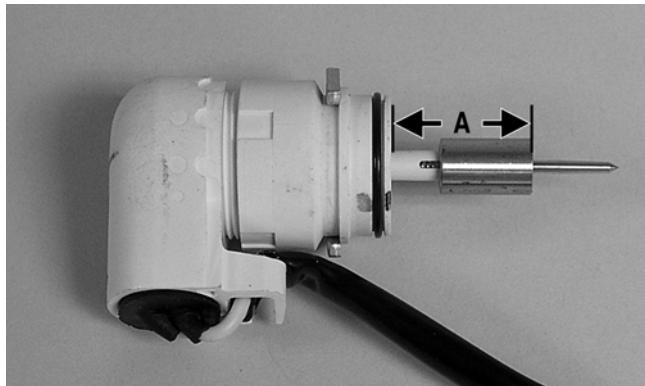

KC328B

3. Connect Electric Choke Test Harness to the choke connector and a suitable 12 DC volt power supply for 2-3 minutes. Disconnect the power and measure plunger extension. Measurement (B) should be 22.1-23.4 mm.

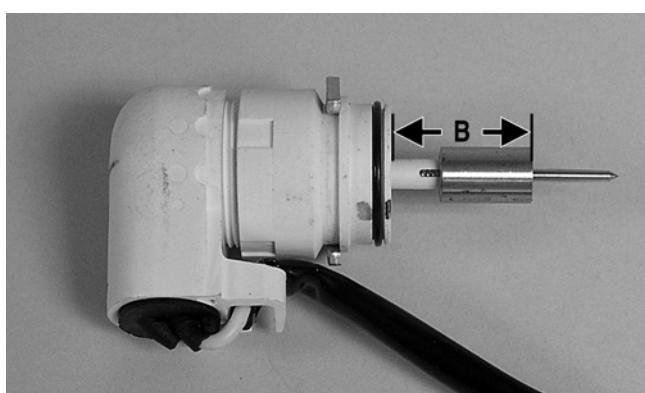

KC328C

4. If the choke is damaged or the measurements are not within specifications, the choke must be replaced.

INSTALLING

1. Lightly lubricate the O-ring on the choke body; then carefully insert the choke assembly into the carburetor being careful not to damage the plunger.
2. Secure the choke with the screw and tighten securely; then connect the choke connector to the wiring harness.


Carburetor

WARNING

Whenever any maintenance or inspection is performed on the fuel system during which there may be fuel leakage, there should be no welding, smoking, open flames, etc., in the area.


REMOVING

1. Remove the gas tank (see Gas Tank in this section).
2. Disconnect the intake air housing boot from the carburetor; then slide the intake air housing to the rear to clear the carburetor.

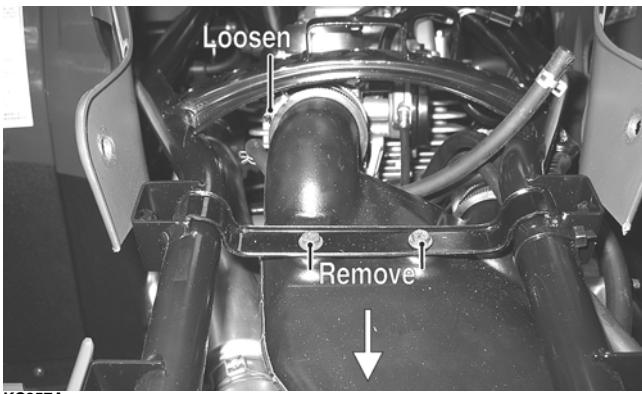

KC257A


3. Loosen the clamp on the intake pipe and lift the carburetor up and to the rear; then disconnect the electric choke connector and vent hose.

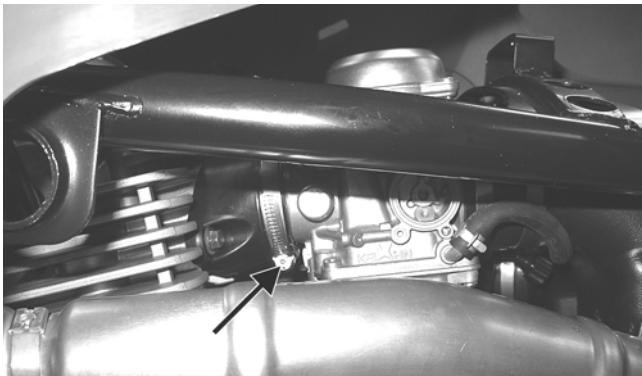

KC256A




KC263

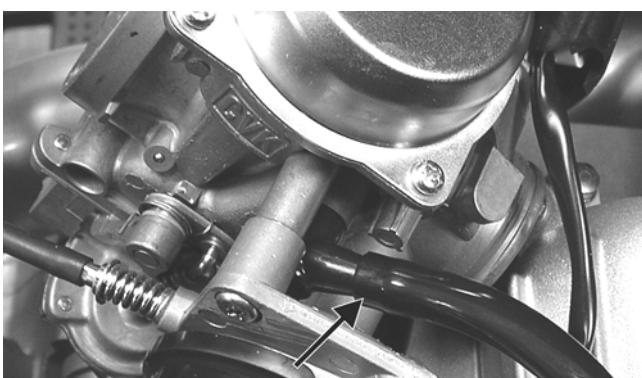

KC264A


4. Remove the throttle arm cover; then loosen the jam nut on the throttle cable and remove the throttle cable from the throttle arm. The carburetor can now be removed for service.

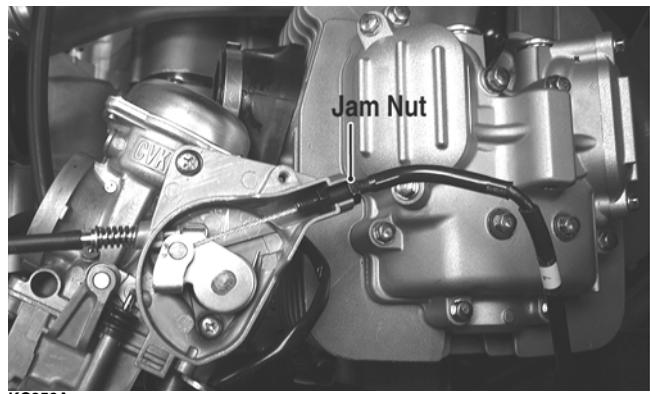

KC258A


DISASSEMBLING

1. Remove the four Phillips-head screws securing the top cover; then remove the cover.

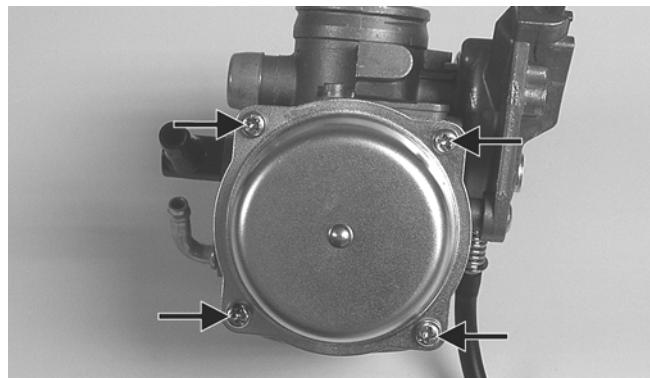


KC0019A

2. Remove the vacuum piston assembly from the carburetor body. Account for a spring, spring seat, and the jet needle.


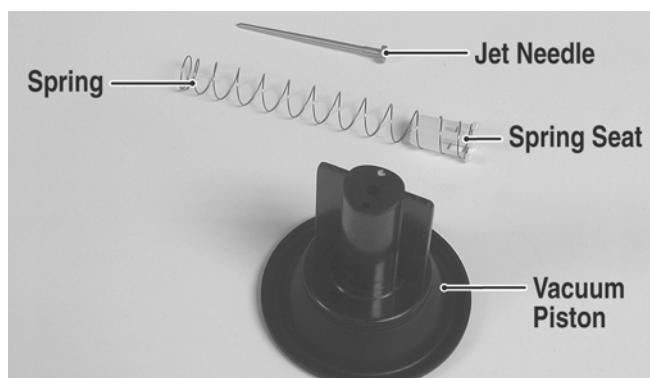


KC0021A


3. Remove the three screws securing the pump housing. Account for the diaphragm assembly, spring, and U-ring (in the housing).

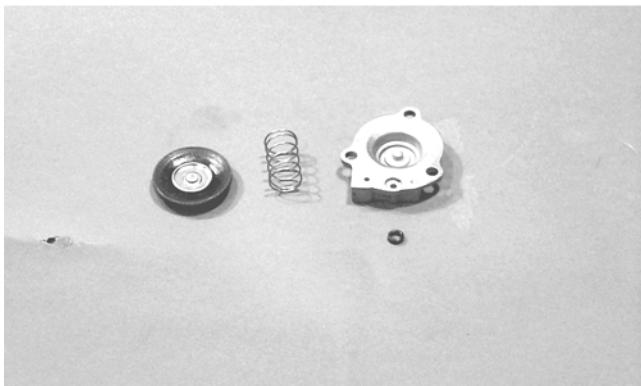


4. Remove the Phillips-head screws securing the float chamber; then remove the chamber. Account for the O-ring.

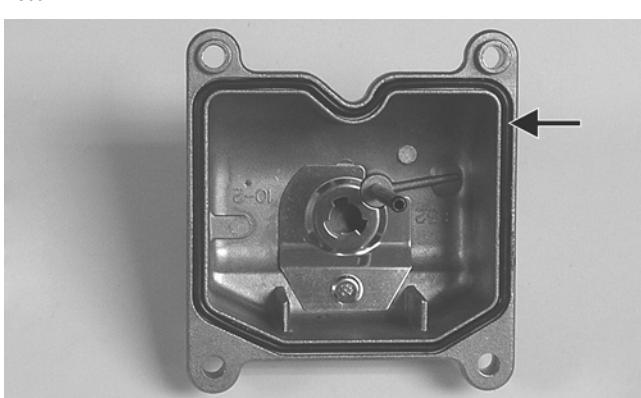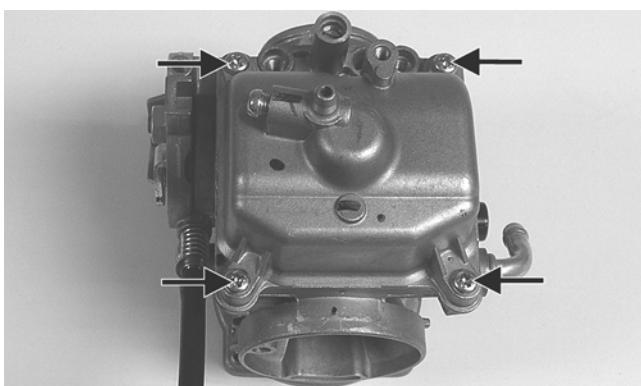


5. Remove the float pin.

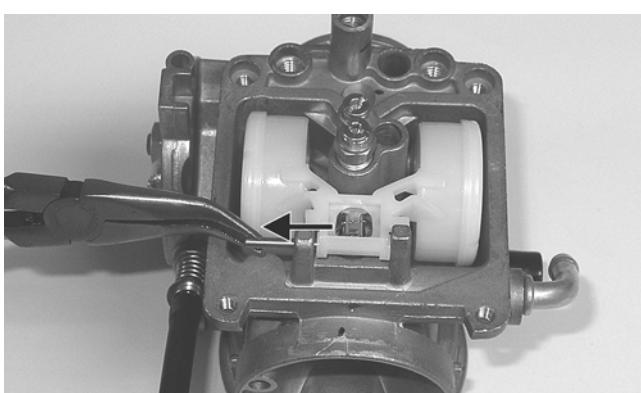


6. Lift the float assembly from the carburetor. Account for the float valve and clip.

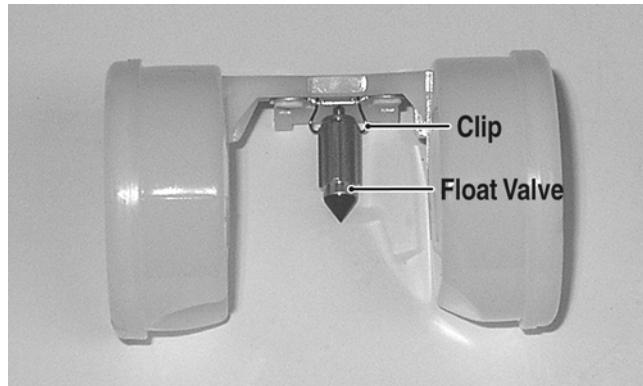


■**NOTE: Note the locations of the jets, pilot screw, and holder for disassembling procedures.**

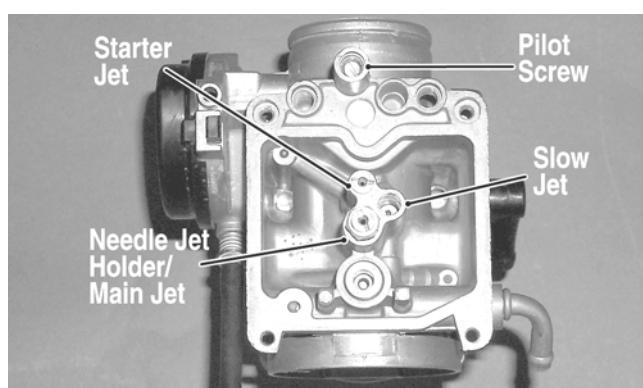

7. Secure the needle jet holder with a wrench; then remove the main jet.
8. Remove the needle jet holder; then remove the needle jet, slow jet, and the starter jet.
9. Remove the pilot screw. Account for a spring, washer, and an O-ring.

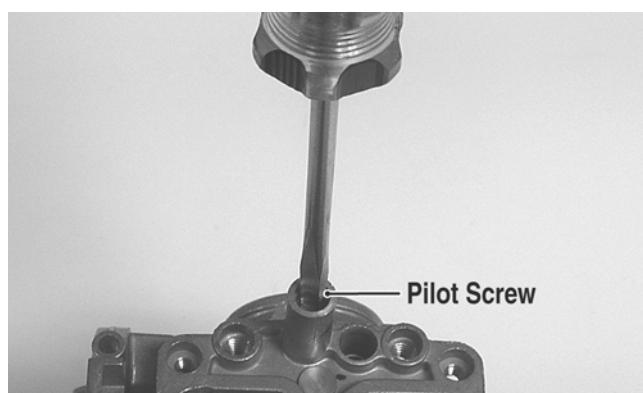

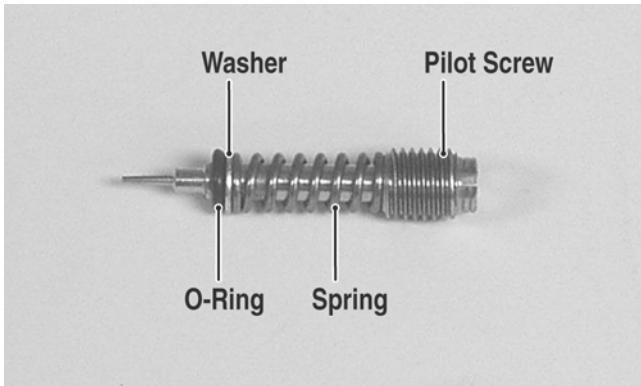

KC0029A

10. Unscrew and remove the idle adjust screw. Account for the spring and washer.

CLEANING AND INSPECTING

WARNING

When drying components with compressed air, always wear safety glasses.

CAUTION

DO NOT place any non-metallic components in parts-cleaning solvent because damage or deterioration will result.

1. Place all metallic components in a wire basket and submerge in carburetor cleaner.
2. Soak for 30 minutes; then rinse with clean, hot water.
3. Wash all non-metallic components with soap and water. Rinse thoroughly.
4. Dry all components with compressed air only making sure all holes, orifices, and channels are unobstructed.
5. Inspect the carburetor body for cracks, nicks, stripped threads, and any imperfections in the casting.
6. Inspect the vacuum piston/diaphragm for cracks, imperfections in the casting, or cracks and tears in the rubber.
7. Inspect float for damage.
8. Inspect gasket and O-rings for distortion, tears, or noticeable damage.
9. Inspect tips of the jet needle, pilot screw, and the needle jet for wear, damage, or distortion.
10. Inspect the slow jet and main jet for obstructions or damage.


■NOTE: If the slow jet is obstructed, the mixture will be extremely lean at idle and part-throttle operation.

11. Inspect the float valve for wear or damage.
12. Inspect the carburetor mounting flange for damage and tightness.


ASSEMBLING

1. Thread the idle adjust screw into the carburetor making sure the washer and spring are properly positioned.

2. Install the pilot screw, spring, washer, and O-ring.

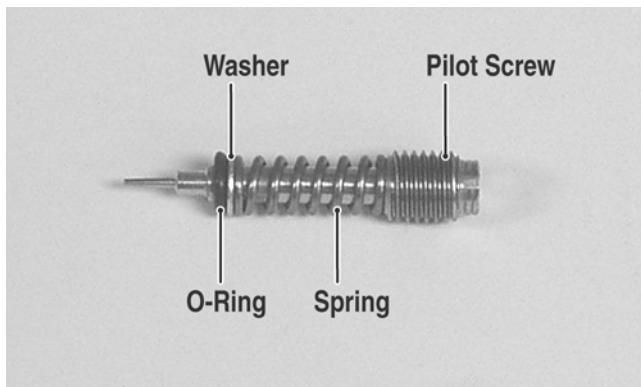


KC0029A

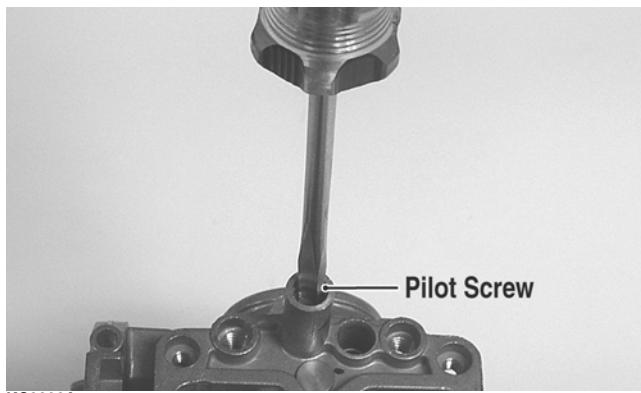

KC0028A


■NOTE: Turn the pilot screw clockwise until it is lightly seated; then turn it counterclockwise the recommended number of turns as an initial setting.

■NOTE: Note the locations of the jets and holder during assembling procedures.

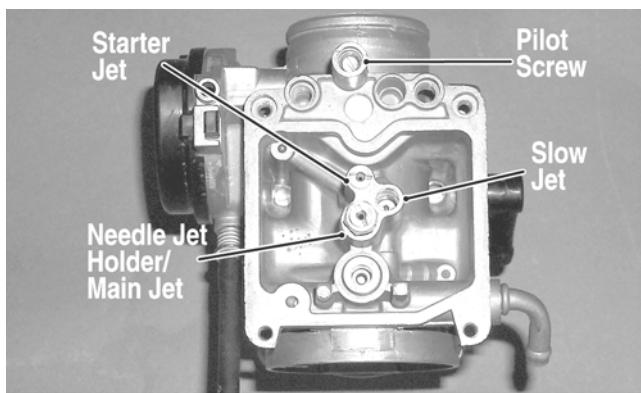


CC761A

3. Install the starter jet and slow jet. Tighten securely.

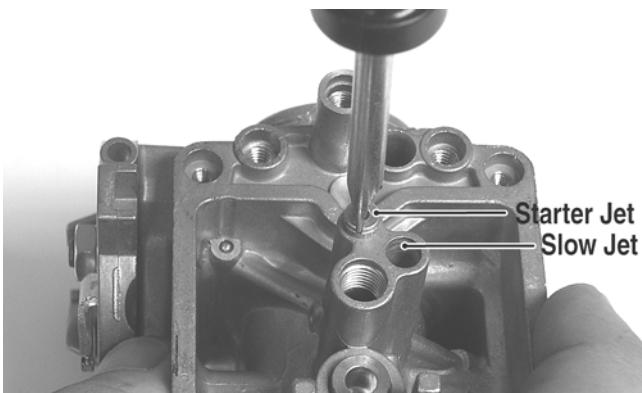


KC0032A

4. Install the main jet into the needle jet holder and tighten securely; then install the needle jet and needle jet holder assembly into the carburetor and tighten securely.

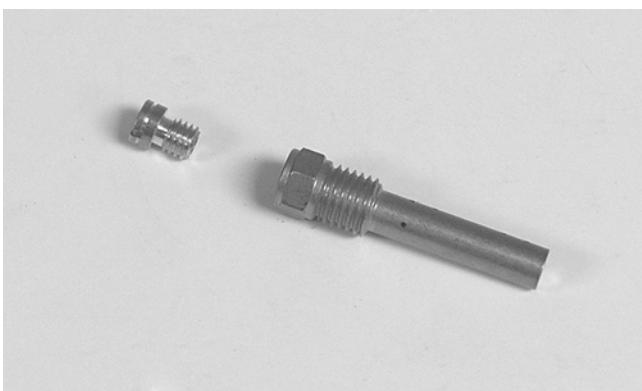


KC0031

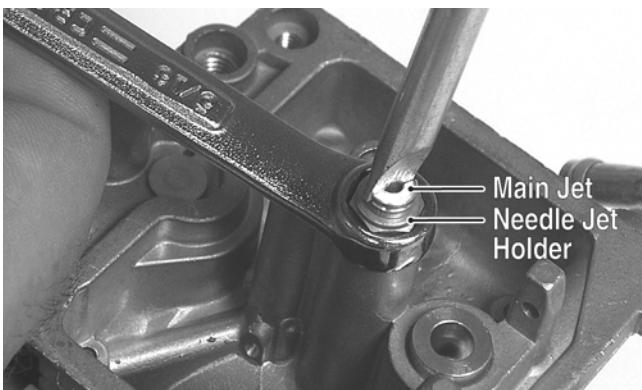


KC0030A

5. Place the float assembly (with float valve) into position and secure to the carburetor with the float pin.

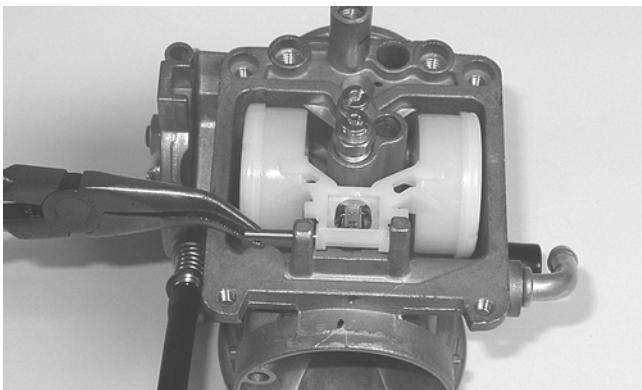


KC0024

■NOTE: Check float height by placing the carburetor on its side w/float contacting the needle; then measure with a caliper the height when the float arm is in contact with the needle valve. Float arm height should be 17 mm.

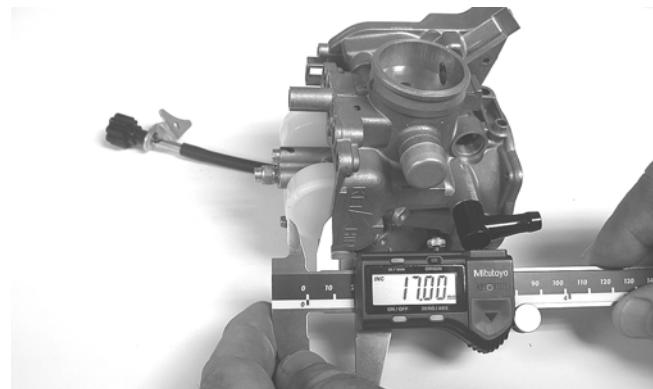


KC0035

6. Place the float chamber into position making sure the O-ring is properly positioned; then secure with the Phillips-head screws.

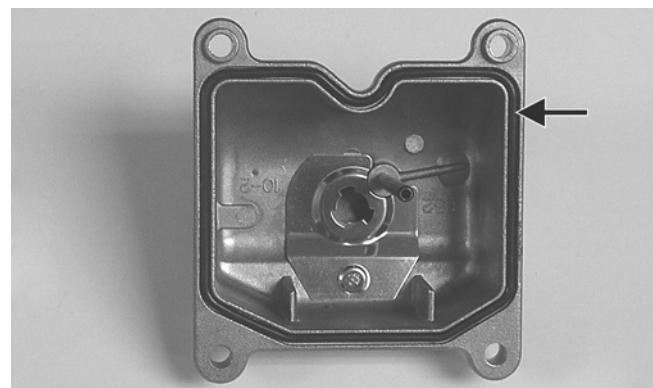


KC0063A

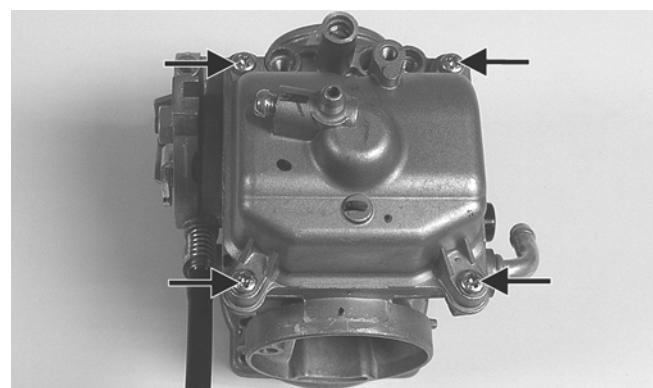

KC0022A

7. Place the U-ring into the pump housing. Position the spring and diaphragm assembly (lip toward the carburetor) onto the carburetor; then secure the assembly with the pump housing and three screws. Tighten securely.

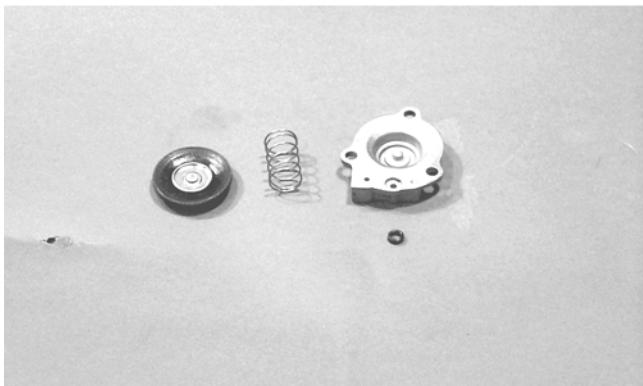


CC748

CAUTION


It is important to press down on the pump housing until it contacts the carburetor to make sure the diaphragm lip is properly seated in the groove in the carburetor. If the diaphragm is not properly seated, leakage will occur.

8. Place the jet needle, spring seat, and spring into the vacuum piston; then place the assembly down into the carburetor.

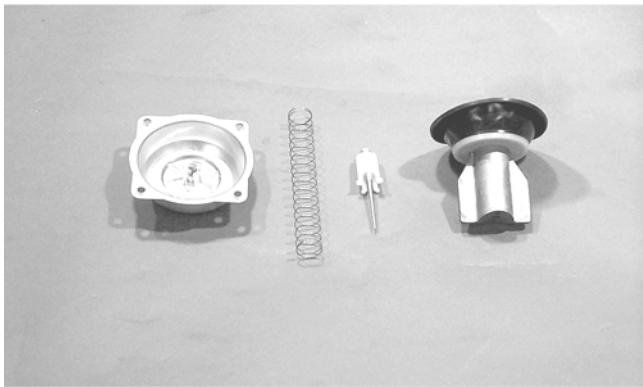

CC746


9. Place the top cover into position; then secure with the Phillips-head screws. Tighten securely.

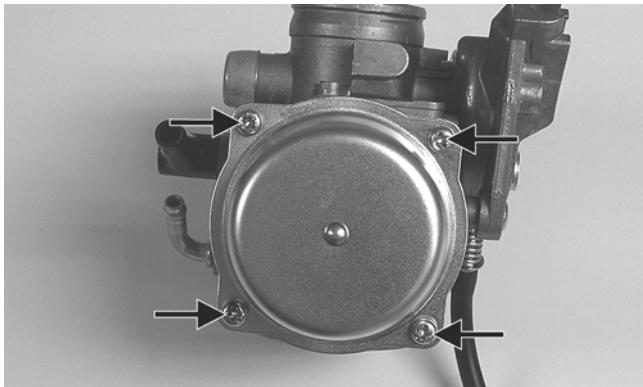


KC0019A

INSTALLING

1. Connect the vent hose to the carburetor; then connect the electronic choke connector and install the throttle cable onto the throttle arm.

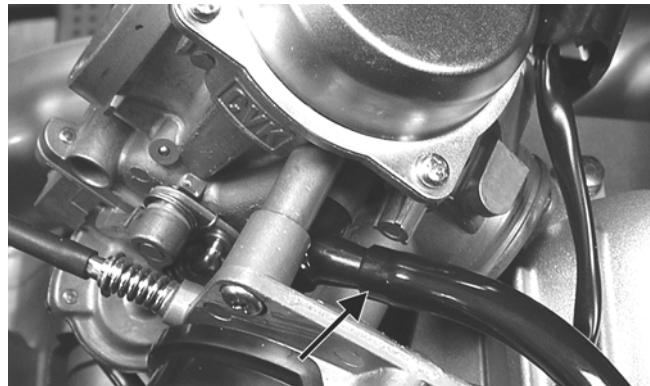


KC264A

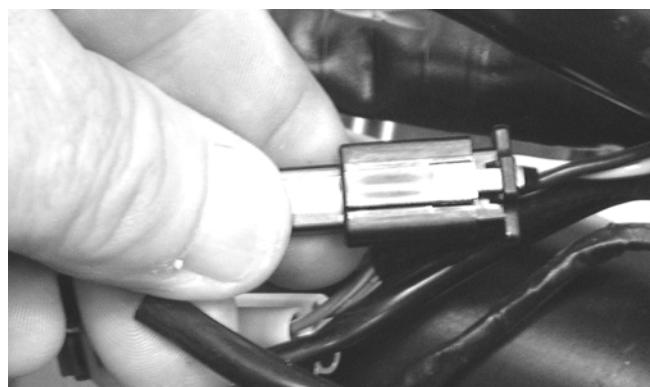

KC263

2. Adjust the throttle cable free-play to specifications (see Throttle Cable Free-Play); then tighten the jam nut securely and install the throttle arm cover.

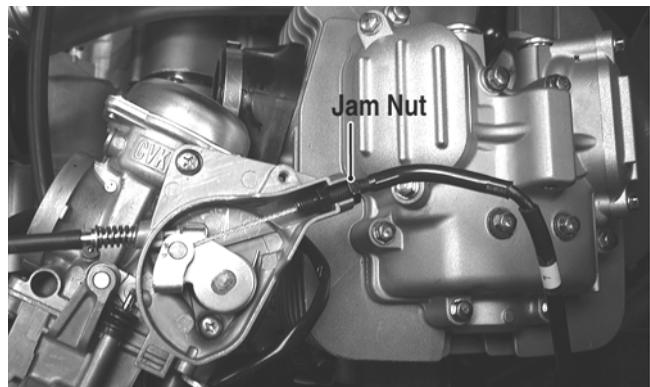


KC258A



KC266

3. Install the carburetor onto the engine making sure the alignment lug on the carburetor is between the two tabs on the air intake pipe; then tighten the clamp securely.

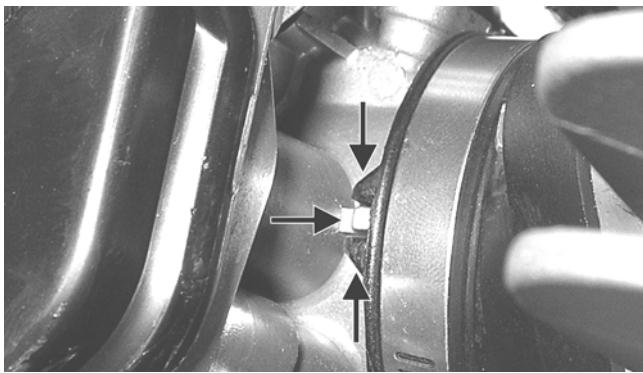


KC245A



KC256A

4. Connect the intake air housing and tighten all clamps and mounting hardware securely.

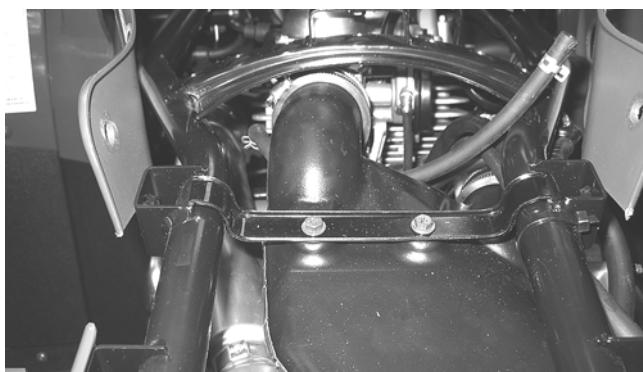


KC257

5. Install the gas tank (see Gas Tank in this section).


Throttle Cable Free-Play

1. Slide the rubber boot away; then loosen the jam nut from the throttle cable adjuster.

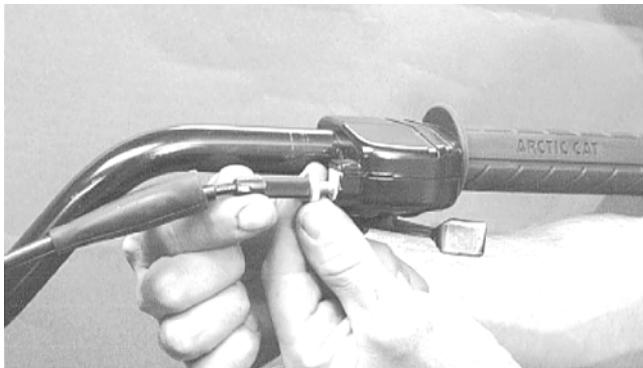

AL611D

2. Turn the adjuster until the throttle cable has proper free-play of 3-6 mm (1/8-1/4 in.) at the lever.

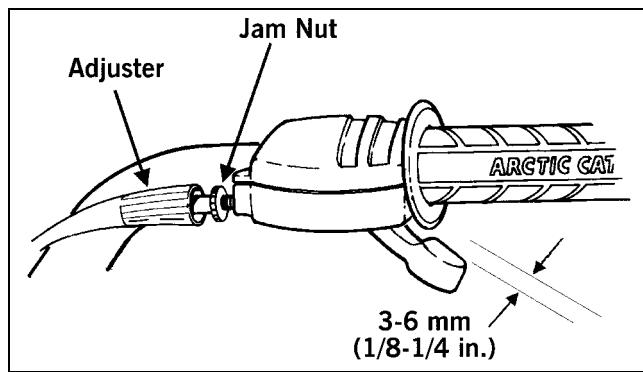

ATV-0047


3. Tighten the jam nut against the throttle cable adjuster securely; then slide the rubber boot over the adjuster.

Engine RPM (Idle)

To properly adjust the idle RPM, a tachometer is necessary. To adjust idle RPM, use the following procedure.

1. With the transmission in neutral, start the engine and warm it up to normal operating temperature.
2. Turn the idle adjustment screw clockwise one turn past the recommended RPM setting; then turn it counterclockwise to 1250-1350 RPM.

■**NOTE:** The idle adjustment screw is located under the seat.

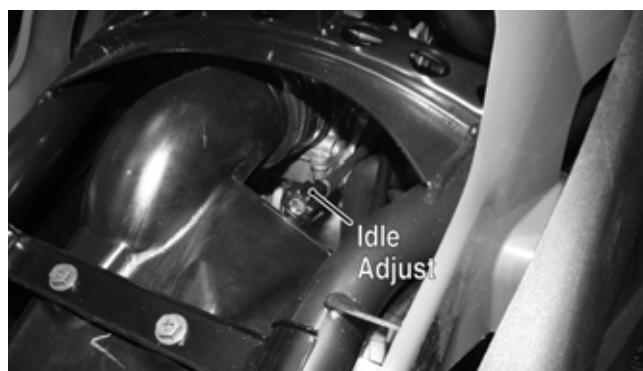

KC356A

WARNING

Adjust the idle to the correct RPM. Make sure the engine is at normal operating temperature before adjusting the idle RPM.


Gas Tank

WARNING

Whenever any maintenance or inspection is made on the fuel system during which there may be fuel leakage, there should be no welding, smoking, open flames, etc., in the area.


REMOVING

1. Turn the fuel shut-off valve to the OFF position; then remove the seat and side panels.
2. Remove the cap screws securing the instrument pod and move it forward.

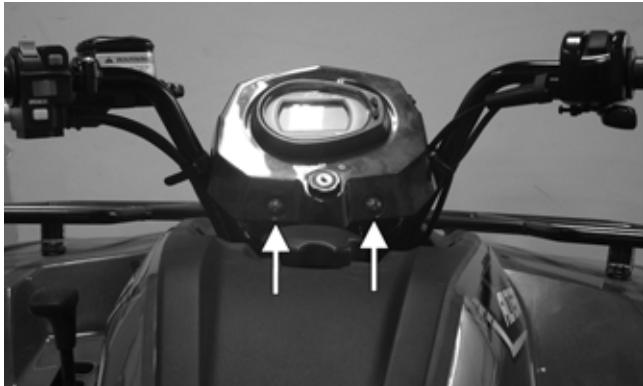

XA017A

3. Remove the cap screws (A) securing the rear of the front body to the frame; then remove the two reinstallable rivets (B) securing the gas tank cover to the body.

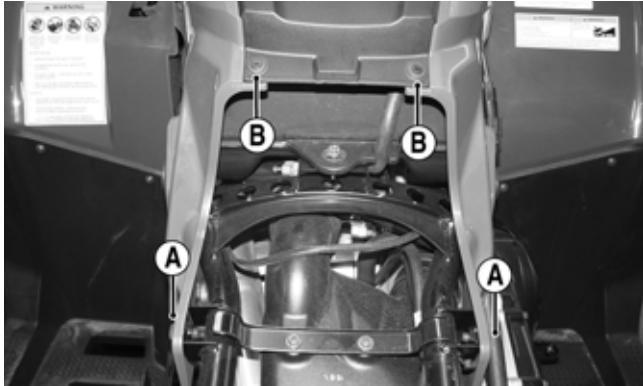

XA005A

4. Remove the front access panel.



XA004

5. Remove the gas tank cap; then remove gas tank cover. Place the cap back on the tank.

6. Using suitable straps, hook the body panel at the rear of the gas tank and route it over the handlebar to the front rack; then pull it tight to spread open the panel at the rear of the gas tank.




KC509A

7. Remove the fuel shut-off valve knob.



KC569

8. Remove the cap screw securing the gas tank to the frame; then unplug the fuel level sensor wires.

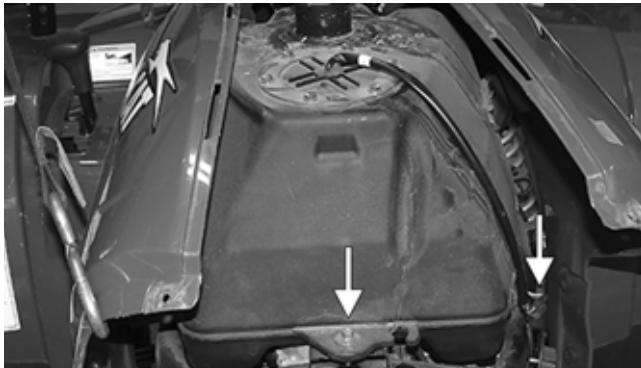


KC568A

9. Using a suitable block, support the rear of the tank; then remove the clamp securing the gasoline hose and remove the hose from the fuel shut-off valve.

WARNING

Gasoline may be under pressure. Place an absorbent towel under the connector to absorb any gasoline spray when disconnecting.

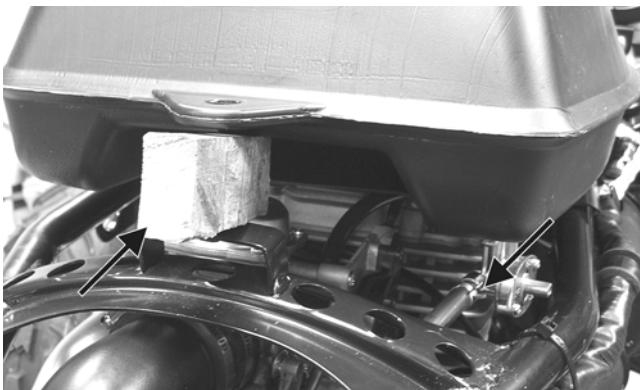

KC241A


10. Remove the gas tank to the rear and account for heat shield.

CLEANING AND INSPECTING

1. Clean all gas tank components with parts-cleaning solvent.
2. Inspect all hoses for cracks or leaks.
3. Inspect tank cap and tank for leaks, holes, and damaged threads.


INSTALLING

1. Using straps to hold the front plastic open, place the gas tank into position in the frame making sure the heat shield is in position.

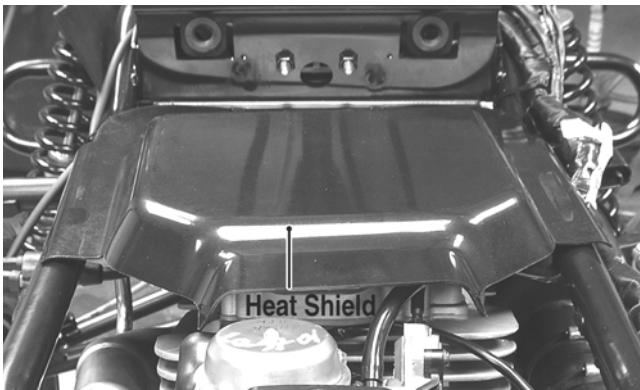


KC252A

2. Using a suitable block, support the rear of the tank and connect the gasline hose. Secure with the clamp.

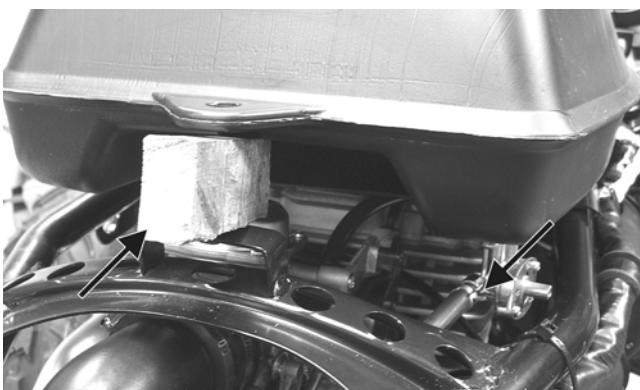


KC241A

3. Remove the block and slide the tank forward, connect the fuel level sensor wires, and insert the cap screw into the rear of tank. Tighten securely.

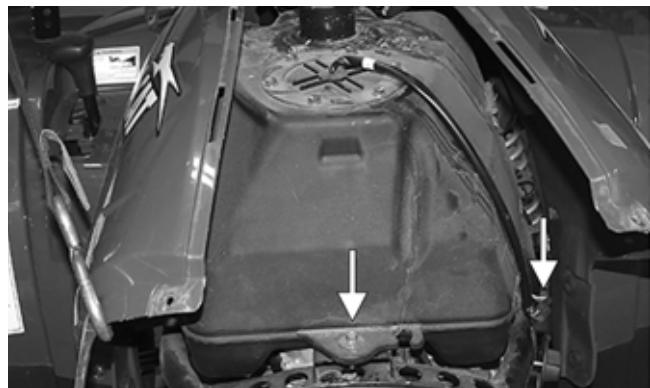

KC568A

4. Remove the straps; then using the existing cap screws, install the instrument pod. Tighten securely.
5. Secure the rear of the front body panel to the frame with the cap screws (A) and tighten securely; then install the gas tank cover and front access panel. Secure it with the reinstallable rivets (B).

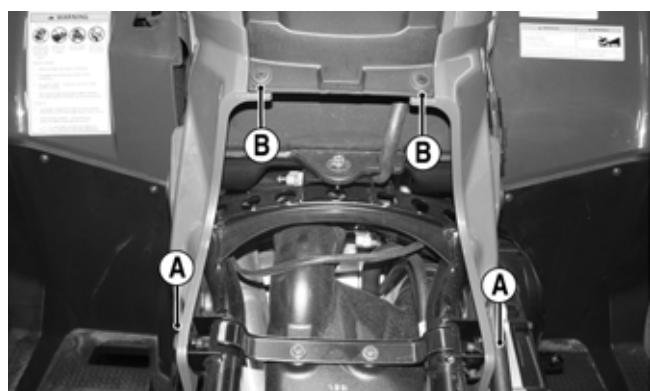

XA005A


6. Install the fuel shut-off valve knob; then turn the valve to the ON position.
7. Install the side panels and seat making sure they lock securely in place.

Oil Pump

■NOTE: Whenever internal engine components wear excessively or break and whenever oil is contaminated, the oil pump should be replaced. The oil pump is not a serviceable component.


TESTING OIL PUMP PRESSURE

1. Connect the Tachometer to the engine or place the gauge in diagnostic mode and select "tACH."
2. Connect the Oil Pressure Test Kit to the oil filter drain plug.

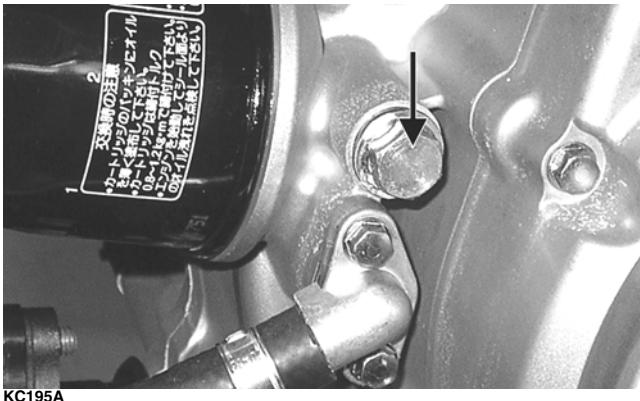

■NOTE: Some oil seepage may occur when installing the oil pressure gauge. Wipe up oil residue with a cloth.

3. Warm up the engine to normal operating temperature (cooling fan cycling); then increase engine RPM to 3000 RPM. The oil pressure must read 1.1-1.7 kg/cm² (16-25 psi).

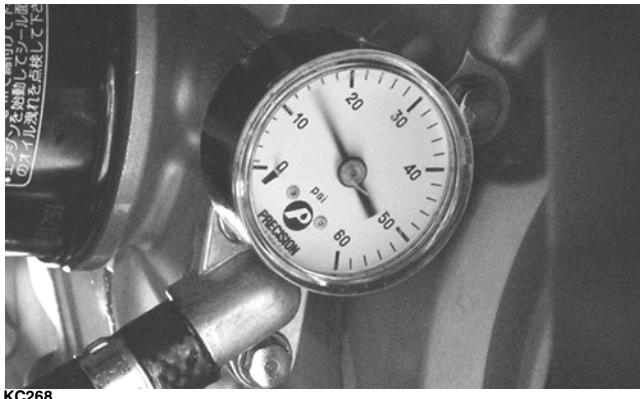

■NOTE: If the oil pressure is lower than specified, check for low oil level, defective oil pump, or restricted oil cooler.

■NOTE: If the oil pressure is higher than specified, check for clogged oil passage, clogged oil filter, or improper installation of the oil filter.

Oil Cooler

REMOVING


■NOTE: It is not necessary to drain the engine oil for this procedure.

1. Remove the input and output hoses from the fittings on the cooler.

CAUTION

Elevate and secure the hoses to avoid oil spillage.

2. Remove the cap screws securing the oil cooler to the frame. Account for grommets.

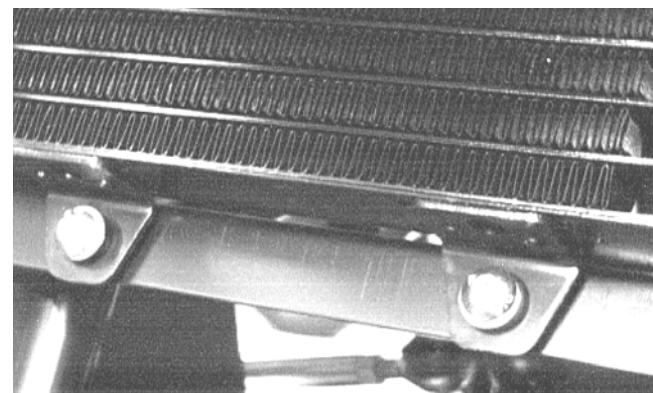

3. Remove the oil cooler from the frame.

INSTALLING

1. Place the cooler into position in the frame.
2. Secure the cooler to the frame with the cap screws and grommets.
3. Install the hoses onto their respective fittings and secure with the clamps.

Troubleshooting

| Problem: Starting impaired | |
|---|--|
| Condition | Remedy |
| 1. Starter jet obstructed 2. Starter jet passage obstructed 3. Carburetor leaking air 4. Gas contaminated | 1. Clean jet 2. Clean passage 3. Replace gasket 4. Drain gas tank and fill with clean gas |
| Problem: Idling or low speed impaired | |
| Condition | Remedy |
| 1. Slow jet obstructed - loose 2. Slow jet outlet obstructed 3. Low speed fuel screw setting incorrect 4. Float height incorrect | 1. Clean - tighten jet 2. Clean outlet 3. Adjust screw 4. Adjust float height |
| Problem: Medium or high speed impaired | |
| Condition | Remedy |
| 1. High RPM "cut out" against RPM limiter 2. Main jet obstructed 3. Needle jet obstructed 4. Vacuum piston not operating properly 5. Filter obstructed 6. Float height incorrect | 1. Shift into higher gear - decrease RPM speed 2. Clean main jet 3. Clean needle jet 4. Check piston operation 5. Clean filter 6. Adjust float height |
| Problem: Overflow and fuel level fluctuations | |
| Condition | Remedy |
| 1. Float valve worn - damaged 2. Float valve spring broken 3. Float not working properly 4. Float valve dirty 5. Float height too high - too low | 1. Replace valve 2. Replace spring 3. Adjust float height - replace float 4. Clean valve 5. Adjust float height |

Electrical System

In case of an electrical failure, check fuses, connections (for tightness, corrosion, damage), and/or bulbs.

TESTING ELECTRICAL COMPONENTS

All of the electrical tests should be made using the Fluke Model 77 Multimeter. If any other type of meter is used, readings may vary due to internal circuitry. When troubleshooting a specific component, always verify first that the fuse(s) are good, that the bulb(s) are good, that the connections are clean and tight, that the battery is fully charged, and that all appropriate switches are activated.

■NOTE: For absolute accuracy, all tests should be made at room temperature of 68° F.

SPECIAL TOOLS

A number of special tools must be available to the technician when performing service procedures in this section. Refer to the current Special Tools Catalog for the appropriate tool description.

■NOTE: When indicated for use, each special tool will be identified by its specific name, as shown in the chart below, and capitalized.

| Description | p/n |
|---------------------------|----------|
| Fluke Model 77 Multimeter | 0644-559 |
| MaxiClips | 0744-041 |

■NOTE: Special tools are available from the Arctic Cat Service Department.

Battery

The battery is located under the seat.

After being in service, batteries require regular cleaning and recharging in order to deliver peak performance and maximum service life. The following procedure is recommended for cleaning and maintaining a sealed battery. Always read and follow instructions provided with battery chargers and battery products.

■NOTE: Refer to all warnings and cautions provided with the battery or battery maintainer/charger.

Loss of battery charge may be caused by ambient temperature, ignition OFF current draw, corroded terminals, self discharge, frequent start/stops, and short engine run times. Frequent winch usage, snowplowing, extended low RPM operation, short trips, and high amperage accessory usage are also reasons for battery discharge.

Maintenance Charging

■NOTE: Arctic Cat recommends the use of the CTEK Multi US 800 or the CTEK Multi US 3300 for battery maintenance charging. Maintenance charging is required on all batteries not used for more than two weeks or as required by battery drain.




800E

1. When charging a battery in the vehicle, be sure the ignition switch is in the OFF position.
2. Clean the battery terminals with a solution of baking soda and water.
3. Be sure the charger and battery are in a well-ventilated area. Be sure the charger is unplugged from the 110-volt electrical outlet.
4. Connect the red terminal lead from the charger to the positive terminal of the battery; then connect the black terminal lead of the charger to the negative terminal of the battery.

■NOTE: Optional battery charging adapters are available from your authorized Arctic Cat dealer to connect directly to your vehicle from the recommended chargers to simplify the maintenance charging process. Check with your authorized Arctic Cat dealer for proper installation of these charging adapter connectors.

5. Plug the battery charger into a 110-volt electrical outlet.
6. If using the CTEK Multi US 800, there are no further buttons to push. If using the CTEK Multi US 3300, press the Mode button (A) at the left of the charger until the Maintenance Charge Icon (B) at the bottom illuminates. The Normal Charge Indicator (C) should illuminate on the upper portion of the battery charger.

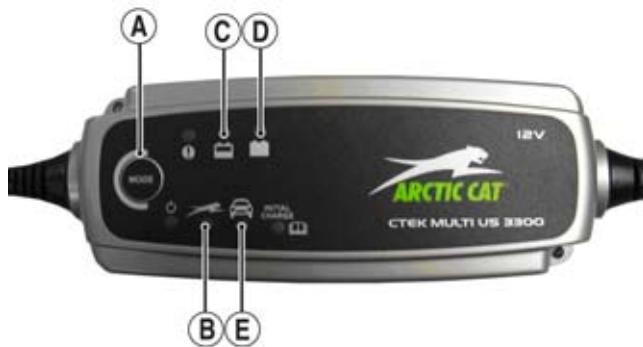

3300A

■**NOTE:** The maintainer/charger will charge the battery to 95% capacity at which time the Maintenance Charge Indicator (D) will illuminate and the maintainer/charger will change to pulse/float maintenance. If the battery falls below 12.9 DC volts, the charger will automatically start again at the first step of the charge sequence.

■**NOTE:** Not using a battery charger with the proper float maintenance will damage the battery if connected over extended periods.

Charging

■**NOTE:** Arctic Cat recommends the use of the CTEK Multi US 800 or the CTEK Multi US 3300 for battery maintenance charging.

1. Be sure the battery and terminals have been cleaned with a baking soda and water solution.

■**NOTE: The sealing strip should NOT be removed and NO fluid should be added.**

2. Be sure the charger and battery are in a well-ventilated area. Be sure the charger is unplugged from the 110-volt electrical outlet.
3. Connect the red terminal lead from the charger to the positive terminal of the battery; then connect the black terminal lead of the charger to the negative terminal of the battery.
4. Plug the charger into a 110-volt electrical outlet.
5. By pushing the Mode button (A) on the left side of the charger, select the Normal Charge Icon (E). The Normal Charge Indicator (C) should illuminate on the upper left portion of the charger.
6. The battery will charge to 95% of its capacity at which time the Maintenance Charge Indicator (D) will illuminate.

■**NOTE: For optimal charge and performance, leave the charger connected to the battery for a minimum 1 hour after the Maintenance Charge Indicator (D) illuminates. If the battery becomes hot to the touch, stop charging. Resume after it has cooled.**

7. Once the battery has reached full charge, unplug the charger from the 110-volt electrical outlet.

■**NOTE: If, after charging, the battery does not perform to operator expectations, bring the battery to an authorized Arctic Cat dealer for further troubleshooting.**

Ignition Switch

The ignition switch harness connects to the switch with a three-pin connector. To access the connector, remove the access panel in front of the handlebar.



VOLTAGE


■**NOTE: Perform this test on the main harness connector.**

1. Set the meter selector to the DC Voltage position.
2. Connect the red meter lead to the red/white wire; then connect the black meter lead to ground.
3. Meter must show battery voltage.

■**NOTE: If the meter shows no battery voltage, troubleshoot the battery or the main wiring harness.**

RESISTANCE

■**NOTE: Perform this test on the switch harness using the following procedure.**

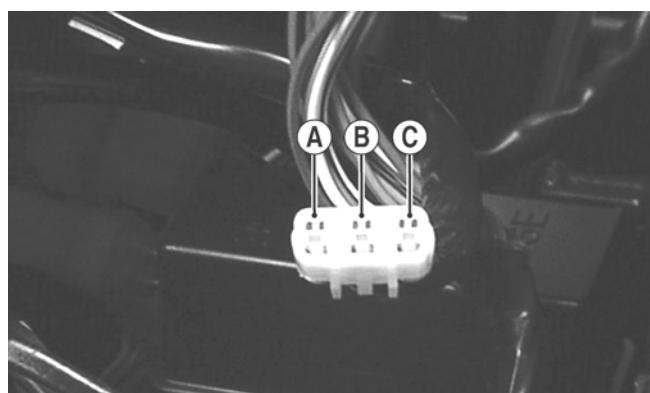

1. Turn the ignition switch to the ON position.
2. Set the meter selector to the OHMS position.
3. Connect either tester lead to pin B; then connect the other tester lead to pin A.
4. The meter must show less than 1 ohm.
5. Turn the ignition switch to the LIGHTS position. The meter must show less than 1 ohm.
6. Leaving the tester lead on pin B, connect the other tester lead to pin C.
7. The meter must show less than 1 ohm.

■**NOTE: If the meter shows more than 1 ohm of resistance, replace the switch.**

Ignition Coil

The ignition coil is located under the front access panel. To access the coil, the left side panel must be removed.

RESISTANCE

CAUTION

Always disconnect the battery when performing resistance tests to avoid damaging the multimeter.

■**NOTE: For these tests, the meter selector should be set to the OHMS position and the primary wire should be disconnected.**


Primary Winding

1. Connect the red tester lead to either terminal; then connect the black tester lead to the other terminal.
2. The meter reading must be within specification.

■**NOTE: Secondary coil resistance checks are not recommended. An internal diode in the coil prevents accurate secondary resistance measurements.**

Spark Plug Cap

1. Connect the red tester lead to one end of the cap; then connect the black tester lead to the other end of the cap.

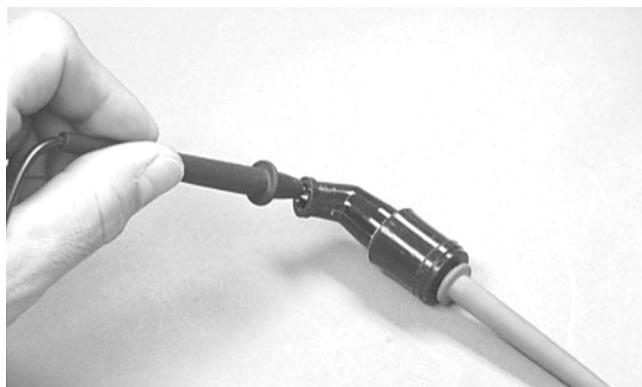

AR603D

2. The meter reading must be within specification.

■**NOTE: If the meter does not read as specified, replace the spark plug cap.**

Ignition Timing

The ignition timing cannot be adjusted; however, verifying ignition timing can aid in troubleshooting other components. To verify ignition timing, use the following procedure.

1. Attach the Timing Light to the spark plug high tension lead; then remove the timing inspection plug from the left-side crankcase cover.
2. Using the Tachometer, start the engine and run at 1500 RPM; ignition timing should be 10° BTDC.
3. Install the timing inspection plug.

If ignition timing cannot be verified, the rotor may be damaged, the key may be sheared, the trigger coil bracket may be bent or damaged, or the CDI unit may be faulty.

Accessory Receptacle/Connector

■**NOTE: This test procedure is for either the receptacle or the connector.**

VOLTAGE

1. Turn the ignition switch to the ON position; then set the meter selector to the DC Voltage position.
2. Connect the red tester lead to the red wire; then connect the black tester lead to ground.
3. The meter must show battery voltage.

■**NOTE: If the meter shows no battery voltage, troubleshoot the battery, fuse, receptacle, connector, or the main wiring harness.**

Switches

VOLTAGE (Brakelight)

The brakelight switch is located on the top of the auxiliary brake master cylinder and is pressure activated by the hand brake or the auxiliary brake pedal. This switch also activates the start-in-gear (SIG) relay in the power distribution module (PDM).

■**NOTE: The ignition switch must be in the ON position.**


1. Set the meter selector to the DC Voltage position.
2. Connect the red tester to the orange wire; then connect the black tester lead to ground.
3. The meter must show battery voltage.

■**NOTE: If the meter shows no battery voltage, troubleshoot the battery, fuse, switch, or the main wiring harness.**

■**NOTE: If the meter shows battery voltage, the main wiring harness is good; proceed to test the switch/component or connector.**

RESISTANCE (Brakelight)

1. Remove the spade connectors from the brake switch.
2. Set the meter selector to the OHMS position.
3. Connect the red tester lead to one switch terminal; then connect the black tester lead to the other switch terminal.

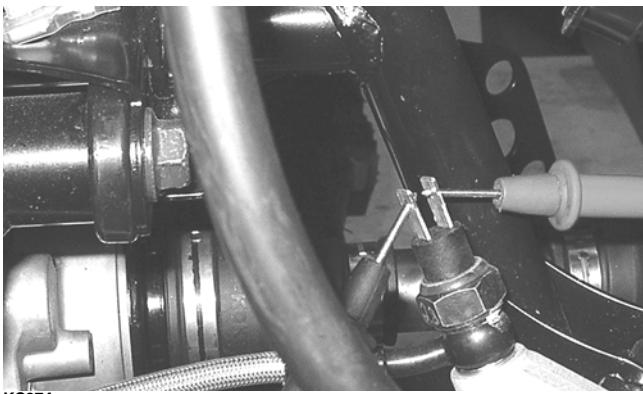

4. When the brake pedal is depressed, the meter must show less than 1 ohm.

■**NOTE: If the meter shows more than 1 ohm of resistance, replace the switch.**

RESISTANCE (HI Beam)

The connectors are located under the front access panel next to the PDM. To access the connector, the electrical cover must be removed.

■**NOTE: These tests should be made on the switch side of the connector.**

1. Set the meter selector to the OHMS position.
2. Connect one tester lead to the brown/black wire; then connect the other tester lead to the lavender wire.
3. With the dimmer switch in the HI position, the meter must show less than 1 ohm.

■**NOTE: If the meter shows more than 1 ohm of resistance, replace the switch.**


RESISTANCE (LO Beam)

1. Connect one tester lead to the brown/black wire; then connect the other tester lead to the white wire.
2. With the dimmer switch in the LO position, the meter must show less than one ohm.

■**NOTE: If the meter reads greater than one ohm, replace the switch.**

RESISTANCE (Running Lights)

1. Connect one tester lead to the (B) position; then connect the other tester lead to the (C) position.

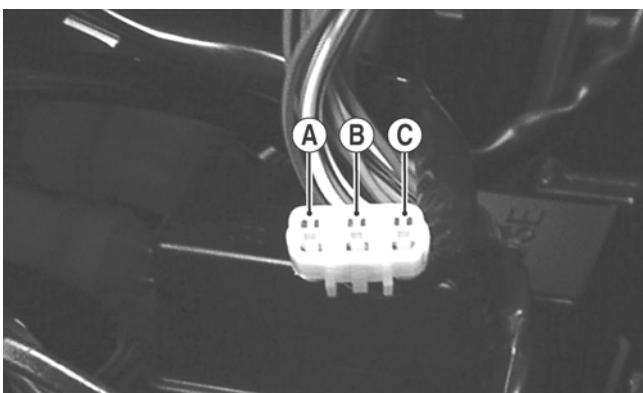

2. With the dimmer switch in the LO position, the meter must show less than one ohm.

■**NOTE: If the meter reads greater than one ohm, replace the switch.**

RESISTANCE (Emergency Stop)

1. Set the meter selector to the OHMS position.
2. Connect the one lead to the brown/lavender wire; then connect the other tester lead to the black/white wire.
3. With the switch in the OFF position, the meter must show an open circuit.
4. With the switch in the RUN position, the meter must show less than 1 ohm.

■**NOTE: If the meter shows more than 1 ohm of resistance, replace the switch.**

RESISTANCE (Reverse Override)

1. Set the meter selector to the OHMS position.
2. Connect one tester lead to one lavender/red wire; then connect the other tester wire to the green/red wire. The meter must show less than 1 ohm.
3. Depress and hold the reverse override button. The meter must show an open circuit.

■**NOTE: If the meter does not show as specified, replace the switch.**

RESISTANCE (Drive Select)



Component data can be retrieved using the CATT II. Utilize the Sensor Data screen.

The connector is the snap-lock one in front of the steering post. To access the connector, the radiator/electrical access panel cover must be removed.

■**NOTE: Resistance tests should be made with the connector disconnected and on the switch-side of the connector.**

1. Set the meter selector to the OHMS position.
2. Connect the red tester lead to the white/blue wire; then connect the black tester lead to the black wire.
3. With the selector switch in the 2WD position, the meter must show an open circuit.
4. With the selector switch in the 4WD position, the meter must show less than 1 ohm.

■**NOTE: If the meter does not show as specified, replace the front drive select switch.**

VOLTAGE (Drive Select)

■**NOTE: The battery must be connected when performing voltage tests.**

1. Set the meter selector to the DC Voltage position.
2. Connect the black tester lead to the negative battery terminal.
3. Connect the red tester lead to the white/green wire on the harness side of the connector.


4. Turn the ignition switch to the RUN position.

5. The meter must show battery voltage.

■**NOTE: If the meter shows other than specified, check the harness, connector, main relay, and battery connections.**

RESISTANCE (Gear Position)

The gear position switch connector is located on the right side of the engine over the V-belt housing.

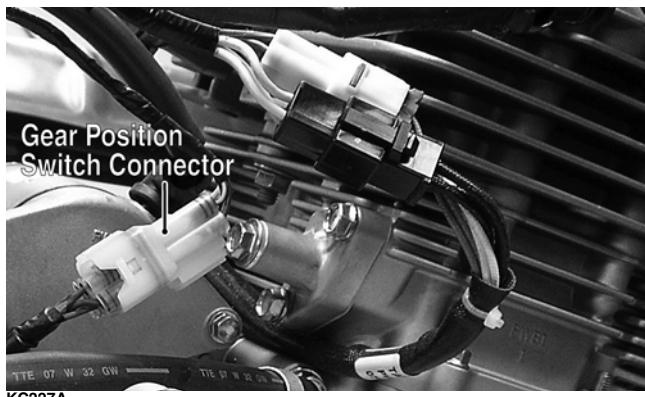

1. Disconnect the gear position switch from the main harness at the connector; then connect the black tester lead to a suitable ground.
2. Select the OHMS position on the tester and connect the red tester lead to the lavender/red wire; then move the shift lever to the R (reverse) position. The meter must read less than 1 ohm.
3. Move the red tester lead and shift lever in turn to the light green/red wire and N (neutral) position, white/black wire and H (high) position, and white/red wire and L (low) position. The meter must read less than 1 ohm in all positions. If not, the shift linkage must be adjusted (see Periodic Maintenance/Tune-Up - Shift Lever) or the switch must be replaced.

Fan Motor

The connector is the black two-prong one located behind the fan assembly along the right-side frame tube.

■**NOTE: To determine if the fan motor is good, connect the red wire from the fan connector to the positive side of a 12 volt DC power supply; then connect the black wire from the fan connector to the negative side. The fan should operate.**

⚠ WARNING

Care should be taken to keep clear of the fan blades.

■**NOTE: Fan motor resistance checks are not recommended. Resistance values change with the motor commutator position.**

Lights

VOLTAGE (Headlights)

The connectors are the two 4-pin ones snapped onto the front body/rack support. To release the connectors from the frame, press the release tab with a small screwdriver.

■**NOTE: Perform this test on the main harness side of the connectors. Also, the ignition switch must be in the LIGHTS position.**

1. Set the meter selector to the DC Voltage position.
2. Connect the black tester lead to the black wire; then connect the red tester lead to the white wire.
3. With the dimmer switch in the LO position, the meter must show battery voltage.
4. Remove the red tester lead from the white wire and connect to the lavender wire.
5. With the dimmer switch in the HI position, the meter must show battery voltage.

■**NOTE: If battery voltage is not shown in any test, inspect the fuses, battery, main wiring harness, connectors, or the left handlebar switch.**

VOLTAGE (Running Lights)

1. Release the wire connector from the frame; then release and separate the connectors.

■**NOTE: Perform this test on the wiring harness side of the connectors.**

2. Connect the black tester lead of the meter to the black wire; then with the tester in the DC Volts position, connect the red tester lead to the brown/black wire.
3. Turn the ignition switch to the LIGHTS position. The meter must show battery voltage.

■**NOTE: If the meter does not show voltage, inspect the LIGHTS fuse, battery connections, or troubleshoot the main wiring harness.**

VOLTAGE (Taillights)

■**NOTE: Perform this test on the main harness side of the connector. Also, the ignition switch should be in the LIGHTS position.**

1. Set the meter selector to the DC Voltage position.
2. Connect the black tester lead to the black wire; then connect the red tester lead to the brown/black wire.
3. The meter must show battery voltage.

■**NOTE: If the meter does not show voltage, inspect fuses, wiring harness, connectors, and switches.**

VOLTAGE (Brakelights)

■**NOTE: Perform this test on the main harness side of the connector. Also, the ignition switch should be in the ON position and the brake (either foot pedal or hand lever) must be applied.**

1. Set the meter selector to the DC Voltage position.
2. Connect the black tester lead to the black wire; then connect the red tester lead to the green/yellow wire.
3. The meter must show battery voltage.


■NOTE: If the meter does not show voltage, inspect bulb, fuses, wiring harness, connectors, and switches.

Fuse Block/Power Distribution Module

The fuses are located in a power distribution module in front of the steering post. In addition, there is a 30 amp fuse on the starter relay under the seat next to the battery.

If there is any type of electrical system failure, always check the fuses first.

■NOTE: To remove a fuse, compress the locking tabs on either side of the fuse case and lift out.

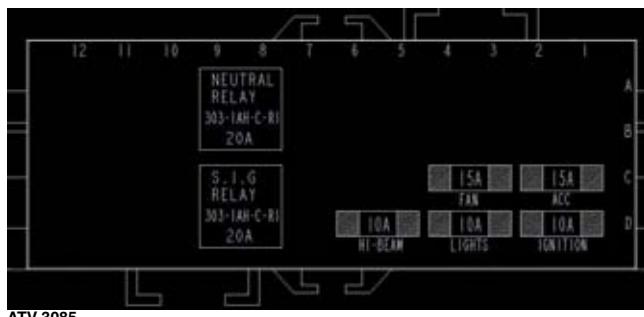

ATV-3085

CAUTION

Always replace a blown fuse with a fuse of the same type and rating.



■NOTE: The ignition switch must be in the LIGHTS position.

1. Remove all fuses from the distribution module.
2. Set the meter selector to the DC Voltage position.
3. Connect the black tester lead to ground.
4. Using the red tester lead, contact each end of the fuse holder connector terminals individually.
5. The meter must show battery voltage from one side of the connector terminal ends.

■NOTE: Battery voltage will be indicated from only one side of the fuse holder connector terminal; the other side will show no voltage.

■NOTE: When testing the HI fuse holder, the headlight dimmer switch must be in the HI position; when testing the LIGHTS fuse holder, the headlight dimmer switch can be in either position.

■NOTE: If the meter shows no battery voltage, troubleshoot the battery, switches, distribution module, or the main wiring harness.

FUSES

1. Set the meter selector to the OHMS position.
2. Connect the red tester lead to one spade end of the fuse; then connect the black tester lead to the other spade end.
3. The meter must show less than 1 ohm resistance. If the meter reads open, replace the fuse.

■NOTE: Make sure the fuses are returned to their proper position according to amperage. Refer to the fuse block cover for fuse placement.

RELAYS


The relays are identical plug-in type located on the power distribution module. Relay function can be checked by switching relay positions. The relays are interchangeable.

■NOTE: The module and wiring harness are not a serviceable component and must be replaced as an assembly.

Sensors/Components

SPEED SENSOR

1. Set the meter selector to the DC Voltage position.
2. With appropriate needle adapters on the meter leads, connect the red tester lead to the brown/blue wire (V); then connect the black tester lead to the black wire (G).

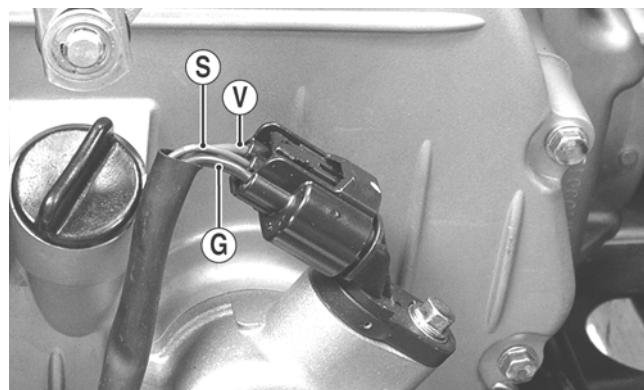

KC248A


3. Turn the ignition switch to the ON position.
4. The meter will typically show battery voltage.
5. Leave the black tester lead connected; then connect the red tester lead to the violet wire (S).

- Slowly move the ATV forward or backward; the meter must show near 0 and battery voltage alternately.

■NOTE: If the sensor tests are within specifications, the speedometer must be replaced (see Steering/Body/Controls).

To replace a speed sensor, use the following procedure.

- Disconnect the three-wire connector from the speed sensor; then remove the cap screw securing the sensor to the sensor housing.
- Remove the sensor from the sensor housing accounting for an O-ring.
- Install the new speed sensor into the housing with new O-ring lightly coated with multi-purpose grease; then secure the sensor with the cap screw (threads coated with blue Loctite #242). Tighten securely.

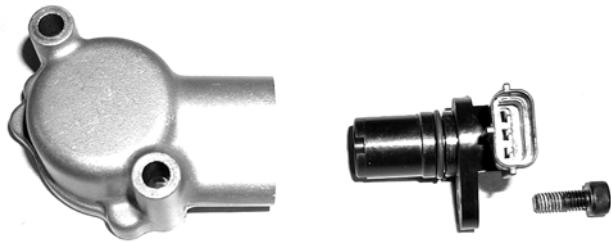

CD071


OIL TEMPERATURE AND COOLING FAN

- Connect the meter leads (selector in the OHMS position) to the switch contacts.
- Suspend the switch and a thermometer in a container of cooking oil; then heat the oil.

■NOTE: Neither the switch nor the thermometer should be allowed to touch the bottom of the container or inaccurate readings will occur. Use wire holders to suspend switch and thermometer.

⚠ WARNING

Wear insulated gloves and safety glasses. Heated oil can cause severe burns.

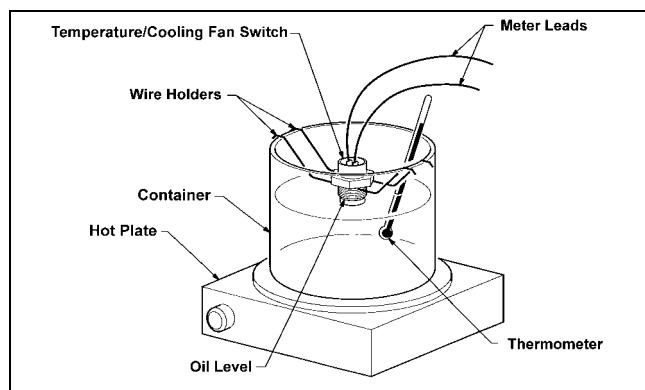

733-554C

- On the oil temperature switch when the oil temperature reaches 160° C (320° F), the meter should read a closed circuit.
- On the oil temperature switch, allow the oil to cool, and when the temperature is at (or just before) a temperature of 140° C (284° F), the meter should read an open circuit.
- On the cooling fan switch when the temperature reaches 120° C (248° F), the meter should read a closed circuit.
- On the cooling fan switch, allow the oil to cool, and when the temperature is at (or just before) a temperature of 110° C (230° F), the meter should read an open circuit.
- If the readings are not as indicated, the switch must be replaced.
- Apply thread tape to the threads of the switch; then install the switch and tighten securely.
- Connect the switch leads.

RPM Limiter

■NOTE: The ATV is equipped with a CDI unit that retards ignition timing when maximum RPM is approached. When the RPM limiter is activated, it could be misinterpreted as a high-speed misfire.

Stator Coil

VOLTAGE (Charging Coil - No Load)

The connector is the black three-pin one on the right side of the engine just above the starter motor.

■NOTE: Test the engine-side of the connector.

- Set the meter selector to the AC Voltage position.
- Test between the three yellow wires for a total of three tests.
- With the engine running at the specified RPM, all wire tests must show 60 AC volts.

CAUTION

Do not run the engine at high RPM for more than 10 seconds.


RESISTANCE (Charging Coil)

- Set the meter selector to OHMS position.
- Test between the three yellow wires for a total of three tests.
- The meter reading must be within specification.

■NOTE: If both charging coil tests failed, check all connections, etc., and test again. If no voltage is present, replace the stator assembly.

RESISTANCE (Trigger Coil)

1. Disconnect the gray four-pin connector on the right side of the engine just above the starter motor.
2. Set the meter selector to the OHMS position.
3. Connect the red tester lead to the green/white wire; then connect the black tester lead to the blue/yellow wire. The meter reading must be within specification.

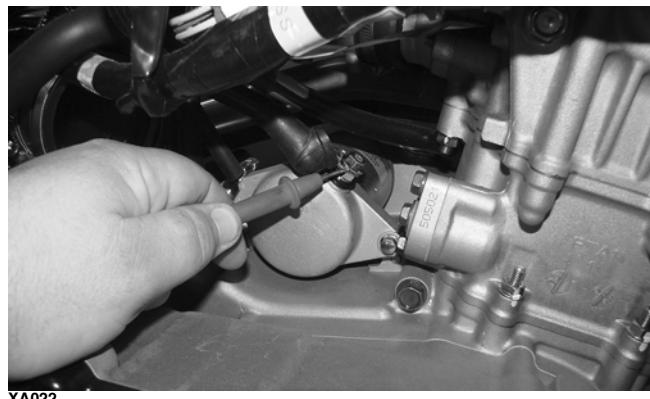

Regulator/Rectifier

The regulator/rectifier is located under the front rack and front fenders above the oil cooler.

TESTING

1. Start engine and warm up to normal operating temperatures; then connect a multimeter to the battery as follows.
2. Select the DC Voltage position; then connect the red tester lead to the positive battery post and the black tester lead to the negative battery post.
3. Start the engine and slowly increase RPM. The voltage should increase with the engine RPM to a maximum of 15.5 DC volts.

CAUTION

Do not run the engine at high RPM for more than 10 seconds.

■**NOTE: If voltage rises above 15.5 DC volts, the regulator is faulty or a battery connection is loose or corroded. Clean and tighten battery connections or replace the regulator/rectifier. If voltage does not rise, check Voltage (Charging Coil - No Load) in this section. If charging coil voltage is normal, replace the regulator/rectifier.**

Starter Motor

■**NOTE: The starter motor is a non-serviceable component. If the following test does not result as specified, the starter motor must be replaced.**

TESTING VOLTAGE

Perform this test on the starter motor positive terminal. To access the terminal, slide the boot away.

■**NOTE: The ignition switch must be in the ON position, the emergency stop switch in the RUN position, and the shift lever in the NEUTRAL position.**

1. Set the meter selector to the DC Voltage position.
2. Connect the red tester lead to the starter terminal; then connect the black tester lead to ground.
3. With the starter button depressed, the meter must show approximately 10.0 DC volts and the starter motor should operate.

REMOVING

1. Disconnect the battery cables (negative cable first); then remove the right side panel and intake tube.


CAUTION

Always disconnect the negative battery cable from the battery first; then disconnect the positive cable.

2. Remove the nut securing the positive cable to the starter; then remove the cable from the starter.
3. Fasten the intake tube with the clamps; then install the right side panel.
4. Remove the two cap screws securing the starter to the crankcase; then remove the starter. Account for an O-ring.

INSTALLING

1. Apply a small amount of grease to the O-ring seal on the starter; then install the starter into the crankcase. Secure with two cap screws making sure the engine ground is secured by the rear cap screws. Tighten to 8 ft-lb.

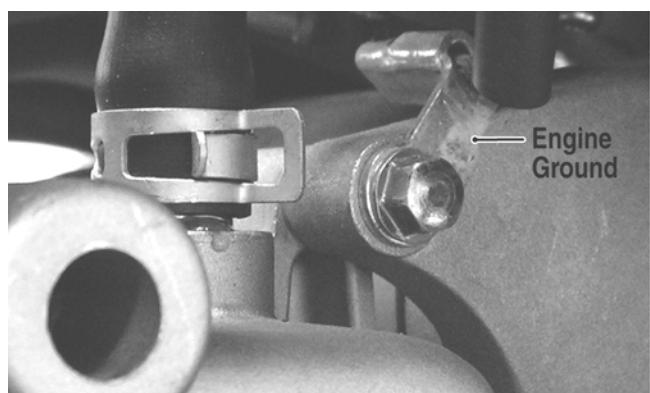

2. Secure the positive cable to the starter with the nut. Tighten to 8 ft-lb.
3. Secure the intake tube with the clamps; then install the right side panel.
4. Connect the battery.

Starter Relay

1. Remove the seat; then using the multimeter set to the DC Voltage position, check the relay as follows.
2. Connect the red tester lead to the positive battery terminal; then connect the black tester lead to the starter cable connection on the starter relay. The meter must show battery voltage.
3. Depress the starter button while observing the multimeter. The multimeter should drop to 0 volts, a "click" should be heard from the relay, and the starter motor should run.

■NOTE: Make sure that the ignition switch is in the ON position, transmission in neutral, brake lock released, and the emergency stop switch in the RUN position.

■NOTE: If a "click" is heard and any voltage is indicated by the multimeter, replace the starter relay. If no "click" is heard and the multimeter continues to indicate battery voltage, test the neutral start relay.

CDI Unit

The CDI is located on the electrical tray in front of the steering post.

■NOTE: The CDI unit is not a serviceable component. If the unit is defective, it must be replaced.

The CDI is rarely the cause for electrical problems; however, if the CDI is suspected, substitute another CDI unit to verify the suspected one is defective.

■NOTE: Prior to replacing the CDI unit to assure the CDI unit is defective, it is advisable to perform a CDI peak voltage test (see Ignition Coil in this section) and/or perform a continuity test of the wiring harness from the CDI connector to the CDI unit.

Troubleshooting

| Problem: Spark absent or weak | |
|--|--|
| Condition | Remedy |
| 1. Ignition coil defective 2. Spark plug defective 3. Alternator defective 4. CDI unit defective 5. Pick-up coil defective | 1. Replace ignition coil 2. Replace plug 3. Replace stator coil 4. Replace CDI unit 5. Replace stator coil |
| Problem: Spark plug fouled with carbon | |
| Condition | Remedy |
| 1. Gasoline incorrect 2. Air cleaner element dirty 3. Spark plug incorrect (too cold) 4. Valve seals cracked - missing 5. Oil rings worn - broken 6. Mixture too rich 7. Idling RPM too high | 1. Change to correct gasoline 2. Clean element 3. Replace plug 4. Replace seals 5. Replace rings 6. Replace jets with correct size 7. Adjust carburetor |
| Problem: Spark plug electrodes overheat or burn | |
| Condition | Remedy |
| 1. Spark plug incorrect (too hot) 2. Engine overheats 3. Spark plug loose 4. Mixture too lean | 1. Replace plug 2. Service oil filter 3. Tighten plug 4. Replace jets with correct size |
| Problem: Alternator does not charge | |
| Condition | Remedy |
| 1. Stator wires/connections shorted - loose - open 2. Stator coils shorted - grounded - open 3. Regulator/rectifier defective | 1. Repair - replace - tighten stator wires 2. Replace stator coils 3. Replace regulator/rectifier |
| Problem: Alternator charges, but charging rate is below the specification | |
| Condition | Remedy |
| 1. Stator wires shorted - open - loose (at terminals) 2. Stator coils grounded - open 3. Regulator/rectifier defective 4. Battery defective 5. Electrolyte low | 1. Repair - tighten Stator wires 2. Replace stator coils 3. Replace regulator/rectifier 4. Replace battery 5. Add distilled water |
| Problem: Alternator overcharges | |
| Condition | Remedy |
| 1. Battery shorted 2. Regulator/rectifier damaged - defective 3. Regulator/rectifier poorly grounded | 1. Replace battery 2. Replace regulator/rectifier 3. Clean - tighten ground connection |
| Problem: Charging unstable | |
| Condition | Remedy |
| 1. Stator wire intermittently shorting 2. Alternator internally shorted 3. Regulator/rectifier defective | 1. Replace stator wire 2. Replace stator coil 3. Replace regulator/rectifier |
| Problem: Starter button inoperative | |
| Condition | Remedy |
| 1. Battery charge low 2. Switch contacts defective 3. Starter motor defective 4. Starter relay defective 5. Emergency stop - ignition switch off 6. Wiring connections loose - disconnected | 1. Charge - replace battery 2. Replace switch 3. Replace starter motor 4. Replace relay 5. Turn on switches 6. Connect - tighten - repair connections |
| Problem: Battery "sulfation" (Acidic white powdery substance or spots on surfaces of cell plates) | |
| Condition | Remedy |
| 1. Charging rate too low - too high 2. Battery run-down - damaged 3. Electrolyte contaminated 4. Battery electrolyte insufficient 5. Specific gravity too low | 1. Repair charging system 2. Replace battery 3. Replace battery 4. Keep electrolyte to prescribed level 5. Charge battery - add distilled water |
| Problem: Battery discharges too rapidly | |
| Condition | Remedy |
| 1. Electrolyte contaminated 2. Charging system not charging 3. Battery overcharged - damaged 4. Battery short-circuited 5. Specific gravity too low | 1. Replace battery 2. Check alternator - regulator/rectifier - circuit connections 3. Replace battery - correct charging system 4. Replace battery 5. Charge battery - add distilled water |
| Problem: Battery polarity reversed | |
| Condition | Remedy |
| 1. Battery incorrectly connected | 1. Reverse connections - replace battery - repair damage |

Drive System

GENERAL INFORMATION

| | |
|--------------------|--------------------------------|
| Ring Gear Backlash | 0.28-0.38 mm (0.011-0.015 in.) |
| Ring Gear End Play | 0.1-0.2 mm (0.004-0.008 in.) |

All gear cases are tagged beneath a cover bolt. This tag is marked with a production date code, sequence code, and a ratio code.

The "1" or "3.1" on the lower-right corner indicates a 3.1:1 gear set ratio (11:34 teeth).

SPECIAL TOOLS

A number of special tools must be available to the technician when performing service procedures in this section. Refer to the current Special Tools Catalog for the appropriate tool description.

■NOTE: When indicated for use, each special tool will be identified by its specific name, as shown in the chart below, and capitalized.

| Description | p/n |
|-----------------------------------|----------|
| Backlash Measuring Tool | 0544-010 |
| CV Boot Clamp Tool | 0444-120 |
| Gear Case Seal Installer Tool Kit | 0444-273 |
| Internal Hex Socket | 0444-104 |
| Pinion Gear/Shaft Removal Tool | 0444-127 |
| Slide Hammer Kit | 0444-225 |
| Multi-Seal Remover | 0644-180 |

■NOTE: Special tools are available from the Arctic Cat Service Department.

Front Drive Actuator


■NOTE: The actuator is not a serviceable component. If it is defective, it must be replaced.

■NOTE: The actuator will operate only when the ignition switch is in the ON position.

The front drive actuator is located on the side of the front drive input housing. With the engine stopped and the ignition switch in the ON position, a momentary "whirring" sound can be heard each time the front drive selector switch is shifted. If no sound is heard, see Electrical System. If the actuator runs constantly or makes squealing or grinding sounds, the actuator must be replaced.


REMOVING

1. Disconnect the connector on the actuator harness.
2. Remove the mounting cap screw from the driveshaft side of the actuator.

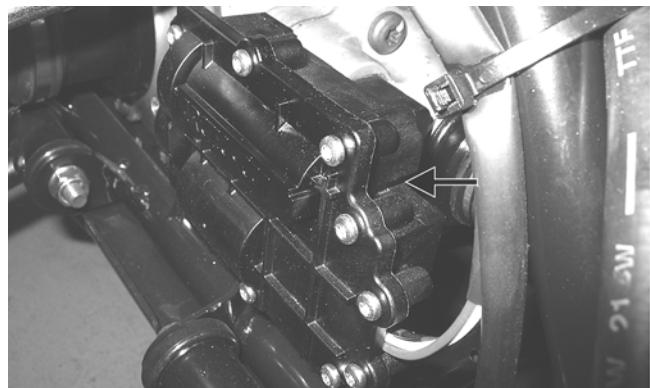


KC293A

3. Remove the mounting cap screw from below the actuator on the suspension side.

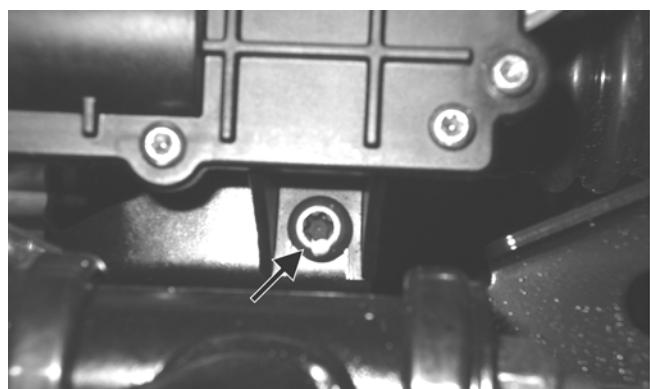

KC294A


4. Loosen but do not remove the mounting cap screw at the front of the actuator; then slide the actuator to the rear enough to clear the slotted mounting tab and the selector shaft.

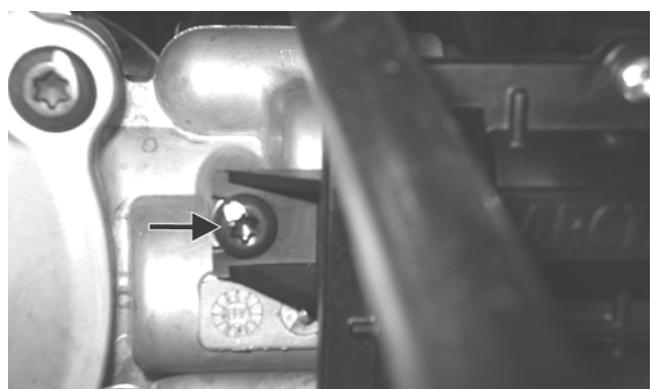

KC295A

INSTALLING

1. Lubricate the O-ring on the actuator; then ensure that all mounting surfaces are clean and free of debris.
2. Align the actuator with the selector shaft and slide it forward onto the shaft taking care to engage the cap screw in the slot of the front mounting tab.

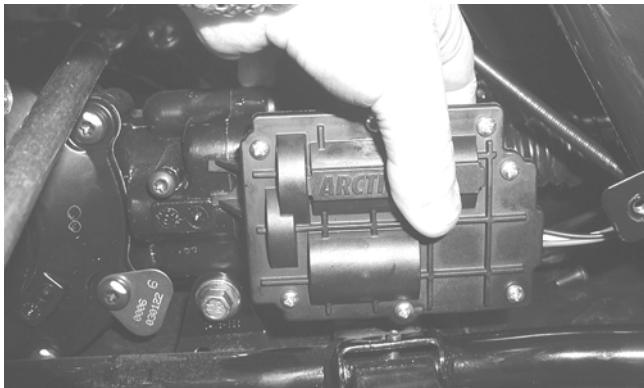

AG925

3. While holding the actuator firmly forward, tighten the front cap screw to hold the actuator in place; then install but do not tighten the two remaining cap screws.



KC295A

4. Loosen the front cap screw; then tighten the cap screw on the driveshaft side.



AG926

■NOTE: It is important to tighten this cap screw while the others are loose to ensure proper seating of the actuator.

5. Tighten the remaining cap screws; then connect the electrical plug to the main harness.
6. Turn the ignition switch to the ON position and check the operation by shifting the selector switch several times.
7. Secure the wiring harness to the frame with a nylon cable tie.

Front Differential


REMOVING DIFFERENTIAL

1. Secure the ATV on a support stand to elevate the wheels.

⚠ WARNING

Make sure the ATV is solidly supported on the support stand to avoid injury.

2. Remove the drain plug and drain the gear lubricant into a drain pan; then reinstall the plug and tighten to 45 in.-lb.

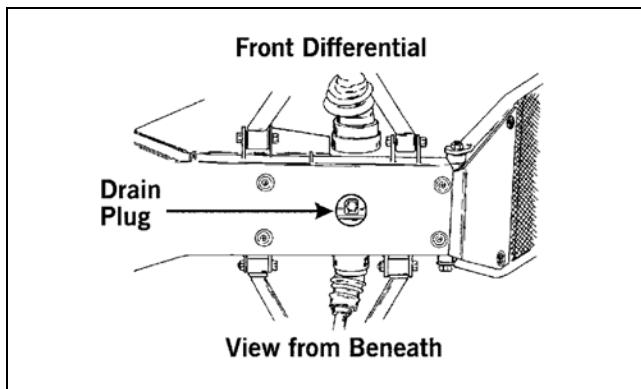


ATV0082A

3. Remove the front wheels.
4. Pump up the hand brake; then engage the brake lever lock.
5. Remove the cotter pins securing the hex nuts to the axles; then remove the hex nuts.
6. Remove the cap screws securing the brake calipers to the knuckle.
7. Release the brake lever lock.
8. Remove the upper and lower ball joint cap screws taking care not to strip the threads.

CAUTION

Apply pressure to hold the ball joint firmly in the knuckle or the threads will be stripped when the retaining cap screws are removed.

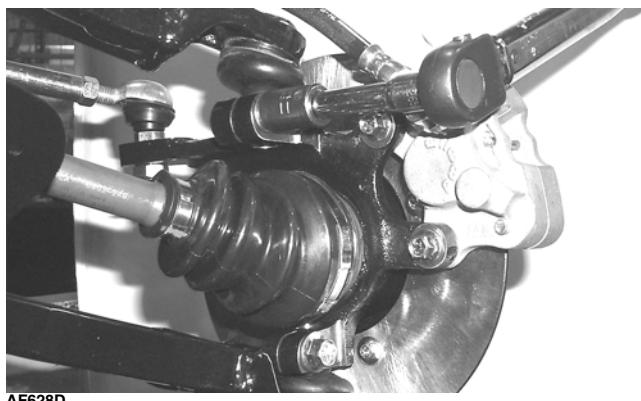

AF628D

9. Pull the steering knuckle away from the axle taking care not to damage the seals as the axle clears the knuckle.




KC314

10. Support the axle to not allow it to drop or hang.

CAUTION

The axle must be supported. If the axle is allowed to drop or hang, damage to the inner CV joint may occur.

11. Pull out on the axle until completely extended; then push it back in approximately one half inch and pull out sharply. Repeat until axle spline dislodges from the gear case.

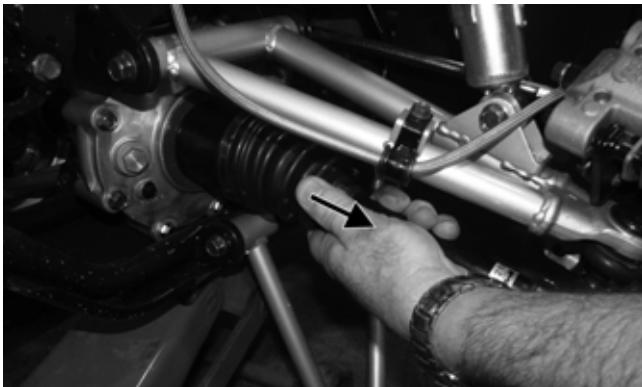

KC425A


■NOTE: In some instances it may be necessary to use an appropriate axle puller to remove the axle from the differential.

12. Remove the cap screws and lock nuts securing the shocks to the upper A-arms; then remove the upper A-arms.



KC486

13. Remove the cap screws from the drive coupler flange; then remove the upper and lower mounting cap screws and remove the differential from the frame.

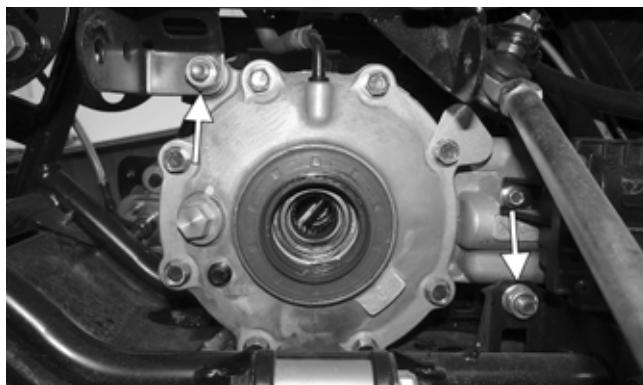

KC488A

Disassembling Input Shaft

■NOTE: This procedure can be performed on a rear gear case; however, some components may vary from model to model. The technician should use discretion and sound judgment.

1. Remove the cap screws securing the front drive actuator and remove the actuator.



CD102

2. Remove the cap screws securing the pinion housing; then using a rubber mallet, remove the housing. Account for a gasket. Note the location of all the components for assembling purposes.

3. Using a side-cutter, remove the boot clamps; then remove the boots and splined drive from the input shaft.

4. Remove the input shaft from the pinion housing.



CD107

5. Using the Multi-Seal Remover, remove the input shaft seal. Account for a spacer.




AF982

6. Remove the snap ring securing the input shaft bearing; then place the pinion housing in a press and remove the bearing.



AF983

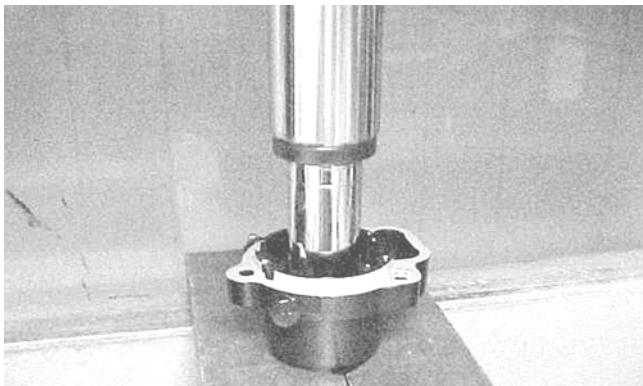


AF984



KX219

Assembling Input Shaft

1. Place the pinion housing in a press and install the input shaft bearing. Secure the bearing with the existing snap ring making sure the sharp edge of the snap ring faces to the outside.

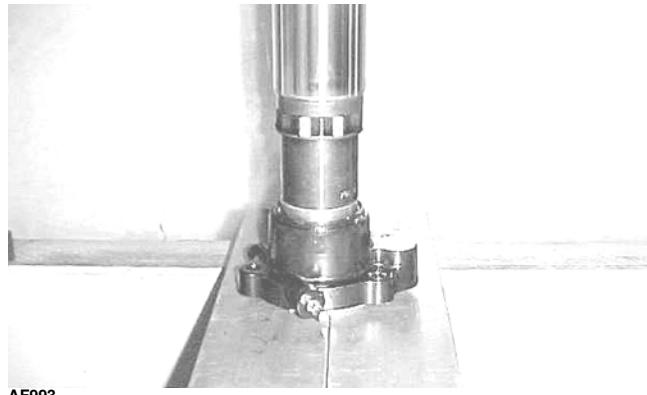

AF993



AF994

2. Install the input shaft seal making sure it is flush with the edge of the housing.
 3. Lubricate the input shaft splines with High-Performance #2 Molybdenum Disulphide Grease.

■NOTE: Any time drive splines are separated, clean all splines with parts-cleaning solvent and dry with compressed air; then lubricate with recommended grease.



KX221



KX222

4. Install the input shaft into the housing; then install the front boot and secure with an appropriate boot clamp and the rear boot with an appropriate boot clamp.




CD112

5. Using a new O-ring lubricated with grease, install the front drive actuator and secure with the cap screws.
6. Place the pinion housing with new gasket onto the gear case housing; then secure with the existing cap screws. Tighten to 18 ft-lb.

Disassembling Pinion Gear


■NOTE: This procedure can be performed on a rear gear case.

1. Remove the cap screw securing the pinion housing; then remove the housing. Account for the gasket, coupler, fork, and spring.

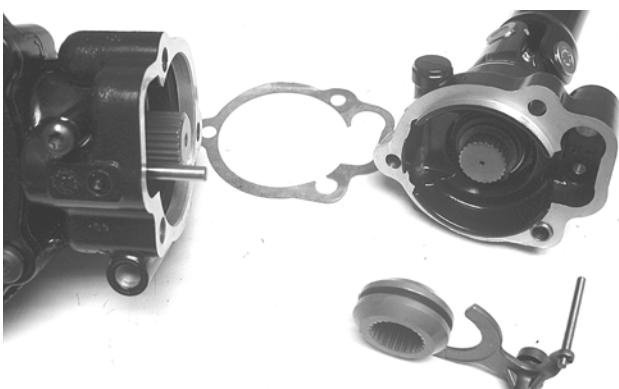

KX209

2. Remove the cap screws securing the gear case cover. Account for and make note of the ID tag location for assembling purposes.

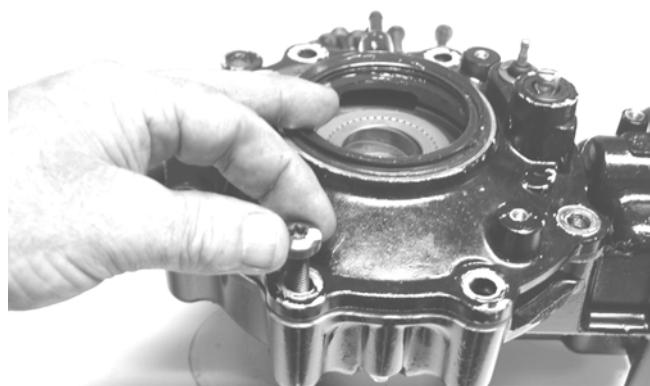

KX173

3. Using a plastic mallet, tap lightly to remove the differential cover. Account for an O-ring and a shim.

■NOTE: If the cover is difficult to remove, pry on the cover in more than one recessed location.




GC063

4. Place the differential with the open side down; then lift the housing off the spider assembly. Account for shim(s) and mark as right-side.



KX179

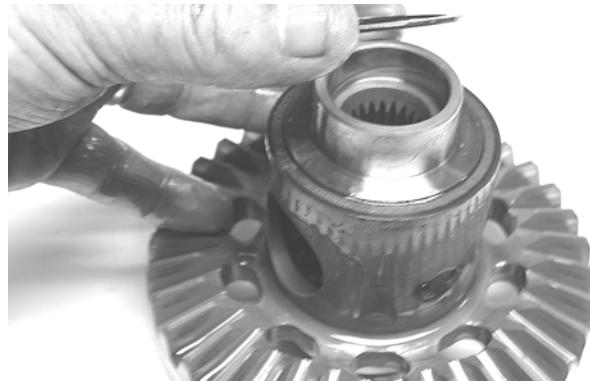


KX181

- Unstake the lock collar; then using the 48 mm Internal Hex Socket, remove the lock collar securing the pinion gear assembly.

CAUTION

Failure to completely remove the staked material from the lock collar will result in the destruction of the threads in the gear case housing.

■NOTE: On a front differential, the lock collar has right-hand threads. On a rear gear case, the lock collar has left-hand threads.

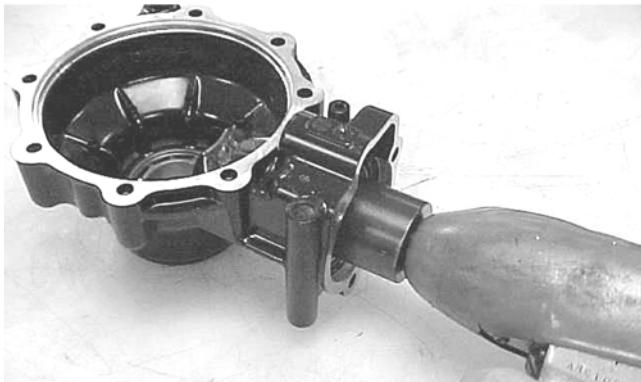


CC875




CC876

- Using the Pinion Gear/Shaft Removal Tool and a hammer, remove the pinion gear from the gear case housing.

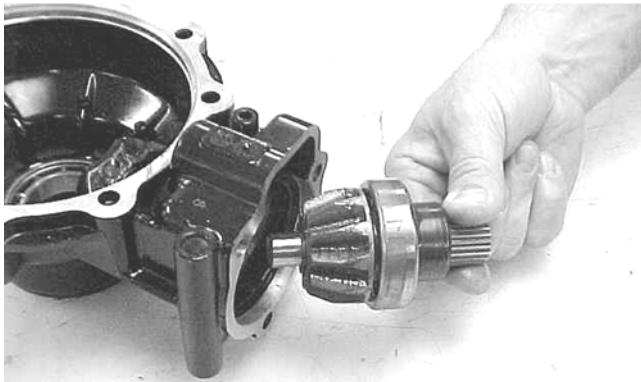

CC878

- Secure the pinion gear in a bearing puller; then remove the pinion bearing using a press. Account for a collar and a bearing.

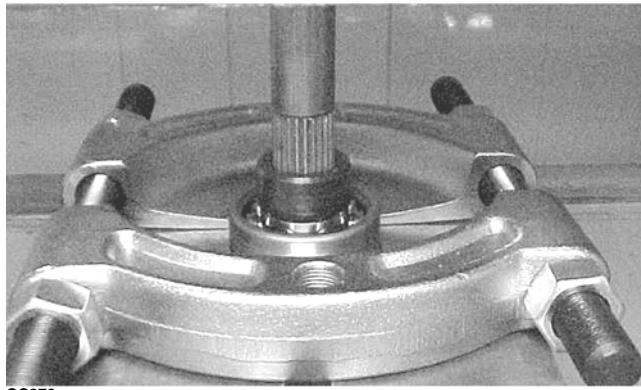

CC879

■NOTE: If gears are being replaced, use the existing shims.

■NOTE: If the gear case housing is being replaced, proceed to the following Shimming Procedure/Shim Selection sub-section.

Shimming Procedure/Shim Selection

| Shims | | |
|----------|-----|-------|
| p/n | mm | in. |
| 0402-405 | 1.3 | 0.051 |
| 0402-406 | 1.4 | 0.055 |
| 0402-407 | 1.5 | 0.059 |
| 0402-408 | 1.6 | 0.063 |
| 0402-409 | 1.7 | 0.067 |

It is very important to adjust bevel gears for the proper running tolerances. Gear life and gear noise are greatly affected by these tolerances; therefore, it is very important to properly adjust any gear set prior to final assembly.


The following procedure can be used on both front differential or rear drive gear case.

■NOTE: All bearings must be installed in the gear case and the pinion properly installed before proceeding.

Backlash


■NOTE: Always set backlash prior to any other shimming.

- Install the existing shim or a 0.051-0.055-in. shim on the gear case side of the ring gear assembly.

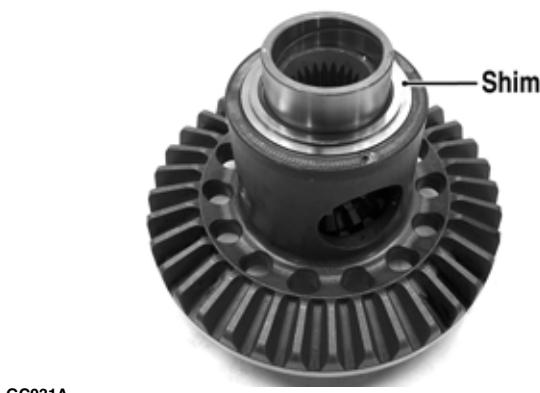


GC031A

2. Install the ring gear with shim in the gear case; then while holding the pinion stationary, rock the ring gear forward and back to determine if any backlash exists. If no backlash exists, install a thicker shim and recheck.

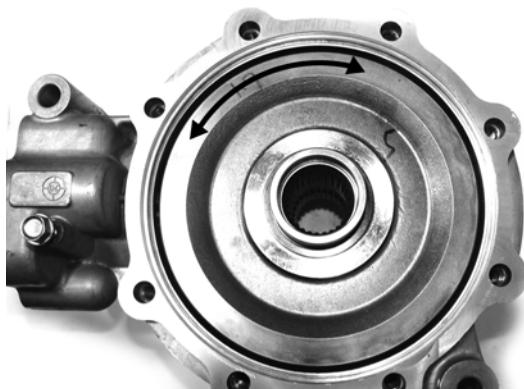

GC059A

3. Install the bearing flange onto the gear case cover making sure the alignment/locating pin engages the locating hole in the cover; then make sure the bearing flange is completely seated in the cover.
4. Install the existing shim or a 0.063 in. shim on the cover side of the ring gear; then place the assembled gear case cover onto the gear case and secure with three cap screws. Tighten evenly using a crisscross pattern.

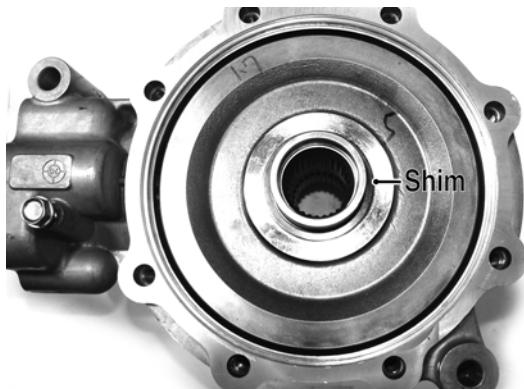

GC059B

5. Place the Backlash Measuring Tool into the splines of the ring gear and install a dial indicator making sure it contacts the gauge at a 90° angle and on the index mark.




GC070



GC072A

6. Zero the dial indicator; then while holding the pinion stationary, rock the ring gear assembly forward and back and record the backlash. Backlash must be 0.011-0.015 in. If backlash is within specifications, proceed to Ring Gear End-Play. If backlash is not within specifications, increase shim thickness to increase backlash or decrease shim thickness to decrease backlash.

■NOTE: Higher backlash settings usually result in quieter gear operation.

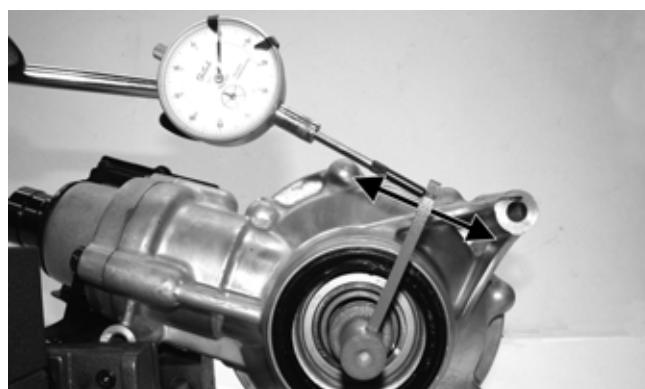

GC071A

Ring Gear End-Play

After correcting backlash, ring gear end-play can be adjusted. To adjust end-play, use the following procedure.

1. Secure the gear case in a holding fixture with the cover side up; then install a dial indicator contacting the ring gear axle flange.



GC065

2. Zero the dial indicator; then push the ring gear toward the dial indicator and release. End-play should be 0.004-0.008 in.

- To increase end-play, decrease the shim thickness. To decrease end-play, increase the shim thickness.

■NOTE: Once proper backlash and end play are established, the gear case can be assembled.



CC888

RING GEAR/THRUST BUTTON

Removing

Remove the thrust button from the gear case cover (left-hand threads). Account for a shim.


Inspecting

- Inspect the ring gear for excessive wear or discoloration.
- Inspect the thrust button for excessive wear or discoloration.
- Inspect the bearings for discoloration, roughness, or excessive wear.

Installing/Shimming


■NOTE: Ring gear end-play must be adjusted prior to selecting shim for the thrust button.

- Install the thrust button with shim into the gear case cover and tighten securely (left-hand threads).

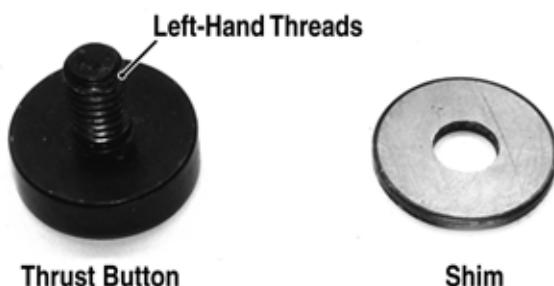

GC057A

- Place the ring gear with selected shim into the cover and measure the ring gear to thrust button clearance with a thickness gauge. Clearance should be 0.020-0.040 in.

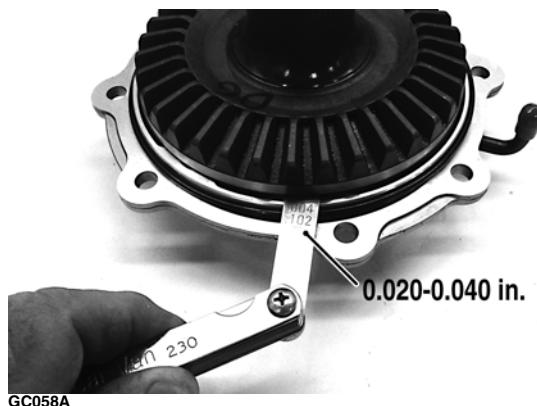

GC058A


- If clearance is as specified, remove the ring gear and thrust button; then place a drop of red Loctite #271 on the threads and tighten to 8 ft-lb (left-hand threads).
- If clearance is not as specified, repeat steps 1 and 2 using thicker (clearance too great) or thinner (clearance too small) until correct specification is reached.

Assembling Differential Assembly

- With the pinion gear and new bearings installed, place the selected (backlash) shim on the gear case side of the ring gear with the chamfered side toward the ring gear; then install into gear case/differential housing.



GC031A

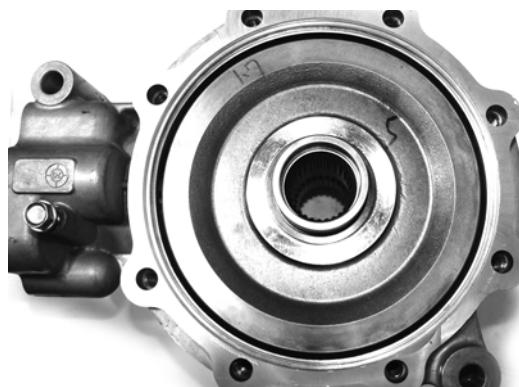

GC059

- Place the selected (end-play) shim, chamfered side toward the gear, onto the cover side of the ring gear.



GC059B

■NOTE: The spider and ring gear assembly must be replaced as a complete unit.

3. Making sure the O-ring is properly positioned on the differential housing cover assembly, install the cover with existing cap screws (coated with green Loctite #609). Account for the ID tag. Tighten the cap screws evenly to 18 ft-lb.

■NOTE: Grease can be applied to the O-ring for ease of assembling.

4. Place the input shaft assembly onto the gear case housing; then secure with the existing cap screws. Tighten to 18 ft-lb.




CD110

Removing Needle Bearing

■NOTE: Removing the needle bearing is rarely necessary. Avoid removing the needle bearing unless the bearing is clearly damaged.

■NOTE: This procedure can be performed on a rear gear case.

1. Place a 1/4 in. drill bit on the inside surface of the needle bearing (against the bottom side); then drill through the pinion shaft needle bearing housing.

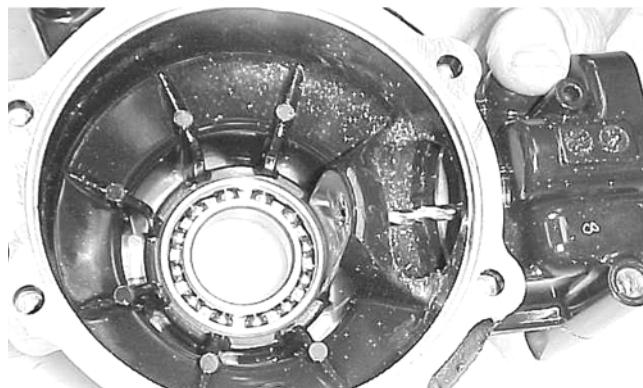

CC885

2. Using a propane torch, heat the area surrounding the needle bearing to soften the Loctite.



CC886

3. Using a flat-nosed punch, drive the bearing out of the housing.



CC887

Installing Needle Bearing


1. Apply green Loctite #609 to the outside of a new bearing; then place the new bearing into the housing.



CC888


2. Using a suitable driver, install the needle bearing into the gear case housing making sure the bearing is seated.

■NOTE: Do not push the bearing too far into the housing.

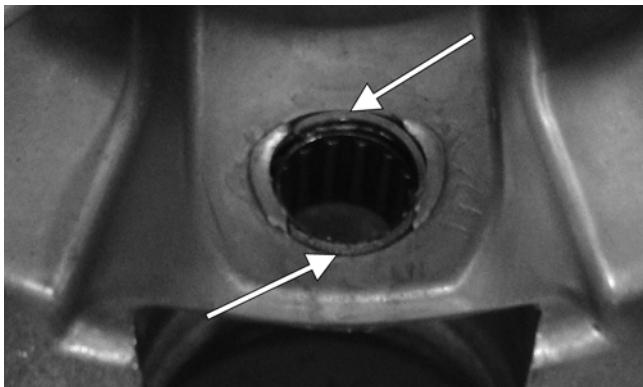


GC045A

3. Install the pinion shaft and secure with a new 48 mm lock collar. Tighten to 125 ft-lb.

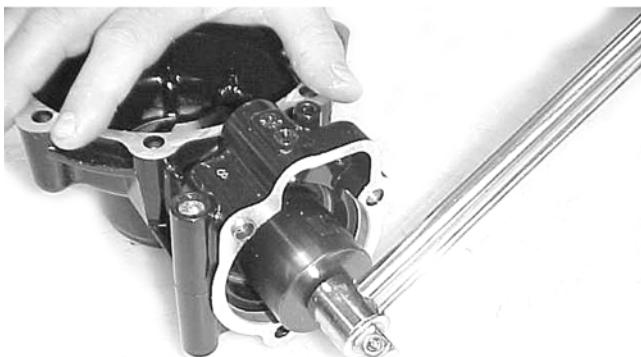

CC890

4. Place a punch on the edge of the lock collar in the oil gallery area; then using a hammer, stake the lock collar to ensure that the collar will remain securely tightened.

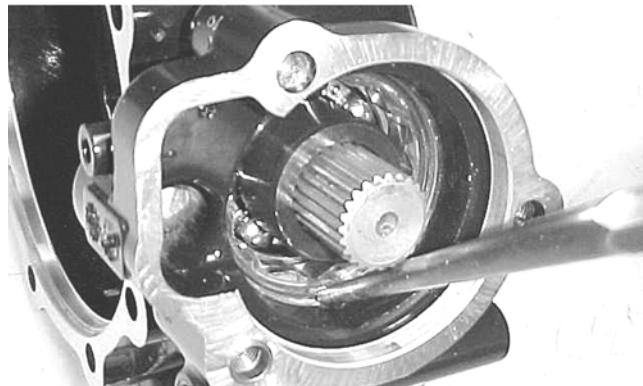

CC891

5. Install the pinion housing.

Removing/Installing Axle Seal

■NOTE: This procedure can be performed on a rear gear case.

1. Remove the seal using a seal removal tool.




GC066

2. Using a press, remove the bearing.



CC900

3. Using a press, install the new bearing into the housing.

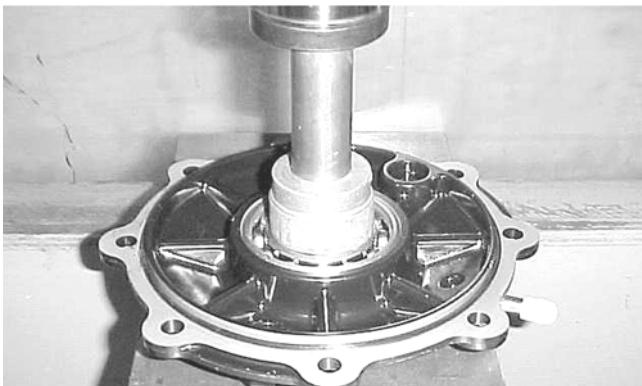

CC901

■NOTE: Prior to installing the seal, apply High Performance #2 Molybdenum Disulphide Grease to the seal outside diameter.

4. Using an appropriate seal installation tool, evenly press the seal into the cover bore until seated.

CAUTION

Make sure the tool is free of nicks or sharp edges or the seal will be damaged.



GC060

5. Repeat steps 1-4 for the opposite side.

INSTALLING DIFFERENTIAL

1. Align the input flange with the front output flange; then place the differential into position on the frame and install the cap screws and nuts. Tighten to 38 ft-lb.



KC488

2. Install the cap screws securing the flange couplers together and tighten to 20 ft-lb.




XA023

3. Install the front axles, upper A-arms, and front shocks.



XA024

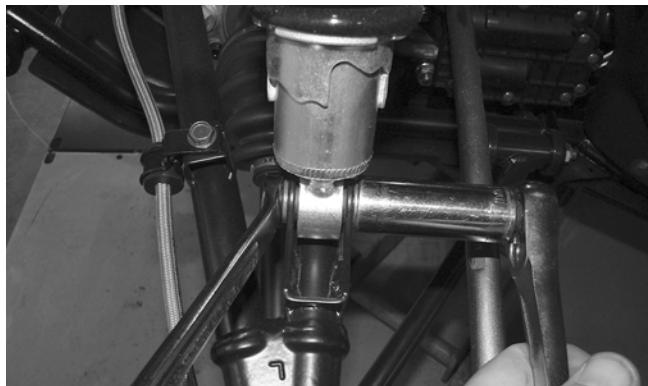


XA025

4. Install the axle into the wheel bearing; then secure the ball joints to the knuckle with the cap screws.



KC314

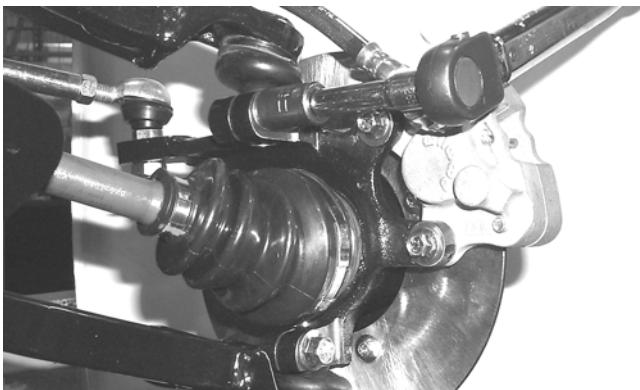

AF628D

5. Install the hub to the axle; then tighten the nut to specification and secure with cotter pin. Install the brake caliper.



KC283

6. Install the wheel; then using a crisscross pattern, tighten the wheel nuts in 20 ft-lb increments to a final torque of 40 ft-lb (steel wheel), 60 ft-lb (aluminum wheel w/black nuts), or 80 ft-lb (aluminum wheel w/chrome nuts).
7. Pour 275 ml (9.3 fl oz) of SAE 80W-90 hypoid gear lubricant into the differential and install the filler plug. Tighten to 16 ft-lb.
8. Remove the ATV from the support stand.



KC284

■**NOTE:** Never reuse a lock nut. Once a lock nut has been removed, it must be replaced with a new lock nut.

6. While holding the drive axle stationary, pull the top of the knuckle out and down until it is free of the drive axle.



KC285

7. Place a drain pan under the ATV to contain any oil leakage; then pull out sharply on the axle to dislodge the splines from the gear case. Remove the axle.

REMOVING FRONT DRIVE AXLE

■**NOTE:** For removing a front drive axle, see Front Differential in this section.

CLEANING AND INSPECTING

■**NOTE:** Always clean and inspect the drive axle components to determine if any service or replacement is necessary.

1. Using a clean towel, wipe away any oil or grease from the axle components.

2. Inspect boots for any tears, cracks, or deterioration.

■**NOTE:** If a boot is damaged in any way, it must be replaced with a boot kit.

3. Inspect the gear case seals for nicks or damage.

DISASSEMBLING AXLES

■**NOTE:** To disassemble/assemble axles, refer to appropriate boot kit instructions.

INSTALLING REAR DRIVE AXLE

1. Slide the drive axle into place in the gear case.

Drive Axles

REMOVING REAR DRIVE AXLE

1. Secure the ATV on a support stand to elevate the wheels.

WARNING

Make sure the ATV is solidly supported on the support stand to avoid injury.

2. Pump up the hand brake; then engage the brake lever lock.
3. Remove the rear wheels.
4. Remove the cotter pins securing the hex nuts; then remove the hex nuts. Release the brake lever lock.
5. Remove the cap screw and lock nut securing the knuckle to the upper A-arm. Discard the lock nut.

■NOTE: To assure proper seating of the axle, give it a light pull; the axle should remain “clipped” in place.

2. Swing the knuckle up and onto the drive axle; then place the knuckle into place in the upper A-arm. Secure the knuckle to the A-arm with a cap screw and a new lock nut. Tighten to 35 ft-lb.
3. Place the hub into position on the axle followed by a hex nuts. Tighten the hex nuts finger-tight at this time.
4. Pump up the hand brake lever; then engage the brake lever lock.
5. Tighten the hub hex nuts (from step 3) to 200 ft-lb; then install and spread a new cotter pin making sure each side of the pin is flush to the hub nut.
6. Install the wheel; then using a crisscross pattern, tighten the wheel nuts in 20 ft-lb increments to a final torque of 40 ft-lb (steel wheel), 60 ft-lb (aluminum wheel w/black nuts), or 80 ft-lb (aluminum wheel w/chrome nuts).
7. Remove the ATV from the support stand and release the brake lever lock.


INSTALLING FRONT DRIVE AXLE

1. Position the drive axle in the gear case and steering knuckle; then insert the upper A-arm ball joint into the steering knuckle. Secure with a cap screw tightened to 35 ft-lb.
2. Slide the hub w/brake disc into position in the steering knuckle followed by a washer and hex nut. Tighten finger-tight at this time.
3. Install the brake caliper on the steering knuckle. Tighten to 20 ft-lb; then pump up the hand brake lever and engage the brake lever lock.
4. Tighten the hub hex nut (from step 2) to 200 ft-lb; then install and spread a new cotter pin making sure each side of the pin is flush to the hub nut.



KC305

5. Install the wheel; then using a crisscross pattern, tighten the wheel nuts in 20 ft-lb increments to a final torque of 40 ft-lb (steel wheel), 60 ft-lb (aluminum wheel w/black nuts), or 80 ft-lb (aluminum wheel w/chrome nuts).
6. Remove the ATV from the support stand and release the brake lever lock.
7. Check the front differential oil level and add oil as necessary.

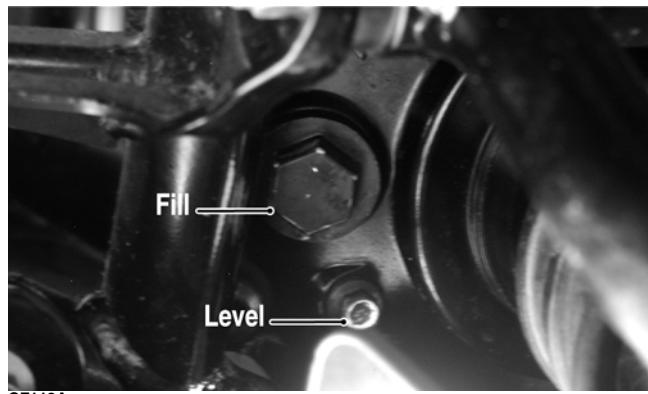


CF113A

Rear Gear Case

REMOVING

1. Remove both of the rear drive axles.
2. Remove the four cap screws securing the engine output shaft to the rear gear case input flange.

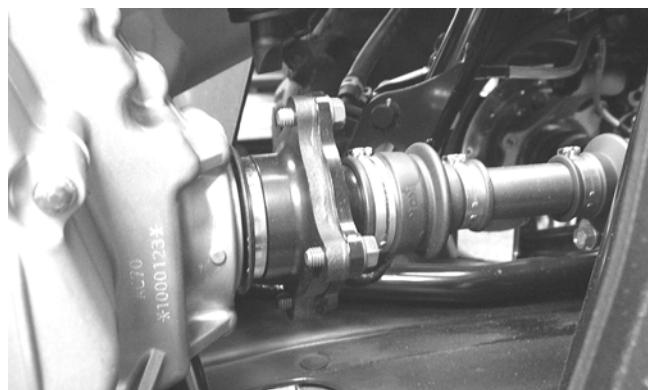

KC169

3. Remove the two cap screws and lock nuts securing the rear gear case to the frame; then remove the gear case through the left side.



KC489

AT THIS POINT

For servicing the input shaft, pinion gear, needle bearing, thrust button, and axle seal, see Front Differential in this section.

INSTALLING

1. Slide the gear case into position through the left side of the frame; then secure it to the frame with cap screws and lock nuts. Tighten to 38 ft-lb.
2. Secure the engine output flange to the rear gear case input flange with four cap screws and lock nuts. Tighten to 20 ft-lb.
3. Install the rear drive axles.

Hub


REMOVING

1. Secure the ATV on a support stand to elevate the wheel; then remove the wheel.

WARNING

Make sure the ATV is solidly supported on the support stand to avoid injury.

2. Remove the cotter pin from the nut. Discard the cotter pin.
3. Remove the flange nut securing the hub.
4. Remove the brake caliper.

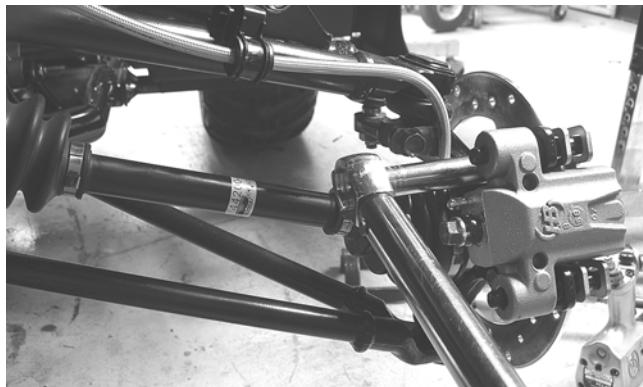

5. Remove the hub assembly.
6. Remove the four cap screws securing the brake disc.

CLEANING AND INSPECTING

1. Clean all hub components.
2. Inspect all threads for stripping or damage.
3. Inspect the brake disc for cracks or warping.
4. Inspect the hub for pits, cracks, loose studs, or spline wear.

INSTALLING

1. Secure the brake disc to the hub with the four cap screws coated with blue Loctite #243. Tighten to 15 ft-lb.
2. Apply grease to the splines in the hub.
3. Install the hub assembly onto the shaft.
4. Secure the hub assembly with the nut. Tighten only until snug.

5. Secure the brake caliper to the knuckle with two new “patch-lock” cap screws. Tighten the caliper to 20 ft-lb.



6. Tighten the hub nut (from step 4) to 200 ft-lb; then install and spread a new cotter pin making sure each side of the pin is flush to the hub nut.



7. Install the wheel; then using a crisscross pattern, tighten the wheel nuts in 20 ft-lb increments to a final torque of 40 ft-lb (steel wheel), 60 ft-lb (aluminum wheel w/black nuts), or 80 ft-lb (aluminum wheel w/chrome nuts).
8. Remove the ATV from the support stand.

Hand Brake Lever/Master Cylinder Assembly

■NOTE: The master cylinder is a non-serviceable component; it must be replaced as an assembly.

REMOVING

1. Slide a piece of flexible tubing over one of the wheel bleeder valves and direct the other end into a container. Remove the reservoir cover; then open the bleeder valve. Allow the brake fluid to drain completely.

■NOTE: Compressing the brake lever several times will quicken the draining process.



REMOVING/DISASSEMBLING

1. Secure the ATV on a support stand to elevate the wheel; then remove the wheel.

⚠ WARNING

Make sure the ATV is solidly supported on the support stand to avoid injury.

⚠ WARNING

Never let brake fluid contact the eyes. Damage to the eyes will occur. Always wear appropriate protective safety goggles and latex gloves when handling brake fluid.

2. Drain the brake fluid from the caliper, hose, and master cylinder through the bleed screw by pumping the brake lever/pedal.



CAUTION

Brake fluid is highly corrosive. Do not spill brake fluid on any surface of the ATV.

3. Remove the clamp screws securing the brake housing to the handlebar, then remove the assembly from the handlebar.

INSPECTING

1. Inspect the pin securing the brake lever for wear.
2. Inspect the brake lever for elongation of the pivot hole.
3. Inspect the reservoir for cracks and leakage.
4. Inspect the banjo-fitting and bolt for cracks and deterioration and the condition of the fittings (threaded and compression).

INSTALLING

1. Position the brake housing on the handlebar. Secure with clamp screws; then tighten securely.
2. Using two new crush washers, connect the banjo-fitting to the master cylinder; then secure with the banjo-fitting bolt. Tighten to 20 ft-lb.
3. Bleed the brake system (see Periodic Maintenance/Tune-Up - Hydraulic Brake Systems).

Hydraulic Brake Caliper

⚠ WARNING

Arctic Cat recommends that only authorized Arctic Cat ATV dealers perform hydraulic brake service. Failure to properly repair brake systems can result in loss of control causing severe injury or death.

CAUTION

Brake fluid is highly corrosive. Do not spill brake fluid on any surface of the ATV and do not reuse brake fluid.


■**NOTE:** Whenever brake components are removed, disassembled, or repaired where brake fluid is exposed to air, drain all fluid and replace with new DOT 4 brake fluid from an unopened container. Brake fluid readily absorbs moisture from the air significantly lowering the boiling point. This increases the chance of vapor lock reducing braking power and increasing stopping distance.

3. Remove the brake hose from the caliper and close the bleed screw; then remove the caliper.
4. Compress the caliper holder against the caliper (opposite the O-ring side) and remove the outer brake pad; then remove the inner brake pad.

■**NOTE:** If brake pads are to be returned to service, do not allow brake fluid to contaminate them.



PR237A

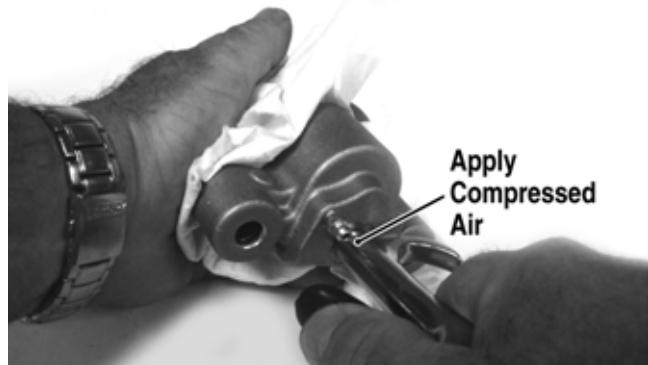


PR713A



PR238

5. Remove the caliper holder from the caliper and discard the O-ring.

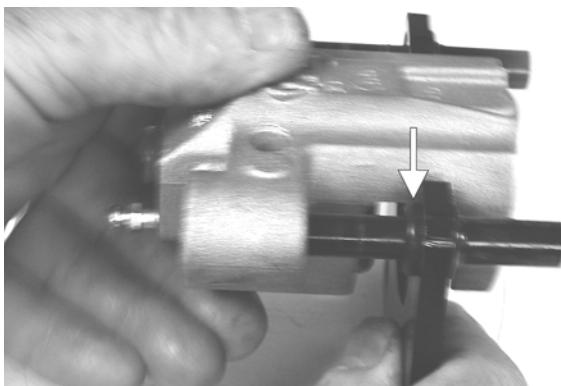

PR239B

■**NOTE: The O-ring is used for shipping purposes and provides no function in operation.**

6. Cover the piston end of the housing with a shop towel; then keeping fingers clear of piston travel, apply compressed air to the fluid port to blow the piston free of the housing. Account for two seal rings in the housing.



PR715

⚠ WARNING

Make sure to hold the towel firmly in place or the piston could be ejected from the housing causing injury.

7. Using an appropriate seal removal tool, carefully remove the seals from the brake caliper housing; then remove four O-rings from the brake caliper housing noting the location of the different sized O-rings. Discard all seals, O-rings, and crush washers.

CLEANING AND INSPECTING

1. Clean all caliper components (except the brake pads) with DOT 4 brake fluid. Do not wipe dry.
2. Inspect the brake pads for damage and excessive wear.

■**NOTE: For measuring brake pads, see Periodic Maintenance/Tune-Up - Hydraulic Brake Systems.**

3. Inspect the brake caliper housings for scoring in the piston bores, chipped seal ring grooves, or signs of corrosion or discoloration.
4. Inspect the piston surface for scoring, discoloration, or evidence of binding or galling.
5. Inspect the caliper holder for wear or bending.

ASSEMBLING/INSTALLING


1. Install new seals into the brake caliper housing and apply a liberal amount of DOT 4 brake fluid to the cylinder bore of the housing, seals, and brake piston.

CAUTION

Make sure the seals are properly in place and did not twist or roll during installation.



PR715

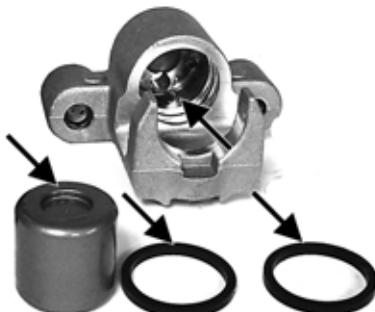

PR717A

2. Press the piston into the caliper housing using hand pressure only. Completely seat the piston; then wipe off any excessive brake fluid.




PR711A



PR712


3. Apply high-temperature silicone grease (supplied with the O-ring kit) to the inside of the caliper holder bores and O-rings; then install the four O-rings into the caliper.

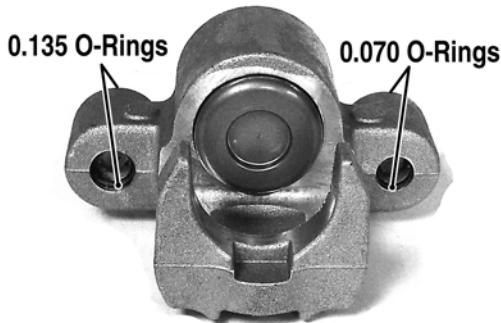

PR719C

4. Install the caliper onto the caliper holder making sure the caliper and holder are correctly oriented.

■NOTE: It is very important to apply silicone grease to the O-rings and caliper bores prior to assembly.

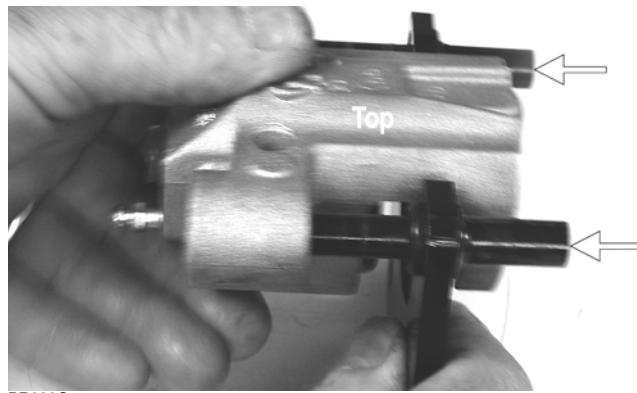

PR239C


5. Making sure brake fluid does not contact the brake pads, compress the caliper holder toward the caliper and install the inner brake pad; then install the outer pad.

CAUTION

If brake pads become contaminated with brake fluid, they must be thoroughly cleaned with brake cleaning solvent or replaced with new pads. Failure to do so will result in reduced braking and premature brake pad failure.



PR238

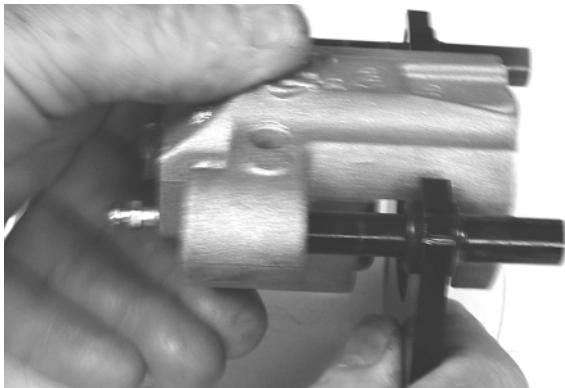

PR239

6. Place the brake caliper assembly into position and secure with new "patch-lock" cap screws. Tighten the caliper to 20 ft-lb.
7. Place a new crush washer on each side of the brake hose fitting and install it on the caliper. Tighten to 20 ft-lb.

8. Fill the reservoir; then bleed the brake system (see Periodic Maintenance/Tune-Up - Hydraulic Brake Systems).

⚠️ WARNING

Never use brake fluid from an open container or reuse brake fluid. Moisture-contaminated brake fluid could cause vapor build-up (expansion) during hard braking resulting in greatly increased stopping distance or loss of control leading to injury or death.

9. Install the wheel; then using a crisscross pattern, tighten the wheel nuts in 20 ft-lb increments to a final torque of 40 ft-lb (steel wheel), 60 ft-lb (aluminum wheel w/black nuts), or 80 ft-lb (aluminum wheel w/chrome nuts).
10. Remove the ATV from the support stand and verify brake operation.

Troubleshooting Drive System

Problem: Power not transmitted from engine to wheels

| Condition | Remedy |
|--|------------------|
| 1. Rear axle shafts serration worn - broken | 1. Replace shaft |

Problem: Power not transmitted from engine to either front wheel

| Condition | Remedy |
|--|---|
| 1. Secondary drive - driven gear teeth broken 2. Propeller shaft serration worn - broken 3. Coupling damaged 4. Coupling joint serration worn - damaged 5. Front drive - driven bevel gears broken - damaged 6. Front differential gears/pinions broken - damaged 7. Sliding dogs/shaft fork worn - damaged 8. Front drive axle worn - damaged 9. Front drive axle serration worn - damaged | 1. Replace gear(s) 2. Replace shaft 3. Replace coupling 4. Replace joint 5. Replace gear(s) 6. Replace gears - pinions 7. Replace gear(s) 8. Replace axle 9. Replace axle |

Troubleshooting Brake System

Problem: Braking poor

| Condition | Remedy |
|--|--|
| <ol style="list-style-type: none">1. Pad worn2. Pedal free-play excessive3. Brake fluid leaking4. Hydraulic system spongy5. Master cylinder/brake cylinder seal worn | <ol style="list-style-type: none">1. Replace pads2. Replace pads3. Repair - replace hydraulic system component(s)4. Bleed hydraulic system - correct or repair leaks5. Replace master cylinder |

Problem: Brake lever travel excessive

| Condition | Remedy |
|---|--|
| <ol style="list-style-type: none">1. Hydraulic system entrapped air2. Brake fluid low3. Brake fluid incorrect4. Piston seal - cup worn | <ol style="list-style-type: none">1. Bleed hydraulic system2. Add fluid to proper level3. Drain system - replace with correct fluid4. Replace master cylinder |

Problem: Brake fluid leaking

| Condition | Remedy |
|--|---|
| <ol style="list-style-type: none">1. Connection joints loose2. Hose cracked3. Piston seal worn | <ol style="list-style-type: none">1. Tighten joint2. Replace hose3. Replace brake caliper |

Suspension

The following suspension system components should be inspected periodically to ensure proper operation.

- A. Shock absorber rods not bent, pitted, or damaged.
- B. Rubber damper not cracked, broken, or missing.
- C. Shock absorber body not damaged, punctured, or leaking.
- D. Shock absorber eyelets not broken, bent, or cracked.
- E. Shock absorber eyelet bushings not worn, deteriorated, cracked, or missing.
- F. Shock absorber spring not broken or sagging.

Shock Absorbers

REMOVING

1. Secure the ATV on a support stand to elevate the wheels and to release load on the suspension.

WARNING

Make sure the ATV is solidly supported on the support stand to avoid injury.

2. Remove the two cap screws and nuts securing each front shock absorber to the frame and the upper A-arm. Account for bushings and sleeves from each.

CAUTION

Additional support stands are necessary to support the rear axle when the shock absorbers are removed or damage may occur.

3. Remove the two cap screws and nut securing each rear shock absorber to the frame and lower A-arm. Account for bushings and sleeves from each.

■NOTE: The shock absorbers are not serviceable components. If leaking, dented, or there are missing or broken parts, the shock absorber assembly must be replaced.

INSTALLING

1. Place bushings and sleeves (where appropriate) into shock eyelet; then install shock with cap screws and nuts. Tighten all nuts to 35 ft-lb.

CAUTION

Do not tighten the nuts beyond the 35 ft-lb specification or the shock eyelet or mount WILL be damaged.

2. Remove the ATV from the support stand.

Front A-Arms


REMOVING

1. Secure the ATV on a support stand to elevate the front wheels; then remove the wheels.

WARNING

Make sure the ATV is solidly supported on the support stand to avoid injury.

2. Remove the cotter pin from the nut. Discard the cotter pin.
3. Remove the nut securing the hub.
4. Remove the brake caliper. Account for two cap screws.

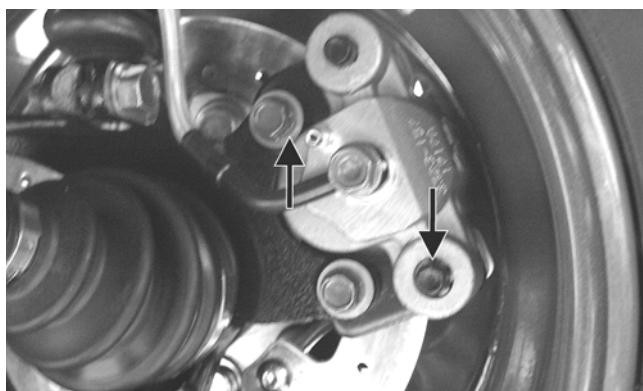


KC187A

5. Remove the hub assembly.
6. Remove the cap screws securing the ball joints to the knuckle.

CAUTION

Support the knuckle when removing the cap screws or damage to the threads will occur.

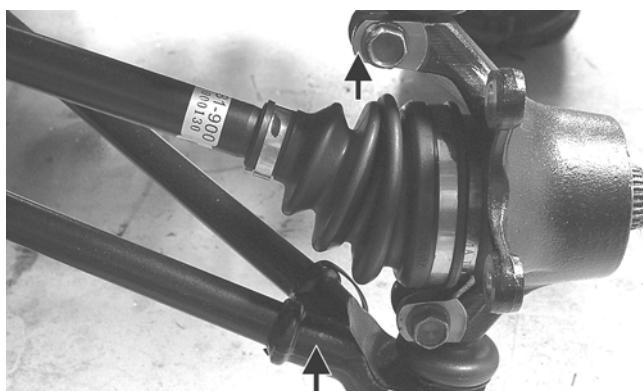

KC313A

7. Tap the ball joints out of the knuckle; then free the knuckle from the axle and swing out of the way.



KC297

8. Remove the lower shock absorber eyelet from the upper A-arm.
9. Remove the cap screws securing the A-arms to the frame.
10. Remove the circlip from the ball joint; then remove the ball joint from the A-arm.

CLEANING AND INSPECTING

1. Clean all A-arm components using a pressure washer.
2. Clean the ball joint mounting hole of all residual Loctite, grease, oil, or dirt for installing purposes.
3. Inspect the A-arm for bends, cracks, and worn bushings.
4. Inspect the ball joint mounting holes for cracks or damage.
5. Inspect the frame mounts for signs of damage, wear, or weldment damage.

INSTALLING

1. Apply green Loctite #609 to the entire outside diameter of the ball joint; then install the ball joint into the A-arm and secure with the circlip.
2. Install the A-arm assemblies into the frame mounts and secure with the cap screws. Only finger-tighten at this time.
3. Secure the lower eyelet of the shock absorber to the upper A-arm. Tighten nut to 35 ft-lb.
4. Secure the A-arm assemblies to the frame mounts (from step 2). Tighten the cap screws to 35 ft-lb.

CAUTION

Do not tighten the nut beyond the 35 ft-lb specification or the shock eyelet or mount WILL be damaged.

5. Install the knuckle assembly onto the ball joints and secure with cap screws. Tighten to 35 ft-lb.
6. Apply grease to the hub and drive axle splines; then install the hub assembly onto the drive axle.
7. Secure the hub assembly with the nut. Tighten only until snug.
8. Secure the brake caliper to the knuckle with the two "patch-lock" cap screws. Tighten to 20 ft-lb.

9. Secure the hub nut (from step 7) to the shaft/axle. Tighten to 200 ft-lb.
10. Install a new cotter pin and spread the pin to secure the nut.
11. Install the wheel; then using a crisscross pattern, tighten the wheel nuts in 20 ft-lb increments to a final torque of 40 ft-lb (steel wheel), 60 ft-lb (aluminum wheel w/black nuts), or 80 ft-lb (aluminum wheel w/chrome nuts).
12. Remove the ATV from the support stand.

Rear A-Arms

REMOVING

1. Secure the ATV on a support stand to elevate the wheels.


WARNING

Make sure the ATV is solidly supported on the support stand to avoid injury.

2. Pump up the hand brake; then engage the brake lever lock.
3. Remove the wheel.
4. Remove the cotter pin securing the hex nut; then remove the hex nut. Release the brake lever lock. Discard the cotter pin.
5. Remove the caliper (right side only).

■NOTE: Do not allow the brake caliper to hang from the hose.

6. Remove the cap screws and lock nut securing the shock absorber to the frame and lower A-arm; then remove the shock absorber.

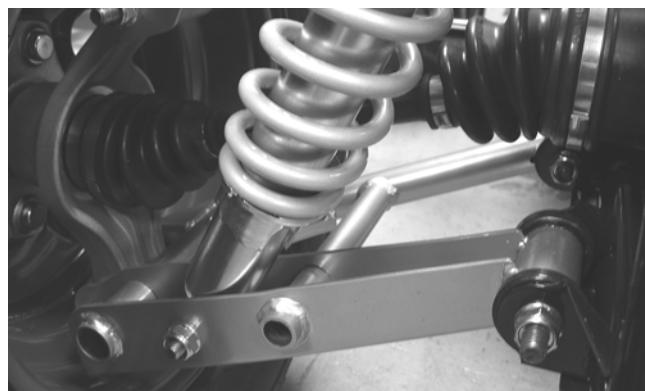

KC0100

7. Slide the hub out of the knuckle and set aside.
8. Remove the cap screws and lock nuts securing the knuckle to the A-arms. Discard the lock nuts.

■NOTE: Never reuse a lock nut. Once a lock nut has been removed, it must be replaced with a new lock nut.

9. Remove the cap screws and lock nuts securing the A-arms to the frame; then remove the A-arms.

■**NOTE:** If removing the upper right A-arm, it will be necessary to disconnect the brake hose from the A-arm.

CLEANING AND INSPECTING

1. Clean all A-arm components using a pressure washer.
2. Inspect the A-arm for bends, cracks, and worn bushings.
3. Inspect the frame mounts for signs of damage, wear, or weldment damage.

INSTALLING

1. Install the A-arm assemblies into the frame mounts and secure with the cap screws and new lock nuts. Only finger-tighten at this time.
2. Slide the knuckle onto the drive axle and into position on the A-arms; then secure the knuckle to the A-arms with cap screws and new lock nuts. Tighten to 35 ft-lb.
3. Tighten the hardware securing the A-arms to the frame mounts (from step 1) to 35 ft-lb.
4. Apply grease on the drive axle splines; then install the hub assembly onto the drive axle.
5. Secure the hub assembly with the nut. Tighten only until snug.
6. Secure the brake caliper to the knuckle with two new “patch-lock” cap screws (right side only). Tighten the caliper to 20 ft-lb.
7. Compress the hand brake lever and engage the brake lever lock; then secure the hub nut (from step 5) to the drive axle. Tighten to 200 ft-lb.
8. Install a new cotter pin and spread the pin to secure the nut.
9. Secure the shock absorber to the frame with a cap screw and new lock nut. Tighten to 35 ft-lb.
10. Secure the shock absorber to the lower A-arm with a cap screw and new lock nut. Tighten to 35 ft-lb.
11. Secure the boot guard to the lower A-arm with the two cap screws. Tighten securely.
12. Install the wheel; then using a crisscross pattern, tighten the wheel nuts in 20 ft-lb increments to a final torque of 40 ft-lb (steel wheel), 60 ft-lb (aluminum wheel w/black nuts), or 80 ft-lb (aluminum wheel w/chrome nuts).
13. Remove the ATV from the support stand.

Wheels and Tires

TIRE SIZE

⚠ WARNING

Use only Arctic Cat approved tires when replacing tires. Failure to do so could result in unstable ATV operation.

The ATV is equipped with low-pressure tubeless tires of the size and type listed in the General Information section. Do not under any circumstances substitute tires of a different type or size.

⚠ WARNING

Do not mix tire tread patterns. Use the same pattern type on front and rear. Failure to heed warning could cause poor handling qualities of the ATV and could cause excessive drive train damage not covered by warranty.

TIRE INFLATION PRESSURE

Front and rear tire inflation pressure should be 27.6 kPa (4.0 psi).

REMOVING

1. Secure the ATV on a support stand to elevate the wheels.

⚠ WARNING

Make sure the ATV is solidly supported on the support stand to avoid injury.

2. Remove the wheels.

■**NOTE:** Keep left-side and right-side wheels separated for installing them on their proper sides.

CLEANING AND INSPECTING

1. Clean the wheels and hubs using a pressure washer.
2. Inspect each wheel for cracks, dents, or bends.
3. Inspect each tire for cuts, wear, missing lugs, and leaks.

INSTALLING

Install the wheel using a crisscross pattern, tighten the wheel nuts in 20 ft-lb increments to a final torque of 40 ft-lb (steel wheel), 60 ft-lb (aluminum wheel w/black nuts), or 80 ft-lb (aluminum wheel w/chrome nuts).

■**NOTE:** Make sure each wheel is installed on its proper hub as noted in removing (the “rotation arrow” (if applicable) must indicate forward direction of rotation).



CHECKING/INFLATING

1. Using an air pressure gauge, measure the air pressure in each tire. Adjust the air pressure as necessary to meet the recommended inflation pressure.
2. Inspect the tires for damage, wear, or punctures.

⚠️ WARNING

Do not operate the ATV if tire damage exists.

■**NOTE:** If repair is needed, follow the instructions found on the tire repair kit or remove the wheel and have it repaired professionally.

■**NOTE:** Be sure all tires are the specified size and have identical tread pattern.

3. Check the front wheel toe-in and toe-out and adjust as necessary (see Steering/Body/Controls - Front Wheel Alignment).
4. Test drive the ATV on a dry, level surface and note any pulling to the left or right during acceleration, deceleration, and braking.

■**NOTE:** If pulling is noted, measure the circumference of the front and rear tires on the pulling side. Compare the measurements with the tires on the opposite side. If pulling is noted during braking only, check and adjust the brakes as necessary and recheck operation (see Periodic Maintenance/Tune-Up - Hydraulic Brake Systems).

5. Increase the air pressure in the tires with the smallest circumference measurement until all tires are equal in circumference.
6. Repeat steps 4-5 as necessary to ensure proper handling.

Troubleshooting

Problem: Suspension too soft

| Condition | Remedy |
|---|---|
| 1. Spring(s) weak 2. Shock absorber damaged 3. Shock absorber preload too low | 1. Replace spring(s) 2. Replace shock absorber 3. Adjust shock absorber preload |

Problem: Suspension too stiff

| Condition | Remedy |
|--|--|
| 1. A-arm-related bushings worn 2. Shock absorber preload too high | 1. Replace bushing 2. Adjust shock absorber preload |

Problem: Suspension noisy

| Condition | Remedy |
|---|--|
| 1. Cap screws (suspension system) loose 2. A-arm-related bushings worn | 1. Tighten cap screws 2. Replace bushings |

Problem: Rear wheel oscillation

| Condition | Remedy |
|--|--|
| 1. Rear wheel hub bearings worn - loose 2. Tires defective - incorrect 3. Wheel rim distorted 4. Wheel hub cap screws loose 5. Auxiliary brake adjusted incorrectly 6. Rear suspension arm-related bushing worn 7. Rear shock absorber damaged 8. Rear suspension arm nut loose | 1. Replace bearings 2. Replace tires 3. Replace rim 4. Tighten cap screws 5. Adjust brake 6. Replace bushing 7. Replace shock absorber 8. Tighten nut |



©2015 Arctic Cat Inc.

Printed in U.S.A. Trademarks of Arctic Cat Inc., Thief River Falls, MN 56701 p/n 2260-600

Effective: November 2015