

- 1 ACTUATOR, REAR DIFFERENTIAL LOCK
- 2 MOTOR, FAN
- 3 ACCESSORY FRONT, CLA
- 4 ACCESSORY, SWITCHED
- 5 GAUGE, LOD
- 6 ACCESSORY, FRONT
- 7 SWITCH, LIGHT
- 8 SWITCH, 2WD/4WD
- 9 SWITCH, REAR LOCK
- 10 KEYSWITCH
- 11 CONNECTOR, ROOF HARNESS
- 12 CONNECTOR, DIAGNOSTICS
- 13 CONNECTOR, ECM A
- 14 ECM
- 15 CONNECTOR, ECM B
- 16 SENSOR, FUEL PUMP/LEVEL
- 17 COIL, PTO
- 18 COIL, CENTER
- 19 COIL, MAG
- 20 INJECTOR, PTO
- 21 INJECTOR, CENTER
- 22 INJECTOR, MAG.
- 23 SENSOR, OXYGEN
- 24 ACCESSORY, REAR
- 25 SENSOR, SPEED
- 26 HARNESS, CARGO BOX
- 27 TAILLIGHT, RIGHT
- 28 TAILLIGHT, LEFT
- 29 CONNECTOR, SEAT BELT SWITCH
- 30 SENSOR, CRANK ANGLE
- 31 SENSOR, KNOCK
- 32 SENSOR, TILT
- 33 SENSOR, TMAP
- 34 SWITCH, OIL PRESSURE
- 35 SENSOR, ENGINE COOLANT TEMP.
- 36 CONTROL, ELECTRONIC THROTTLE BODY
- 37 SENSOR, ACCELERATOR POSITION
- 38 SWITCH, GEAR
- 39 SWITCHES, BRAKE PRESSURE
- 40 PDM 2
- 41 PDM 1
- 42 ACTUATOR, FRONT 2WD/4WD/DIFF. LOCK
- 43 HEADLIGHT, LEFT HI/LO
- 44 HEADLIGHT, LEFT ACCENT
- 45 HEADLIGHT, RIGHT ACCENT
- 46 HEADLIGHT, RIGHT HI/LO
- 47 GROUND, ENGINE
- 48 BATTERY, 12V
- 49 SOLENOID, STARTER
- 50 MOTOR, STARTER
- 51 SOLENOID, STARTER
- 52 ALTERNATOR
- 53 REGULATOR/RECTIFIER
- 54 ELECTRONIC POWER STEERING

