

- 1 CONTROLS, LH  
 2 SWITCH, HAND BRAKE  
 3 GUAGE, LCD  
 4 SWITCH, KEY  
 5 SWITCH, 2WD/4WD  
 6 CONNECTOR, DIAGNOSTICS  
 7 ECU  
 8 CONNECTOR, REVERSE LIMIT-HIGH  
 9 CONNECTOR, REVERSE LIMIT-LOW  
 10 CONNECTOR, REVERSE LIMIT  
 11 HORN, 12V  
 12 COIL, IGNITION  
 13 SENSOR/PUMP, FUEL  
 14 INJECTOR  
 15 SENSOR, SPEEDO  
 16 SOLENOID, STARTER  
 17 BATTERY, 12V  
 18 MOTOR, STARTER  
 19 GROUND, ENGINE/BATTERY  
 20 CONNECTOR, REAR ACCESSORY  
 21 SIGNAL, REAR RH TURN  
 22 TAILLIGHT, RH  
 23 LIGHT, LICENSE PLATE  
 24 TAILLIGHT, LH  
 25 SIGNAL, REAR LH TURN  
 26 REGULATOR/RECTIFIER  
 27 MAGNETO  
 28 SENSOR, CRANKSHAFT POSITION  
 29 SENSOR, AIR TEMPERATURE  
 30 SENSOR, MANIFOLD ABSOLUTE PRESSURE  
 31 SENSOR, COOLANT TEMPERATURE  
 32 SENSOR, TILT  
 33 CONTROL, IDLE SPEED  
 34 SENSOR, THROTTLE POSITION  
 35 RELAY, 2WD  
 36 RELAY, 2WD/4WD  
 37 PDM  
 38 SWITCH, FOOT BRAKE  
 39 SWITCH, GEAR  
 40 FLASHER  
 41 MOTOR, FAN  
 42 ACTUATOR, 2WD/4WD  
 43 SWITCH, 4 WD. DIFF. LOCK  
 44 LIGHT, LEFT POSITION  
 45 SIGNAL, FRONT LH TURN  
 46 HEADLIGHT, LH  
 47 CONNECTORS, FRONT SWITCHED ACCESSORY  
 48 CONNECTORS, FRONT ACCESSORY  
 49 HEADLIGHT, RH  
 50 SIGNAL, FRONT RH TURN  
 51 LIGHT, RIGHT POSITION

