Harness
(p/n 0486-273)
(p/n 0486-290)
Prowler 1000
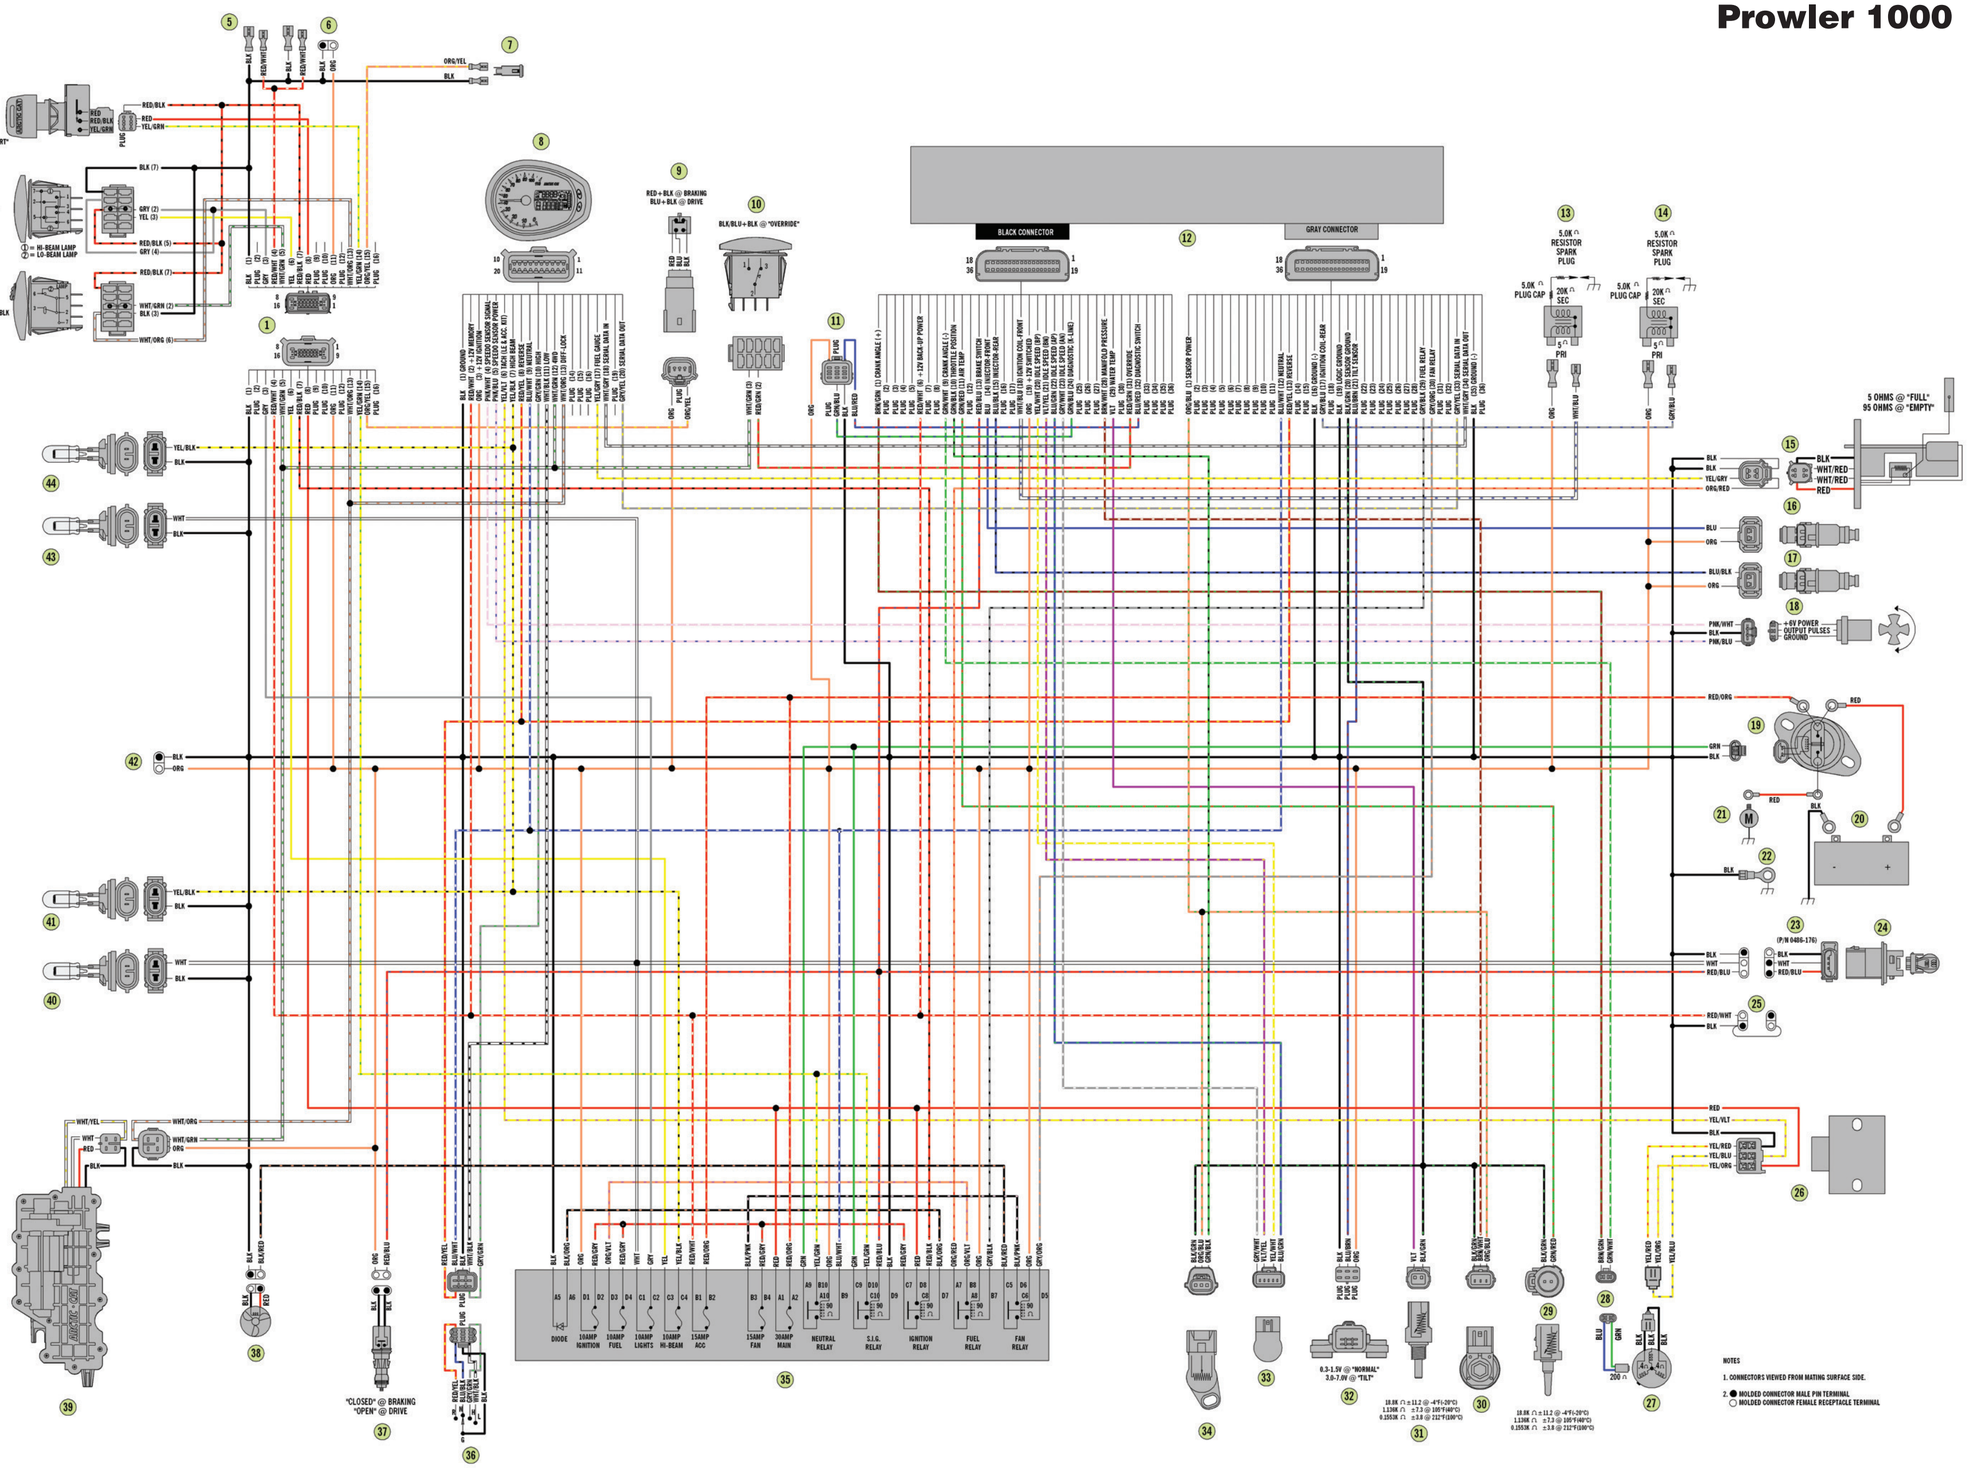
1. HARNESS, CONSOLE
2. SWITCH, 2WD/4WD
3. SWITCH, HI/LO BEAM
4. SWITCH, KEY
5. CONNECTORS, FRONT ACCESSORY
6. CONNECTOR, FRONT ACCESSORY SWITCH
7. LIGHT, PARKING BRAKE
8. GAUGE, LCD
9. SWITCH, PARKING BRAKE LIGHT
10. SWITCH, REVERSE OVERRIDE
11. CONNECTOR, DIAGNOSTICS
12. ECU
13. COIL, FRONT IGNITION
14. COIL, REAR IGNITION
15. SENSOR, FUEL LEVEL/ PUMP, FUEL
16. INJECTOR, FRONT FUEL
17. INJECTOR, REAR FUEL
18. SENSOR, SPEEDOMETER
19. SOLENOID, STARTER
20. BATTERY, 12V
21. MOTOR, STARTER
22. CONNECTOR, ENGINE/BATTERY GROUND
23. HARNESS, TAILLIGHT
24. TAILLIGHT
25. CONNECTOR, REAR ACCESSORY
26. REGULATOR/RECTIFIER
27. MAGNETO
28. SENSOR, CRANKSHAFT POSITION
29. SENSOR, AIR TEMPERATURE
30. SENSOR, MANIFOLD ABSOLUTE PRESSURE
31. SENSOR, COOLANT TEMPERATURE
32. SENSOR, TILT
33. CONTROL, IDLE SPEED
34. SENSOR, THROTTLE POSITION
35. PDM
36. SWITCH, GEAR SHIFT POSITION
37. SWITCH, FOOT BRAKE
38. MOTOR, FAN
39. ACTUATOR, 2WD/4WD
40. HEADLIGHT, LOW BEAM LH
41. HEADLIGHT, HIGH BEAM LH
42. CONNECTOR, ACCESSORY SWITCH
43. HEADLIGHT, LOW BEAM RH
44. HEADLIGHT, HIGH BEAM RH