


Arctic Cat® ATV

Installation Instructions - Accessory Kit

Front Rack Extension Kit

(p/n 1436-029)

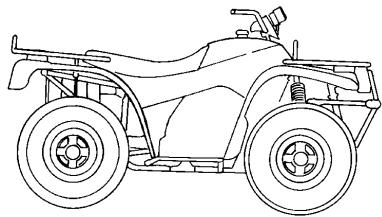

■ **NOTE:** Read these installation instructions thoroughly before beginning the installation process. Retain these Installation Instructions for future reference.


Application:
2008 400, 500, 650, 700, and TRV Models

Kit includes:

p/n	QTY	DESCRIPTION
0541-581	1	Front Rack Extension
0441-308	3	Protective Tube Wrap (7 1/4 in.)
0441-307	2	Clamp
8468-840	4	Machine Screw (8 mm x 1 1/4 x 40)
8424-805	4	Flange Hex Nut (8 mm)
0453-454	1	Instructions

1. Place two Clamps (A) over the front perimeter of the existing front rack with the mounting holes facing downward. See Fig. 1.

Fig. 1

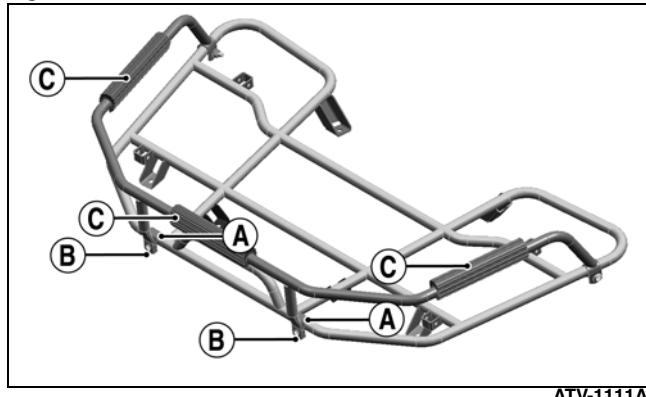

2. Properly position the Front Rack Extension onto the existing rack with the flat-end tube extensions facing toward the front of the ATV. Making sure the flat-end tube extensions are positioned on the front side of the clamps, align the mounting holes in the clamps with the extension mounting holes. From the outside, insert two Machine Screws (B) through the mounting holes and secure with Flange Hex Nuts (see Fig. 1).

3. From the outside, insert the two remaining Machine Screws through the rear clamps and secure with Flange Hex Nuts. Securely tighten all hardware.

4. Install a Protective Tube Wrap (C) onto the front and side perimeter tubes making sure each tube wrap is centered. See Fig. 1.

■ **NOTE:** Install the tube wrap by beginning at one end of the wrap. Tilt the wrap upward at a 45° angle; then snap the wrap onto the tube continuing to the opposite end of the tube.

