


Arctic Cat® ATV

Installation Instructions - Accessory Kit

Rear Rack Extension Kit

(p/n 1436-030)

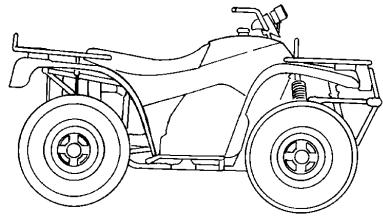

■ **NOTE:** Read these installation instructions thoroughly before beginning the installation process. Retain these Installation Instructions for future reference.

Application:
2008 400, 500, 650, and 700 Models

Kit includes:

p/n	QTY	DESCRIPTION
0541-582	1	Rear Rack Extension
0406-293	1	Protective Tube Wrap (Rear)
0441-308	2	Protective Tube Wrap (Sides)
0441-307	2	Clamp
8468-840	4	Machine Screw (8 mm x 1 1/4 x 40)
8424-805	4	Flange Hex Nut (8 mm)
0453-455	1	Instructions

1. Place two Clamps (A) over the rear perimeter tube on the existing rear rack with the mounting holes facing downward. See Fig. 1.
2. Properly position the Rear Rack Extension onto the existing rack with the flat-end tube extensions facing toward the rear of the ATV.

■ **NOTE:** When positioning the front of the rack extension, it will be necessary to pull outward on the ends of the extension to allow the clamps to fit onto the rack.

3. Making sure the flat-end tube extensions are positioned on the rear side of the clamps, align the mounting holes in the clamps with the extension mounting holes. From the outside, insert two Machine Screws through the mounting holes and loosely secure with Flange Hex Nuts.


4. From the outside, insert two Machine Screws through the front clamps and secure with Flange Hex Nuts. Securely tighten all hardware.

5. Install Protective Wrap (B) onto the rack extension rear perimeter tube making sure the wrap is centered. See Fig. 1.

■ **NOTE:** Install the tube wrap by beginning at one end of the wrap. Tilt the wrap upward at a 45° angle; then snap the wrap onto the tube continuing to the opposite end of the wrap.

6. Install Protective Tube Wrap (C) onto each side perimeter tube making sure each wrap is centered. See NOTE above for installation process. See Fig. 1.

Fig. 1

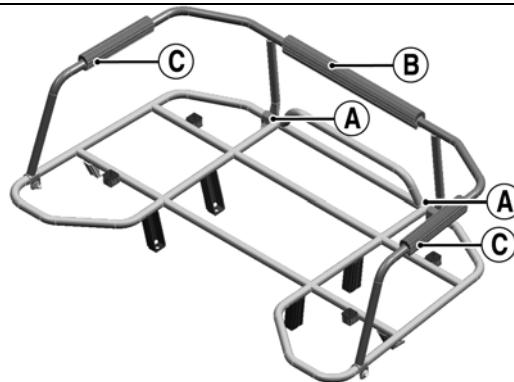

ATV-1112A

