


# Arctic Cat® OHUV

## Installation Instructions - Accessory Kit

### Rear Panel Kit

(p/n 1436-039) & (p/n 1436-041)

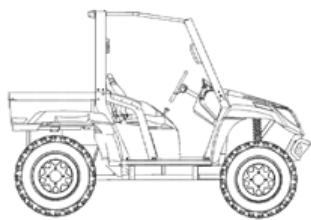

■ NOTE: Read these installation instructions thoroughly before beginning the installation process. Retain these Installation Instructions for future reference.

#### Application

All Prowler models

##### Kit includes:

p/n	QTY	DESCRIPTION
0541-606	1	Rear Panel Assembly *
0541-605	1	Rear Slider Panel Assembly **
1436-040	1	Hardware Kit
N/A	4	Rear Panel Spacer (1.0 in.)
N/A	4	Machine Screw (6 mm x 1.0 x 45)
N/A	2	Clamp (1.125)
N/A	2	Clamp (.750)
N/A	2	Machine Screw (6 mm x 1.0 x 20)
N/A	4	Flange Nyloc Nut
N/A	4	Flat Washer
0453-465	1	Instructions

\*Included in Kit (p/n 1436-039)

\*\* Included in Kit (p/n 1436-041)

■ NOTE: The hardware components in Hardware Kit (p/n 1436-040) cannot be ordered separately. Hardware Kit (p/n 1436-040) must be ordered.

1. Install the Rear Seal (A) around the Rear Panel Assembly making sure the seal is firmly seated around the entire perimeter. See Fig.1 or Fig. 2.

Fig. 1


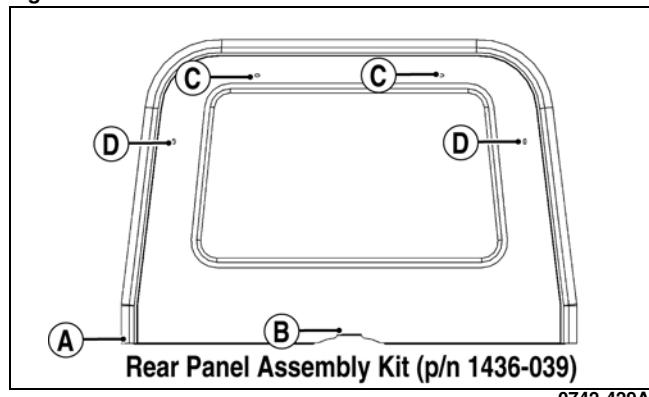


Fig. 2



2. Remove the two torx-head screws (B) located between the lower ends of the V-Brace tubes.
3. From the rear of the vehicle, properly position the rear panel assembly w/seal onto the vehicle; then align the bottom mounting holes with the two holes from which the screws were removed in step 2. Secure the panel assembly with the screws removed in step 2. Tighten to 1.1 kg/m (8 ft-lb).
4. Place the two larger Clamps (C) onto the V-brace tubes with the flat side of the clamps positioned against the inside face of the rear panel. Align the clamp mounting holes with the rear panel mounting holes and Rear Panel Spacer; then from the backside of the panel, insert two 6 mm Machine Screws w/Flat Washers. Secure the clamps with Flange Nyloc Nuts.
5. Place the smaller Clamps (D) onto the horizontal headrest support tubes with the flat side of the clamps positioned against the inside face of the panel. Align the clamp mounting holes with the panel mounting holes and the spacer; then from the backside of the panel, insert the remaining two 6 mm Machine Screws w/ Flat Washers. Secure with Nyloc Nuts.

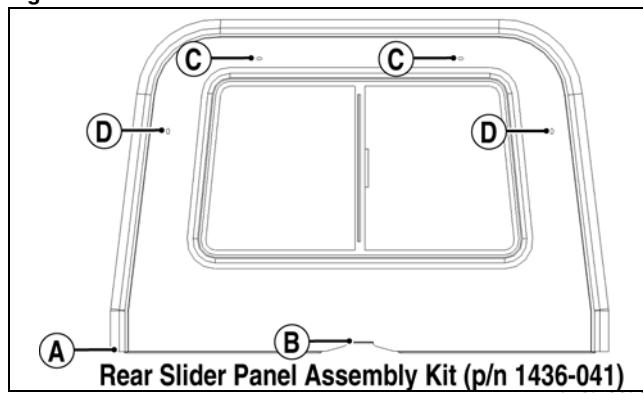