


Arctic Cat® ATV

Installation Instructions - Accessory Kit

Rack Basket Kit

(p/n 1436-123)

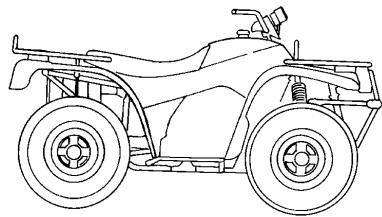

■ **NOTE:** Read these installation instructions thoroughly before beginning the installation process. Retain these Installation Instructions for future reference.

Application

All 2008 400-Thundercat models (excluding 700 Diesel)

Kit includes:

p/n	QTY	DESCRIPTION
0541-630	1	Rack Basket
0541-447	2	Pin
0453-493	1	Instructions


1. To install Rack Basket (A) onto the MRP rack, first tilt the rack basket to insert the 90° brackets into the MRP pockets.

■ **NOTE: The 90° brackets should be fully inserted so they are positioned below the bottom of the pockets.**

2. Making sure that the 90° mounting brackets are fully inserted through the MRP pockets, move the basket downward onto the MRP rack with the remaining two brackets inserted into the MRP pockets. Secure the basket to the rack with two provided Pins (B).

■ **NOTE: Fig. 1 illustrates the proper installation of the rack basket on a rear rack. The hooks on the basket must face the rear of the vehicle.**


Fig. 1

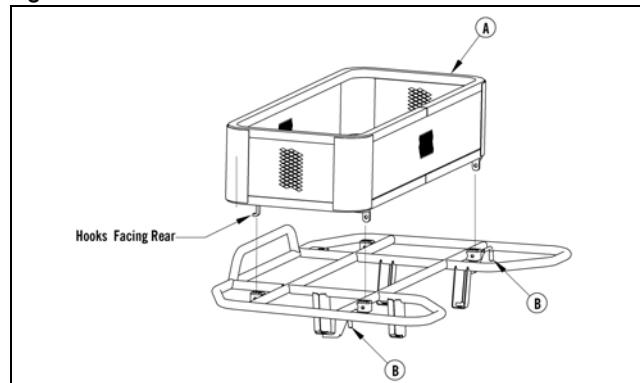

0742-716

■ **NOTE: Fig. 2 illustrates the proper rack basket on a front rack. The bottom hooks on the basket must face toward the front of the vehicle.**

Fig. 2

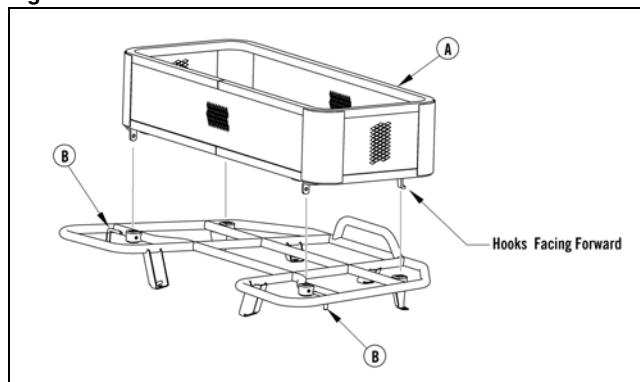

0742-715

