


Arctic Cat® ATV

Installation Instructions - Accessory Kit

Rear Rack Extension Kit (p/n 1436-158)

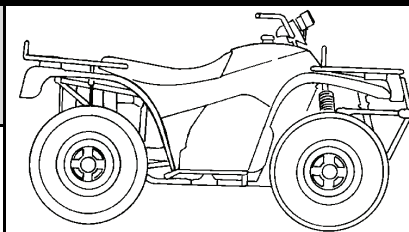

■ **NOTE:** Read these installation instructions thoroughly before beginning the installation process. Retain these Installation Instructions for future reference.

Application: 2008 366 Model

Kit includes:

p/n	QTY	DESCRIPTION
0541-703	1	Rear Rack Extension
1441-796	1	Protective Pad Cover (Rear)
1441-795	2	Protective Pad (Rear)
0441-307	2	Clamp
1441-799	2	Clamp (Long)
0423-543	4	Machine Screw (8 mm x 35)
0423-848	4	Acorn Nut
3606-799	2	Tube Cap
0453-517	1	Instructions

1. Press Tube Caps (E) onto the open ends of the rear rack extension. See Fig. 1.
2. Place two short Clamps (A) over the rear perimeter tube on the existing rear rack with the mounting holes facing downward.
3. Properly position the Rear Rack Extension onto the existing rack with the flat-end tube extensions facing the rear of the ATV.
4. Making sure the flat-end tube extensions are positioned on the rear side of the clamps, align the mounting holes in the clamps with the rear rack extension mounting holes. From the outside, insert two Machine Screws (8 mm x 35) (B) through the mounting holes and loosely secure with Acorn Nuts (C).
5. Place two Long Clamps (D) over the side perimeter tubes on the rear rack with the mounting holes facing upward.
6. Align the mounting holes in the clamps with the extension mounting holes on both tube ends making sure the clamps attach around the tube ends.
7. From the outside, insert two machine screws (B) through the front clamps and tube ends and secure with acorn nuts (C). Tighten all hardware securely.

8. Install both Protective Pads (F) onto the rack extension perimeter tube making sure they meet in the center.


■ **NOTE:** Install the tube pads by starting from the center of the rear perimeter and working toward the front. The opening should be facing down.

9. Install Protective Pad Cover (G) onto the perimeter tube making sure it is centered on the pads. Secure with velcro and three snaps.

■ **NOTE:** Install the protective pad cover by snapping the center in place first around the pads; then work your way outward and toward the front by fastening the velcro making sure the cover is covering both pad ends. Finally, secure the cover by snapping each end.

■ **NOTE:** All three snaps should be securely fastened on the cover.

Fig. 1

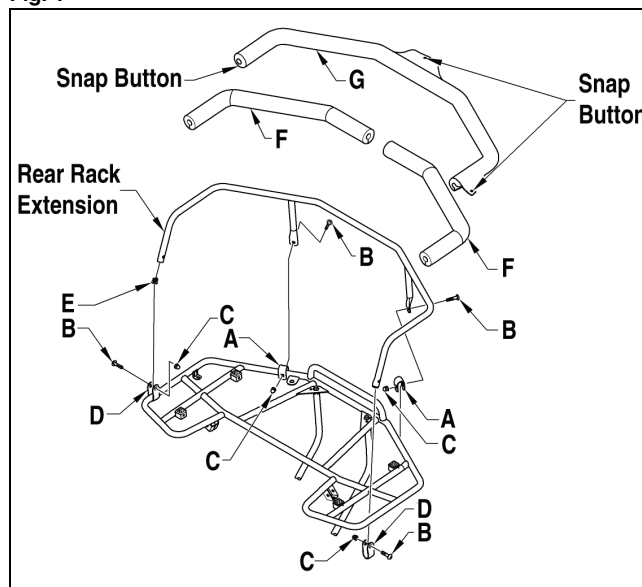

743-379A

