


Arctic Cat® ATV

Installation Instructions - Accessory Kit

Quick Release Windshield Kit (p/n 0505-562/569 & 1436-233-236)

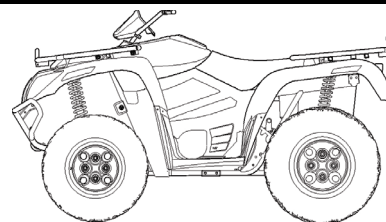

■ **NOTE:** Read these Installation Instructions thoroughly before beginning the installation process. Retain these Installation Instructions for future reference.

Application: 2009 400-Thundercat

Kit includes:


Ref. No.	p/n	QTY	DESCRIPTION
1	0405-333	1	Windshield
2	0405-332	1	Dashboard
3	0405-350	2	Mounting Bracket
4	0405-352	2	Taper Pin
5	0405-351	2	Half Clamp
6	1441-839	1	Flashlight
7	0405-353	1	Flashlight Plug
8	0641-897	1	Power Outlet (12V)
9	0486-319	1	Wiring Harness
10	1436-326	1	Plastic Mirror Kit (Pair)
	**	2	Mirror Cap
	**	2	Flange Nut (M8)
	**	2	Cap Screw (M8)
	1436-324	1	Hardware Kit
	*	2	Plastic Knob
	*	2	Cap Screw (M5)
	*	2	Nyloc Nut (M5)
	*	6	Torx-Head Cap Screw
	*	4	Nyloc Nut (M8)
	*	4	Flange Bolt (M8)
	*	4	Flat Washer (Large)
	*	2	Rubber Flat Washer
	*	4	Flat Washer (Small)
	1436-313	6	Plastic Clip
11	0505-554	1	Front Fairing (p/n 0505-562)
	0505-556	1	Front Fairing (p/n 0505-569)
	0405-327	1	Front Fairing (p/n 1436-233)
	0405-325	1	Front Fairing (p/n 1436-234)
	0405-326	1	Front Fairing (p/n 1436-235)
	0405-324	1	Front Fairing (p/n 1436-236)
	1411-987	1	Front Decal (H2)
	1411-988	1	Front Decal (700 H1)
	1411-989	1	Decal (H2 & 700 H1)
	8611-267	1	Decal (Aircat)***
	2411-056	1	Right-Side Decal***
	2411-057	1	Left-Side Decal***
	0453-589	1	Instructions

* Included in Hardware Kit (p/n 1436-324) – not a service part

** Included in Plastic Mirror Kit (p/n 1436-326)

*** Included in Kit (p/n 1436-233-236)

Fig. 1

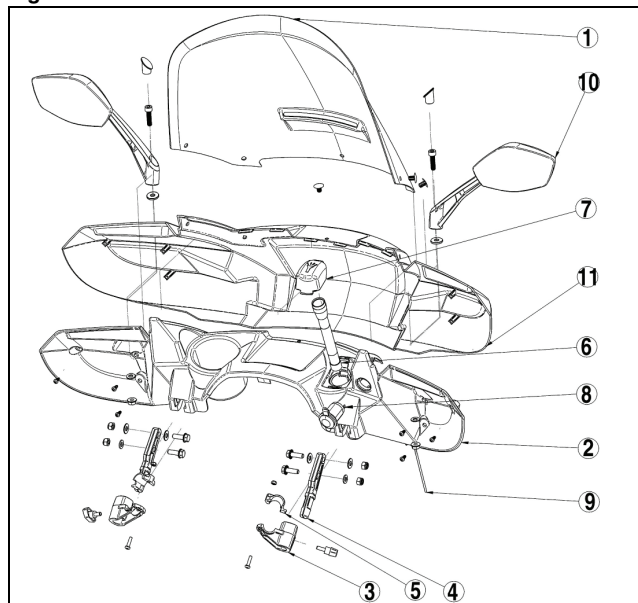

ATV-1139A

1. Install Flashlight Plug into the Dashboard by squeezing the rubber ring and inserting into the formed slots. See Fig. 2.


Fig. 2



ATV-1147

2. Install 12V Power Outlet into Dashboard; then connect Wiring Harness to the power outlet.
3. Secure Taper Pin to the dashboard using two Flange Bolts (M8), two Large Flat Washers, one Small Flat Washer, and two Nyloc Nuts (M8). Do not fully tighten at this time. See Fig. 3.

Fig. 3

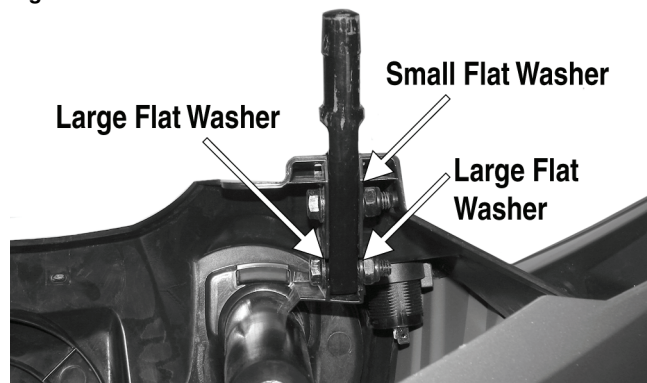

ATV-1142A

4. Repeat step 3 for opposite side.
5. Position Mounting Bracket onto the right-side handlebar and secure with Half Clamp, Cap Screws (M5), Nyloc Nuts (M5), and Plastic Knob. Do not fully tighten at this time.
6. Repeat step 5 for opposite side.

CAUTION

Be sure to position the mounting bracket so it does not interfere with any other ATV components.

7. Align the dashboard so both taper pins slide into the mounting brackets; then secure all hardware.
8. Remove the dashboard from the mounting brackets.
9. Secure Front Fairing to the dashboard using one Plastic Clip; then secure using six Torx-Head Cap Screws. Do not over-tighten. See Fig. 4.


Fig. 4



ATV-1144A

10. Install Windshield onto front fairing and secure with five plastic clips. See Fig. 5.

Fig. 5

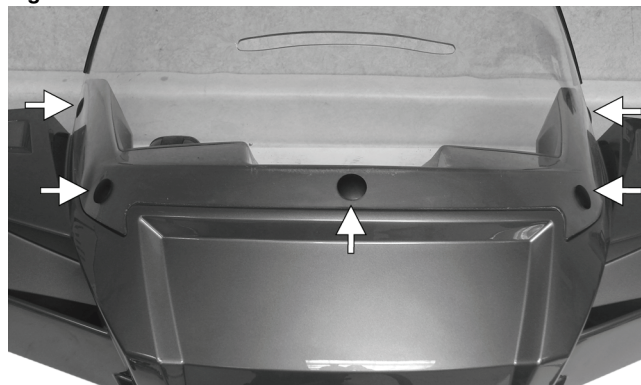

ATV-1141A

11. Secure Plastic Mirror Kit assemblies to the front fairing using one Mirror Cap, one Cap Screw (M8), one Rubber Flat Washer, one Small Flat Washer, and one Flange Nut (M8). See Fig. 6.

Fig. 6



ATV-1146

■ **NOTE:** The small flat washer and flange nut will be on the bottom side of the front fairing.

12. With the windshield assembly installed, secure both mirror assemblies to desired positions.
13. Clean the intended Decal locations, then install both Front Decal and the 4x4 Decal.

■ **NOTE:** For accessory kits (p/n 1436-233-236) Front Decal (Aircat) will be placed on the front fairing indicated below. Right- and Left-Side Decals will adhere to the front fairing in the location indicated below. See Fig. 7

Fig. 7



ATV-1145A

14. Install Flashlight into the flashlight holder. Two AA batteries are required.