


Arctic Cat® ATV

Installation Instructions

Rear Hand Warmer Kits (p/n 1436-272)

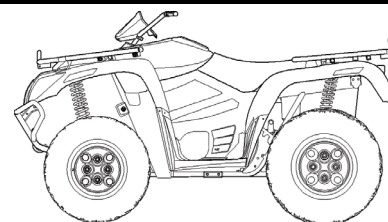

■ **NOTE:** Read these Installation Instructions thoroughly before beginning the installation process. Retain these Installation Instructions for future reference.

Application: 2006-2009 TRV Models

Kit includes:

p/n	QTY	DESCRIPTION
2406-744	1	Right-Side Heated Handhold
2406-745	1	Left-Side Heated Handhold
0409-126	1	Switch
0486-318	1	Wiring Harness
0486-307	1	Accessory Harness
0453-555	1	Instructions

1. Remove the existing right and left handholds from the rear seat assembly and discard.
2. Secure the new Right-Side and Left-Side Handholds to the rear seat assembly using existing hardware. Tighten to 20 ft-lb.
3. Insert the Switch into the right-side handhold. See Fig. 1.

Fig. 1




ATV-1133

4. Route Wiring Harness to the accessory plug under the gauge pod; then route the battery connections to the battery.
5. Route the wiring harness from the battery to the right-side handhold and through the rear fender. Cable tie to the frame tube. See Fig. 2.

■ **NOTE:** The right side drain hole in the rear fender will have to be enlarged to 5/8-in. for the harness to pass.


Fig. 2

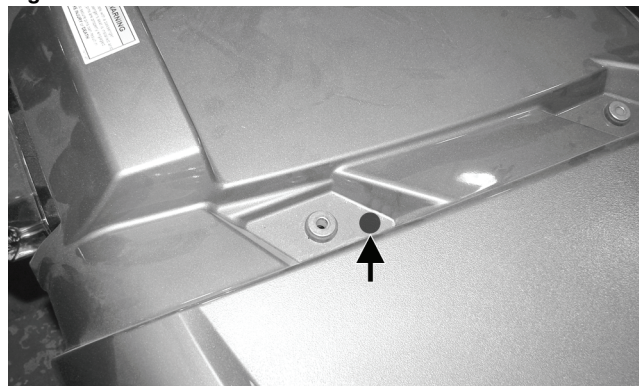

ATV-1137A

6. Route the Accessory Harness on the underside of the rear seat assembly. Secure with cable ties. See Fig. 3.

Fig. 3

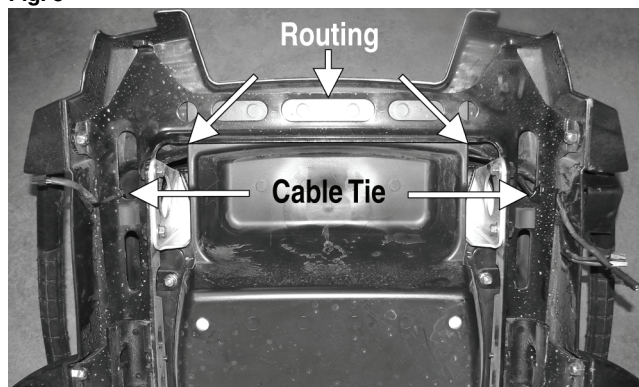

ATV-1136A

7. Connect the wiring harness to the right and left handhold and switch; then secure with cable ties.
8. Secure the rear seat assembly onto the vehicle.

■ **NOTE:** Be sure to disconnect the accessory plug before removing rear seat.

