


# Arctic Cat® UTV

## Installation Instructions - Accessory Kit

### Windshield Kits (p/n 1436-277/278)

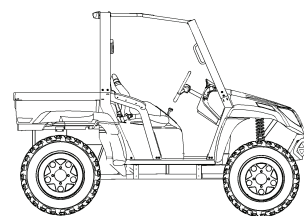

■ **NOTE:** Read these Installation instructions thoroughly before beginning the installation process. Retain these Installation Instructions for future reference.

#### Application: All Prowler Models

##### Kit includes:

| p/n      | QTY | DESCRIPTION        |
|----------|-----|--------------------|
| 0541-599 | 1   | Slider Vent        |
| 1441-635 | 1   | Glass Windshield   |
| 1441-636 | 1   | Weatherstrip       |
| 0423-773 | 1   | Tapered Handle     |
| 0423-772 | 9   | Flat Washer        |
| 0423-774 | 2   | Nyloc Nut (1/4-20) |
| 1441-402 | 1   | Dash Seal          |
| 1441-647 | 1   | Shim               |
| 0541-600 | 1   | Flip-Up Frame*     |
| 1441-638 | 1   | Rubber Seal*       |
| 1436-038 | 1   | Hardware Kit *     |
| 0423-799 | 1   | Windshield Latch*  |
| 0453-586 | 1   | Instructions       |

\*Included in Kit (p/n 1436-278)

■ **NOTE:** If the vehicle is equipped with a roof, remove the roof and header before beginning these instructions.

1. Remove the cap screw and nut from the dash mounting bracket. Account for two shims which will be used following step 4 (if applicable).
2. Using a T-40 wrench, remove the four torx-head screws (two per side) located on the outside of the canopy frame tube next to the bottom of the windshield. See Fig. 1.

Fig. 1



UTV-051A

3. Remove the four cap screws securing the top front of the canopy to the right-side and left-side cross-braces. See Fig. 2.


Fig. 2



OHUV-050


4. Place the Windshield Panel Assembly (A) or (B) onto the front canopy tube making sure they overlap the two panel posts and that the mounting holes align. Using a T-40 wrench and the four screws removed in step 2, secure the lower front panel assembly. Tighten to 20 ft-lb. See following NOTE for instructions if doors are not installed. See Fig. 3 and Fig. 4.

Fig. 3

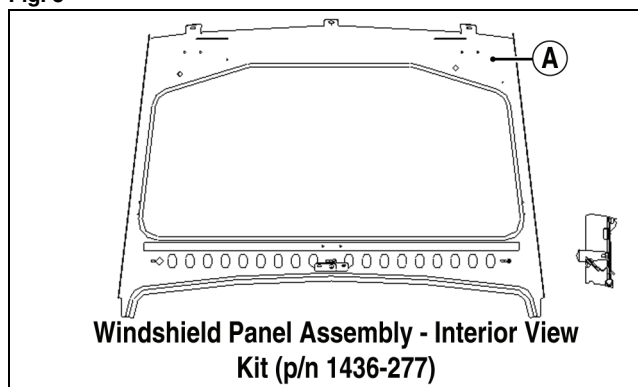

742-503B

Fig. 4

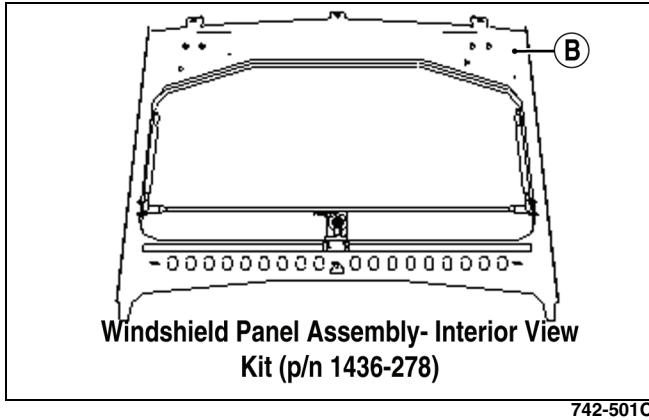

■ **NOTE:** If a door kit is not being installed, place a shim (removed in step 1) between the lower canopy and the front panel mounting locations. See Fig 1.

5. Secure the two inside brackets on windshield panel assembly (A) or (B) to the top of the canopy cross-brace using hardware removed in step 3. See Fig. 2. Tighten to 20 ft-lb.

6. Secure the upper outer section of the Windshield Panel to the right-side and left-side of the header using four 6 mm x 1.0 Machine Screws and U-Clips (provided in Roof Kit p/n 1436-012).
7. Securely tighten all hardware.
8. If necessary, bend the dash mounting bracket downward until it conforms to the contour of the dash; then using the dash bracket as a template, carefully drill a 15/64 in. hole through the dash. Secure the dash bracket to the dash using the cap screw and nut removed in step 1.
9. If installing Windshield Kit (p/n 1436-278) (B), install the windshield latch as follows. From inside the windshield frame and using the provided hardware, install the Windshield Latch; then install the latch striker onto the striker mounting bracket (if applicable).

