


Arctic Cat® ATV

Installation Instructions - Accessory Kit

Front Fender Extension Kit (p/n 1436-351/353)

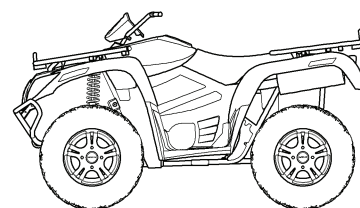

■ **NOTE:** Read these Installation Instructions thoroughly before beginning the installation process. Retain these Installation Instructions for future reference.

Kit includes:

p/n	QTY	DESCRIPTION
N/A	1	Front Right Fender Extension
N/A	1	Front Left Fender Extension
N/A	10	Cap Screws
N/A	10	Nuts
0453-632	1	Instructions

1. Remove the right-side cap screw and nut securing the rear fender to the foot rest. See Fig. 1.


Fig. 1



ATV-1186

■ **NOTE:** If tracks are installed on the ATV, front cut fender extension to appropriate length. See Fig. 2.

Fig. 2

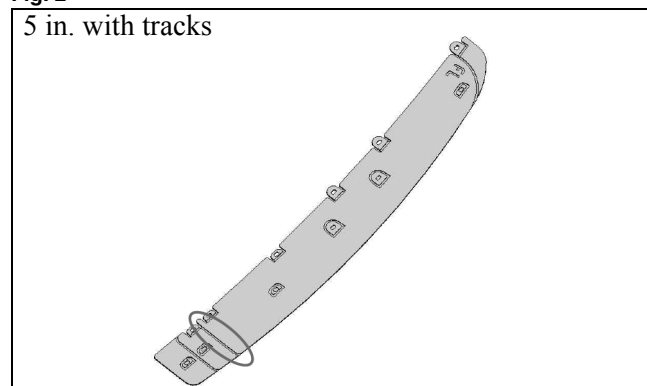


ATV-1187

■ **NOTE:** If tracks are not installed on the ATV, Cut the front fender extension to appropriate length. See Fig. 3.

Fig. 3

5 in. extension without tracks


**Do not bend if installing
5 inch wide extension**

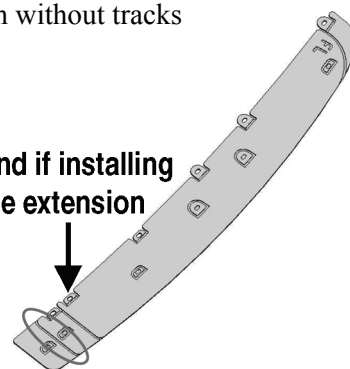

ATV-1192A

2. For five inch wide extension installation, bend all outside pre-drilled tabs so the rough finish will be on top. See Fig. 4.

Fig. 4

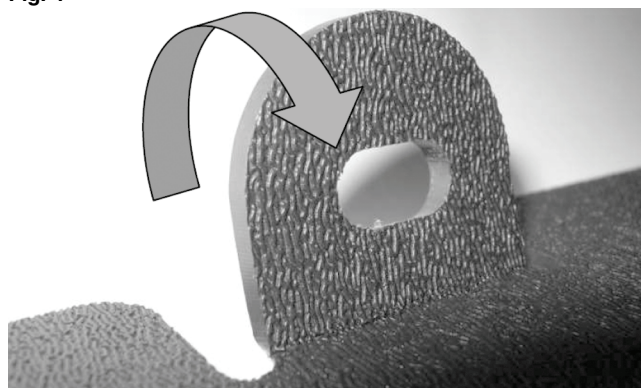

ATV-1164

3. Secure the fender extensions to the outside of the fender with the cap screw and nut removed in step 1; then using a 1/4-in. drill bit, drill all mounting locations. See Fig. 5.

Fig. 5



ATV-1189

4. Secure Front Right Fender Extension to the rear fender using four Cap Screws and four Nuts. Tighten securely. See Fig. 6.


Fig. 6



ATV-1187A


■ **NOTE:** For 2 1/2 inch wide extension, cut the front extensions along the grooves in the extensions. See Fig. 7 and 8.

Fig. 7

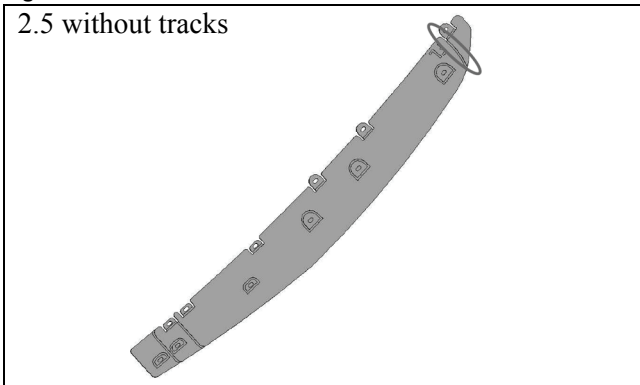

ATV-1190


Fig. 8

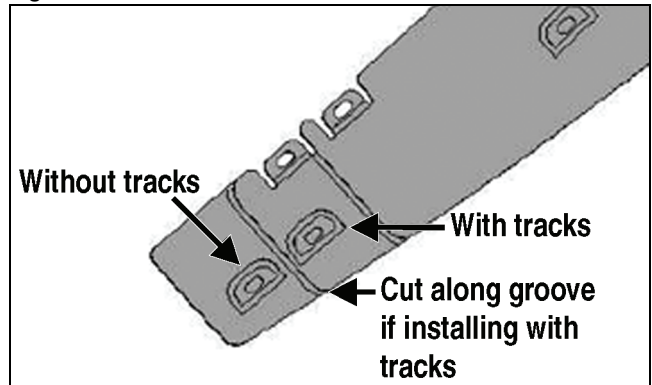

ATV-2001A

■ **NOTE:** For 2 1/2-in. wide extension, the half-cut mounting locations must be cut with a knife and the hole drilled using a 1/4-in. drill bit. See Fig. 8.

Fig. 8

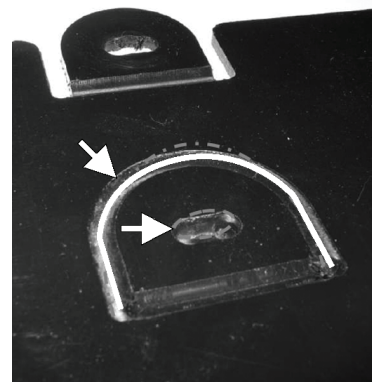

ATV-1185A

5. Repeat steps 1-4 for opposite side

