


Arctic Cat® ATV

Installation Instructions - Accessory Kit

Rear Fender Extension Kit (p/n 1436-352/354)

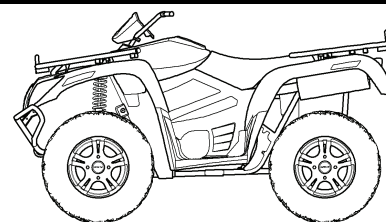

■ **NOTE:** Read these Installation Instructions thoroughly before beginning the installation process. Retain these Installation Instructions for future reference.

Kit includes:

p/n	QTY	DESCRIPTION
N/A	1	Rear Right Fender Extension
N/A	1	Rear Left Fender Extension
N/A	10	Cap Screws
N/A	10	Nuts
0453-633	1	Instructions

A-Body



ATV-2004

B-Body



ATV-2003

1. Remove the right-side cap screw and nut securing the rear fender to the foot rest. See Fig. 1.


Fig. 1



ATV-1163A

■ **NOTE:** If installing five inch extension on A or B-body models, there will be no cutting of the extension. See Fig. 2.

Fig. 2

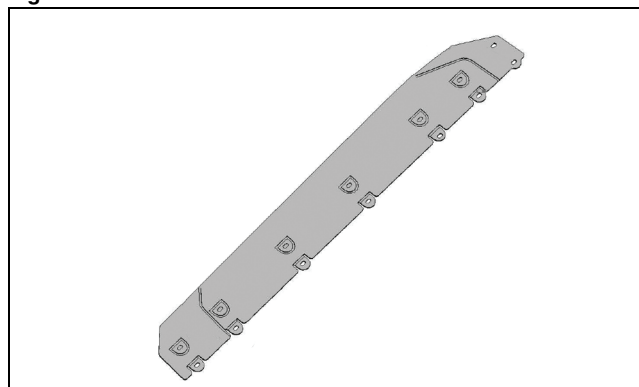


ATV-2002

■ **NOTE:** On TRV models, cut along the grooves in the rear extensions. See Fig. 3 and 4.


Fig. 3

5 in. TRV

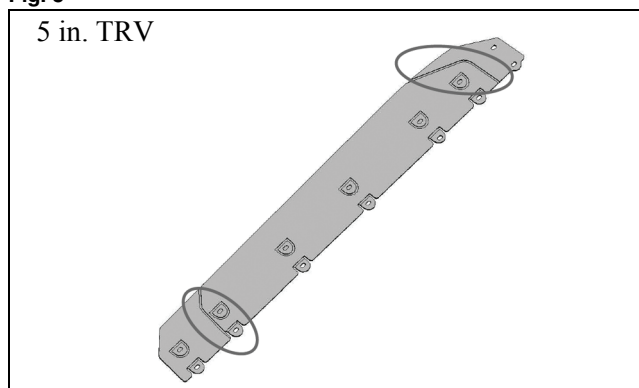

ATV-1191


Fig. 4

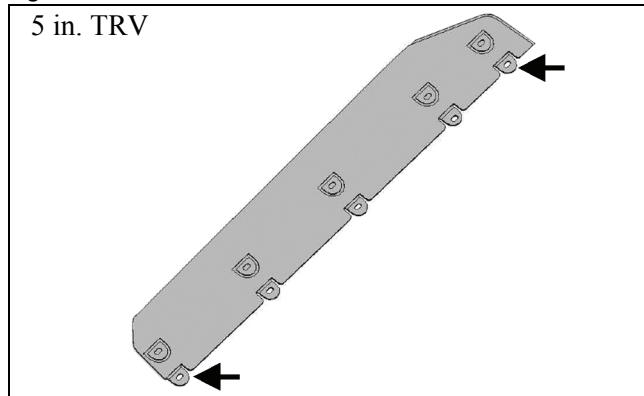

ATV-1193A

2. For five inch wide extension, bend all outside pre-drilled tabs (Except the two tabs shown in Fig. 4 for TRV models) so the rough finish will be on top. See Fig. 5.

Fig. 5

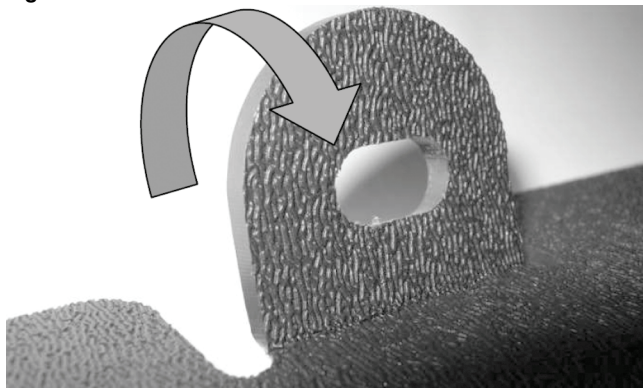

ATV-1164

3. Secure the fender extensions to the outside of the fender with the cap screw and nut removed in step 1; then using a 1/4-in. drill bit, drill all mounting locations. See Fig. 6.


Fig. 6



ATV-1188

4. Secure Rear Right Fender Extension to the rear fender using five Cap Screws and five Nuts. Tighten securely. See Fig. 7.

Fig. 7

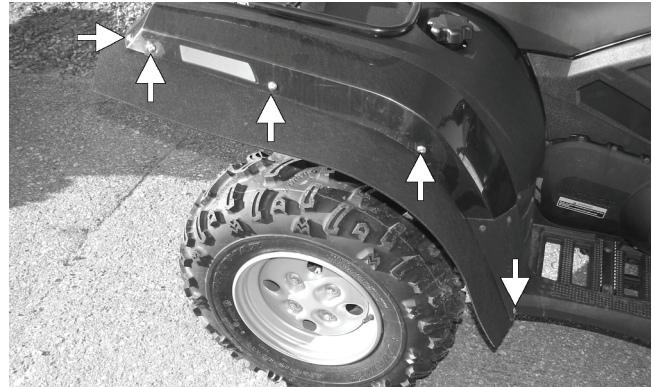


ATV-1183A

5. Repeat steps 1-4 for opposite side.

■ **NOTE:** For 2.5-in. wide extension on B-body models, cut the rear extensions along the grooves to the appropriate length and drill hole using a 1/4-in. drill bit. See Fig. 8.


Fig. 8

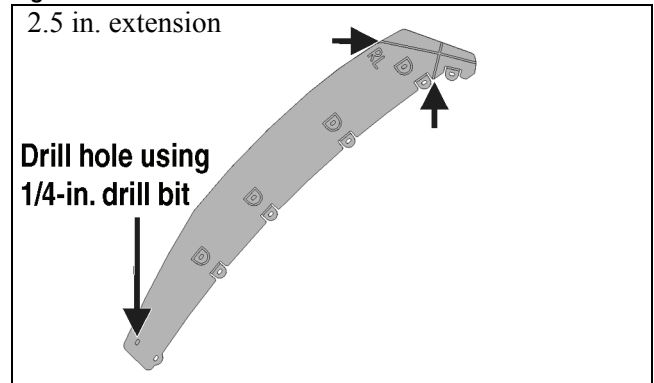

ATV-1184A

■ **NOTE:** For 2.5-in. wide extension, the half-cut mounting locations must be cut with a knife and the hole drilled using a 1/4-in. drill bit. See Fig. 9.

Fig. 9

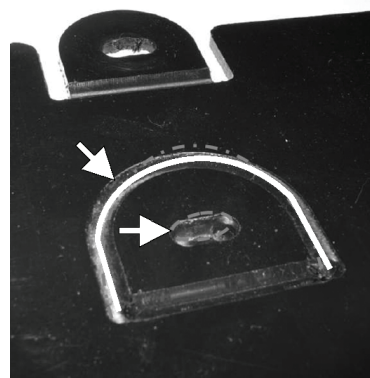

ATV-1185A

