

Arctic Cat®

Installation Instructions - Accessory Kit

Hand Guard Mount/Extension Kit (p/n 5639-263/264; 1436-375)

■ **NOTE:** Read these instructions thoroughly and carefully before beginning the installation process. Retain these instructions for future reference.

Kit (5639-264; 1436-375) includes:

p/n	QTY.	DESCRIPTION
N/A	1	Right-Side Hand Guard Mount
N/A	1	Left-Side Hand Guard Mount
N/A	2	Clamp
N/A	4	Screw (Long)
N/A	4	Screw (Short)
N/A	4	Flat Washer
1653-590	1	Instruction

Kit (p/n 5639-263) includes:

p/n	QTY.	DESCRIPTION
N/A	1	Right-Side Extension
N/A	1	Left-Side Extension
N/A	14	Flat Washer
N/A	14	Screw
1653-590	1	Instruction


■ **NOTE:** The parts listed above are included in Hand Guard Mount Kit (p/n 5639-264) and cannot be ordered separately. Hand guard kits used in conjunction with this kit must be ordered separately.

Installing Hand Guard Mount (p/n 5639-264; 1436-375)

■ **NOTE:** This kit can be used only if the snowmobile is equipped with a low-profile windshield.


1. Install Left-Side Hand Guard Mount to the handlebar at desired location using one Clamp and two Long Screws (threads coated with blue Loctite #243).
2. Install appropriate hand guard to left-side hand guard mount using two Flat Washers and two Short Screws (threads coated with blue Loctite #243). See Fig. 1 or 2.

Fig. 1

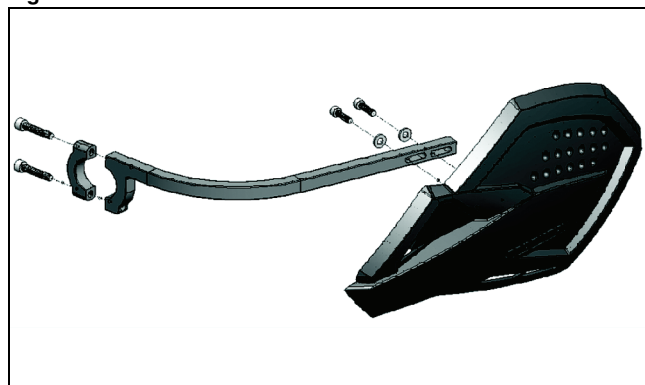

SNO-2164

Fig. 2

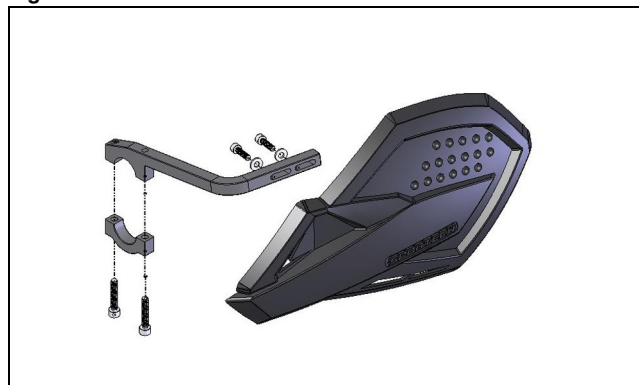


ATV-1185

3. Repeat for opposite side.
4. Adjust the hand guards as desired and tighten all hardware securely.
5. Turn the handlebar to the left and to the right to ensure that the hand guards do not come into contact with the windshield. If necessary, adjust the hand guards.

Installing Extension Kit (p/n 5639-263)

1. Install Hand Guard Extension onto right- and left-side hand guard using seven Flat Washers and Screws (threads coated with blue Loctite #243). Tighten securely. See Fig. 2.

Fig. 2

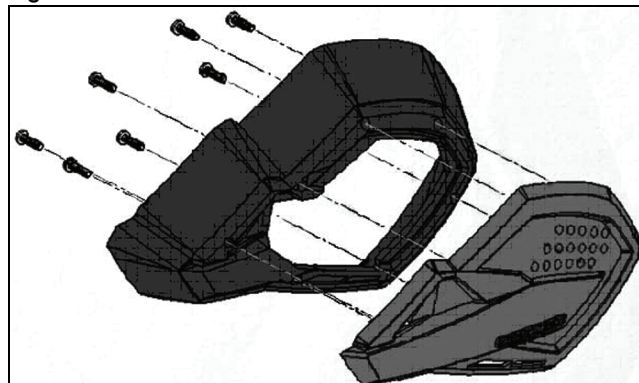

SNO-2164