


Arctic Cat® ATV

Installation Instructions - Accessory Kit

Touring Windshield Light Kit (p/n 1436-378)

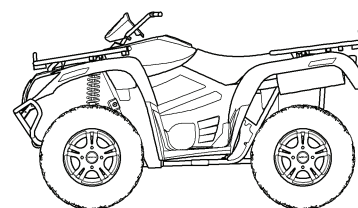

■ **NOTE:** Read these installation instructions thoroughly before beginning the installation process. Retain these Installation Instructions for future reference.

Kit includes:

p/n	QTY	DESCRIPTION
N/A	5	Machine Screw
N/A	1	Light w/ Touring Mount
N/A	1	Light Harness
0453-643	1	Instructions

■ **NOTE:** Refer to the appropriate ATV Service Manual for more detailed instructions.

1. Disconnect the negative battery cable from the battery; then remove the windshield assembly by loosening the handlebar mounted thumb screws.
2. Disconnect all wiring from the windshield assembly.
3. Cut out template and place onto the underside of the windshield assembly making sure it is properly aligned. See Fig. 1.

Fig. 1



ATV-2010

4. Using the proper drill bit (instructed on template), drill all six locations.

■ **NOTE:** The top (1/2-in.) hole is for Harness routing.

5. Loosely secure Light w/Touring Mount to the windshield assembly using five Machine Screws. Once all machine screws are started, tighten the light to the windshield. Do not over tighten. See Fig. 2.

Fig. 2



ATV-2011

6. Connect the Light Harness to the accessory plug under the steering post cover.

■ **NOTE:** Accessory Adapter (p/n 1639-623) may be required if an Arctic Cat winch is installed.

8. With all wiring connected, reconnect the negative battery cable and check light for proper function.
9. Install windshield using existing hardware.

