


# Arctic Cat® ATV

## Installation Instructions - Accessory Kit

### Econo Sprayer Kit (p/n 1436-607)

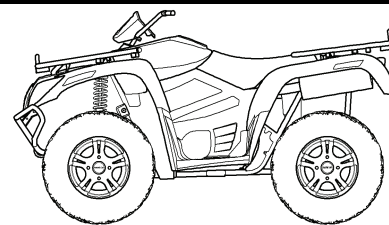

■ **NOTE:** Read these installation instructions thoroughly before beginning the installation process. Retain these Installation Instructions for future reference.

#### Kit includes:

| p/n      | QTY | DESCRIPTION                     |
|----------|-----|---------------------------------|
| 2441-068 | 1   | Tank                            |
| 2441-057 | 1   | Pump                            |
| 2441-022 | 1   | Hose Barb Elbow (3/8 x 1/2)     |
| 2441-052 | 2   | Plug                            |
| 2441-049 | 2   | One Hole Clamp                  |
| 2441-069 | 1   | Tank Cover                      |
| 2441-015 | 1   | Harness                         |
| 2441-038 | 2   | Mounting Bracket                |
| 2441-060 | 1   | Spray Hose (3/8)                |
| 2441-062 | 1   | Spray Wand                      |
| 2441-005 | 4   | Cap Screw (5/16 x 1/2-in.)      |
| 2441-033 | 4   | Machine Screw (10/24 x 5/8-in.) |
| 2441-024 | 1   | Hose Carrier                    |
| 2441-032 | 4   | Machine Screw (10/24 x 1/2-in.) |
| 2441-025 | 4   | Hose Clamp (#4)                 |
| 2441-063 | 2   | Spray Wand Clip                 |
| 2441-011 | 4   | Flat Washer (10/24)             |
| 2441-067 | 1   | Suction Hose (3/8)              |
| 0453-710 | 1   | Instruction                     |

■ **NOTE:** Refer to illustrations on page 2 of this instruction for location of each component.


1. Install Mounting Brackets on the bottom of Tank using four Cap Screws (5/16 x 1/2-in.).

■ **NOTE:** Do not over tighten cap screws into tank inserts.

2. Secure Pump to the front left side of the tank using four Machine Screw (10/24 x 5/8-in.) and four Flat Washers.
3. Install Hose Elbow into tank; then connect Suction Hose from tank to pump. Secure using two Hose Clamps.
4. Secure Hose Carrier using two Machine Screws (10/24 x 1/2-in.). Tighten securely.
5. Connect Spray Hose to the pump; then connect other end of hose to Spray Wand.
6. Secure all hoses with hose clamps.

# Key

1. Tank
2. Pump
3. Hose Elbow
4. Pipe Plug
5. One Hole Clamp
6. Tank Cover
7. Harness
8. Mounting Bracket
9. Spray Hose
10. Spray Wand
11. Cap Screw (5/16 x 1/2-in.)
12. Machine Screw (10/24 x 5/8-in.)
13. Hose Carrier
14. Machine Screw (10/24 x 1/2-in.)
15. Hose Clamp
16. Spray Wand Clip
17. Flat Washer
18. Suction Hose

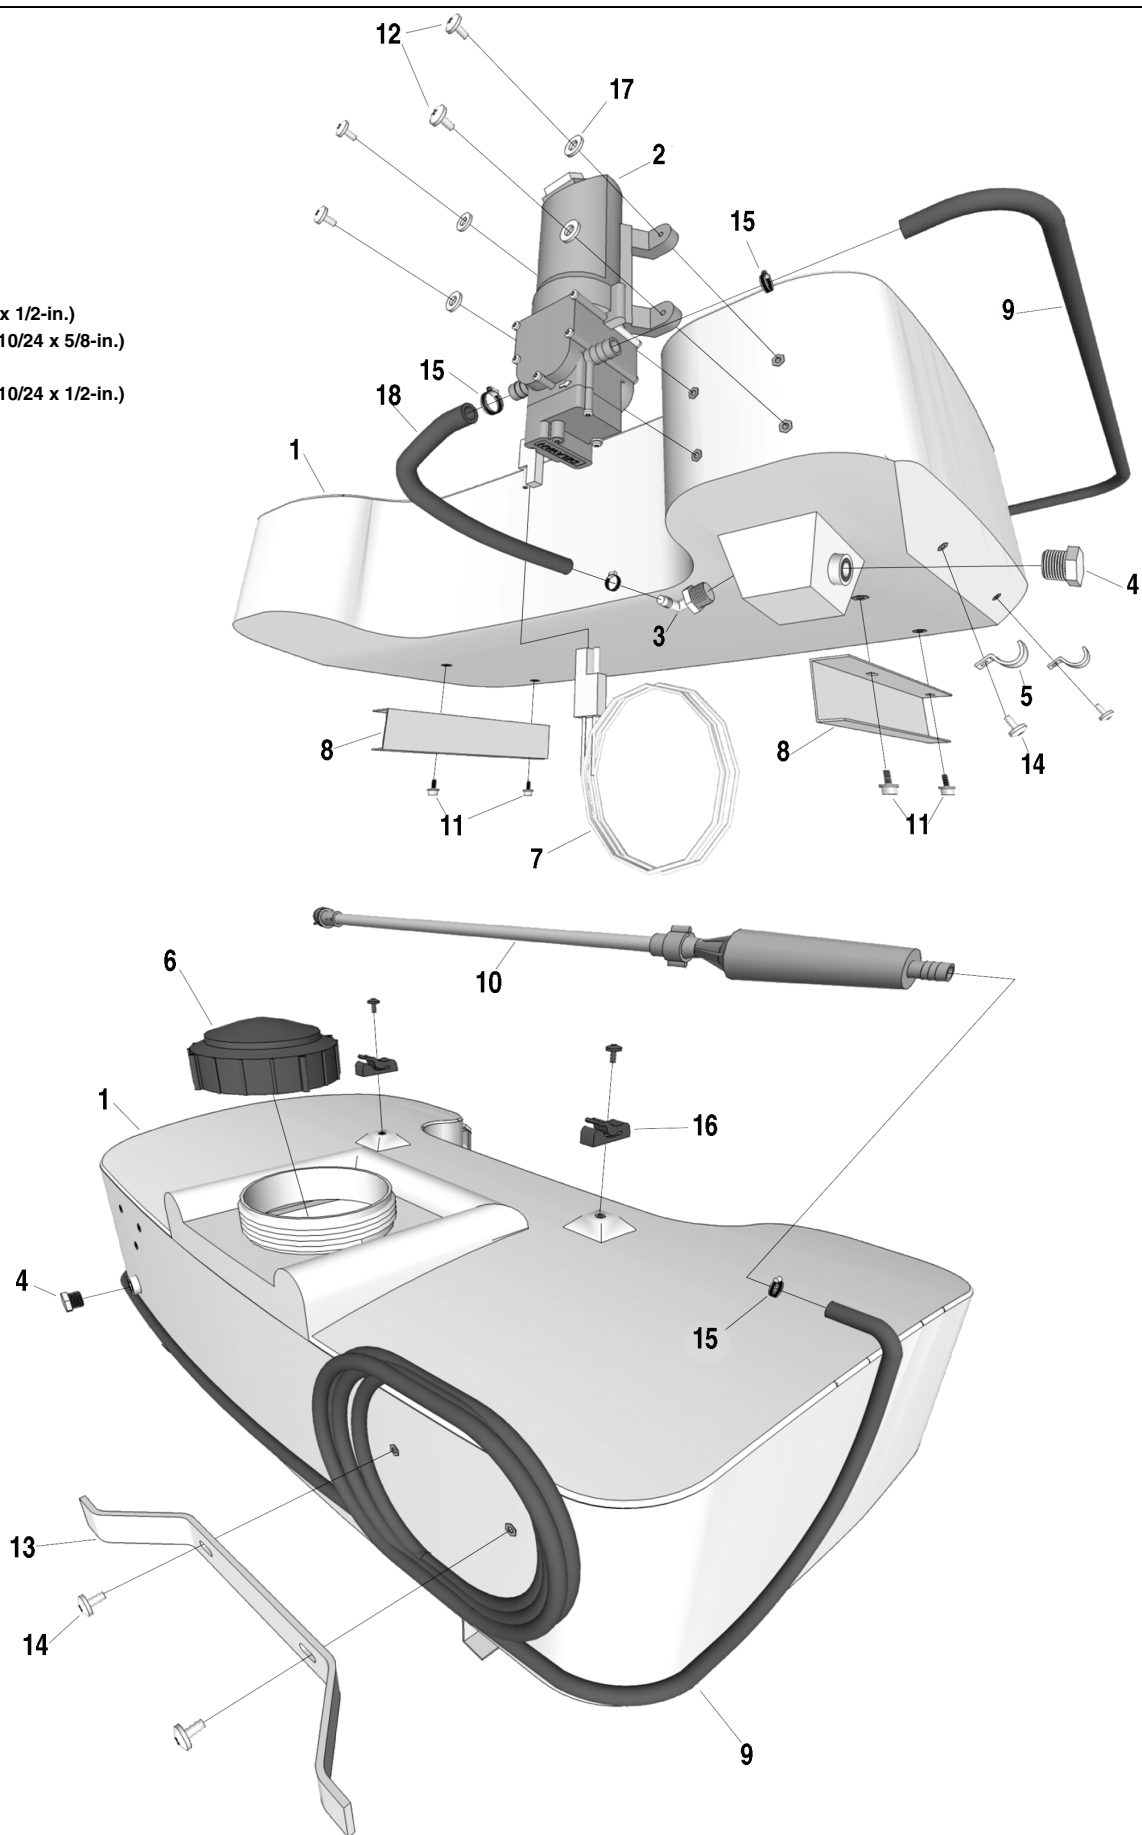

## **SAFETY PRECAUTIONS**

- Product knowledge is the first step to safety.
- Read all instructions carefully.
- Always wear protective equipment when handling dangerous chemicals.
- Never let children operate sprayer or handle chemicals.
- Repair any loose or leaking fittings and hoses immediately.
- Avoid spraying in windy conditions.
- Never use sprayer for anything other than its original intentions.
- Follow applications and rate charts carefully.
- For precautionary reasons, know first aid treatments for any dangerous material you may handle.

### **WARNING**

**Take all necessary precautions when handling chemicals. Wear coveralls, safety vest, boots, hat, gloves, respirator, and goggles. Wash coveralls, etc., daily. DO NOT spray upwind or on windy days. Avoid waste of chemicals.**

- Flush unit with clean water and ammonia after every use.
- Never leave chemical or water in tank after use.

■ **NOTE: Freezing will cause cracking of components.**

### **To winterize, do the following:**

1. Drain all water from tank by removing flush plug.
2. Remove hoses from pump.
3. Remove nozzle caps and loosen diaphragms.
4. Remove and drain filter bowl.
5. Disconnect hoses from valve bodies.
6. Pump RV antifreeze through the sprayer.

■ **NOTE: Antifreeze may be left in the sprayer over the winter. This will not damage the sprayer.**