


Arctic Cat® ATV

Installation Instructions - Accessory Kit

Molded Rack Tray Kit

(p/n 1436-381/906)

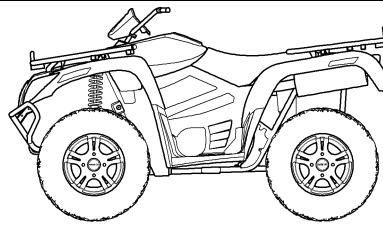

■ **NOTE:** Read these installation instructions thoroughly before beginning the installation process. Retain these Installation Instructions for future reference.

Kit includes:

p/n	QTY	DESCRIPTION
0541-959	1	Molded Tray
8476-630	4	Machine Screws
0623-184	4	Flat Washer
1441-993	4	Insert
N/A	1	Divider Template
0453-690	1	Instructions

1. Remove the existing four Speedrack inserts from the front rack; then install four new Inserts (by pressing in the four tabs) into the front rack from the bottom side until they snap completely into place. See Fig. 1.

Fig. 1




ATV-2076

■ **NOTE: When installing inserts, be sure to install the flat bottom side of the insert along the rack tube or brackets.**

2. With Molded Tray aligned with the four inserts, secure the molded tray to the rack using Four Machine Screws, and four Flat Washers. Tighten securely. See Fig. 2.

Fig. 2

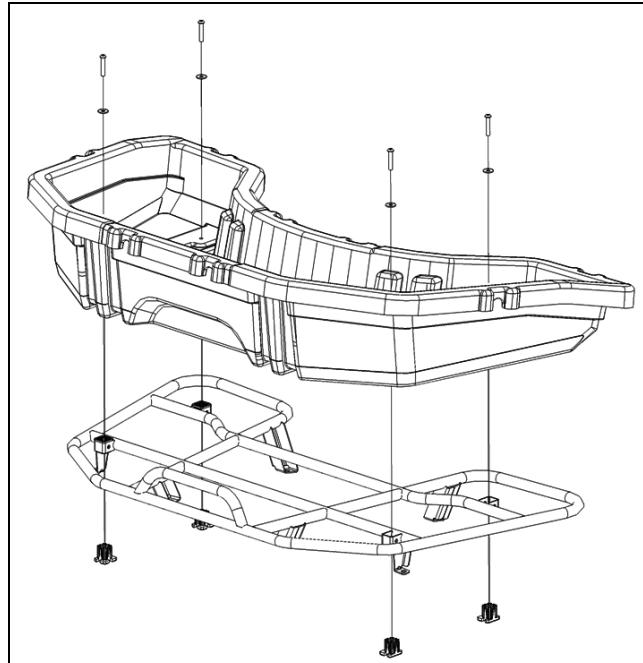


ATV-3020

Optional

3. Use provided Divider Template to cut 3/4-in. wooden dividers.
4. Add notches, slots, holes, or whatever customization you chose to help hold your items in place.



DIVIDER TEMPLATE

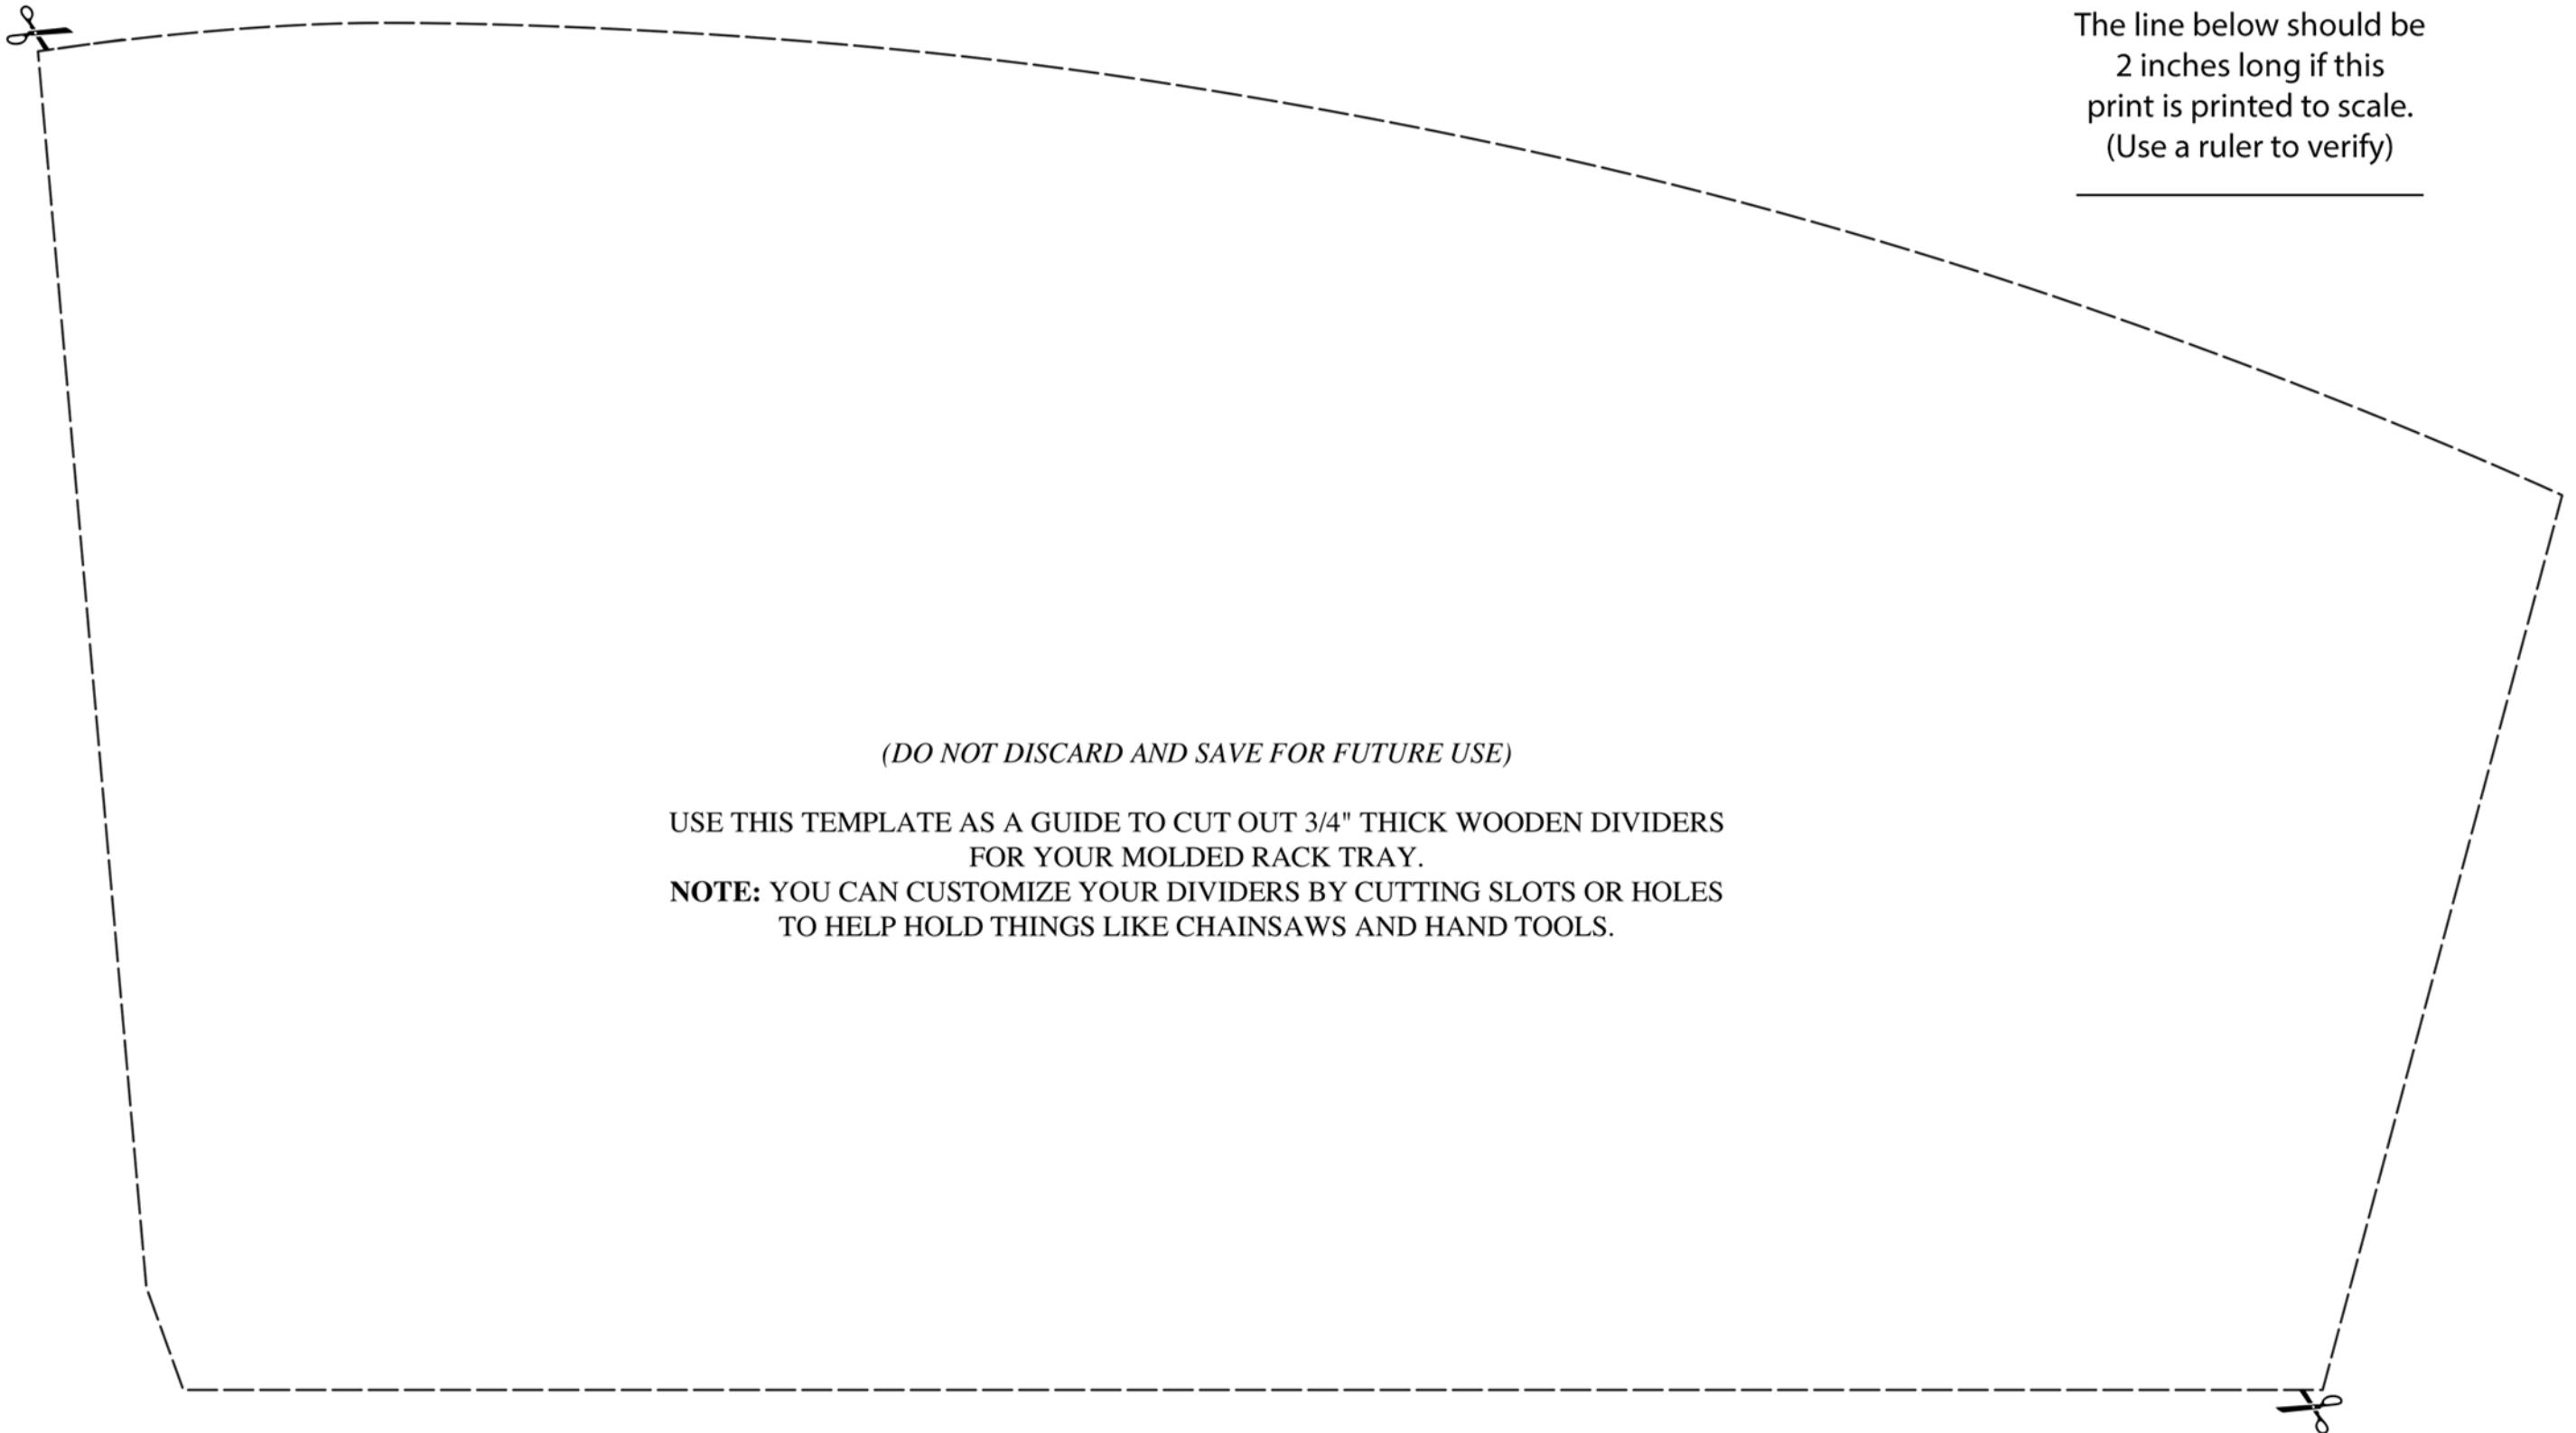

The line below should be 2 inches long if this print is printed to scale. (Use a ruler to verify)

(DO NOT DISCARD AND SAVE FOR FUTURE USE)

USE THIS TEMPLATE AS A GUIDE TO CUT OUT 3/4" THICK WOODEN DIVIDERS
FOR YOUR MOLDED RACK TRAY.

NOTE: YOU CAN CUSTOMIZE YOUR DIVIDERS BY CUTTING SLOTS OR HOLES TO HELP HOLD THINGS LIKE CHAINSAWS AND HAND TOOLS.