


Arctic Cat® ATV

Installation Instructions - Accessory Kit

Plow Push Frame Kit (Quick-Attach) (p/n 1436-380)

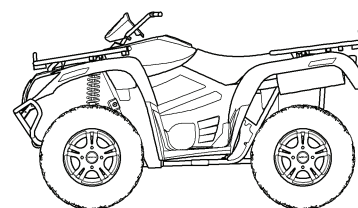

■ **NOTE:** Read these installation instructions thoroughly before beginning the installation process. Retain these Installation Instructions for future reference.


Kit includes:

QTY	DESCRIPTION
2	Fender Washer (M6)
1	Fender Washer (M8)
4	Flat Washer (M12)
4	Flat Washer (M16)
2	Cap Screw (M10-1.5 x 35mm)
2	Cap Screw (M6-1.0 x 40mm)
1	Cap Screw (M8-1.25 x 30mm)
1	Cap Screw (M8-1.25 x 40mm)
2	Cap Screw (1/2"-13 x 2-1/2 in.)
2	Lock Nut (M10-1.5) (Yellow Zinc Plated)
2	Lock Nut (M10-1.5) (Zinc Plated)
1	Lock Nut (M16-1.5)
4	Lock Nut (M6-1.0)
5	Lock Nut (M8-1.25)
2	Lock Nut (1/2"-13)
2	Shoulder Screw (M10-1.5 x 30mm)
1	"R" Pin
1	Tension Spring (13mm x 58mm)
2	Tension Spring (41mm x 201mm)
1	Right Tension Spring (13mm x 62mm)
1	Left Tension Spring (13mm x 62mm)
2	Adjustable Stop Block
1	Angle Adjust Lever Grip
1	Attachment
1	Main Frame
1	Handle
1	Swivel Plate
2	Attachment Plate Lever
1	Angle Adjust Lever
2	Attachment Plate Lever Spacer
1	Handle Strap
1	Clevis Pin
1	Lift Bracket
2	Eye Bolt (M8-1.25 x 45mm)
1	Instructions

■ **NOTE:** The blade must be allowed to rotate freely. Periodically check the tightness to prevent unnecessary wear.

3. Rotate the plow blade back to an upright position until the frame comes into contact with the stop blocks. Check the stop blocks to ensure both are set the same and are fully seated against the blade frame.
4. Connect one eye bolt loop to one end of the kick over tension spring. Connect the opposite end of the spring to the pre-drilled hole at the top of blade frame. Install the threaded section of the eye bolt through the pre-drilled hole in the swivel plate and secure with a lock nut. Tighten until 1/4 in. of thread appears past the nut. Repeat for opposite side. See Fig. 1.

Fig. 1

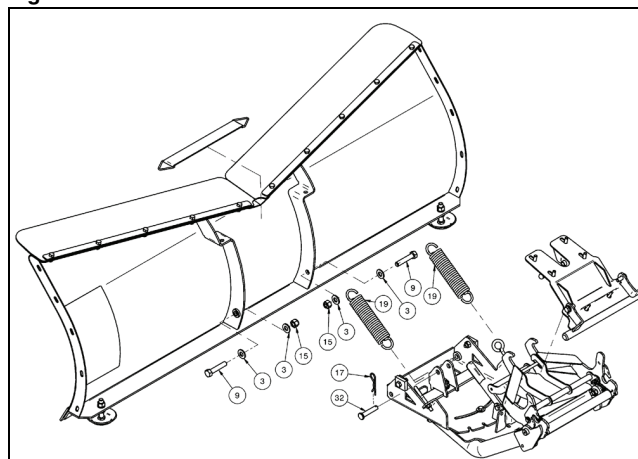

ATV-3009

1. Position Push Frame on a flat level surface.
2. Place the snowplow blade face down at the front of the swivel plate. Secure the blade to the swivel plate using two 1/2-13 x 2-1/2 in. cap screws, four M12 washers, and two 1/2-13 lock nuts. Tighten the nuts until secure; then loosen 1/4 to 1/2 turn.

KEY

- | | |
|---|--|
| 1. Fender Washer (M6) | 17. "R" Pin |
| 2. Fender Washer (M8) | 18. Tension Spring (13mm dia x 58mm) |
| 3. Flat Washer (M12) | 19. Tension Spring (41mm dia x 201mm) |
| 4. Flat Washer (M16) | 20. Right Tension Spring (13mm dia x 62mm) |
| 5. Cap Screw (M10-1.5 x 35mm) | 21. Left Tension Spring (13mm dia x 62mm) |
| 6. Cap Screw (M6-1.0 x 40mm) | 22. Adjustable Stop Block |
| 7. Cap Screw (M8-1.25 x 30mm) | 23. Angle Adjust Lever Grip |
| 8. Cap Screw (M8-1.25 x 40mm) | 24. Attachment |
| 9. Cap Screw (1/2"-13 x 2-1/2 in.) | 25. Main Frame |
| 10. Lock Nut (M10-1.5) (Yellow Zinc Plated) | 26. Handle |
| 11. Lock Nut (M10-1.5) (Zinc Plated) | 27. Swivel Plate |
| 12. Lock Nut (M16-1.5) | 28. Attachment Plate Lever |
| 13. Lock Nut (M6-1.0) | 29. Angle Adjust Lever |
| 14. Lock Nut (M8-1.25) | 30. Attachment Plate Lever Spacer |
| 15. Lock Nut (1/2"-13) | 31. Handle Strap |
| 16. Shoulder Screw (M10-1.5 x 30mm) | 32. Clevis Pin |
| | 33. Lift Bracket |
| | 34. Eye Bolt (M8-1.25 x 45mm) |

