

Arctic Cat® ATV

Installation Instructions - Accessory Kit

Push Frame Extension Kit

(p/n 1436-601)


■ **NOTE:** Read these installation instructions thoroughly before beginning the installation process. Retain these installation instructions for future reference.

Application:
Used with Snowplow Push Frame (p/n 1436-380)

Kit includes:			
Qty	Description	Qty	Description
2	Fender Washer (M8)	1	Lock Nut (M8-1.25)
1	Washer (M16)	1	Lock Washer (M8)
1	Cap Screw (M8-1.25 x 30mm)	1	Extension
1	Lock Nut (M16-1.5)	1	Instructions


1. Remove the cap screw, the washer, and the two lock nuts retaining the tension spring to the angle adjust lever. Remove the tension spring.
2. Remove the cap screw and the nut retaining the angle adjust lever to frame. Remove the angle adjust lever.
3. Remove the lock nut and the washer retaining the lift bracket and the front part of the pivot to frame. Remove the pivot.

Fig. 1

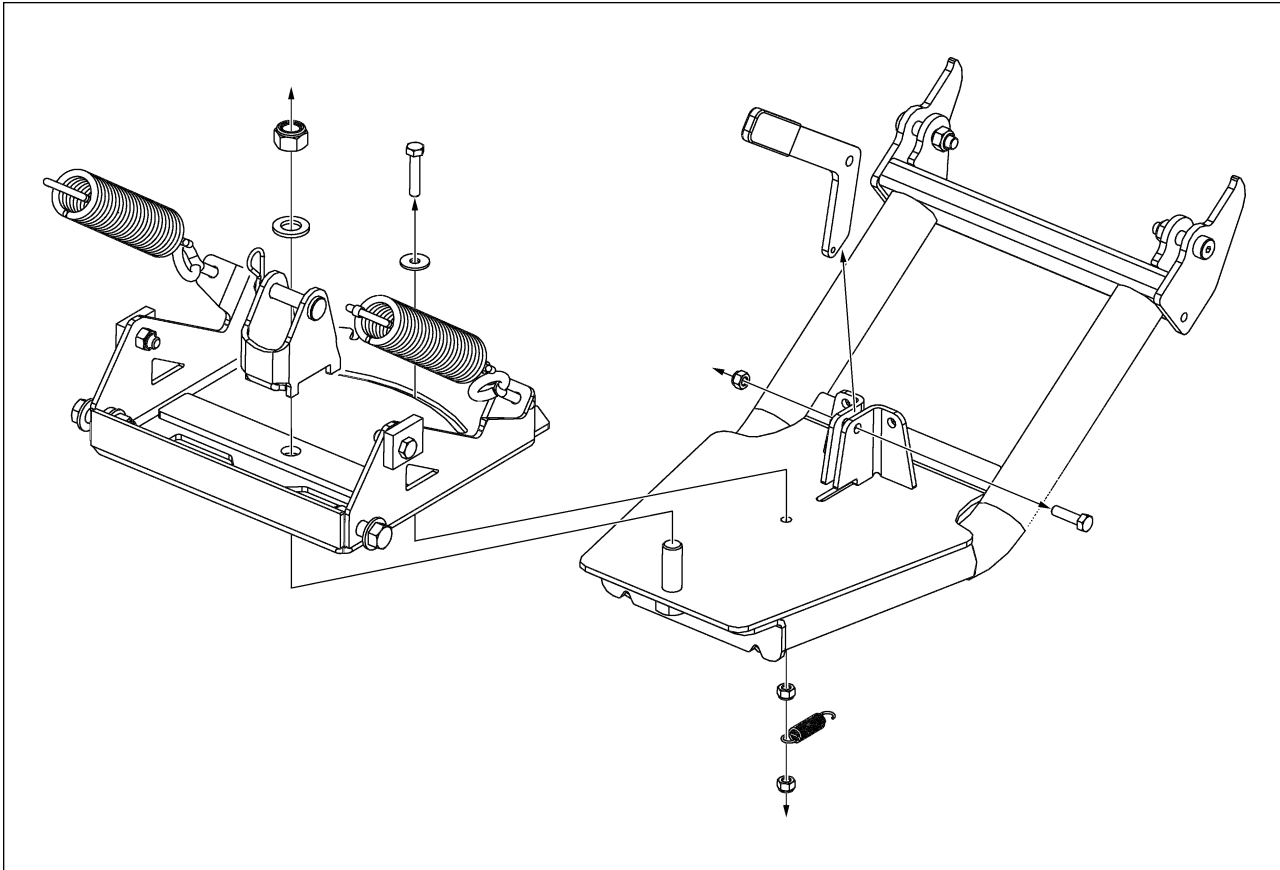

4. Slide the extension to the front part of the frame as illustrated.

Fig. 2

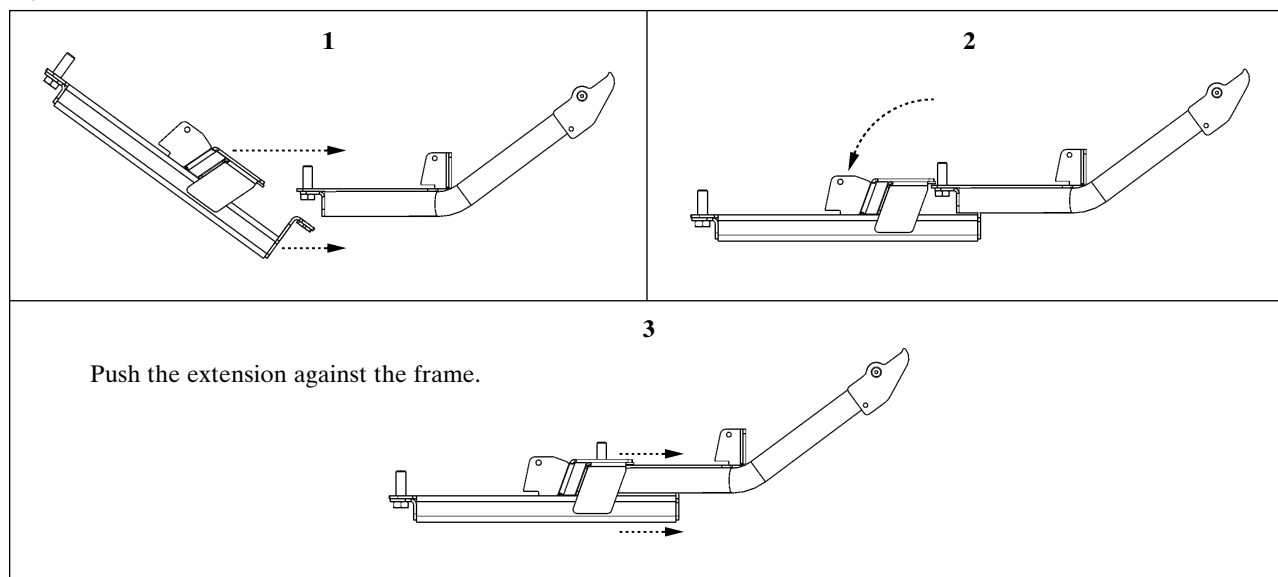

5. **IMPORTANT:** Make sure to push the extension against the frame before tightening all bolts and nuts. Fasten the rear part of the extension to frame using the M8-1.25 x 30mm cap screw, the M8 lock washer, the (2) M8 Fender washers, and the M8-1.25 lock nut.

6. Reposition the lift bracket on the extension and fasten using the M16 washer and the M16-1.5 lock nut.

7. Position and fasten the pivot and the angle adjust lever removed in **steps 1 to 3** using the original hardware.

NOTE: To maintain the movement of the pivot, do not overtighten.

Fig. 3


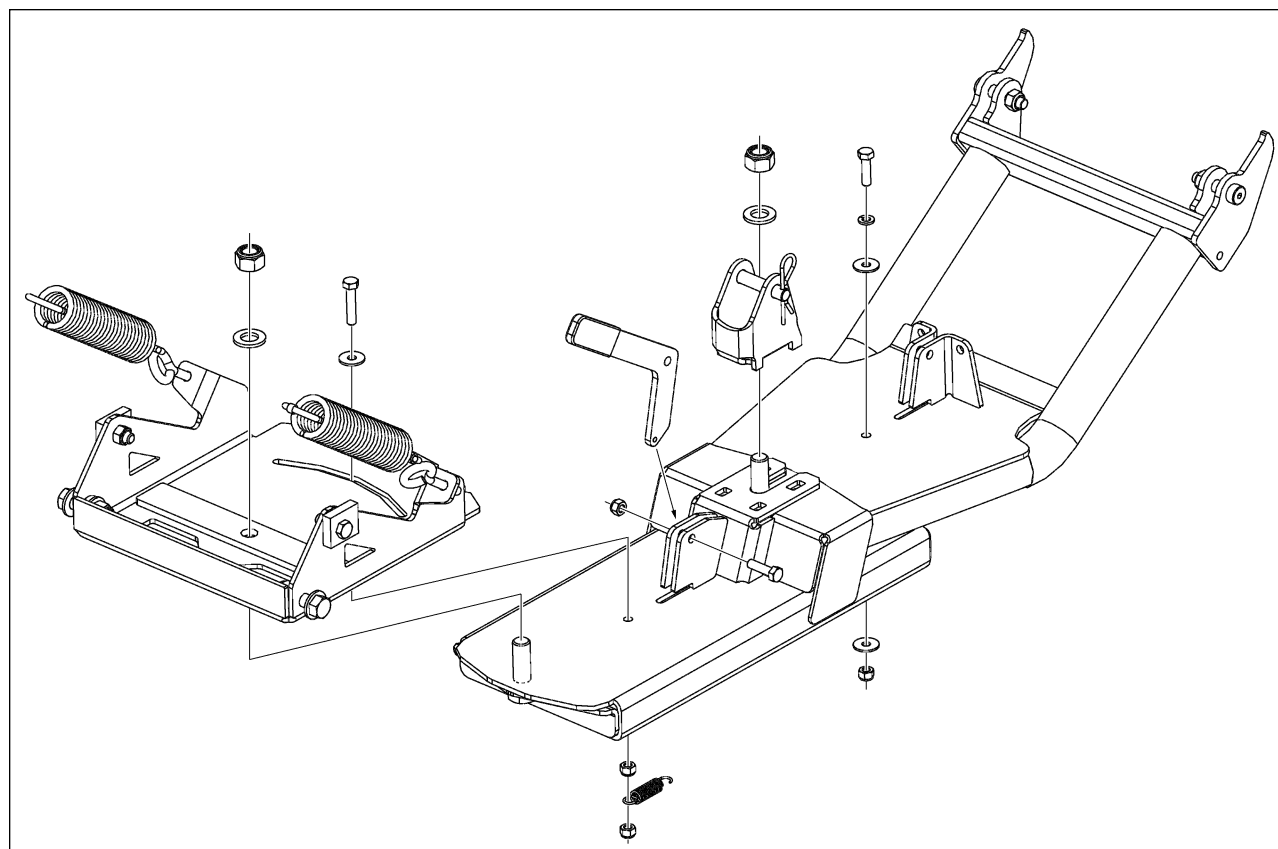



Fig. 4

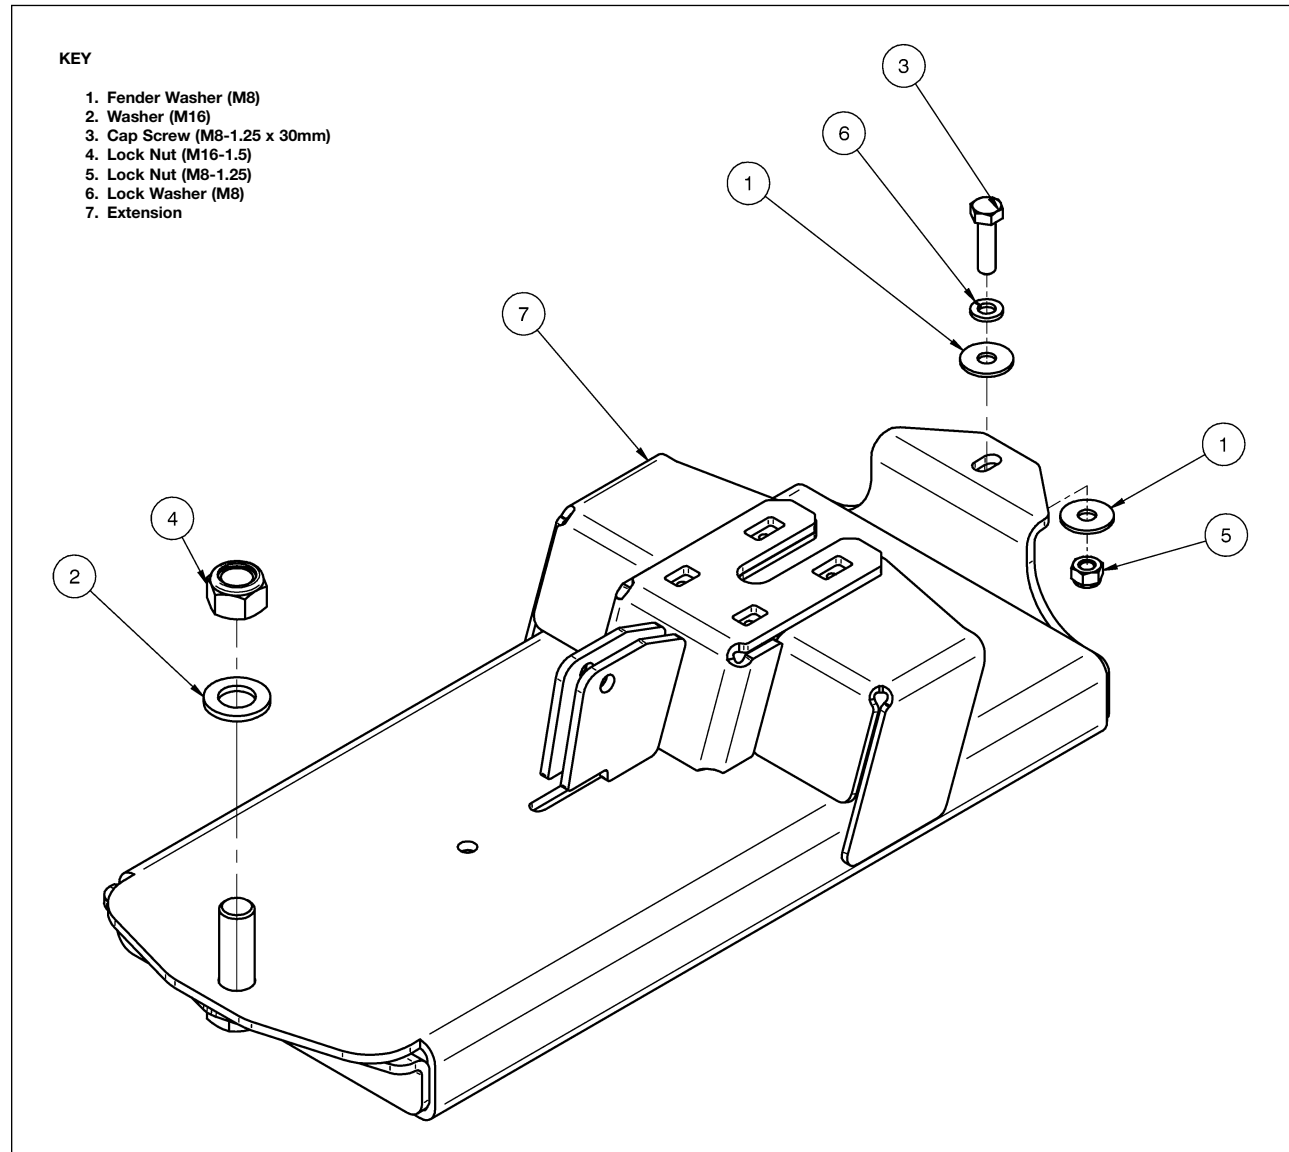

Arctic Cat® VTT

Instructions d'installation - Ensemble d'accessoires

Rallonge de châssis pour pelle (p/n 1436-601)

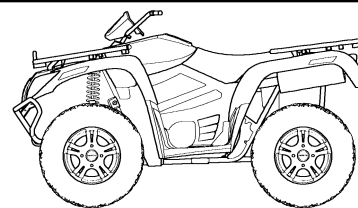

■ **NOTE :** Avant de débiter l'assemblage, lire entièrement les instructions suivantes. Gardez ces instructions d'assemblage pour une consultation future.

Application :


Utilisée avec le châssis de pelle (p/n 1436-380)

L'ensemble comprend :

Qté	Description	Qté	Description
2	Rondelle Fender (M8)	1	Écrou autobloquant (M8-1.25)
1	Rondelle (M16)	1	Rondelle frein (M8)
1	Boulon hex. (M8-1.25 x 30mm)	1	Rallonge
1	Écrou autobloquant (M16-1.5)	1	Instructions


1. Retirer le boulon, la rondelle et les deux écrous retenant le ressort de tension au loquet d'angle. Retirer le ressort de tension.
2. Retirer le boulon et l'écrou retenant le loquet d'angle au châssis. Retirer le loquet d'angle.
3. Retirer l'écrou autobloquant et la rondelle retenant le crochet de levage et la partie avant du pivot au châssis. Retirer le pivot.

Fig. 1

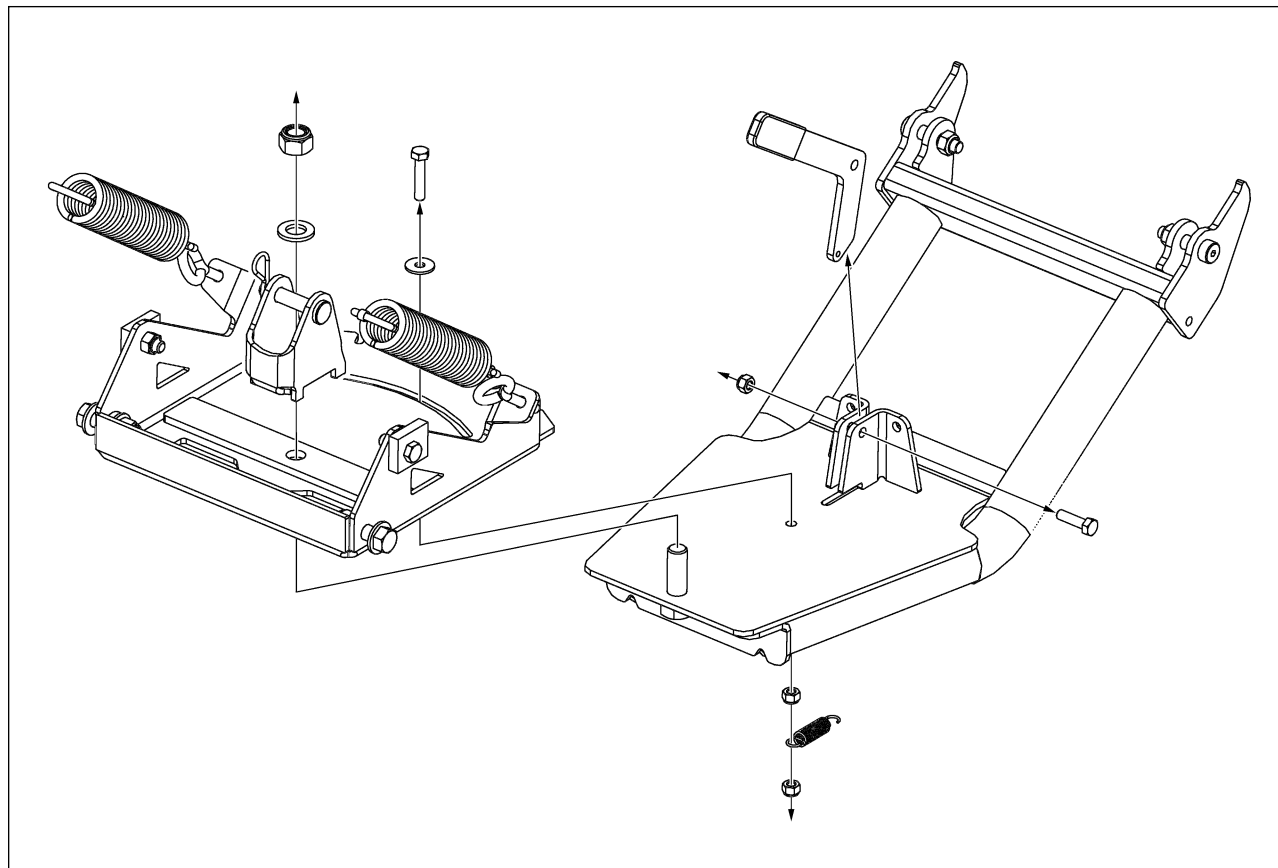

4. Glisser la rallonge à l'avant du châssis tel qu'illustré.

Fig. 2

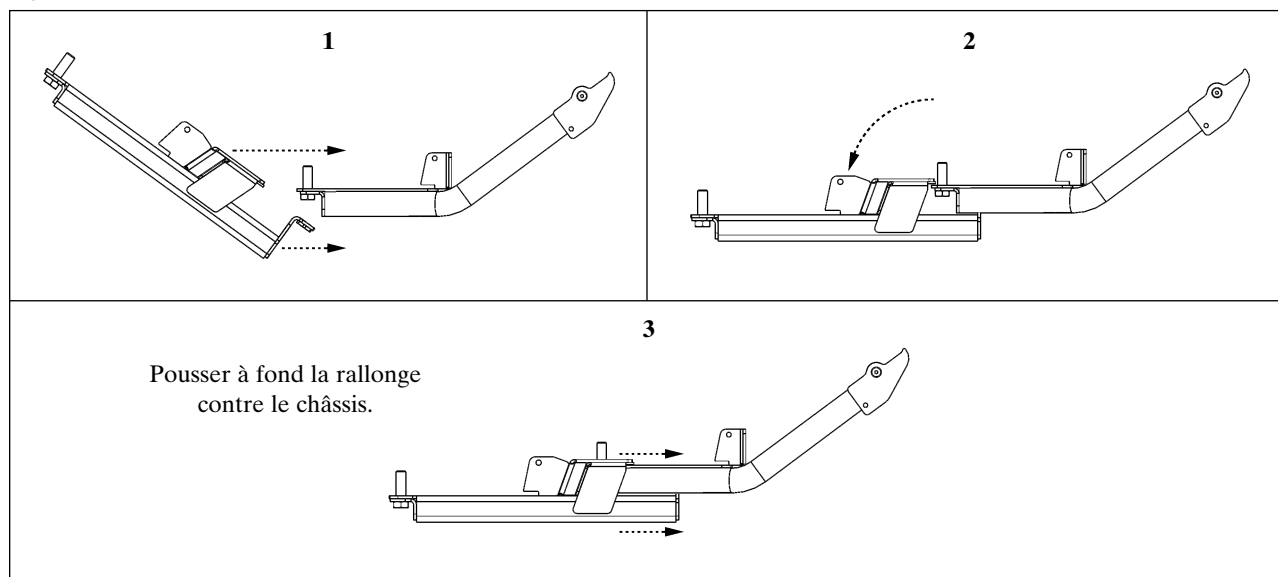

5. **IMPORTANT** : Assurez-vous de pousser à fond la rallonge contre le châssis avant de serrer le tout.

Fixer la partie arrière de la rallonge au châssis à l'aide du boulon hex. M8-1.25 x 30mm, de la rondelle frein M8, des (2) rondelles Fender M8 et de l'écrou autobloquant M8-1.25.

6. Repositionner le crochet de levage sur la rallonge et fixer à l'aide de la rondelle M16 et de l'écrou autobloquant M16-1.5.

7. Positionner et fixer le pivot et le loquet d'angle retirés aux **étapes 1 à 3** à l'aide de la quincaillerie d'origine.
NOTE : Ne pas serrer à fond afin que le pivot puisse demeurer en mouvement.

Fig. 3

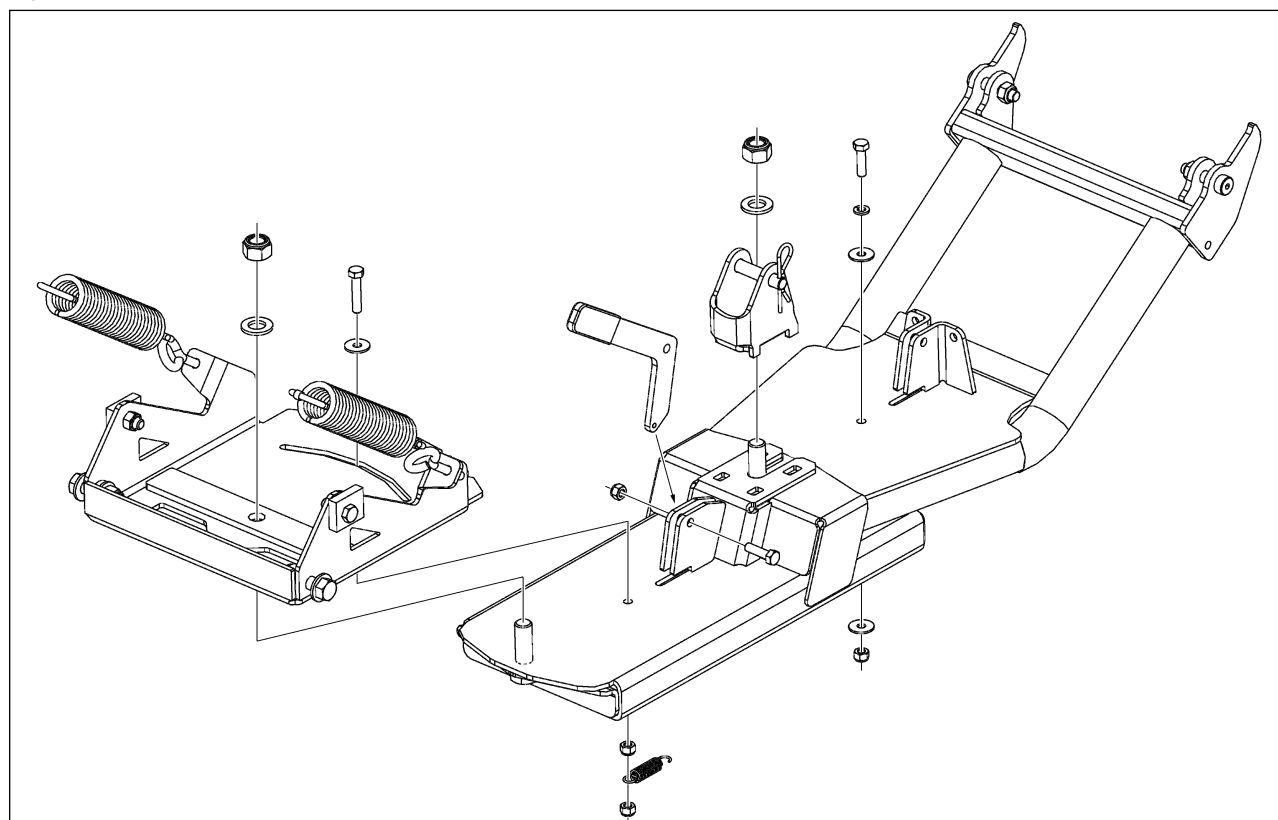


Fig. 4

