


Arctic Cat® ATV

Installation Instructions - Accessory Kit

Quick-Release Windshield Kits (p/n 1436-546/547/548/549/550)

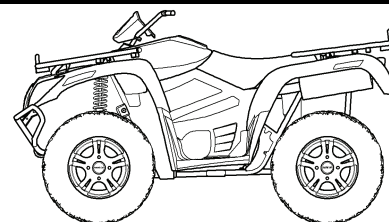

■ **NOTE:** Read these installation instructions thoroughly before beginning the installation process. Retain these Installation Instructions for future reference.


Application: 1996-2011 Full-Size models excluding Mud Pro.

Kit includes:

p/n	QTY	DESCRIPTION
1436-554	2	Mounting Bracket with Half Clamp
0541-590	1	Taper Pin (Right-Side)
0541-591	1	Taper Pin (Left-Side)
0541-589	1	Windshield Bracket
0541-594	2	Cup Holder Bracket
1441-624	2	Plastic Knob
1436-560	1	Hardware Kit
*	6	Plastic Cap
*	6	Plastic Snap Washer
*	6	Nut (M6)
*	6	Machine Screw (M6 x 16 mm)
*	6	Socket-Head Cap Screw (5 mm)
*	6	Nyloc Hex Nut (5 mm)
*	4	Hex-Head Cap Screw (6 mm)
*	4	Flat Washer
*	4	Nylon Washer
*	4	Nyloc Hex Nut (6 mm)
1441-621	1	Windshield (Black)
1441-618	1	Windshield (Marsh Green)
1441-619	1	Windshield (Red)
1441-620	1	Windshield (Lime Green)
0453-658	1	Instructions

1. Position Mounting Bracket onto the right-side handlebar and secure with Half Clamp, two 5 mm Socket-Head Cap Screws, and two 5 mm Nyloc Hex Nuts. Finger-tighten only at this time. See Fig. 1 and Fig. 2.

Fig. 1

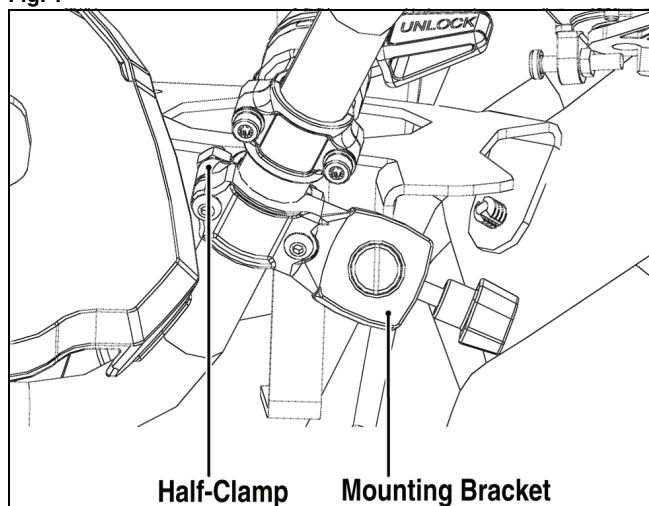

ATV-1110A


2. Repeat step 1 for opposite side.

CAUTION

Be sure to position the mounting bracket so it does not interfere with any other ATV components.

3. Secure Right-Side Taper Pin to Windshield Bracket using two 6 mm Hex-Head Cap Screws, two Flat Washers, two Nylon Washers, and two 6 mm Nyloc Hex Nuts. Finger-tighten only at this time.
4. Repeat step 3 for opposite side.
5. Secure the two Cup Holder Brackets to the windshield bracket using two 5 mm socket-head cap screws and two 5 mm Nyloc hex nuts.
6. Secure Windshield to the windshield bracket using six Machine Screws (M6 x 16 mm), six Plastic Snap Washers, six M6 Nuts, and six Plastic Caps.
7. Insert the taper pins into the mounting brackets and secure with two Plastic Knobs. Finger-tighten only at this time.
8. Position the windshield as desired; then secure all hardware.
9. Be sure to tighten the screws securing the mounting brackets from step 1 to 30 in.-lb.

Fig. 2

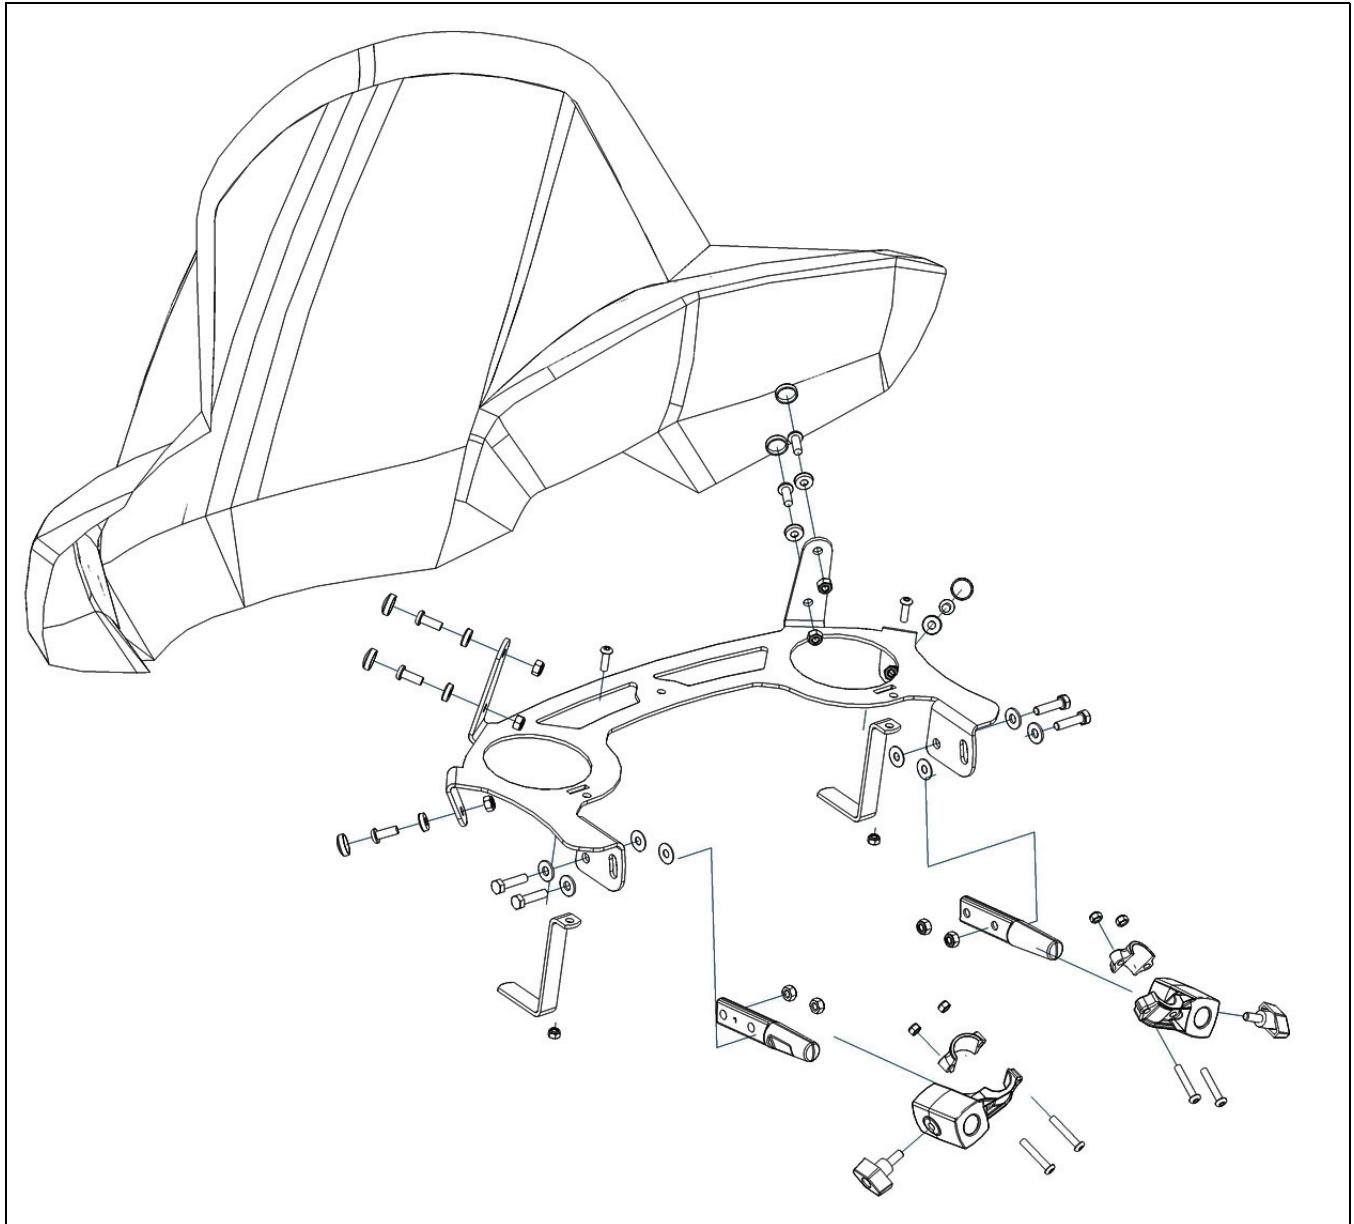

ATV-3011

