


Arctic Cat® ATV

Installation Instructions - Accessory Kit

Skid Plate Kit

(p/n 1436-616)

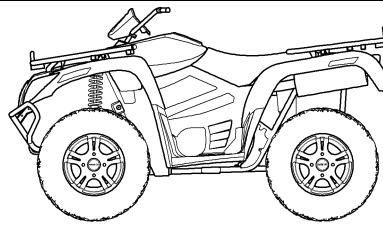


■ NOTE: Read these installation instructions thoroughly before beginning the installation process. Retain these Installation Instructions for future reference.

Kit includes:

p/n	QTY	DESCRIPTION
N/A	1	Front Skid Plate
N/A	1	Rear Skid Plate
N/A	2	Bracket
N/A	4	Cap Screw
N/A	16	Nylon Washer
N/A	8	Flat Washer
N/A	4	Nut
0453-671	1	Instructions

1. Remove the existing plastic skid plate. Retain all twelve shoulder screws.
2. Secure Front Skid Plate to Rear Skid Plate using two Brackets (mounted on the inside), four Cap Screws, eight Flat Washers, and four Nuts. Tighten securely. See Fig. 1.

Fig. 1

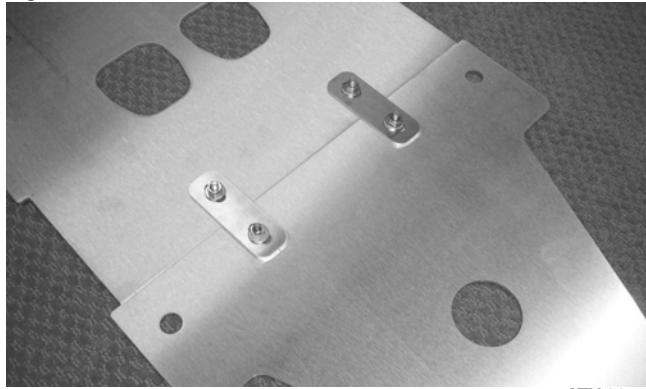

ATV-2057

3. Install the skid plate assembly using existing shoulder screws and Nylon Washers (nylon washers should be installed between the screw and skid plate). Do not tighten screws until all are in place for ease of install.
4. Tighten all shoulder screws securely. See Fig. 2.

Fig. 2



ATV-2058

