


Arctic Cat® Prowler

Installation Instructions - Accessory Kit

2-Piece Roof Kit (1436-519)

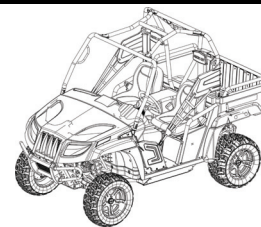

■ **NOTE:** Read these Installation Instructions thoroughly before beginning the installation process. Retain these Installation Instructions for future reference.


Kit includes:

p/n	QTY	DESCRIPTION
2441-225	2	Roof Bracket
1441-970	1	Rubber Extrusion
*	10	Fender Washer
*	10	Flange Lock Nut
*	10	Torx Screw (M6)
*	4	Truss Head Screw
*	4	Low Profile Lock Nut
2441-224	6	Rubber Clamp
2441-226	1	Edge Trim
1441-976	2	End Cap
0453-720	1	Instruction

* Included in Hardware Kit (p/n 1436-571)

1. Install End Cap (A) to the front Left- and Right-Side Roof using two Truss-Head Screws and two Low Profile Lock Nuts; then slide Rubber Extrusion (B) in between the two roof pieces until it is completely installed; then install another end cap in the rear using two truss-head screws and two low-profile lock nuts. See Fig. 1.


Fig. 1

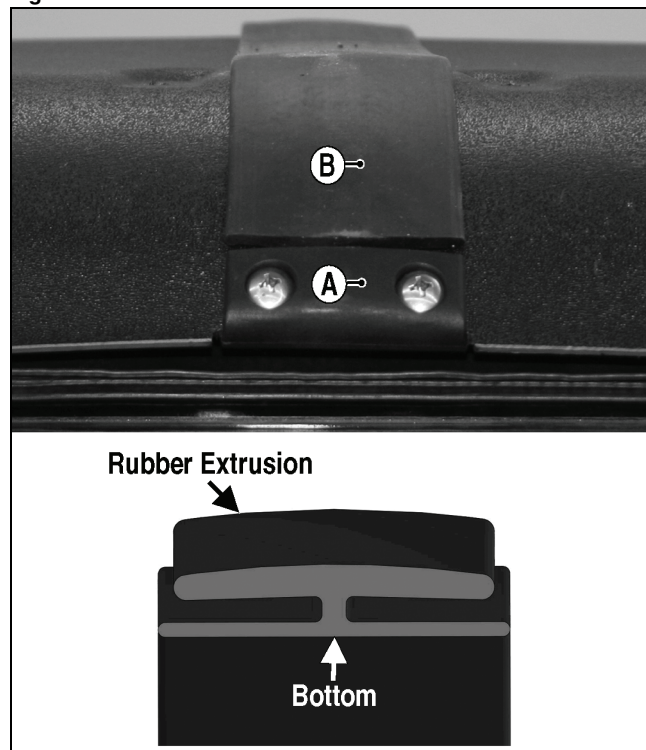

UTV-274A

2. Align both Roof Brackets (A) with the holes on the under-side of the assembled roof. Insert four M6 Torx Screws and four Fender Washers through the top of the roof and the roof brackets. Fasten using four Flange Lock Nuts. See Fig. 2.


Fig. 2

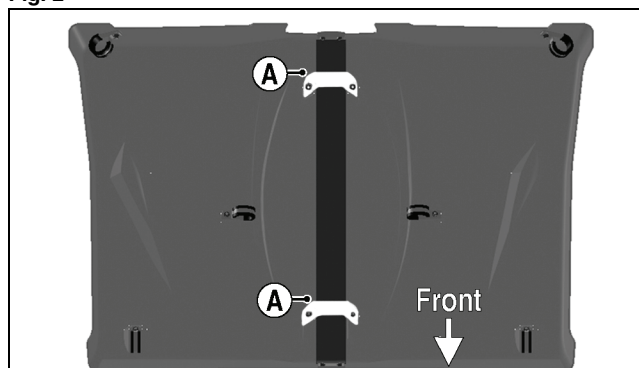

UTV-123A

■ **NOTE:** Place and align the roof onto the ROPS frame to find proper location for Edge Trim; then remove paper backing from edge trim and install on top of front ROPS tube to seal between roof and the front ROPS tube. See Fig. 3.


Fig. 3

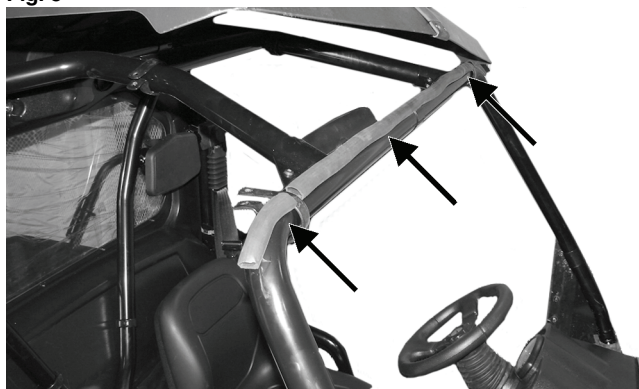

UTV-275A

3. Place and align the assembled roof properly over the ROPS frame. Install six Rubber Clamps (A) on the ROPS bars so that they are aligned with the mount holes. See Fig. 4.

Fig. 4

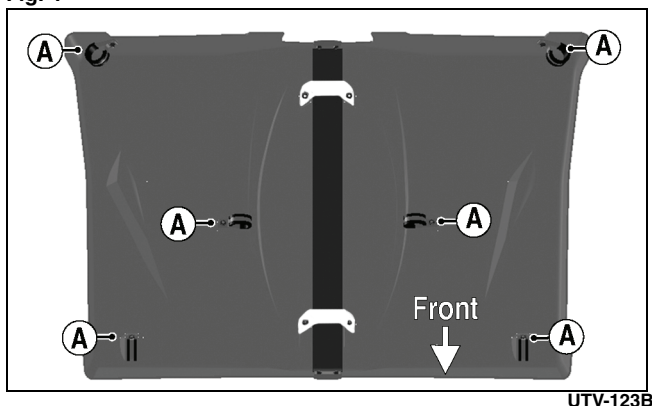

UTV-123B

4. Insert six M6 Torx Screws and six M6 Fender Washers through the top of the roof and into the six rubber clamps; then fasten using six M6 Flange Nuts (the rear mount straps will also pass through the rear panel).
5. Once optimal fitment is achieved, tighten all hardware.