


Arctic Cat® UTV Installation Instructions Cargo Box Latch Bracket Kit (1436-322)

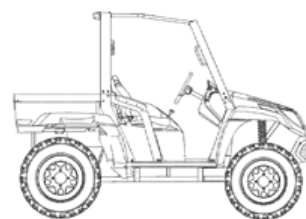

■ **NOTE:** Read these Installation Instructions thoroughly before beginning the installation process. Retain these Installation Instructions for future reference.

Application: 2008-2009 Prowler XTX, 2009 Prowler 650 XT

Kit includes:


p/n	QTY	DESCRIPTION
2516-178	1	Cargo Box Latch Bracket
2416-086	1	Spring
8476-616	1	Bolt
0423-540	5	Nut
0453-580	1	Instructions

1. Remove the existing cargo box latch bracket by removing the spring and two self-tapping screws. Discard bracket and spring.
2. Install new Cargo Box Latch Bracket using two existing self-tapping screws.

■ **NOTE:** If the front self-tapping screw boss is stripped, please discard self-tapping screw. The cargo box assembly will NOT have to be replaced if the self-tapping screw boss is stripped.

3. Using a 15/64-in. drill bit, drill out the mounting location for Bolt and Nut. See Fig. 1.


Fig. 1

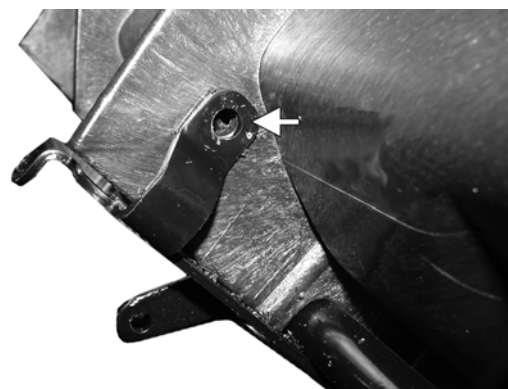

UTV-050A

4. Install bolt and nut and tighten securely; then install new Spring. See Fig. 2.

Fig. 2

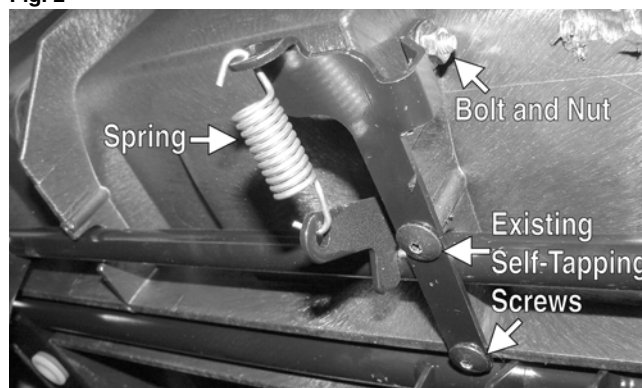


UTV-049A



Arctic Cat® VTU Installation Instructions

Trousse de verrou de coffre de rangement (p/n 1436-322)

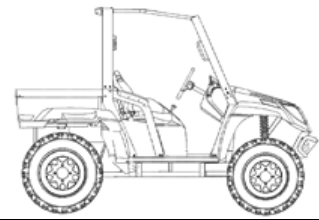

■ **REMARQUE :** Lisez ces instructions sur l'usage attentivement avant de commencer la procédure d'installation. Conservez ces instructions sur l'installation pour vos références futures.

Application : 2008-2009 Prowler XTX, 2009 Prowler 650 XT

La trousse inclut :


n/p	QTÉ	DESCRIPTION
2516-178	1	de verrou de coffre de rangement
2416-086	1	Ressort
8476-616	1	Boulon
0423-540	5	Écrou
0453-580	1	Instructions

1. Déposez le support de verrou de coffre de rangement existant en retirant le ressort et les deux vis autotaraudeuses. Jetez le support et le ressort.
2. Installez le nouveau Support de verrou de coffre de rangement en utilisant les deux vis autotaraudeuses existantes.

■ **REMARQUE:** Si la protubérance avant de la vis autotaraudeuse est foirée, veuillez mettre la vis au rebut. Il n'est pas nécessaire de remplacer le coffre de rangement si la protubérance de la vis autotaraudeuse est foirée.

3. En utilisant un foret de 15/64 po, percez les orifices de montage du Boulon et d' Écrou. Consultez l'III. 1


III. 1

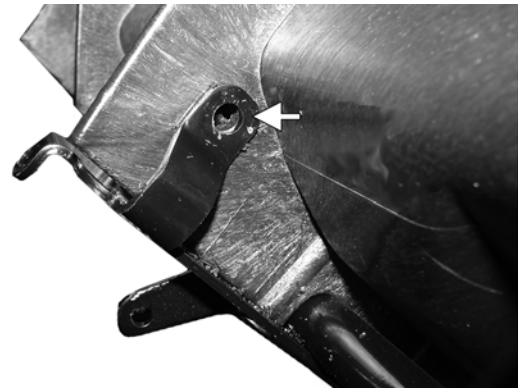

UTV-050A

4. Installez le boulon ainsi que l'écrou et serrez bien. Ensuite, installez le nouveau Ressort. Consultez l'III. 2

III. 2

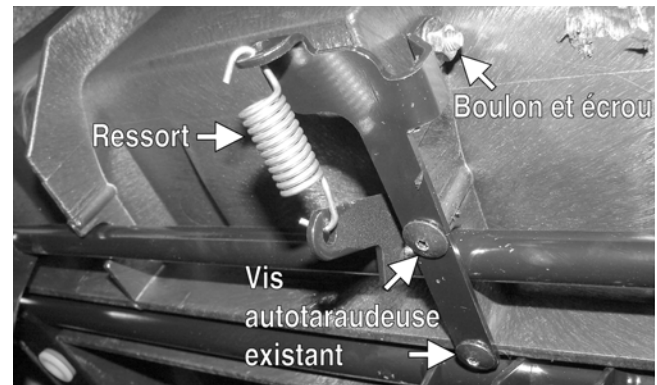

UTV-049F

