


Arctic Cat® Prowler

Installation Instructions - Accessory Kit

HDX Soft Rear Panel Kit

(1436-555)

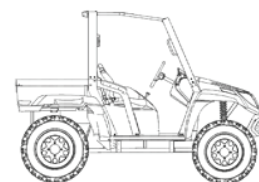

■ **NOTE:** Read these Installation Instructions thoroughly before beginning the installation process. Retain these Installation Instructions for future reference.


Kit includes:

p/n	QTY	DESCRIPTION
N/A	1	Rear Panel
0453-688	1	Instructions

■ **NOTE:** Do not trailer vehicle with this soft rear panel installed.

1. Lift the cargo box; then feed the top velcro straps around the vertical canopy tube and the top x-brace and connect the velcro. See Fig. 1.


Fig. 1

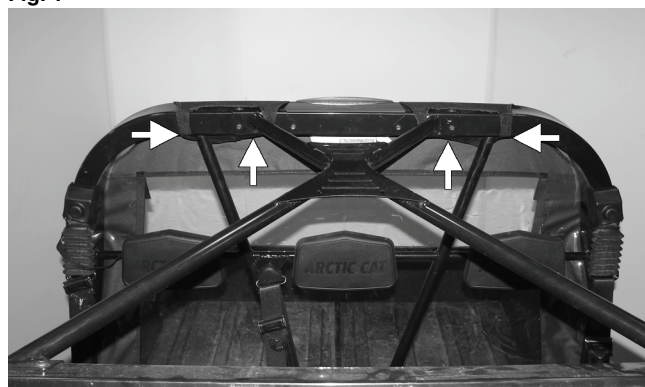

UTV-187A

2. Feed the side straps around the outside of the vertical canopy tube and connect the buckles. Cinch the straps keeping the panel centered. Do not secure over the seat belt straps. See Fig. 2

Fig. 2

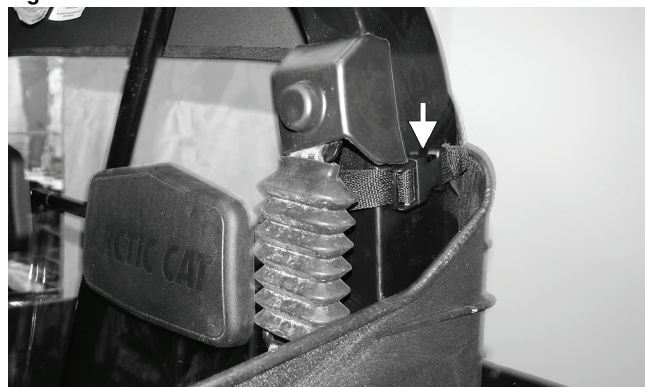

UTV-188A

3. Secure the bottom of the rear panel around the seat brace using four velcro connections. See Fig. 3

Fig. 3



UTV-189

4. Wrap the bottom velcro straps around the side arm rests and connect the velcro. See Fig. 4.

Fig. 4



UTV-190

5. Close the cargo box.

■ **NOTE:** The clear material of the panel can be rolled up at operator's discretion. Do so by disconnecting the side webbing/velcro and disconnecting the velcro on the panel from the self-adhesive velcro; then roll the clear material up and connect with the hanging velcro straps.

■ **NOTE:** For use with the soft top, feed the rear strap from the soft top through the access hole in the rear panel and connect the strap back to the top.