


Arctic Cat® Prowler

Installation Instructions - Accessory Kit


LXC Windshield Washer Kit (1436-523)

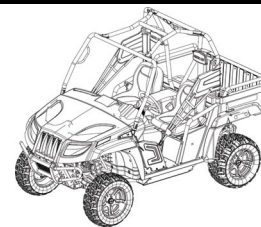

■ **NOTE:** Read these Installation Instructions thoroughly before beginning the installation process. Retain these Installation Instructions for future reference.


Kit includes:

p/n	QTY	DESCRIPTION
2441-262	1	Tank (A)
2441-263	1	90 ° Adaptor (B)
2441-264	1	Check Valve (C)
N/A	2	Machine Screw (D)
N/A	2	Washer (E)
2441-265	1	Sprayer (F)
N/A	6	Cable Tie (G)
2441-266	1	Washer Tube (H)
N/A	2	Nut (I)
2441-267	1	Pump
2441-268	1	Wire Harness
0453-747	1	Instruction

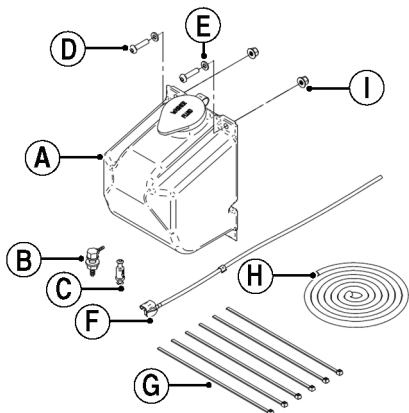

1. Open the hood; then cut 8-in. of Washer Tube and install it on pump until it is fully seated.
2. Install Check Valve to the other side of the 8-in. washer tube making sure the arrow is in the direction flowing away from the Tank. See Fig. 1.

Fig. 1

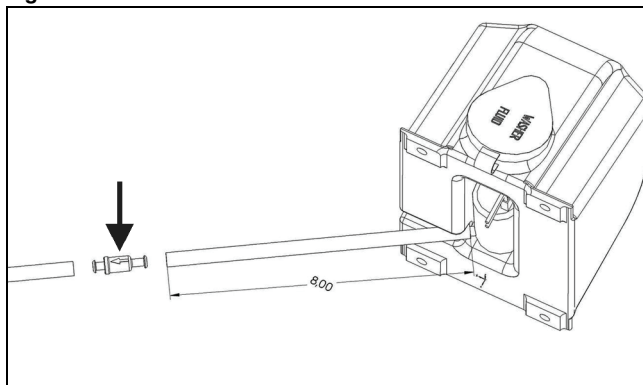


UTV-232

3. Install the rest of the washer tube on the other side of the check valve.

4. Place the tank into the operator's side of the under-hood storage box and mark both mounting locations.
5. Remove the tank and using a 1/4-in. drill bit, drill both mounting locations. See Fig. 2.


Fig. 2

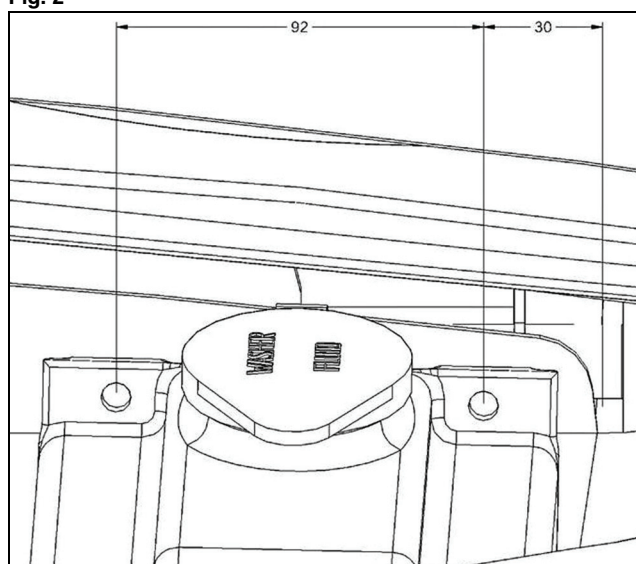

UTV-233

6. Connect both the black and red wires to the pump mounted on the back of the tank; then secure the tank to the storage box using two Machine Screws, two Washers, and two nuts. Tighten securely. See Fig. 3.


Fig. 3

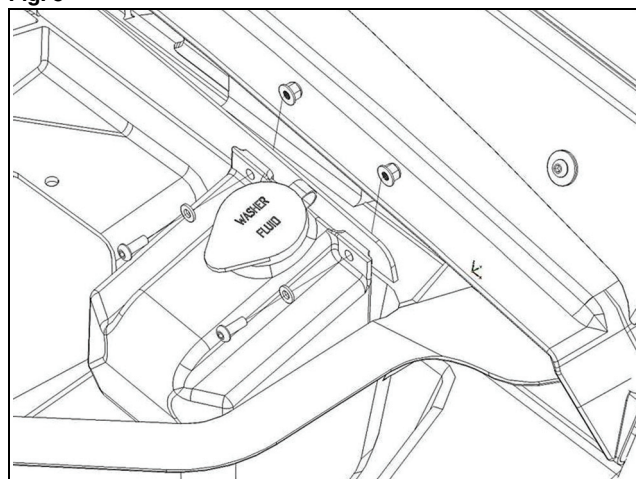

UTV-234

7. Make sure all wires are between the dash and the gutter of the storage box. Use cable ties to maintain all wires. See Fig. 4.


Fig. 4

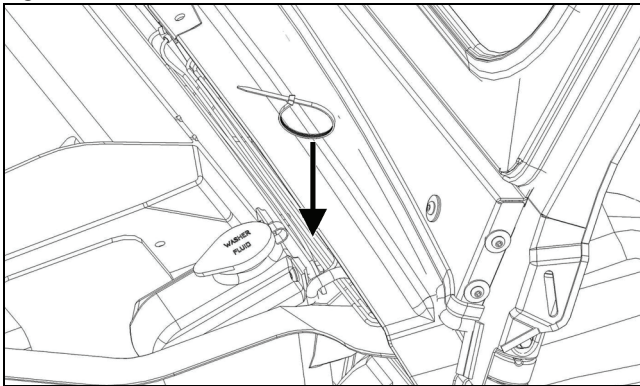

UTV-235A

8. Remove the two machine screws securing the top of the dash to the frame; route the red wire from the pump to upper left tab of the switch from the windshield wiper kit.
9. Route the black wire from the pump to the same mounting location as the black wire from the wiper motor. Secure the dash to the frame using existing machine screws. See Fig. 5.

Fig. 5

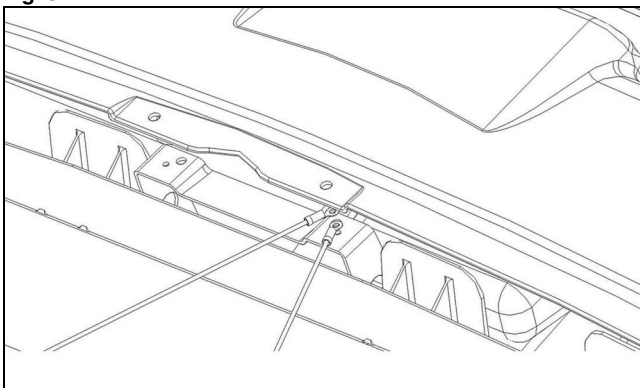


UTV-236

■ **NOTE:** Cut a 9-in. section of washer tube which will be routed from the 90° adaptor to the sprayer.

10. Route the washer tube from the pump under the dash and up along the left-side ROPS tube and toward the wiper motor.
11. Remove the plug above the wiper motor; then install 90° Adaptor into the windshield; then connect the washer tube to the adaptor. See Fig. 6.


Fig. 6

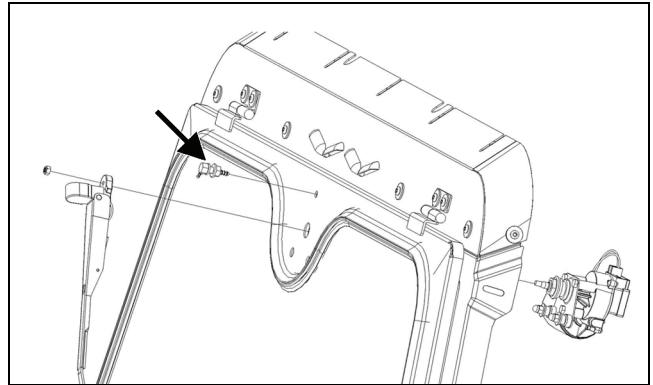

UTV-240A

12. Install Sprayer onto the wiper arm; then plug the sprayer tube into the 90° adaptor. See Fig. 7.

Fig. 7

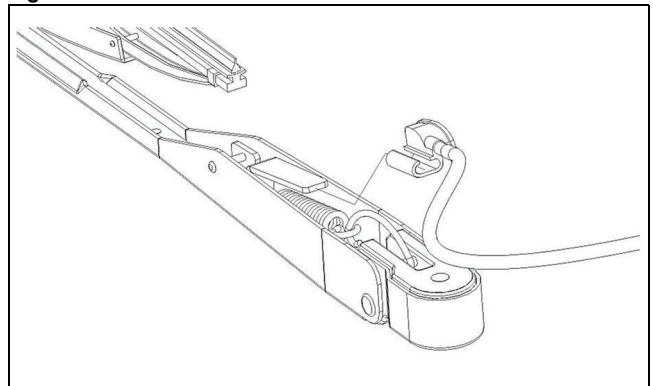

UTV-241

13. Fill the tank with appropriate window washer fluid and test the function of the sprayer.