


# Arctic Cat® ROV

## Installation Instructions - Accessory Kit

### Prowler Full Windshield Kit

(p/n 0436-975)

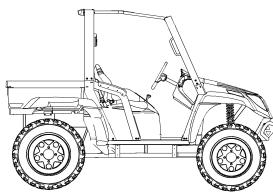

■ NOTE: Read these installation instructions thoroughly before beginning the installation process. Retain these Installation Instructions for future reference.

**Application: All 2006-2010 Prowler models and 2011 Prowler HDX**


**Kit includes:**

Ref. No.	p/n	QTY	DESCRIPTION
1	*	8	Nyloc Flange Nut (1/4-20)
2	1441-343	6	Rubber Clamp
3	n/a	1	Windshield
4	*	3	Rubber Bumper
5	*	7	Flat Washer (1/4 in.)
6	*	6	Screw (1/4-20 x 1 1/4 in.)
7	*	1	Bolt (1/4-20 x 1.0 in.)
8	*	1	Flat Washer (1/4 in.)
9	1441-928	1	Center L-Bracket
10	*	1	Rubber Washer
11	*	1	Screw (1/4-20 x 3/4 in.)
	0453-440	1	Instructions

\* Included in Hardware Kit (p/n 1436-174)

1. Thoroughly clean the installation area on the vehicle.
2. Place six Rubber Clamps on the forward-most section of the cab frame tubing making sure the flat side of the clamp is facing toward the front of the vehicle. See Fig. 1 for orientation of clamps.

**Fig. 1**

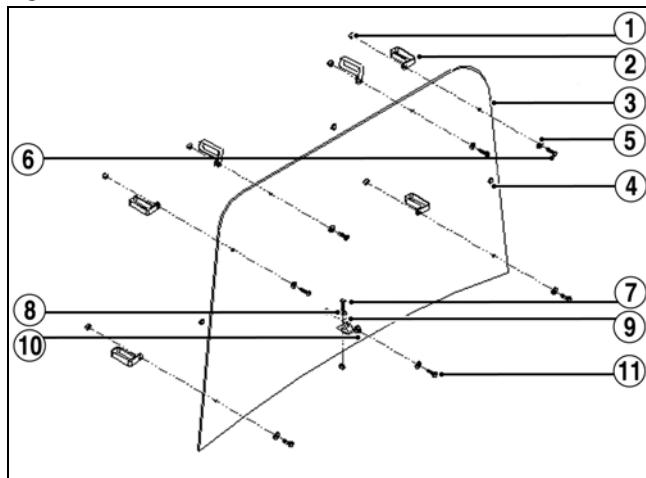

3. Place Windshield into position centered on the front cab frame surface. Install two Rubber Bumpers midway between the side clamps: then attach the remaining bumper between the two upper clamps.
4. Making sure the windshield is properly centered, place Center L-bracket on the dash in line with the center mounting hole in the windshield. Mark the mounting hole location on the dash. Remove the windshield and bracket; then drill a 1/4-in. mount- ing hole in the dash.
5. Secure the windshield to the cab frame using 1 1/4-in. Screws, Fender Washers, and 1/4-in. Nyloc Nuts. See Fig. 1 for orientation of hardware.

### CAUTION

**Do not over-tighten the nuts. Damage to the wind- shield could occur.**

6. With the perimeter clamps secured, install the center bracket to the dash using a 1-in. bolt, flat washer, and nyloc nut. Secure the windshield to the center bracket using a rubber washer, fender washer, and 3/4-in. screw.

