


# Arctic Cat® ATV

## Installation Instructions - Accessory Kit

### Rear Sway Bar Kit (p/n 0436-991)

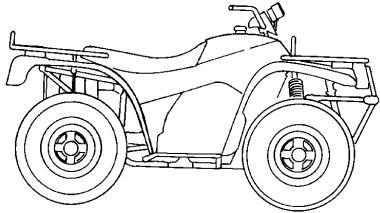

■ **NOTE:** Read these installation instructions thoroughly before beginning the installation process. Retain these Installation Instructions for future reference.


#### Kit includes:

Ref. No. p/n	QTY	DESCRIPTION
1 0404-110	1	Rear Sway Bar
2 0404-135	2	Clamp (Sway Bar Bushing)
3 0404-094	2	Bushing (Upper Half)
4 0404-095	2	Bushing (Lower Half)
5 8409-016	4	Machine Screw (10 mm)
6 8422-002	2	Nylock Nut (10 mm)
7 0423-335	2	Cap Screw (10 MM)
8 0423-073	8	Flat Washer
9 1402-434	8	Bushing (Sway Bar Link)
10 0423-620	2	Spacer
0453-431	1	Instructions

#### Application:

2007 Prowler

Fig. 1

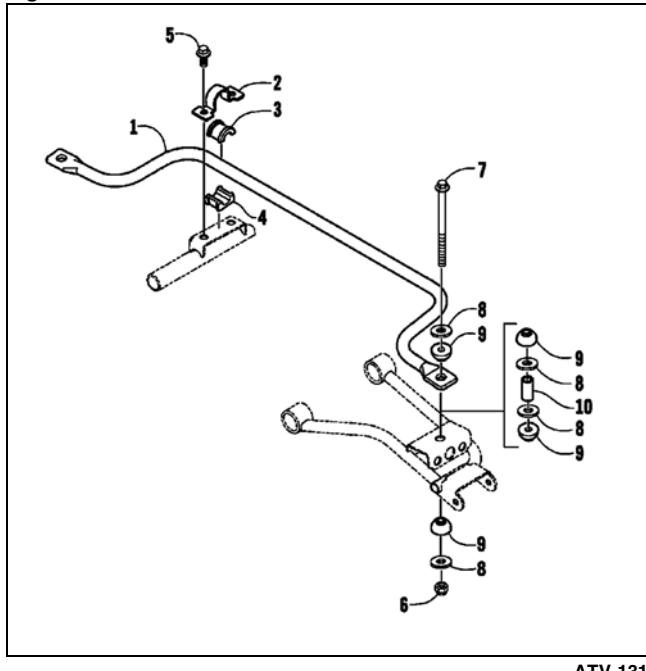

1. Set the parking brake and remove the key from the ignition switch.
2. Using an approved lift, raise the Prowler and remove the rear wheels.
3. Place the upper and lower bushings (Items 3 & 4) onto one end of the sway bar; then secure the end of the sway bar to the rear frame with clamp (Item # 2) and two 10 mm machine screws (Item 5). Tighten to 4.8 kg-m (35 ft-lb). See Fig. 1.
4. Repeat for opposite end of sway bar.
5. Place a flat washer (Item 8) and a bushing (Item 9) onto cap screw (Item 7); then insert the cap screw through the mounting hole in the sway bar. Place a bushing, flat washer, spacer (Item 10), flat washer, and bushing onto the cap screw. While holding the components in place, insert the cap screw through the upper A-arm bracket. See Fig. 1.
6. Place a bushing, washer, and a nyloc nut onto the cap screw.

■ **NOTE:** The flat side of the bushings must be placed against the washers.

7. Tighten the nut until a minimum of three full threads are protruding from the nut.
8. Repeat steps 5-7 for the opposite side.
9. Reinstall the wheels and tighten the lug nuts to 5.5-6.2 kg-m (40-45 ft-lb).