


Arctic Cat® OHUV

Installation Instructions - Accessory Parts

Roof Kit (p/n 1436-012)

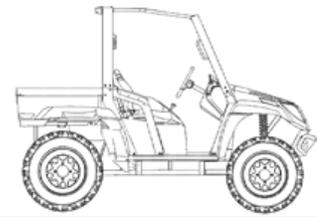

■ **NOTE:** Read these installation instructions thoroughly before beginning the installation process. Retain these Installation Instructions for future reference.

Application: All Prowler Models

Kit includes:

p/n	QTY	DESCRIPTION
1441-601	1	Roof (Plastic)
1441-644	1	Header Panel (Right Side)
1441-645	1	Header Panel (Left Side)
1441-646	1	Seal (Roof)
N/A	1	Windshield/Roof Support *
1436-046	1	Hardware Kit (Roof)
N/A	4	Insert
N/A	5	Machine Screw (8 mm x 1.0 x 30)
N/A	8	Machine Screw (6 mm x 1.0 x 20)
N/A	10	Fender Washer (Rubber)
N/A	5	Flat Washer
N/A	5	U-Nut Clip (8 mm)
N/A	4	U-Nut Clip (6 mm)
0453-466	1	Instructions

* Not included in kit. For illustration purposes only.


■ **NOTE:** The hardware components in Hardware Kit (p/n 1436-046) cannot be ordered separately. Hardware Kit (p/n 1436-046) must be ordered.

■ **NOTE:** If also installing a windshield, the windshield must be installed first. If installing only Roof Kit (p/n 1436-012), complete step 1. If not installing the windshield kit, omit step 1 and begin with step 2.

1. Install Windshield/Roof Support. See instructions in Windshield/Roof Support Kit (p/n 1436-047).
2. Press the four Inserts into the pre-cut hexagonal-shaped holes on the rear face of the rear canopy tube.
3. Position Left-Side Header Panel (A) into place with the front of the windshield or windshield roof support positioned on the inside of the windshield or windshield/roof support. Align the rear mounting holes with the inserts; then thread the 6 mm x 1.0 x 20 Machine Screws (B) into the inserts.

■ **NOTE:** Refer to Fig. 1 for identification and location of all parts and hardware.

Fig. 1

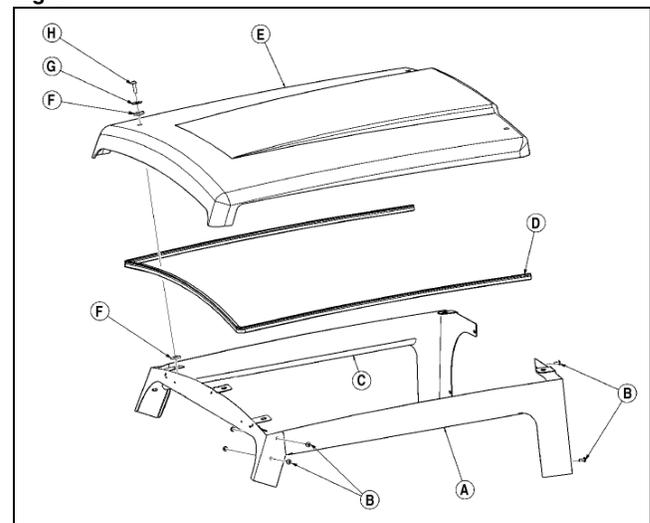

436-841A

4. While applying pressure to the rear of the panel, tighten the machine screws.

■ **NOTE:** The inserts will self-tighten inside the rear canopy tube as the screws are tightened.

5. Secure the front of the roof to the windshield or windshield/roof support using two 6 mm x 1.0 x 20 Machine Screws and 6 mm U-Nut Clips.
6. Repeat steps 3-5 for Right-Side Header Panel (C).
7. Cut Seal (D) into two 35 in. sections and one 33 in. section.
8. Install the two 35 in. seals (cut in step 7) onto the right-side and left-side header panels; then install the 33 in. seal into the windshield or windshield/roof support. Press the seals into place making sure each is fully seated.
9. Install the five 8 mm U-Nut Clips onto the five tabs that support the roof.
10. Position Roof (E) onto the top of the canopy.

11. Raise the corner of the roof slightly; then place a Fender Washer (F) on the underside of the panel mounting hole with the raised side facing upward. Place another Fender Washer (F) on top of the roof at the same mounting location with the raised side of the washer facing downward. Place a Flat Washer (G) on top of the fender washer (located on top of the roof).
12. From the top of the roof, insert an 8 mm x 1.0 x 30 Machine Screw (H) through the hardware (installed in step 11) and through the windshield or header panel; then secure with 8 mm U-Nut Clips. Loosely tighten machine screw.
13. Repeat steps 10-12 for the remaining four roof mounting locations.
14. Carefully tighten the machine screw until the top rubber washers are slightly compressed.

 **CAUTION**

Do not over-tighten. Damage to the roof may occur.

