


# Arctic Cat® UTV

## Installation Instructions - Accessory Parts

### Roof Kit

(p/n 1436-330)

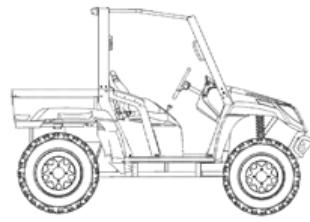

■ **NOTE:** Read these installation instructions thoroughly before beginning the installation process. Retain these Installation Instructions for future reference.

#### Application: All Prowler Models

##### Kit includes:

p/n	QTY	DESCRIPTION
1441-601	1	Roof (Plastic)
1441-876	1	Header Panel (Right Side)
1441-877	1	Header Panel (Left Side)
1441-646	1	Seal (Roof)
N/A	1	Windshield/Roof Support *
1436-046	1	Hardware Kit (Roof)
N/A	4	Insert
N/A	5	Machine Screw (8 mm)
N/A	8	Machine Screw (6 mm)
N/A	10	Fender Washer (Rubber)
N/A	5	Flat Washer
N/A	5	U-Nut Clip (8 mm)
N/A	4	U-Nut Clip (6 mm)
0453-593	1	Instructions


\* Not included in kit. For illustration purposes only.

■ **NOTE:** The hardware components in Hardware Kit (p/n 1436-046) cannot be ordered separately. If replacement components are required, order hardware kit.

■ **NOTE:** If also installing a windshield, the windshield must be installed first (proceed to step 2).

1. Install Windshield/Roof Support. See instructions in Windshield/Roof Support Kit (p/n 1436-047).
2. Press the four Inserts into the pre-cut hexagonal-shaped holes on the rear face of the rear canopy tube.
3. Position Left-Side Header Panel (A) into place with the front of the windshield or windshield roof support positioned on the inside of the windshield or windshield/roof support. Align the rear mounting holes with the inserts; then thread the 6 mm Machine Screws (B) into the inserts. See Fig. 1.

Fig. 1

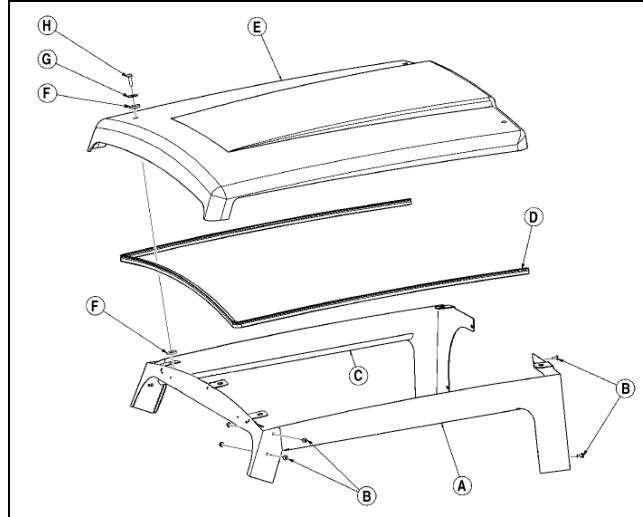

436-841A

4. While applying pressure to the rear of the panel, tighten the machine screws.

■ **NOTE:** The inserts will self-tighten inside the rear canopy tube as the screws are tightened.

5. Secure the front of the roof panel to the windshield or windshield/roof support using two 6 mm machine screws and 6 mm U-Nut Clips.
6. Repeat steps 3-5 for Right-Side Header Panel (C).
7. Install Rubber Seal onto left-, right- and front side panels. Note where rubber seal contacts the three front roof mounting tabs.
8. On the front panel, cut on the inside of the rubber seal to allow it to be placed on front panel as one piece.

■ **NOTE:** It is best to cut one tab at a time to allow for a continuous seal for the roof. It may also be necessary to snip out a "V" notch on the inside corners where the side panel and front panel connect.

9. Press rubber seal into place making sure it is fully seated.
10. Install the five 8 mm U-Nut Clips onto the five tabs supporting the roof.

11. Position Plastic Roof (E) onto the top of the canopy.
12. Raise the corner of the roof slightly; then place a Rubber Fender Washer (F) on the underside of the panel mounting hole with the raised side facing upward. Place another fender washer (F) on top of the roof at the same mounting location with the raised side of the washer facing downward. Place a Flat Washer (G) on top of the fender washer (located on top of the roof).
13. From the top of the roof, insert an 8 mm Machine Screw (H) through the hardware (installed in step 11) and through the windshield or header panel; then secure with 8 mm U-nut clips. Loosely tighten machine screw.
14. Repeat steps 10-12 for the remaining four roof mounting locations.
15. Carefully tighten the machine screw until the top rubber washers are slightly compressed.

**⚠ CAUTION**

**Do not over-tighten. Damage to the roof may occur.**

