


# Arctic Cat® OHUV

## Installation Instructions - Accessory Parts

### Windshield Guard Kit

(p/n 1436-011)

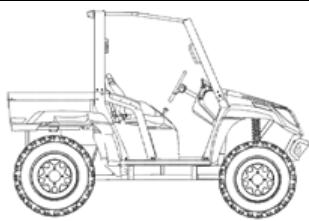

■ **NOTE:** Read these installation instructions thoroughly before beginning the installation process. Retain these Installation Instructions for future reference.

**Application:**  
2006-2007 Prowler

**Kit includes:**

p/n	QTY	DESCRIPTION
0541-565	2	Windshield Guard
1441-390	2	Machine Screw
1441-396	2	Flange Nyloc Nut
0453-439	1	Instructions

1. Remove the upper torx-head screw from each canopy mount. Retain the screws for installation purposes. See Fig. 1.

Fig. 1



2. Remove the lower torx-head screw located at each panel header. Discard the screws. See Fig. 1.
3. Position one of the Windshield Guards (p/n 0541-565) onto windshield edge; then secure windshield guard to the canopy mount using existing hardware.
4. Secure the windshield guard to the header panel using Machine Screw (p/n 1441-390) and Flange Nyloc Nut (p/n 1441-396).
5. Repeat for opposite side.

■ **NOTE:** Fig. 1 illustrates installed windshield guard.

