


Arctic Cat® OHUV

Installation Instructions - Accessory Kit

Windshield Kit (p/n 0436-815)

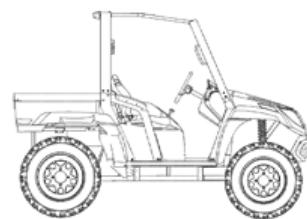


■ **NOTE:** Read these installation instructions thoroughly before beginning the installation process. Retain these Installation Instructions for future reference.

Kit includes:

Ref. No.	p/n	QTY	DESCRIPTION
1	1441-398	1	Windshield Assembly
2	0541-474	1	Lower Front Panel
3	1441-399	2	Louver
4	1441-400	6	Windshield Clip
5	1441-390	6	Machine Screw (6 mm x 8 x 16)
6	1441-396	6	Flange Nut (6 mm)
7	1441-401	4	Retaining Clip
8	1441-402	1	Dash Seal
	0453-381	1	Instructions

Fig. 1

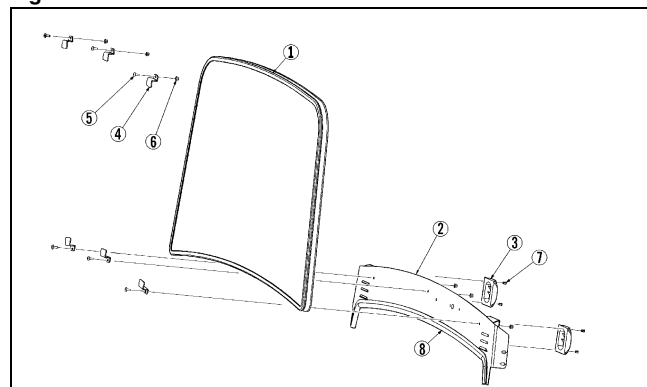

0436-815

I. Removing Windshield from Packing Crate

- Using a rubber mallet, carefully remove the two end-cap boards by pounding outward on boards being careful not to come into contact with the windshield. Repeat this process for the side boards; then carefully remove the windshield.

II. Installation Instructions

■ **NOTE:** If installing a windshield and doors, complete steps 1 and 2 (both sides) in Door Kit (p/n 0436-818) first because Lower Front Panel (p/n 0541-474) is installed over the door frame. If installing a roof, the windshield must be installed first.

- Install Windshield/Roof Support Assembly (p/n 1441-403). See instructions in Windshield/Roof Support Kit (p/n 0436-839).

- Using a T-40 wrench, remove the four torx-head screws (two per side) located on the outside of the canopy frame tube next to the bottom of the windshield. See Fig. 1.
- Using a 6.35 mm (1/4 in.) drill bit, drill holes in opposite diagonal corners of each louver.
- Install two Louvers (p/n 1441-399) onto the inside of the lower front panel (outside edges) by snapping them into place.
- Install two Retaining Clips (p/n 1441-401) per louver by pressing them through the holes drilled in step 4. Securely fasten each louver to the lower front panel assembly.
- Place the lower front assembly onto the front canopy tubes making sure they overlap the two panel posts and the mounting holes align. Using a T-40 wrench and the four screws removed in step 2, secure the lower front panel assembly. Do not tighten at this time.
- Using a T-30 wrench, install three Windshield Clips (p/n 1441-400) onto the lower front panel with Machine Screws (p/n 1441-390) and 6 mm Flange Nuts (p/n 1441-396). Tighten the screws until there is a 1/4 in. gap between the clip and the lower front panel.
- Place the windshield behind the three clips installed in step 7; then carefully place the windshield backward against the canopy frame making sure it is positioned evenly on both sides.
- Install the three remaining windshield clips onto the upper windshield/roof support as done in step 7.
- Making sure the windshield is centered, secure the windshield clips by tightening the machine screws until they bottom out.

■ **NOTE:** When not installing the door kit, place the provided spacer between the canopy and the lower front panel.

