


Arctic Cat® Prowler

Installation Instructions - Accessory Kit

Windshield Kits

(p/n 1436-004/006)

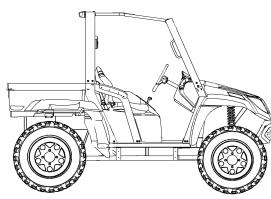

■ **NOTE:** Read these installation instructions thoroughly before beginning the installation process. Retain these Installation Instructions for future reference.

Application: All Prowler Models

Kit includes:


p/n	QTY	DESCRIPTION
0541-598	1	Windshield Panel Assembly
0541-599	1	Slider Vent
1441-635	1	Glass Windshield
1441-636	1	Weatherstrip
0423-773	1	Tapered Handle
0423-772	9	Flat Washer
0423-774	2	Nyloc Nut (1/4-20)
1441-402	1	Dash Seal
1441-647	1	Shim (Windshield Panel)
0541-600	1	Flip-Up Frame *
1441-638	1	Rubber Seal *
1436-038	1	Hardware Kit *
0423-779	1	Windshield Latch*
0453-464	1	Instructions

* Included in Kit (p/n 1436-006) only

■ **NOTE: If the vehicle is equipped with a roof, remove the roof and header before beginning these instructions.**

1. Remove the cap screw and nut from the dash mounting bracket. Account for two shims which will be used following step 4 (if applicable).
2. Using a T-40 wrench, remove the four torx-head screws (two per side) located on the outside of the canopy frame tube next to the bottom of the windshield. See Fig. 1.

Fig. 1

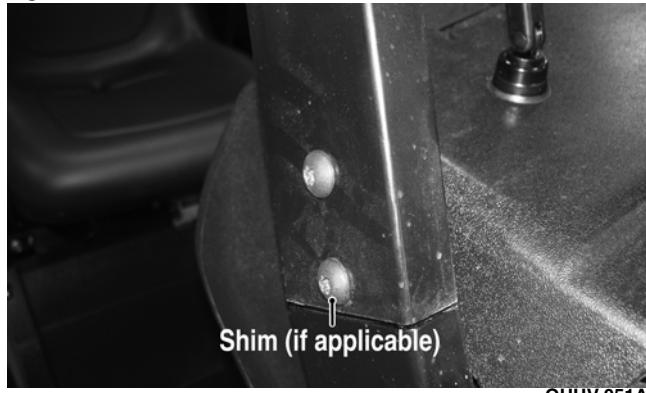

OHUV-051A

3. Remove the four cap screws securing the top front of the canopy to the right-side and left-side cross-braces. See Fig. 2.


Fig. 2



OHUV-050


4. Place the Windshield Panel Assembly (A) or (B) onto the front canopy tube making sure they overlap the two panel posts and that the mounting holes align. Using a T-40 wrench and the four screws removed in step 2, secure the lower front panel assembly. Tighten to 2.8 kg-m (20 ft-lb). See following NOTE for instructions if doors are not installed. See Fig. 3 and Fig. 4.

Fig. 3

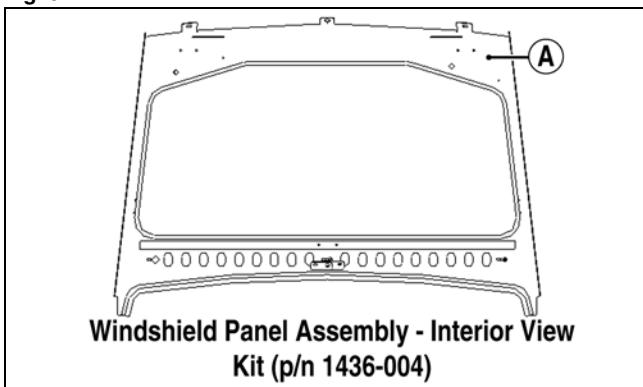

742-503A

Fig. 4

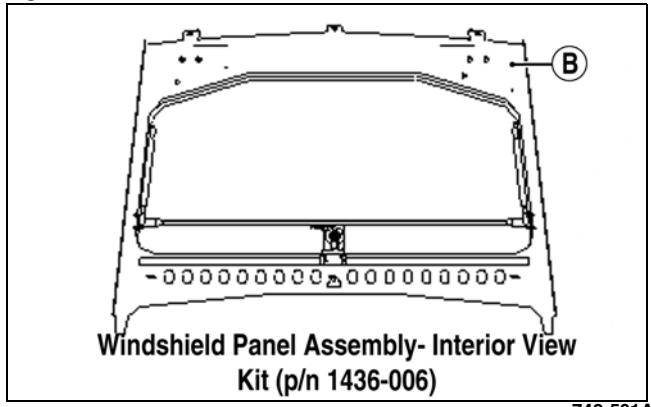

■ **NOTE: If a door kit is not being installed, place a shim (removed in step 1) between the lower canopy and the front panel mounting locations. See Fig 1.**

5. Secure the two inside brackets on windshield panel assembly (A) or (B) to the top of the canopy cross-brace using hardware removed in step 3. See Fig. 2. Tighten to 2.8 kg-m (20 ft-lb).

6. Secure the upper outer section of the Windshield Panel to the right-side and left-side of the header using four 6 mm x 1.0 Machine Screws and U-Clips (provided in Roof Kit - p/n 1436-012).

7. Securely tighten all hardware.

8. If necessary, bend the dash mounting bracket downward until it conforms to the contour of the dash; then using the dash bracket as a template, carefully drill a 6 mm (15/64 in.) hole through the dash. Secure the dash bracket to the dash using the cap screw and nut removed in step 1.

9. If installing Windshield Kit (p/n 1436-006)(B), install the windshield latch as follows. From inside the windshield frame and using the provided hardware, install the Windshield Latch; then install the latch striker onto the striker mounting bracket (if applicable).

