


Arctic Cat® Wildcat

Installation Instructions - Accessory Kit

Aluminum Front Bumper Kit

(p/n 1436-718)

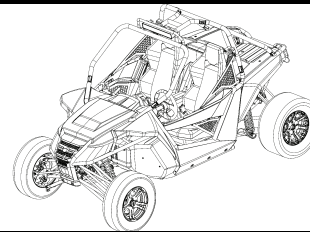

■ **NOTE:** Read these Installation Instructions thoroughly before beginning the installation process. Retain these Installation Instructions for future reference.

Application: 2012 Wildcat

Kit includes:

p/n	QTY	DESCRIPTION
*	2	Torx-Head Screw (M8 x 20 mm)
*	2	Torx-Head Screw (M6 x 16 mm)
*	2	Torx-Head Screw (M6 x 30 mm)
*	1	Black Flat Washer
*	2	M6 Zinc Flat Washer
*	2	M8 Zinc Flat Washer
*	1	M8 Nut
*	1	Cap Screw (M8-1.25 x 25)
*	2	M6 Nut
*	2	Lock Washer
*	2	Spring Lock Washer
0541-041	2	Plastic Cap
0541-042	1	Bottom Mounting Plate
0541-043	1	Upper Mounting Plate
N/A	1	Bumper
0453-765	1	Instructions

* Included in Hardware Kit (p/n 1436-789)

1. Remove the torx-head screws securing the front fascia to the frame. See Fig. 1.

Fig. 1



ROV-014A

2. Remove the two cap screws securing the front of the EPS mounting bracket to the frame; then secure Anchor Plate (with the side mounting tabs down) using the existing cap screws. Tighten to 20 ft-lb. See Fig. 2.

3. Secure the front of the anchor plate to the frame using one Cap Screw, Flat Washer, and Nut. See Fig. 2.


Fig. 2



ROV-015A

4. Install the front fascia and secure to the frame using only the top torx-head screws; then secure Bottom Mounting Bracket using two Torx-Head Screws (M6 x 30 mm), and two Lock Washers into the bottom mounting locations for the front fascia. Tighten securely. See Fig. 3.

Fig. 3

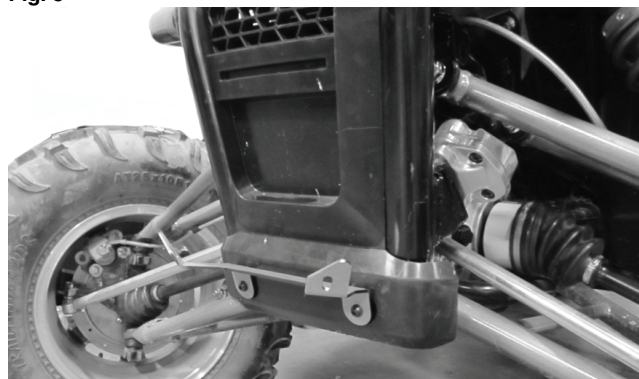

ROV-032

5. Position Bumper and secure to the bottom mounting plate using two Torx-Head Screws (M6 x 16 mm), two M6 Flat Washers, and two M6 Nuts. Finger tighten only at this time. See Fig. 4.


Fig. 4



ROV-036A

6. Secure the bumper to the upper mounting bracket using two Torx-Head Screws (M8 x 20 mm), two Spring Lock Washers, and two M8 Flat Washers. See Fig. 5.

Fig. 5

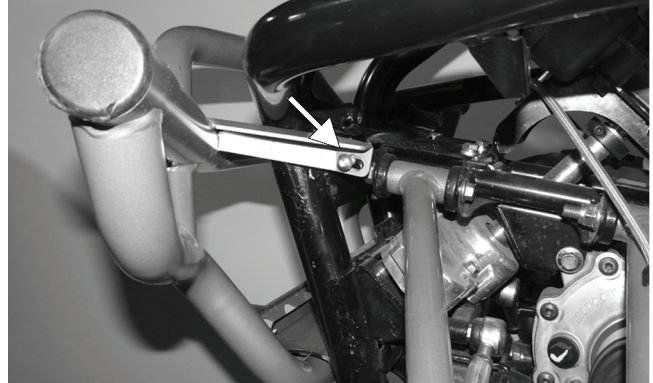

ROV-035A

7. Tighten all hardware securely.

Key

1. Torx-Head Screw (M8 x 20 mm)
2. Torx-Head Screw (M6 x 16 mm)
3. Torx-Head Screw (M6 x 30 mm)
4. Black Flat Washer
5. M6 Flat Washer
6. M8 Flat Washer
7. M8 Nut
8. Cap Screw (M8-1.25 x 25)
9. M6 Nut
10. Lock Washer
11. Spring Lock Washer
12. Plastic Cap
13. Bumper
14. Bottom Mounting Bracket
15. Upper Mounting Bracket

