


Arctic Cat® Wildcat

Installation Instructions - Accessory Kit

Aluminum Front Bumper for Winch Mount Kit (p/n 1436-695)

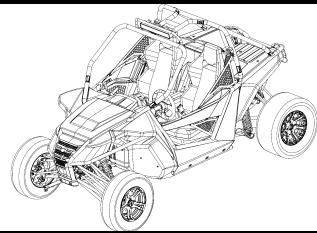


■ NOTE: Read these Installation Instructions thoroughly before beginning the installation process. Retain these Installation Instructions for future reference.

Application: Wildcat

Kit includes:			
Ref. No.	p/n	QTY	DESCRIPTION
1	*	2	Carriage Bolt (M8 x 25)
2.	*	2	Cap Screw (M8 x 25)
3	*	4	Lock Nut
4	N/A	1	Aluminum Front Bumper
5	*	2	Plastic Cap
N/A	0453-855	1	Instruction


* Included in Hardware Kit (p/n 0541-074)

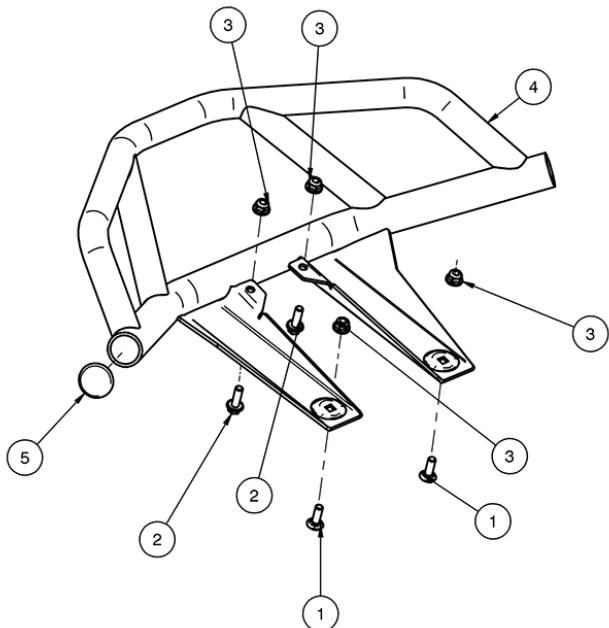

1. Position Aluminum Front Bumper on the front winch mount, lining up all four mounting holes.

2. Loosely secure the top of the front bumper to the mount using two Cap Screws (M8 x 25) and two Lock Nuts; then loosely secure the bottom using two Carriage Bolts (M8 x 25) and two lock nuts. See Fig. 1.

Fig. 1

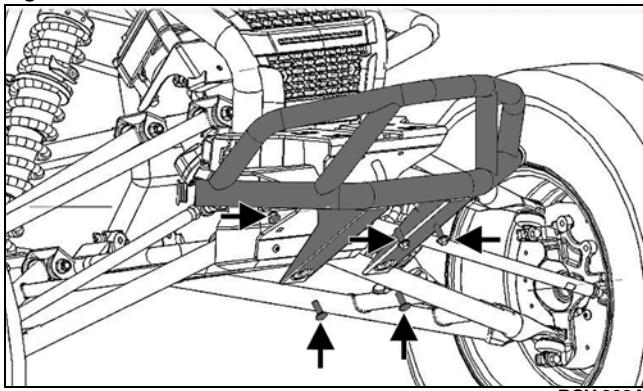

ROV-202A

3. Tighten all hardware securely.

WARNING

Several actions performed by user could be hazardous if common sense is not followed. Always use common sense when using this product.

■ NOTE: Front Winch Mount Kit (p/n 1436-692) must be installed before installing this bumper as this bumper attaches only to the mount.

