


Arctic Cat® Wildcat

Installation Instructions - Accessory Kit

Aluminum Rear Bumper Kit

(1436-685)

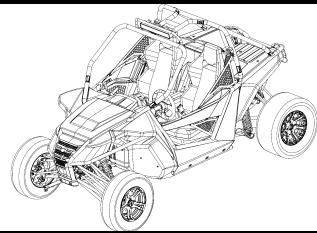


■ NOTE: Read these Installation Instructions thoroughly before beginning the installation process. Retain these Installation Instructions for future reference.

Application: 2013 Wildcat

Kit includes:
Ref. No. p/n QTY DESCRIPTION


1	*	5	Hex-Head Screw
2.	*	5	Nut
3	0541-041	2	Bumper Cap
4	N/A	1	Rear Bumper
N/A	0453-833	1	Instruction

* Included in Hardware Kit (p/n 0541-061)

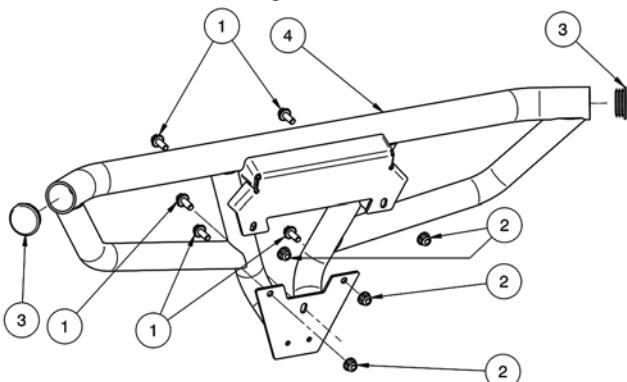


1. Secure the lower portion of the rear bumper using Hex-Head Screw and Nut. Finger tighten only at this time. See Fig. 1.

Fig. 1

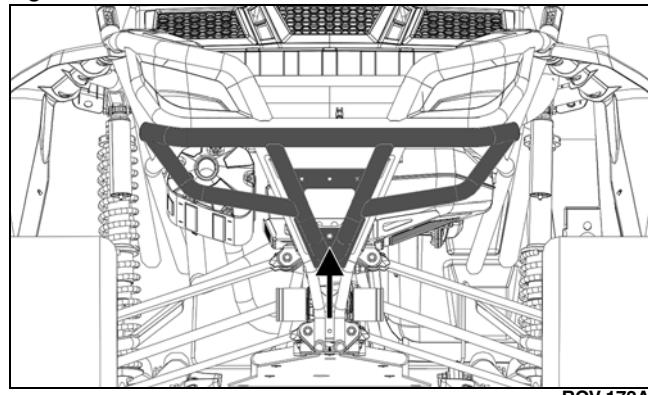

2. Secure the bumper using the remaining four hex-head screws and four nuts. Tighten all hardware securely. See Fig. 2.

Fig. 2

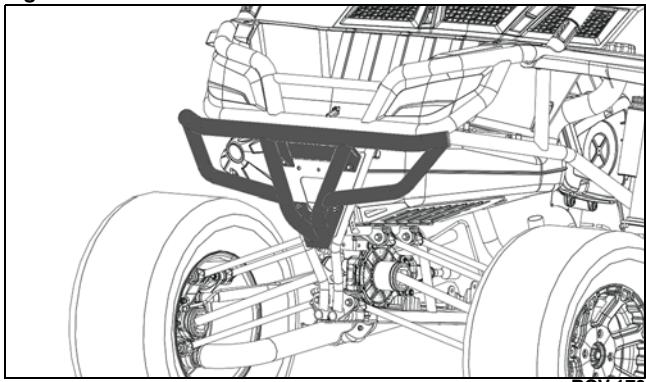

ROV-170

