


Arctic Cat® Wildcat

Installation Instructions - Accessory Kit

Aluminum Rear Bumper Kit

(1436-719)

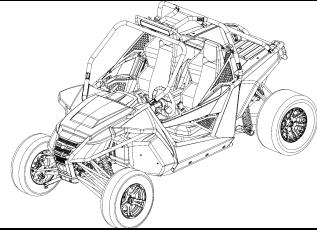


■ NOTE: Read these Installation Instructions thoroughly before beginning the installation process. Retain these Installation Instructions for future reference.

Application: 2012 Wildcat

Kit includes:

p/n	QTY	DESCRIPTION
N/A	1	Rear Bumper (1)
0541-041	2	Bumper Cap (2)
*	5	Hex-Head Screw (3)
*	5	Nut (4)
*	1	Flat Washer (5)
N/A	1	Template
0453-766	1	Instructions

* Included in Hardware Kit (p/n 1436-788)

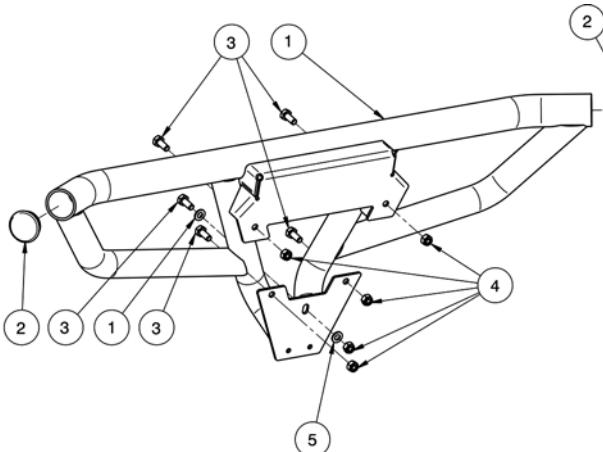

■ NOTE: Wildcats built after January 31st, 2012 will already have the mounting locations so no drilling will be required.


1. On vehicle's without existing mounting holes, follow instructions on Template to mark the four additional mounting locations (A); then using a 9 mm drill bit, drill all four locations.

CAUTION

Be sure to **ONLY DRILL THROUGH THE FRAME** and not into the fuel tank which is located directly behind the drilling area. Using a small piece of steel behind the drilling area is advised.

2. Secure the lower portion of the rear bumper using Hex-Head Screw, Flat Washer, and Nut. Finger tighten only at this time. See Fig. 1.


Fig. 1

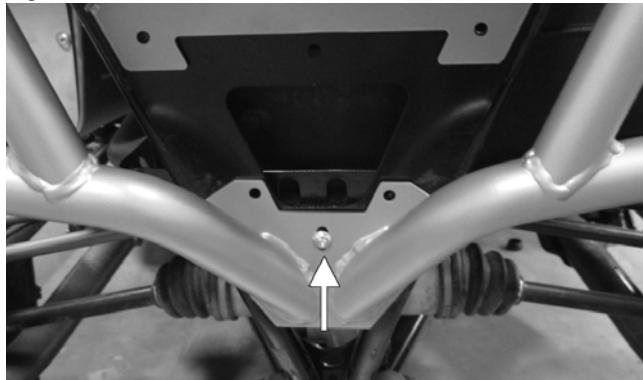

ROV-055A

3. Secure the bumper using the remaining four hex-head screws and four nuts. Tighten securely. See Fig. 2

Fig. 2

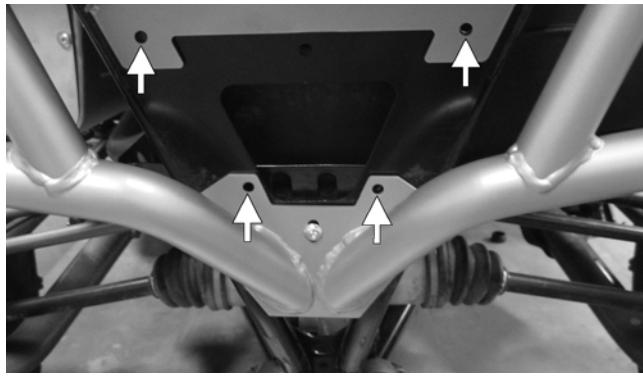

ROV-055B

Be sure to ONLY DRILL THROUGH THE FRAME and not into the fuel tank which is located directly behind the drilling area. Using a small piece of steel behind the drilling area is advised.

Remove this area and align with the rear portion of the frame

Existing Hole
(Can be used to help align template)

The line below should be 2 inches long if this print is printed to scale. (Use a ruler to verify)

NOTE: Make sure the printer settings are set to print actual size or scale set at 100% before printing.

Existing Hole
(Can be used to help align template)