


Arctic Cat® Wildcat

Installation Instructions - Accessory Kit

Armrest Cover Kit (1436-769)

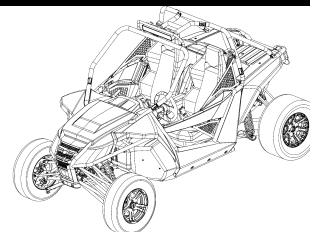

■ **NOTE:** Read these Installation Instructions thoroughly before beginning the installation process. Retain these Installation Instructions for future reference.


Application: 2012 Wildcat

Kit includes:

p/n	QTY	DESCRIPTION
N/A	1	Armrest Cover
0453-771	1	Instructions

1. Remove the two front plastic push rivets and the two rear machine screws on both sides of the armrest. See Fig. 1.

Fig. 1

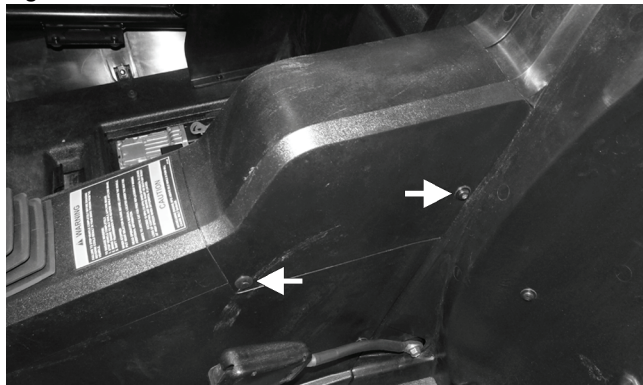

ROV-021A

2. Place Armrest Cover into position and secure using two existing plastic rivets and machine screws. See Fig. 2.

Fig. 2



ROV-019