


Arctic Cat® Wildcat 4

Installation Instructions - Accessory Kit

Bimini Top Kit

(p/n 1436-673)

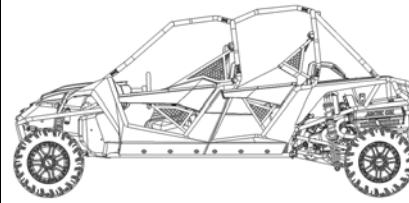

■ NOTE: Read these Installation Instructions thoroughly before beginning the installation process. Retain these Installation Instructions for future reference.

Application: Wildcat 4

Kit includes:

p/n	QTY	DESCRIPTION
N/A	1	Bimini Top
0541-104	2	Bimini Support Clamp
0541-859	1	Bimini Support Rod
0453-882	1	Instructions

1. Install Bimini Support onto the top cross ROPS tubes. See Fig. 1.

Fig. 1



ROV-241A

2. Drape Bimini Top over the ROPS of the vehicle.
3. Detach the front left strap from the adjustable buckle; then route the strap between the dash and the front ROPS tube and then back between the front fender and the front left ROPS tube (A). See Fig. 2.

4. Loosely secure the strap to the buckle; then secure the velcro straps around the vertical tube (B). See Fig. 2.

Fig. 2



ROV-237A

5. Loosely secure the left side strap around the front seat belt strap and install into the adjustable buckle. See Fig. 3.

Fig. 3



ROV-238

6. Detach the rear right strap from the adjustable buckle; then route the strap between the rear fender and the rear ROPS tube and then back between the rear facia and the rear right ROPS tube (A). See Fig. 4.

7. Loosely secure the strap to the buckle; then secure the velcro straps around the vertical tube (B). Repeat steps 3-7 for opposite side. See Fig. 4.

Fig. 4



8. Secure the velcro straps around the middle ROPS tubes. See Fig. 5.

Fig. 5



■ NOTE: If a full windshield is installed; remove the backing from the velcro strip and adhere it to the windshield. This should be done at room temperature for 24 hours.

■ NOTE: If a full windshield is not installed; remove the backing from the velcro strip and adhere it to the front ROPS tube. This should be done at room temperature.

