


Arctic Cat® Wildcat

Installation Instructions - Accessory Kit

Bimini Top Kit (1436-731)

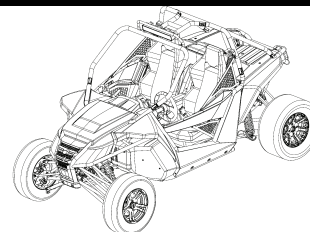

■ **NOTE:** Read these Installation Instructions thoroughly before beginning the installation process. Retain these Installation Instructions for future reference.


Application: 2012 Wildcat

Kit includes:

p/n	QTY	DESCRIPTION
N/A	1	Bimini Top
0453-774	1	Instructions

1. Drape Bimini Top over the ROPS of the vehicle.
2. Detach the front right strap from the adjustable buckle; then route the strap between the dash and the front ROPS tube and then back between the front fender and the front right ROPS tube (A).
3. Loosely secure the strap to the buckle; then secure the velcro straps around the vertical tube (B). See Fig. 1.

Fig. 1

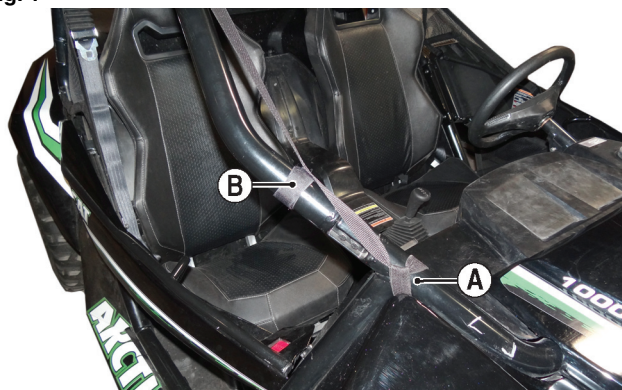

ROV-046A

4. Secure the right side strap around the seat belt strap and install into the adjustable buckle. See Fig. 2.


Fig. 2



ROV-047

5. Detach the rear right strap from the adjustable buckle; then route the strap between the rear fender and the front ROPS tube and then back between the rear facia and the rear right ROPS tube (A).
6. Loosely secure the strap to the buckle; then secure the velcro straps around the vertical tube (B). See Fig. 3.

Fig. 3

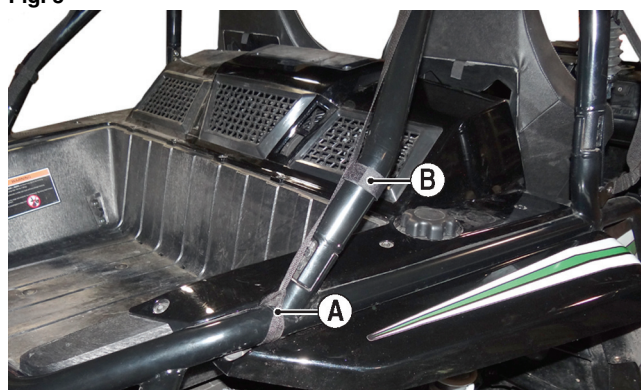

ROV-048A

7. Repeat steps 2-6 for opposite side.
8. Secure the velcro straps around the middle ROPS tubes. See Fig. 4.

Fig. 4



ROV-045

■ **NOTE:** If a full windshield is installed; remove the backing from the velcro strip and adhere it to the windshield. This should be done at room temperature for 24 hours.