


Arctic Cat® Wildcat

Installation Instructions - Accessory Kit

Front A-Arm Guard Kit

(p/n 1436-714)

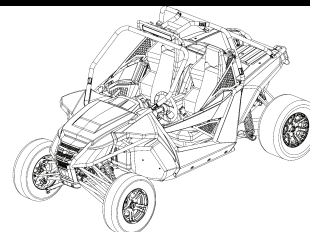

■ **NOTE:** Read these Installation Instructions thoroughly before beginning the installation process. Retain these Installation Instructions for future reference.

Application: 2012 Wildcat


Kit includes:

p/n	QTY	DESCRIPTION
0541-029	1	Left A-Arm Guard (1)
0541-028	1	Right A-Arm Guard (2)
*	6	J Clamp (3)
*	2	Fixation Plate (4)
*	2	U Bracket (5)
***	2	Decal (6)
**	4	Carriage Bolt (M8-1.25 x 30 mm) (7)
**	6	Carriage Bolt (M8-1.25 x 55 mm) (8)
**	2	Carriage Bolt (M8-1.25 x 65 mm) (9)
**	12	Nylon Flange Nut (10)
N/A	4	Foam Strip
0453-785	1	Instruction

* Included in Bracket Kit (p/n 0541-027)

** Included in Hardware Kit (p/n 1436-776)


*** Included in Decal Kit (p/n 0541-030)

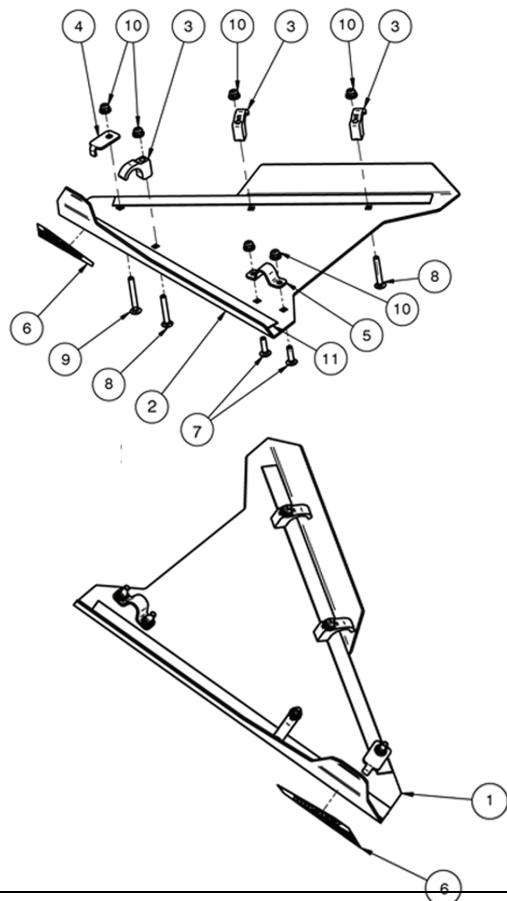

1. Install Foam Strips where the A-Arm will contact the A-Arm Guards.

2. Secure Left A-Arm Guard to the left-side lower A-arm using three J Clamps, three Carriage Bolts (M8-1.25 x 55 mm) and three Nylon Flange Nuts. Finger tighten only at this time. See Fig. 1.


Fig. 1

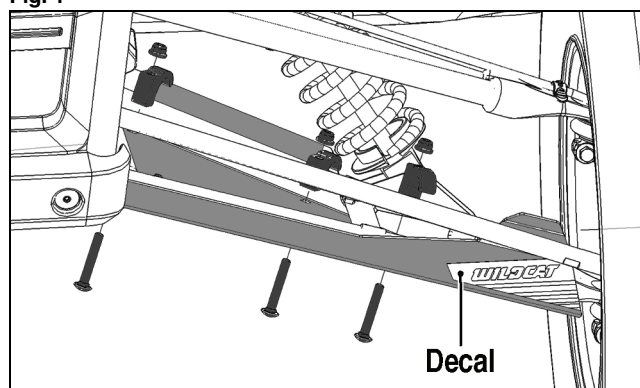

3. Install U Bracket over the inside A-arm tube and secure using two Carriage Bolts (M8-1.25 x 30 mm) and two Nylon Flange Nuts; then install the Fixation Plate and secure using Carriage Bolt (M8-1.25 x 65 mm) and Nylon Flange Nut. See Fig. 2.

■ **NOTE:** The Fixation Plate will be installed with tab pointing down through the slot in the A-arm.

Fig. 2

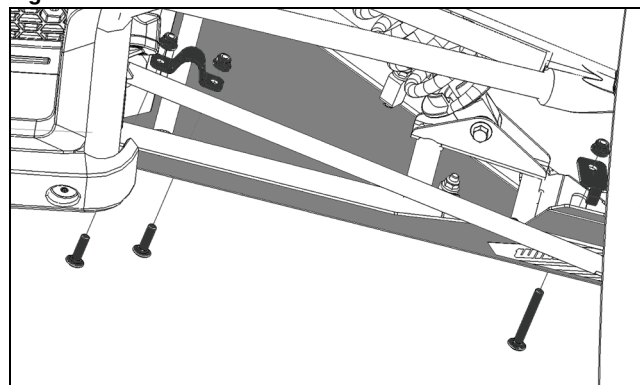

4. Tighten all hardware securely; then repeat for opposite side.

5. Install both Decals on the front of each guard. See Fig. 1.