


Arctic Cat® Wildcat

Installation Instructions - Accessory Kit

Front Lower A-Arm Guard Kit

(p/n 1436-663)

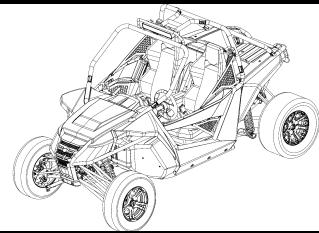

■ NOTE: Read these Installation Instructions thoroughly before beginning the installation process. Retain these Installation Instructions for future reference.

Application: Wildcat

Kit includes:


p/n	QTY	DESCRIPTION
0541-879	1	Left-Side A-Arm Guard
0541-880	1	Right-Side A-Arm Guard
0541-881	4	1-in. Half Clamp
0541-882	4	3/4-in. Half Clamp
*	8	Screw (M6 x 30 mm)
*	10	M6 Flange Nut
*	12	Fender Washer
*	2	Screw (M6 x 60 mm)
*	2	Nylon Spacer
0453-874	1	Instructions

* Included in Hardware Kit (p/n 0541-883)

1. Align Left-Side A-Arm Guard with the left-side lower A-arm. See Fig. 1.

2. Install one M6 x 60 mm Screw and one Fender Washer through the bottom of location (A). Place Nylon Spacer on the inside of the a-arm guard; then fasten using a fender washer and M6 Flange Nut. See Fig. 1.
3. Install two M6 x 30 mm Screws and two fender washers through the bottom of location (B); then align two 1-in. Half Clamps with the frame tube and screws. Fasten using two M6 flange nuts. See Fig. 1.
4. Install two M6 x 30 mm screws and two fender washers through the bottom of location (C); then align two 3/4-in. Half Clamps with the frame tube and screws. Fasten using two M6 flange nuts. See Fig. 1.
5. Repeat steps 1-4 for the opposite side.

Fig. 1

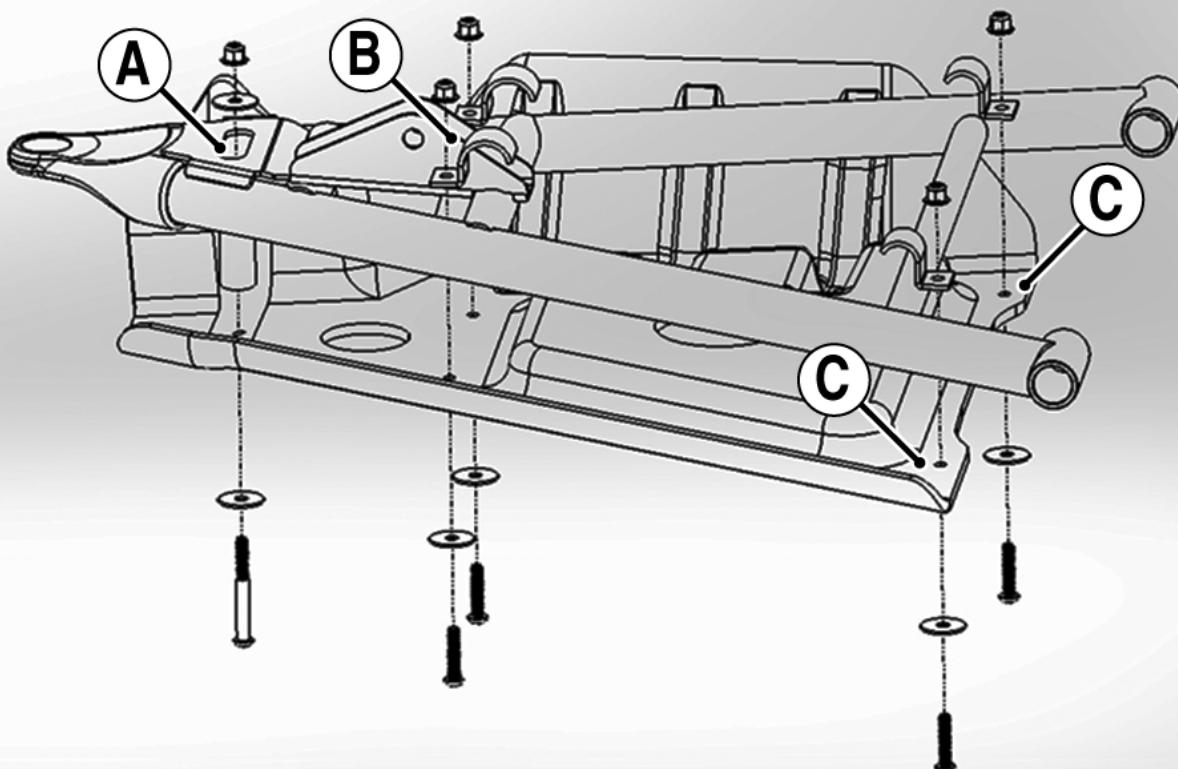

ROV-243A